



Código KP	Descripción	Ref. OEM
TACB-LC1000B	Sustituye a Cartucho Brother LC-1000BK Negro	LC-1000BK
TACB-LC1000BDP	Sustituye a Cartucho Brother LC-1000BKBP2DR Negro, Pack Doble	LC-1000BKBP2DR
TACB-LC1000C	Sustituye a Cartucho Brother LC-1000C Cian	LC-1000C
TACB-LC1000M	Sustituye a Cartucho Brother LC-1000M Magenta	LC-1000M
TACB-LC1000S10	Sustituye a Cartucho Brother LC-1000 4K/2CMY, Set Ahorro (10 uds.)	LC-1000
TACB-LC1000S20	Sustituye a Cartucho Brother LC-1000 5CMYK, Set Ahorro (20 uds.)	LC-1000
TACB-LC1000S3	Sustituye a Cartucho Brother LC-1000 CMY, Set Ahorro (3 uds.)	LC-1000
TACB-LC1000S4	Sustituye a Cartucho Brother LC-1000 CMYK, Set Ahorro (4 uds.)	LC-1000
TACB-LC1000Y	Sustituye a Cartucho Brother LC-1000Y Amarillo	LC-1000Y
TACB-LC1100B	Sustituye a Cartucho Brother LC-1100BK Negro	LC-1100BK
TACB-LC1100BDP	Sustituye a Cartucho Brother LC-1100BK Negro, Pack Doble	LC-1100BK
TACB-LC1100C	Sustituye a Cartucho Brother LC-1100C Cian	LC-1100C
TACB-LC1100M	Sustituye a Cartucho Brother LC-1100M Magenta	LC-1100M
TACB-LC1100S10	Sustituye a Cartucho Brother LC-1100 4K/2CMY, Set Ahorro (10 uds.)	LC-1100
TACB-LC1100S20	Sustituye a Cartucho Brother LC-1100 5CMYK, Set Ahorro (20 uds.)	LC-1100
TACB-LC1100S3	Sustituye a Cartucho Brother LC-1100 CMY, Set Ahorro (3 uds.)	LC-1100
TACB-LC1100S4	Sustituye a Cartucho Brother LC-1100 CMYK, Set Ahorro (4 uds.)	LC-1100
TACB-LC1100Y	Sustituye a Cartucho Brother LC-1100Y Amarillo	LC-1100Y
TACB-LC123B	Sustituye a Cartucho Brother LC-123BK Negro	LC-123BK
TACB-LC123BDP	Sustituye a Cartucho Brother LC-123BKBP2DR Negro, Pack Doble	LC-123BKBP2DR
TACB-LC123C	Sustituye a Cartucho Brother LC-123C Cian	LC-123C
TACB-LC123M	Sustituye a Cartucho Brother LC-123M Magenta	LC-123M
TACB-LC123S3	Sustituye a Cartucho Brother LC-123RBWPDR CMY, Set Ahorro (3 uds.)	LC-123RBWPDR
TACB-LC123S4	Sustituye a Cartucho Brother LC-123VALBPDR CMYK, Set Ahorro (4 uds.)	LC-123VALBPDR
TACB-LC123Y	Sustituye a Cartucho Brother LC-123Y Amarillo	LC-123Y
TACB-LC1240B	Sustituye a Cartucho Brother LC-1240BK Negro	LC-1240BK
TACB-LC1240BDP	Sustituye a Cartucho Brother LC-1240BKBP2DR Negro, Pack Doble	LC-1240BKBP2DR
TACB-LC1240C	Sustituye a Cartucho Brother LC-1240C Cian	LC-1240C
TACB-LC1240M	Sustituye a Cartucho Brother LC-1240M Magenta	LC-1240M
TACB-LC1240S10	Sustituye a Cartucho Brother LC-1240 4K/2CMY, Set Ahorro (10 uds.)	LC-1240
TACB-LC1240S20	Sustituye a Cartucho Brother LC-1240 5CMYK, Set Ahorro (20 uds.)	LC-1240
TACB-LC1240S3	Sustituye a Cartucho Brother LC-1240RBWPDR CMY, Set Ahorro (3 uds.)	LC-1240
TACB-LC1240S4	Sustituye a Cartucho Brother LC-1240VALBPDR CMYK, Set Ahorro (4 uds.)	LC-1240VALBPDR
TACB-LC1240Y	Sustituye a Cartucho Brother LC-1240Y Amarillo	LC-1240Y
TACB-LC125XLC	Sustituye a Cartucho Brother LC-125XLC Cian con Chip	LC-125XLC
TACB-LC125XLM	Sustituye a Cartucho Brother LC-125XLM Magenta con Chip	LC-125XLM
TACB-LC125XLY	Sustituye a Cartucho Brother LC-125XLY Amarillo con Chip	LC-125XLY
TACB-LC127S10	Sustituye a Cartucho Brother LC-127XL 4K/2CMY, Set Ahorro (10 uds.)	LC-127XL/LC-125
TACB-LC127S3	Sustituye a Cartucho Brother LC-125XL CMY, Set Ahorro con Chip (3 uds.)	LC-125
TACB-LC127S4	Sustituye a Cartucho Brother LC-127XLVALBP CMYK, Set Ahorro con Chip (4 uds.)	LC-127
TACB-LC127XL	Sustituye a Cartucho Brother LC-127XLBK Negro con Chip	LC-127XLBK
TACB-LC127XLDP	Sustituye a Cartucho Brother LC-127XLBK Negro con Chip, Pack Doble	LC-127XL
TACB-LC1280B	Sustituye a Cartucho Brother LC-1280BK XXL Negro	LC-1280XLBK
TACB-LC1280BDP	Sustituye a Cartucho Brother LC-1280XBK XXL Negro, Pack Doble	LC-1280XLBK
TACB-LC1280C	Sustituye a Cartucho Brother LC-1280C XXL Cian	LC-1280XLC
TACB-LC1280M	Sustituye a Cartucho Brother LC-1280M XXL Magenta	LC-1280XLM
TACB-LC1280S10	Sustituye a Cartucho Brother LC-1280XL 4K/2CMY, Set Ahorro (10 uds.)	LC-1280
TACB-LC1280S18	Sustituye a Cartucho Brother LC-1280XL 6K/4CMY, Set Ahorro (18 uds.)	LC-1280
TACB-LC1280S3	Sustituye a Cartucho Brother LC-1280XLRBWPDR CMY, Set Ahorro (3 uds.)	LC-1280
TACB-LC1280S4	Sustituye a Cartucho Brother LC-1280XL CMYK, Set Ahorro (4 uds.)	LC-1280
TACB-LC1280Y	Sustituye a Cartucho Brother LC-1280Y XXL Amarillo	LC-1280XLY
TACB-LC129B	Sustituye a Cartucho Brother LC-129BK Negro	LC-129XLBK
TACB-LC221B	Sustituye a Cartucho Brother LC-221BK Negro XXL	LC-221BK
TACB-LC221C	Sustituye a Cartucho Brother LC-221C Cian XXL	LC-221C
TACB-LC221M	Sustituye a Cartucho Brother LC-221M Magenta XXL	LC-221M
TACB-LC221S4	Sustituye a Cartucho Brother LC-221 XXL CMYK, Set Ahorro (4 uds.)	LC-221
TACB-LC221Y	Sustituye a Cartucho Brother LC-221Y Amarillo XXL	LC-221Y
TACB-LC223B	Sustituye a Cartucho Brother LC-223BK Negro	LC-223BK
TACB-LC223C	Sustituye a Cartucho Brother LC-223C Cian	LC-223C
TACB-LC223M	Sustituye a Cartucho Brother LC-223M Magenta	LC-223M
TACB-LC223S4	Sustituye a Cartucho Brother LC-223VALBPDR CMYK, Set Ahorro (4 uds.)	LC-223VALBPDR
TACB-LC223Y	Sustituye a Cartucho Brother LC-223Y Amarillo	LC-223Y
TACB-LC225C	Sustituye a Cartucho Brother LC-225C Cian	LC-225C
TACB-LC225M	Sustituye a Cartucho Brother LC-225M Magenta	LC-225M
TACB-LC225Y	Sustituye a Cartucho Brother LC-225Y Amarillo	LC-225Y
TACB-LC227B	Sustituye a Cartucho Brother LC-227BK Negro	LC-227BK

TACB-LC229B	Sustituye a Cartucho Brother LC-229BK XL Negro	LC-229BK
TACB-LC229S4	Sustituye a Cartucho Brother LC-229 XL VALBP CMYK, Set Ahorro (4 uds.)	LC-229XLBK
TACB-LC900B	Sustituye a Cartucho Brother LC-900BK Negro	LC-900BK
TACB-LC900C	Sustituye a Cartucho Brother LC-900C Cian	LC-900C
TACB-LC900M	Sustituye a Cartucho Brother LC-900M Magenta	LC-900M
TACB-LC900S10	Sustituye a Cartucho Brother LC-900 4K/2CMY, Set Ahorro (10 uds.)	LC-900
TACB-LC900S18	Sustituye a Cartucho Brother LC-900 6K/4CMY, Set Ahorro (18 uds.)	LC-900
TACB-LC900S4	Sustituye a Cartucho Brother LC-900 CMYK, Set Ahorro (4 uds.)	LC-900
TACB-LC900Y	Sustituye a Cartucho Brother LC-900Y Amarillo	LC-900Y
TACB-LC970B	Sustituye a Cartucho Brother LC-970BK Negro	LC-970BK
TACB-LC970C	Sustituye a Cartucho Brother LC-970C Cian	LC-970C
TACB-LC970M	Sustituye a Cartucho Brother LC-970M Magenta	LC-970M
TACB-LC970S10	Sustituye a Cartucho Brother LC-970 4K/2CMY, Set Ahorro (10 uds.)	LC-970
TACB-LC970S20	Sustituye a Cartucho Brother LC-970 5CMYK, Set Ahorro (20 uds.)	LC-970
TACB-LC970S4	Sustituye a Cartucho Brother LC-970 CMYK, Set Ahorro (4 uds.)	LC-970
TACB-LC970Y	Sustituye a Cartucho Brother LC-970Y Amarillo	LC-970Y
TACB-LC980B	Sustituye a Cartucho Brother LC-980BK Negro	LC-980BK
TACB-LC980BDP	Sustituye a Cartucho Brother LC-980BKP2 Negro, Pack Doble	LC-980BK
TACB-LC980C	Sustituye a Cartucho Brother LC-980C Cian	LC-980C
TACB-LC980M	Sustituye a Cartucho Brother LC-980M Magenta	LC-980M
TACB-LC980S10	Sustituye a Cartucho Brother LC-980 4K/2CMY, Set Ahorro (10 uds.)	LC-980
TACB-LC980S20	Sustituye a Cartucho Brother LC-980 5CMYK, Set Ahorro (20 uds.)	LC-980
TACB-LC980S4	Sustituye a Cartucho Brother LC-980 CMYK, Set Ahorro (4 uds.)	LC-980
TACB-LC980Y	Sustituye a Cartucho Brother LC-980Y Amarillo	LC-980Y
TACB-LC985B	Sustituye a Cartucho Brother LC-985BK Negro	LC-985BK
TACB-LC985BDP	Sustituye a Cartucho Brother LC-985BKP2 Negro, Pack Doble	LC-985BKP2
TACB-LC985C	Sustituye a Cartucho Brother LC-985C Cian	LC-985C
TACB-LC985M	Sustituye a Cartucho Brother LC-985M Magenta	LC-985M
TACB-LC985S10	Sustituye a Cartucho Brother LC-985 4K/2CMY, Set Ahorro (10 uds.)	LC-985
TACB-LC985S18	Sustituye a Cartucho Brother LC-985 6K/4CMY, Set Ahorro (18 uds.)	LC-985
TACB-LC985S3	Sustituye a Cartucho Brother LC-985RBWBP CMY, Set Ahorro (3 uds.)	LC-985RBWBP
TACB-LC985S4	Sustituye a Cartucho Brother LC-985VALB CMYK, Set Ahorro (4 uds.)	LC-985VALBP
TACB-LC985Y	Sustituye a Cartucho Brother LC-985Y Amarillo	LC-985Y
TACB-PGI9S5	Sustituye a Cartucho Canon 1033B011 MK/LC/LM/G/R, Set Ahorro (5 uds.)	1033B011
TACB-PGI9S5B	Sustituye a Cartucho Canon 1034B011 CMY/PK/GY, Set Ahorro (5 uds.)	1034B011
TACC-BCI10B	Sustituye a Cartucho Canon 0956A002/BCI-10BK Negro	0956A002
TACC-BCI10BDP	Sustituye a Cartucho Canon BCI-10BK Negro, Pack Doble	0956A002
TACC-BCI1201C	Sustituye a Cartucho Canon 7338A001/BCI-1201C Cian	7338A001
TACC-BCI1401B	Sustituye a Cartucho Canon 7568A001/BCI-1401BK Negro	7568A001
TACC-BCI1401C	Sustituye a Cartucho Canon 7569A001/BCI-1401C Cian	7569A001
TACC-BCI1401M	Sustituye a Cartucho Canon 7570A001/BCI-1401M Magenta	7570A001
TACC-BCI1401PC	Sustituye a Cartucho Canon 7572A001/BCI-1401PC Cian Fotográfico	7572A001
TACC-BCI1401PM	Sustituye a Cartucho Canon 7573A001/BCI-1401PM Magenta Fotográfico	7573A001
TACC-BCI1401Y	Sustituye a Cartucho Canon 7571A001/BCI-1401Y Amarillo	7571A001
TACC-BCI1411B	Sustituye a Cartucho Canon 7574A001/BCI-1411BK Negro	7574A001
TACC-BCI1411C	Sustituye a Cartucho Canon 7575A001/BCI-1411C Cian	7575A001
TACC-BCI1411M	Sustituye a Cartucho Canon 7576A001/BCI-1411M Magenta	7576A001
TACC-BCI1411PC	Sustituye a Cartucho Canon 7578A001/BCI-1411PC Cian Fotográfico	7578A001
TACC-BCI1411PM	Sustituye a Cartucho Canon 7579A001/BCI-1411PM Magenta Fotográfico	7579A001
TACC-BCI1411Y	Sustituye a Cartucho Canon 7577A001/BCI-1411Y Amarillo	7577A001
TACC-BCI1421B	Sustituye a Cartucho Canon 8367A001/BCI-1421BK Negro	8367A001
TACC-BCI1421C	Sustituye a Cartucho Canon 8368A001/BCI-1421C Cian	8368A001
TACC-BCI1421M	Sustituye a Cartucho Canon 8369A001/BCI-1421M Magenta	8369A001
TACC-BCI1421PC	Sustituye a Cartucho Canon 8371A001/BCI-1421PC Cian Fotográfico	8371A001
TACC-BCI1421PM	Sustituye a Cartucho Canon 8372A001/BCI-1421PM Magenta Fotográfico	8372A001
TACC-BCI1421Y	Sustituye a Cartucho Canon 8370A001/BCI-1421Y Amarillo	8370A001
TACC-BCI1431B	Sustituye a Cartucho Canon 8963A001/BCI-1431BK Negro	8963A001
TACC-BCI1431C	Sustituye a Cartucho Canon 8970A001/BCI-1431C Cian	8970A001
TACC-BCI1431M	Sustituye a Cartucho Canon 8971A001/BCI-1431M Magenta	8971A001
TACC-BCI1431PC	Sustituye a Cartucho Canon 8973A001/BCI-1431PC Cian Fotográfico	8973A001
TACC-BCI1431PM	Sustituye a Cartucho Canon 8974A001/BCI-1431PM Magenta Fotográfico	8974A001
TACC-BCI1431Y	Sustituye a Cartucho Canon 8972A001/BCI-1431Y Amarillo	8972A001
TACC-BCI15B	Sustituye a Cartucho Canon 8190A002/BCI-15BK Negro	8190A002
TACC-BCI15BDP	Sustituye a Cartucho Canon 8190A002/BCI-15BK Negro, Pack Doble	8190A002
TACC-BCI15C	Sustituye a Cartucho Canon 8191A002/BCI-15C/I70 CMY	8191A002
TACC-BCI16C	Sustituye a Cartucho Canon 9818A002/BCI-16C CMY	9818A002
TACC-BCI16CDP	Sustituye a Cartucho Canon 9818A002/BCI-16C CMY, Pack Doble	9818A002
TACC-BCI21B	Sustituye a Cartucho Canon 0954A002/BCI-21BK Negro	0954A002
TACC-BCI21C	Sustituye a Cartucho Canon 0955A002/BCI-21C CMY	0955A002
TACC-BCI21S2	Sustituye a Cartucho Canon 0954A379/BCI-21 BK/CMY, Set Ahorro (2 uds.)	0954A002/0955A002
TACC-BCI24B	Sustituye a Cartucho Canon 6881A002/BCI-24BK Negro	6881A002

TACC-BCI24C	Sustituye a Cartucho Canon 6882A002/BCI-24C CMY	6882A002
TACC-BCI24S2	Sustituye a Cartucho Canon 6881A051/BCI-24 BK/CMY, Set Ahorro (2 uds.)	6881A051
TACC-BCI3EB	Sustituye a Cartucho Canon 4479A002/BCI-3EBK Negro sin Chip	4479A002
TACC-BCI3EBP	Sustituye a Cartucho Canon 4479A028/BCI-3EBK Negro, Pack Doble	4479A028
TACC-BCI3EC	Sustituye a Cartucho Canon 4480A002/BCI-3EC Cian sin Chip	4480A002
TACC-BCI3EM	Sustituye a Cartucho Canon 4481A002/BCI-3EM Magenta sin Chip	4481A002
TACC-BCI3EPB	Sustituye a Cartucho Canon 4485A002/BCI-3EPBK Negro Fotográfico sin Chip	4485A002
TACC-BCI3EPC	Sustituye a Cartucho Canon 4483A002/BCI-3EPC Cian Fotográfico sin Chip	4483A002
TACC-BCI3EPM	Sustituye a Cartucho Canon 4484A002/BCI-3EPM Magenta Fotográfico sin Chip	4484A002
TACC-BCI3EY	Sustituye a Cartucho Canon 4482A002/BCI-3EY Amarillo sin Chip	4482A002
TACC-BCI3S3	Sustituye a Cartucho Canon 4480A262/BCI-3E CMY, Set Ahorro (3 uds.)	4480A262
TACC-BCI3S4	Sustituye a Cartucho Canon BCI-3 CMYK, Set Ahorro (4 uds.)	4479A002-4482A002
TACC-BCI3S6	Sustituye a Cartucho Canon BCI-3 CMYK/LC/LM, Set Ahorro (6 uds.)	4479A002
TACC-BCI6B	Sustituye a Cartucho Canon 4705A002/BCI-6BK Negro sin Chip	4705A002
TACC-BCI6C	Sustituye a Cartucho Canon 4706A002/BCI-6C Cian sin Chip	4706A002
TACC-BCI6M	Sustituye a Cartucho Canon 4707A002/BCI-6M Magenta sin Chip	4707A002
TACC-BCI6S3	Sustituye a Cartucho Canon 4706A022/BCI-6 CMY, Set Ahorro (3 uds.)	4706A022
TACC-BCI6Y	Sustituye a Cartucho Canon 4708A002/BCI-6Y Amarillo sin Chip	4708A002
TACC-CL546S2	Sustituye a Cartucho Canon PG545/CL-546 BK/CMY, Set Ahorro (2 uds.)	8286B001/50116514
TACC-CLI36CL	Sustituye a Cartucho Canon 1511B001/CLI-36 CMY	1511B001
TACC-CLI36CLDP	Sustituye a Cartucho Canon 1511B018/CLI-36 CMY, Pack Doble	1511B001/1511B018
TACC-CLI36S2	Sustituye a Cartucho Canon PGI-35/CLI-36 BK/CMY, Set Ahorro (2 uds.)	1509B001/1511B001
TACC-CLI42B	Sustituye a Cartucho Canon 6384B001/CLI-42BK Negro	6384B001
TACC-CLI42C	Sustituye a Cartucho Canon 6385B001/CLI-42C Cian	6385B001
TACC-CLI42GY	Sustituye a Cartucho Canon 6390B001/CLI-42GY Gris	6390B001
TACC-CLI42LGY	Sustituye a Cartucho Canon 6391B001/CLI-42LGY Gris Fotográfico	6391B001
TACC-CLI42M	Sustituye a Cartucho Canon 6386B001/CLI-42M Magenta	6386B001
TACC-CLI42PC	Sustituye a Cartucho Canon 6388B001/CLI-42PC Cian Fotográfico	6388B001
TACC-CLI42PM	Sustituye a Cartucho Canon 6389B001/CLI-42PM Magenta Fotográfico	6389B001
TACC-CLI42S8	Sustituye a Cartucho Canon 6384B010/CLI-42 CMYK/LC/LM/G/R, Set Ahorro (8 uds.)	6384B010
TACC-CLI42Y	Sustituye a Cartucho Canon 6387B001/CLI-42Y Amarillo	6387B001
TACC-CLI521B	Sustituye a Cartucho Canon 2932B009/PGI-520BK Negro con Chip, Pack Doble	2932B009
TACC-CLI521C	Sustituye a Cartucho Canon CLI-521C Cian con Chip	2934B001
TACC-CLI521GY	Sustituye a Cartucho Canon CLI-521GY Gris con Chip	2937B001
TACC-CLI521M	Sustituye a Cartucho Canon CLI-521M Magenta con Chip	2935B001
TACC-CLI521PB	Sustituye a Cartucho Canon CLI-521BK Negro Fotográfico con Chip	2933B001
TACC-CLI521S10	Sustituye a Cartucho Canon CLI-521 2PK/2CMYK, Set Ahorro con Chip (10 uds.)	2933B001-2936B001
TACC-CLI521S20	Sustituye a Cartucho Canon CLI-521 4PK/4CMYK, Set Ahorro con Chip (20 uds.)	2933B001-2936B001
TACC-CLI521S3	Sustituye a Cartucho Canon CLI-521 CMY, Set Ahorro con Chip (3 uds.)	2934B007
TACC-CLI521S5	Sustituye a Cartucho Canon CLI-521 CMYK/PK, Set Ahorro con Chip (5 uds.)	2932B001
TACC-CLI521Y	Sustituye a Cartucho Canon CLI-521Y Amarillo con Chip	2936B001
TACC-CLI526B	Sustituye a Cartucho Canon 4540B001/CLI-526BK Negro con Chip	4540B001
TACC-CLI526C	Sustituye a Cartucho Canon 4541B001/CLI-526C Cian con Chip	4541B001
TACC-CLI526GY	Sustituye a Cartucho Canon 4544B001/CLI-526GY Gris con Chip	4544B001
TACC-CLI526M	Sustituye a Cartucho Canon 4542B001/CLI-526M Magenta con Chip	4542B001
TACC-CLI526S10	Sustituye a Cartucho Canon CLI-526/PGI-525 2PK/2CMYK, Set Ahorro (10 uds.)	4529B001/4540-4544
TACC-CLI526S20	Sustituye a Cartucho Canon CLI-526/PGI-525 4PK/4CMYK, Set Ahorro (20 uds.)	4529B001/4540-4544
TACC-CLI526S3	Sustituye a Cartucho Canon 4541B006/CLI-526 CMY, Set Ahorro (3 uds.)	4541B006
TACC-CLI526S5	Sustituye a Cartucho Canon CLI-526/PGI-525 CMYK/PK, Set Ahorro (5 uds.)	4540B001
TACC-CLI526Y	Sustituye a Cartucho Canon 4543B001/CLI-526Y Amarillo con Chip	4543B001
TACC-CLI551BXL	Sustituye a Cartucho Canon 6443B001/CLI-551BXL Negro	6443B001
TACC-CLI551CXL	Sustituye a Cartucho Canon 6444B001/CLI-551CXL Cian	6444B001
TACC-CLI551GYXL	Sustituye a Cartucho Canon 6447B001/CLI-551GYXL Gris	6447B001
TACC-CLI551MXL	Sustituye a Cartucho Canon 6445B001/CLI-551MXL Magenta	6445B001
TACC-CLI551S10	Sustituye a Cartucho Canon CLI-551XL/PGI-550XL 2PGK/2CMYK, Set Ahorro (10 uds.)	6431B001/6443-46
TACC-CLI551S20	Sustituye a Cartucho Canon CLI-551XL 5CMYK, Set Ahorro (20 uds.)	6443B001-646B001
TACC-CLI551S4	Sustituye a Cartucho Canon 6509B009/CLI-551 CMYK, Set Ahorro (4 uds.)	6509B009
TACC-CLI551S5	Sustituye a Cartucho Canon CLI-551XL/PGI-550XL CMYK/PGK, Set Ahorro (5 uds.)	6443B001-646B001
TACC-CLI551YXL	Sustituye a Cartucho Canon 6446B001/CLI-551YXL Amarillo	6446B001
TACC-CLI571B	Sustituye a Cartucho Canon 0331C001/CLI-571BK XL Negro	0331C001
TACC-CLI571C	Sustituye a Cartucho Canon 0332C001/CLI-571C XL Cian	0332C001
TACC-CLI571GY	Sustituye a Cartucho Canon 0335C001/CLI-571GY XL Gris	0335C001
TACC-CLI571M	Sustituye a Cartucho Canon 0333C001/CLI-571M XL Magenta	0333C001
TACC-CLI571Y	Sustituye a Cartucho Canon 0334C001/CLI-571Y XL Amarillo	0334C001
TACC-CLI8B	Sustituye a Cartucho Canon 0620B001/CLI-8BK Negro Fotográfico con Chip	0620B001
TACC-CLI8C	Sustituye a Cartucho Canon 0621B001/CLI-8C Cian con Chip	0621B001
TACC-CLI8G	Sustituye a Cartucho Canon 0627B001/CLI-8G Green con Chip	0627B001
TACC-CLI8M	Sustituye a Cartucho Canon 0622B001/CLI-8M Magenta con Chip	0622B001
TACC-CLI8PC	Sustituye a Cartucho Canon 0624B001/CLI-8PC Cian Fotográfico con Chip	0624B001
TACC-CLI8PM	Sustituye a Cartucho Canon 0625B001/CLI-8PM Magenta Fotográfico con Chip	0625B001
TACC-CLI8R	Sustituye a Cartucho Canon 0626B001/CLI-8R Rojo con Chip	0626B001

TACC-CLI8S10	Sustituye a Cartucho Canon CLI-8 4K/2CMY, Set Ahorro con Chip (10 uds.)	0620B001-0623B001
TACC-CLI8S18	Sustituye a Cartucho Canon CLI-8 6K/4CMY, Set Ahorro con Chip (18 uds.)	0620B001-0623B001
TACC-CLI8S3	Sustituye a Cartucho Canon 0621B026/CLI-8 CMY, Set Ahorro con Chip (3 uds.)	0621B026
TACC-CLI8S4	Sustituye a Cartucho Canon CLI-8 CMYK, Set Ahorro con Chip (4 uds.)	0620B001-0623B001
TACC-CLI8S6	Sustituye a Cartucho Canon CLI-8 CMYK/LC/LM, Set Ahorro (6 uds.)	0620B001-0625B001
TACC-CLI8S8	Sustituye a Cartucho Canon CLI-8 CMYK/LC/LM/G/R, Set Ahorro (8 uds.)	0620B010
TACC-CLI8Y	Sustituye a Cartucho Canon 0623B001/CLI-8Y Amarillo con Chip	0623B001
TACC-PFI101B	Sustituye a Cartucho Canon 0883B001/PFI-101BK Negro	0883B001
TACC-PFI101BL	Sustituye a Cartucho Canon 0891B001/PFI-101B Azul	0891B001
TACC-PFI101C	Sustituye a Cartucho Canon 0884B001/PFI-101C Cian	0884B001
TACC-PFI101G	Sustituye a Cartucho Canon 0890B001/PFI-101G Verde	0890B001
TACC-PFI101GY	Sustituye a Cartucho Canon 0892B001/PFI-101GY Gris	0892B001
TACC-PFI101M	Sustituye a Cartucho Canon 0885B001/PFI-101M Magenta	0885B001
TACC-PFI101MB	Sustituye a Cartucho Canon 0882B001/PFI-101MBK Negro Mate	0882B001
TACC-PFI101PC	Sustituye a Cartucho Canon 0887B001/PFI-101PC Cian Fotográfico	0887B001
TACC-PFI101PGY	Sustituye a Cartucho Canon 0893B001/PFI-101PGY Gris Fotográfico	0893B001
TACC-PFI101PM	Sustituye a Cartucho Canon 0888B001/PFI-101PM Magenta Fotográfico	0888B001
TACC-PFI101R	Sustituye a Cartucho Canon 0889B001/PFI-101R Rojo	0889B001
TACC-PFI101Y	Sustituye a Cartucho Canon 0886B001/PFI-101Y Amarillo	0886B001
TACC-PFI102B	Sustituye a Cartucho Canon 0895B001/PFI-102BK Negro	0895B001
TACC-PFI102C	Sustituye a Cartucho Canon 0896B001/PFI-102C Cian	0896B001
TACC-PFI102M	Sustituye a Cartucho Canon 0897B001/PFI-102M Magenta	0897B001
TACC-PFI102MB	Sustituye a Cartucho Canon 0894B001/PFI-102MBK Negro Mate	0894B001
TACC-PFI102S4	Sustituye a Cartucho Canon PFI-102 CMY/MK, Set Ahorro (4 uds.)	0894B001-0898B001
TACC-PFI102Y	Sustituye a Cartucho Canon 0898B001/PFI-102Y Amarillo	0898B001
TACC-PFI103B	Sustituye a Cartucho Canon 2212B001/PFI-103BK Negro	2212B001
TACC-PFI103GY	Sustituye a Cartucho Canon 2213B001/PFI-103GY Gris	2213B001
TACC-PFI103MB	Sustituye a Cartucho Canon 2211B001/PFI-103MBK Negro Mate	2211B001
TACC-PFI103PGY	Sustituye a Cartucho Canon 2214B001/PFI-103PGY Gris Fotográfico	2214B001
TACC-PFI107B	Sustituye a Cartucho Canon 6705B001/PFI-107BK Negro	6705B001
TACC-PFI107C	Sustituye a Cartucho Canon 6706B001/PFI-107C Cian	6706B001
TACC-PFI107M	Sustituye a Cartucho Canon 6707B001/PFI-107M Magenta	6707B001
TACC-PFI107MB	Sustituye a Cartucho Canon PFI-107MBK Negro Mate	6704B001
TACC-PFI107S5	Sustituye a Cartucho Canon PFI-107 CMYK/MK, Set Ahorro (5 uds.)	6705B001
TACC-PFI107Y	Sustituye a Cartucho Canon 6708B001/PFI-107Y Amarillo	6708B001
TACC-PFI701B	Sustituye a Cartucho Canon 0900B001/PFI-701BK Negro	0900B001
TACC-PFI701C	Sustituye a Cartucho Canon 0901B001/PFI-701C Cian	0901B001
TACC-PFI701GY	Sustituye a Cartucho Canon 0909B001/PFI-701GY Gris	0909B001
TACC-PFI701M	Sustituye a Cartucho Canon 0902B001/PFI-701M Magenta	0902B001
TACC-PFI701MB	Sustituye a Cartucho Canon 0899B001/PFI-701MBK Negro Mate	0899B001
TACC-PFI701PC	Sustituye a Cartucho Canon 0904B001/PFI-701PC Cian Fotográfico	0904B001
TACC-PFI701PGY	Sustituye a Cartucho Canon 0910B001/PFI-701PGY Gris Fotográfico	0910B001
TACC-PFI701PM	Sustituye a Cartucho Canon 0905B001/PFI-701PM Magenta Fotográfico	0905B001
TACC-PFI701R	Sustituye a Cartucho Canon 0906B001/PFI-701R Rojo	0906B001
TACC-PFI701Y	Sustituye a Cartucho Canon 0903B001/PFI-701Y Amarillo	0903B001
TACC-PFI702B	Sustituye a Cartucho Canon 2220B001/PFI-702BK Negro Pigmentado	2220B001
TACC-PFI702GY	Sustituye a Cartucho Canon 2221B001/PFI-702GY Gris Pigmentado	2221B001
TACC-PFI702MB	Sustituye a Cartucho Canon 2219B001/PFI-702MBK Negro Mate Pigmentado	2219B001
TACC-PFI702PGY	Sustituye a Cartucho Canon 2222B001/PFI-702PGY Gris Fotográfico	2222B001
TACC-PGI1500S4	Sustituye a Cartucho Canon PGI-1500XLCMYBK CMYK, Set Ahorro (4 uds.)	9182B001/9193-95
TACC-PGI1500XLB	Sustituye a Cartucho Canon 9182B001/PGI-1500XLBK Negro	9182B001
TACC-PGI1500XLC	Sustituye a Cartucho Canon 9193B001/CLI-1500XLC Cian	9193B001
TACC-PGI1500XLM	Sustituye a Cartucho Canon 9194B001/CLI-1500XLM Magenta	9194B001
TACC-PGI1500XLY	Sustituye a Cartucho Canon 9195B001/CLI-1500XLY Amarillo	9195B001
TACC-PGI2500S4	Sustituye a Cartucho Canon PGI-2500XLCMYBK CMYK, Set Ahorro (4 uds.)	9254B004
TACC-PGI2500XLB	Sustituye a Cartucho Canon 9254B001/PGI-2500XLBK Negro	9254B001
TACC-PGI2500XLC	Sustituye a Cartucho Canon 9265B001/PGI-2500XLC Cian	9265B001
TACC-PGI2500XLM	Sustituye a Cartucho Canon 9266B001/PGI-2500XLM Magenta	9266B001
TACC-PGI2500XLY	Sustituye a Cartucho Canon 9267B001/PGI-2500XLY Amarillo	9267B001
TACC-PGI29C	Sustituye a Cartucho Canon 4873B001/PGI-29C Cian	4873B001
TACC-PGI29CO	Sustituye a Cartucho Canon 4879B001/PGI-29CO Optimizador de Brillo	4879B001
TACC-PGI29DGY	Sustituye a Cartucho Canon 4870B001/PGI-29DGY Gris Oscuro	4870B001
TACC-PGI29GY	Sustituye a Cartucho Canon 4871B001/PGI-29GY Gris	4871B001
TACC-PGI29LGY	Sustituye a Cartucho Canon 4872B001/PGI-29LGY Gris Fotográfico	4872B001
TACC-PGI29M	Sustituye a Cartucho Canon 4874B001/PGI-29M Magenta	4874B001
TACC-PGI29MB	Sustituye a Cartucho Canon 4868B001/PGI-29MBK Negro Mate	4868B001
TACC-PGI29PB	Sustituye a Cartucho Canon 4869B001/PGI-29PBK Negro Mate	4869B001
TACC-PGI29PC	Sustituye a Cartucho Canon 4876B001/PGI-29PC Cian Fotográfico	4876B001
TACC-PGI29PM	Sustituye a Cartucho Canon 4877B001/PGI-29PM Magenta Fotográfico	4877B001
TACC-PGI29R	Sustituye a Cartucho Canon 4878B001/PGI-29R Rojo	4878B001
TACC-PGI29S5	Sustituye a Cartucho Canon 4868B005/PGI-29 MK/K/DGY/GY/LGY, Set Ahorro (5 uds.)	4868B005

TACC-PGI29S6	Sustituye a Cartucho Canon 4873B005/PGI-29 CMY/LC/LM/R, Set Ahorro (6 uds.)	4873B005
TACC-PGI29Y	Sustituye a Cartucho Canon 4875B001/PGI-29Y Amarillo	4875B001
TACC-PGI35B	Sustituye a Cartucho Canon 1509B001/PGI-35 Negro	1509B001
TACC-PGI35BDP	Sustituye a Cartucho Canon 1509B012/PGI-35BK Negro, Pack Doble	1509B001
TACC-PGI520B	Sustituye a Cartucho Canon PGI-520BK Negro con Chip	2932B001
TACC-PGI525PGB	Sustituye a Cartucho Canon 4529B001/PGI-525PGBK Negro con Chip	4529B001
TACC-PGI525PGBDP	Sustituye a Cartucho Canon 4529B010/PGI-525PGBK Negro, Pack Doble	4529B010
TACC-PGI550PGB	Sustituye a Cartucho Canon 6431B001/PGI-550PGBKXL Negro	6431B001
TACC-PGI550PGBDP	Sustituye a Cartucho Canon 6431B001/PGI-550PGBKXL Negro, Pack Doble	6431B001
TACC-PGI555PGBXXL	Sustituye a Cartucho Canon 8049B001/PGI-555PGBKXXL Negro	8049B001
TACC-PGI570PB	Sustituye a Cartucho Canon 0318C001/PGI-570PGBK XL Negro Pigmentado	0318C001
TACC-PGI5B	Sustituye a Cartucho Canon PGI-5BK Negro con Chip, Pack Doble	0628B025
TACC-PGI5B	Sustituye a Cartucho Canon PGI-5BK Negro con Chip	0628B001
TACC-PGI72C	Sustituye a Cartucho Canon 6404B001/PGI-72C Cian	6404B001
TACC-PGI72CO	Sustituye a Cartucho Canon 6411B001/PGI-72CO Optimizador de Brillo	6411B001
TACC-PGI72GY	Sustituye a Cartucho Canon 6409B001/PGI-72GY Gris	6409B001
TACC-PGI72M	Sustituye a Cartucho Canon 6405B001/PGI-72M Magenta	6405B001
TACC-PGI72MB	Sustituye a Cartucho Canon 6402B001/PGI-72MBK Negro Mate	6402B001
TACC-PGI72PB	Sustituye a Cartucho Canon 6403B001/PGI-72PBK Negro Fotográfico	6403B001
TACC-PGI72PC	Sustituye a Cartucho Canon 6407B001/PGI-72PC Cian Fotográfico	6407B001
TACC-PGI72PM	Sustituye a Cartucho Canon 6408B001/PGI-72PM Magenta Fotográfico	6408B001
TACC-PGI72R	Sustituye a Cartucho Canon 6410B001/PGI-72R Rojo	6410B001
TACC-PGI72S5	Sustituye a Cartucho Canon 6403B007/PGI-72 PK/LC/LM/GY/R, Set Ahorro (5 uds.)	6403B007
TACC-PGI72Y	Sustituye a Cartucho Canon 6406B001/PGI-72Y Amarillo	6406B001
TACC-PGI7B	Sustituye a Cartucho Canon 2444B001/PGI-7BK Negro	2444B001
TACC-PGI9C	Sustituye a Cartucho Canon 1035B001/PGI-9C Cian	1035B001
TACC-PGI9G	Sustituye a Cartucho Canon 1041B001/PGI-9G Verde	1041B001
TACC-PGI9GY	Sustituye a Cartucho Canon 1042B001/PGI-9GY Gris	1042B001
TACC-PGI9M	Sustituye a Cartucho Canon 1036B001/PGI-9M Magenta	1036B001
TACC-PGI9MB	Sustituye a Cartucho Canon 1033B001/PGI-9MBK Negro Mate	1033B001
TACC-PGI9PB	Sustituye a Cartucho Canon 1034B001/PGI-9PBK Negro Fotográfico	1034B001
TACC-PGI9PC	Sustituye a Cartucho Canon 1038B001/PGI-9PC Cian Fotográfico	1038B001
TACC-PGI9PM	Sustituye a Cartucho Canon 1039B001/PGI-9PM Magenta Fotográfico	1039B001
TACC-PGI9R	Sustituye a Cartucho Canon 1040B001/PGI-9R Rojo	1040B001
TACC-PGI9Y	Sustituye a Cartucho Canon 1037B001/PGI-9Y Amarillo	1037B001
TACDL-59211295	Sustituye a Cartucho Dell 592-11343/592-11295/X768N XL Negro	592-11343
TACDL-59211297	Sustituye a Cartucho Dell 592-11345/592-11297/X769N XL CMY	592-11345
TACDL-59211315	Sustituye a Cartucho Dell 592-11331/592-11315/Y498D Negro	592-11331
TACDL-59211317	Sustituye a Cartucho Dell 592-11333/592-11317/Y499D/ X740N CMY	592-11333
TACDL-X768S2	Sustituye a Cartucho Dell X768-769N XL BK/CMY, Set Ahorro (2 uds.)	592-11343-592-11345
TACDL-Y498S4	Sustituye a Cartucho Dell Y498D-Y499D CMYK, Set Ahorro (4 uds.)	59211331-317
TACE-24B	Sustituye a Cartucho Epson C13T24314010/24XL Negro	C13T24314010
TACE-24C	Sustituye a Cartucho Epson C13T24324010/24XL Cian	C13T24324010
TACE-24M	Sustituye a Cartucho Epson C13T24334010/24XL Magenta	C13T24334010
TACE-24PC	Sustituye a Cartucho Epson C13T24354010/24XL Cian Fotográfico	C13T24354010
TACE-24PM	Sustituye a Cartucho Epson C13T24364010/24XL Magenta Fotográfico	C13T24364010
TACE-24XLS6	Sustituye a Cartucho Epson C13T24384010/24XL CMYK/LC/LM, Set Ahorro (6 uds.)	C13T24314010-T2434
TACE-24Y	Sustituye a Cartucho Epson C13T24344010/24XL Amarillo	C13T24344010
TACE-26B	Sustituye a Cartucho Epson 26XL/C13T26214010 Negro	C13T26214010
TACE-26C	Sustituye a Cartucho Epson C13T26324010/26XL Cian	C13T26324010
TACE-26M	Sustituye a Cartucho Epson C13T26334010/26XL Magenta	C13T26334010
TACE-26XLS10	Sustituye a Cartucho Epson C13T26364010/26XL 4K/2CMY, Set Ahorro (10 uds.)	C13T26364010
TACE-26XLS18	Sustituye a Cartucho Epson C13T26364010/26XL 6K/4CMY, Set Ahorro (18 uds.)	C13T26104010/T2632-34
TACE-26XLS4	Sustituye a Cartucho Epson C13T26364010/26XL CMYK, Set Ahorro (4 uds.)	C13T26214010
TACE-26Y	Sustituye a Cartucho Epson C13T26344010/26XL Amarillo	C13T26344010
TACE-27B	Sustituye a Cartucho Epson C13T27914010/27XXL Negro	C13T27914010
TACE-27C	Sustituye a Cartucho Epson C13T27124010 /27XL Cian	C13T27124010
TACE-27M	Sustituye a Cartucho Epson C13T27134010 /27XL Magenta	C13T27134010
TACE-27Y	Sustituye a Cartucho Epson C13T27144010 /27XL Amarillo	C13T27144010
TACE-29XLB	Sustituye a Cartucho Epson C13T29914010/29 XL Negro	C13T29914010
TACE-29XLC	Sustituye a Cartucho Epson C13T29924010/29 XL Cian	C13T29924010
TACE-29XLM	Sustituye a Cartucho Epson C13T29934010/29 XL Magenta	C13T29934010
TACE-29XLY	Sustituye a Cartucho Epson C13T29944010/29 XL Amarillo	C13T29944010
TACE-33XLB	Sustituye a Cartucho Epson C13T33514010/33 XL Negro	C13T33514010
TACE-33XLC	Sustituye a Cartucho Epson C13T33624010/33 XL Cian	C13T33624010
TACE-33XLM	Sustituye a Cartucho Epson C13T33634010/33 XL Magenta	C13T33634010
TACE-33XLPB	Sustituye a Cartucho Epson C13T33614010/33 XL Negro Fotográfico	C13T33614010
TACE-33XLY	Sustituye a Cartucho Epson C13T33644010/33 XL Amarillo	C13T33634010
TACE-78XLS4	Sustituye a Cartucho Epson C13T789/78XL CMYK, Set Ahorro (4 uds.)	C13T789140-440
TACE-79XLB	Sustituye a Cartucho Epson C13T79014010/79XL Negro	C13T79014010
TACE-79XLC	Sustituye a Cartucho Epson C13T79024010/79XL Cian	C13T79024010

TACE-79XLM	Sustituye a Cartucho Epson C13T79034010/79XL Magenta	C13T79034010
TACE-79XLS4	Sustituye a Cartucho Epson C13T790/79XL CMYK, Set Ahorro (4 uds.)	C13T79014010-T7904
TACE-79XLY	Sustituye a Cartucho Epson C13T79044010/79XL Amarillo	C13T79044010
TACE-SJIC1	Sustituye a Cartucho Epson C13S020175/SJIC1 Negro	C13S020175
TACE-SJIC3K	Sustituye a Cartucho Epson C33S020267/SJIC3K Negro	C33S020267
TACE-SJIC5	Sustituye a Cartucho Epson C33S020271/SJIC5 Negro	C33S020271
TACE-SJIC6	Sustituye a Cartucho Epson C33S020403/SJIC6 Negro	C33S020403
TACE-SJIC8	Sustituye a Cartucho Epson C33S020407/SJIC8 Negro	C33S020407
TACE-T007	Sustituye a Cartucho Epson C13T00740110/T007 Negro	C13T00740110
TACE-T008	Sustituye a Cartucho Epson C13T00840110/T008 CMY	C13T00840110
TACE-T026	Sustituye a Cartucho Epson C13T02640110/T026 Negro	C13T02640110
TACE-T027	Sustituye a Cartucho Epson C13T02740110/T027 CMY	C13T02740110
TACE-T0321	Sustituye a Cartucho Epson C13T03214010/T0321 Negro	C13T03214010
TACE-T0322	Sustituye a Cartucho Epson C13T03224010/T0322 Cian	C13T03224010
TACE-T0323	Sustituye a Cartucho Epson C13T03234010/T0323 Magenta	C13T03234010
TACE-T0324	Sustituye a Cartucho Epson C13T03244010/T0324 Amarillo	C13T03244010
TACE-T0324S4	Sustituye a Cartucho Epson T0321-T0324 CMYK, Set Ahorro (4 uds.)	C13T03214010-T0324
TACE-T0331	Sustituye a Cartucho Epson C13T03314010/T0331 Negro	C13T03314010
TACE-T0331S10	Sustituye a Cartucho Epson T0331-T0336 2CMYK/LC/LM, Set Ahorro (10 uds.)	C13T03314010-T0336
TACE-T0331S20	Sustituye a Cartucho Epson T0331-T0336 5K/3CMY/3LC/3LM, Set Ahorro (20 uds.)	C13T03314010-T0336
TACE-T0331S6	Sustituye a Cartucho Epson T0331-T0336 CMYK/LC/LM, Set Ahorro (6 uds.)	C13T03314010-T0336
TACE-T0332	Sustituye a Cartucho Epson C13T03324010/T0332 Cian	C13T03324010
TACE-T0333	Sustituye a Cartucho Epson C13T03334010/T0333 Magenta	C13T03334010
TACE-T0334	Sustituye a Cartucho Epson C13T03344010/T0334 Amarillo	C13T03344010
TACE-T0334S4	Sustituye a Cartucho Epson T0331-T0334 CMYK, Set Ahorro (4 uds.)	C13T03314010-T0334
TACE-T0335	Sustituye a Cartucho Epson C13T03354010/T0335 Cian Fotográfico	C13T03354010
TACE-T0336	Sustituye a Cartucho Epson C13T03364010/T0336 Magenta Fotográfico	C13T03364010
TACE-T0341	Sustituye a Cartucho Epson C13T03414010/T0341/Negro	C13T03414010
TACE-T0342	Sustituye a Cartucho Epson C13T03424010/T0342/Cian	C13T03424010
TACE-T0343	Sustituye a Cartucho Epson C13T03434010/T0343/Magenta	C13T03434010
TACE-T0344	Sustituye a Cartucho Epson C13T03444010/T0344/Amarillo	C13T03444010
TACE-T0345	Sustituye a Cartucho Epson C13T03454010/T0345/Cian Fotográfico	C13T03454010
TACE-T0346	Sustituye a Cartucho Epson C13T03464010/T0346/Magenta Fotográfico	C13T03464010
TACE-T0347	Sustituye a Cartucho Epson C13T03474010/T0347/Negro Fotográfico	C13T03474010
TACE-T0348	Sustituye a Cartucho Epson C13T03484010/T0348 Negro Mate	C13T03484010
TACE-T034S4	Sustituye a Cartucho Epson T034 CMYK, Set Ahorro (4 uds.)	C13T03414010
TACE-T036	Sustituye a Cartucho Epson C13T03614010/T036 Negro	C13T03614010
TACE-T037	Sustituye a Cartucho Epson C13T03704010/T037 CMY	C13T03704010
TACE-T040	Sustituye a Cartucho Epson C13T04014010/T040 Negro	C13T04014010
TACE-T041	Sustituye a Cartucho Epson C13T04104010/T041 CMY	C13T04104010
TACE-T041S4	Sustituye a Cartucho Epson T040/T041 CMYK, Set Ahorro (2 uds.)	C13T04014010-T041
TACE-T0422	Sustituye a Cartucho Epson C13T04224010/T0422 Cian	C13T04224010
TACE-T0423	Sustituye a Cartucho Epson C13T04234010/T0423 Magenta	C13T04234010
TACE-T0424	Sustituye a Cartucho Epson C13T04244010/T0424 Amarillo	C13T04244010
TACE-T0424S4	Sustituye a Cartucho Epson T0321-T0424 CMYK, Set Ahorro (4 uds.)	C13T03214010/T0422-424
TACE-T0441	Sustituye a Cartucho Epson C13T04414010/T0441 Negro	C13T04414010
TACE-T0441S10	Sustituye a Cartucho Epson T0441-T0444 4K/2CMY, Set Ahorro (10 uds.)	C13T04454010
TACE-T0442	Sustituye a Cartucho Epson C13T04424010/T0442 Cian	C13T04424010
TACE-T0443	Sustituye a Cartucho Epson C13T04434010/T0443 Magenta	C13T04434010
TACE-T0444	Sustituye a Cartucho Epson C13T04444010/T0444 Amarillo	C13T04444010
TACE-T0444S20	Sustituye a Cartucho Epson T0441-T0444 5CMYK, Set Ahorro (20 uds.)	C13T04454010
TACE-T0445S4	Sustituye a Cartucho Epson C13T04454010/T0445 CMYK, Set Ahorro (4 uds.)	C13T04454010
TACE-T0481	Sustituye a Cartucho Epson C13T04814010/T0481 Negro	C13T04814010
TACE-T0482	Sustituye a Cartucho Epson C13T04824010/T0482 Cian	C13T04824010
TACE-T0483	Sustituye a Cartucho Epson C13T04834010/T0483 Magenta	C13T04834010
TACE-T0484	Sustituye a Cartucho Epson C13T04844010/T0484 Amarillo	C13T04844010
TACE-T0485	Sustituye a Cartucho Epson C13T04854010/T0485 Cian Fotográfico	C13T04854010
TACE-T0486	Sustituye a Cartucho Epson C13T04864010/T0486 Magenta Fotográfico	C13T04864010
TACE-T0487S6	Sustituye a Cartucho Epson C13T04874010/T0487 CMYK/LC/LM, Set Ahorro (6 uds.)	C13T04874010
TACE-T048BS3	Sustituye a Cartucho Epson C13T048B4010/T048B LC/LM/Y, Set Ahorro (3 uds.)	C13T048B4010
TACE-T048CS3	Sustituye a Cartucho Epson C13T048C4010/T048C CMK, Set Ahorro (3 uds.)	C13T048C4010
TACE-T0501	Sustituye a Cartucho Epson C13T05014010/T0501 Negro	C13T05014010
TACE-T0501DP	Sustituye a Cartucho Epson C13T05014210/T0501 Negro, Pack Doble	C13T05014010
TACE-T0511	Sustituye a Cartucho Epson C13T05114010/T0511 Negro	C13T05114010
TACE-T0520	Sustituye a Cartucho Epson C13T05204010/T0520 CMY	C13T05204010
TACE-T0540	Sustituye a Cartucho Epson C13T05404010/T0540 Optimizador de Brillo	C13T05404010
TACE-T0541	Sustituye a Cartucho Epson C13T05414010/T0541 Negro	C13T05414010
TACE-T0542	Sustituye a Cartucho Epson C13T05424010/T0542 Cian	C13T05424010
TACE-T0543	Sustituye a Cartucho Epson C13T05434010/T0543 Magenta	C13T05434010
TACE-T0544	Sustituye a Cartucho Epson C13T05444010/T0544 Amarillo	C13T05444010
TACE-T0547	Sustituye a Cartucho Epson C13T05474010/T0547 Rojo	C13T05474010

TACE-T0548	Sustituye a Cartucho Epson C13T05484010/T0548 Negro Mate	C13T05484010
TACE-T0549	Sustituye a Cartucho Epson C13T05494010/T0549 Azul	C13T05494010
TACE-T0551	Sustituye a Cartucho Epson C13T05514010/T0551 Negro	C13T05514010
TACE-T0551S10	Sustituye a Cartucho Epson T0551-T0554 4K/2CMY, Set Ahorro (10 uds.)	C13T05564010
TACE-T0551S20	Sustituye a Cartucho Epson T0551-T0554 5CMYK, Set Ahorro (20 uds.)	C13T05564010
TACE-T0552	Sustituye a Cartucho Epson C13T05524010/T0552 Cian	C13T05524010
TACE-T0553	Sustituye a Cartucho Epson C13T05534010/T0553 Magenta	C13T05534010
TACE-T0554	Sustituye a Cartucho Epson C13T05544010/T0554 Amarillo	C13T05544010
TACE-T0556S4	Sustituye a Cartucho Epson C13T05564010/T0556 CMYK, Set Ahorro (4 uds.)	C13T05564010
TACE-T0591	Sustituye a Cartucho Epson C13T05914010/T0591 Negro	C13T05914010
TACE-T0592	Sustituye a Cartucho Epson C13T05924010/T0592 Cian	C13T05924010
TACE-T0593	Sustituye a Cartucho Epson C13T05934010/T0593 Magenta	C13T05934010
TACE-T0594	Sustituye a Cartucho Epson C13T05944010/T0594 Amarillo	C13T05944010
TACE-T0595	Sustituye a Cartucho Epson C13T05954010/T0595 Cian Fotográfico	C13T05954010
TACE-T0596	Sustituye a Cartucho Epson C13T05964010/T0596 Magenta Fotográfico	C13T05964010
TACE-T0597	Sustituye a Cartucho Epson C13T05974010/T0597 Negro Fotográfico	C13T05974010
TACE-T0598	Sustituye a Cartucho Epson C13T05984010/T0598 Negro Mate	C13T05984010
TACE-T0599	Sustituye a Cartucho Epson C13T05994010/T0599 Gris Claro	C13T05994010
TACE-T059S4	Sustituye a Cartucho Epson T059 CMYK, Set Ahorro (4 uds.)	C13T05914010
TACE-T0611	Sustituye a Cartucho Epson C13T06114010/T0611 Negro	C13T06114010
TACE-T0611S10	Sustituye a Cartucho Epson T0611-T0614 4K/2CMY, Set Ahorro (10 uds.)	C13T06114010-T0614
TACE-T0611S22	Sustituye a Cartucho Epson T0611-T0614 7K/5CMY, Set Ahorro (22 uds.)	C13T0611-6144010
TACE-T0612	Sustituye a Cartucho Epson C13T06124010/T0612 Cian	C13T06124010
TACE-T0613	Sustituye a Cartucho Epson C13T06134010/T0613 Magenta	C13T06134010
TACE-T0614	Sustituye a Cartucho Epson C13T06144010/T0614 Amarillo	C13T06144010
TACE-T0615	Sustituye a Cartucho Epson C13T06154010/T0615 CMYK, Set Ahorro (4 uds.)	C13T06154010
TACE-T0711	Sustituye a Cartucho Epson C13T07114010/T0711 Negro	C13T07114010
TACE-T0711S10	Sustituye a Cartucho Epson T0711-T0714 4K/2CMY, Set Ahorro (10 uds.)	C13T07114010-T0714
TACE-T0711S20	Sustituye a Cartucho Epson T0711-T0714 5CMYK, Set Ahorro (20 uds.)	C13T07114010-T0714
TACE-T0711XLS10	Sustituye a Cartucho Epson T0711-T0714 4K/2CMY, Set Ahorro (10 uds.)	C13T07114010-T0714
TACE-T0712	Sustituye a Cartucho Epson C13T07124010/T0712 Cian	C13T07124010
TACE-T0713	Sustituye a Cartucho Epson C13T07134010/T0713 Magenta	C13T07134010
TACE-T0714	Sustituye a Cartucho Epson C13T07144010/T0714 Amarillo	C13T07144010
TACE-T0715S4	Sustituye a Cartucho Epson C13T07154010/T0715 CMYK, Set Ahorro (4 uds.)	C13T07154010
TACE-T0791	Sustituye a Cartucho Epson T0791 Negro	C13T07914010
TACE-T0791S10	Sustituye a Cartucho Epson T0791-T0794 4K/2CMY, Set Ahorro (10 uds.)	C13T07914010-T0794
TACE-T0791S22	Sustituye a Cartucho Epson T0791-T0794 7K/5CMY, Set Ahorro (22 uds.)	C13T07914010-T0794
TACE-T0791S4	Sustituye a Cartucho Epson T0791-T0794 CMYK, Set Ahorro (4 uds.)	C13T07914010-T0794
TACE-T0791S6	Sustituye a Cartucho Epson T0791-T0796 CMYK/LC/LM, Set Ahorro (6 uds.)	T0791-T0796
TACE-T0792	Sustituye a Cartucho Epson T0792 Cian	C13T07924010
TACE-T0793	Sustituye a Cartucho Epson T0793 Magenta	C13T07934010
TACE-T0794	Sustituye a Cartucho Epson T0794 Amarillo	C13T07944010
TACE-T0795	Sustituye a Cartucho Epson T0795 Cian Fotográfico	C13T07954010
TACE-T0796	Sustituye a Cartucho Epson T0796 Magenta Fotográfico	C13T07964010
TACE-T0801	Sustituye a Cartucho Epson C13T08014010/T0801 Negro	C13T08014010
TACE-T0801S10	Sustituye a Cartucho Epson T0801-T0806 2CMYK/LC/LM, Set Ahorro (10uds.)	C13T08014010-T0806
TACE-T0801S20	Sustituye a Cartucho Epson T0801-T0806 5K/3CMY/3LC/3LM, Set Ahorro (20uds.)	C13T08014010-T0806
TACE-T0802	Sustituye a Cartucho Epson C13T08024010/T0802 Cian	C13T08024010
TACE-T0803	Sustituye a Cartucho Epson C13T08034010/T0803 Magenta	C13T08034010
TACE-T0804	Sustituye a Cartucho Epson C13T08044010/T0804 Amarillo	C13T08044010
TACE-T0805	Sustituye a Cartucho Epson C13T08054010/T0805 Cian Fotográfico	C13T08054010
TACE-T0806	Sustituye a Cartucho Epson C13T08064010/T0806 Magenta Fotográfico	C13T08064010
TACE-T0807S6	Sustituye a Cartucho Epson C13T08074010/T0807 CMYK/LC/LM, Set Ahorro (6 uds.)	C13T08074010
TACE-T0870	Sustituye a Cartucho Epson C13T08704010/T0870 Optimizador de Brillo	C13T08704010
TACE-T0871	Sustituye a Cartucho Epson C13T08714010/T0871 Negro Fotográfico	C13T08714010
TACE-T0872	Sustituye a Cartucho Epson C13T08724010/T0872 Cian	C13T08724010
TACE-T0873	Sustituye a Cartucho Epson C13T08734010/T0873 Magenta	C13T08734010
TACE-T0874	Sustituye a Cartucho Epson C13T08744010/T0874 Amarillo	C13T08744010
TACE-T0877	Sustituye a Cartucho Epson C13T08774010/T0877 Rojo	C13T08774010
TACE-T0878	Sustituye a Cartucho Epson C13T08784010/T0878 Negro Mate	C13T08784010
TACE-T0879	Sustituye a Cartucho Epson C13T08794010/T0879 Naranja	C13T08794010
TACE-T0891	Sustituye a Cartucho Epson C13T08914010/T0891 Negro	C13T08914010
TACE-T0891S4	Sustituye a Cartucho Epson C13T0891/T0891 CMYK, Set Ahorro (4 uds.)	C13T08914010
TACE-T0892	Sustituye a Cartucho Epson C13T08924010/T0892 Cian	C13T08924010
TACE-T0893	Sustituye a Cartucho Epson C13T08934010/T0893 Magenta	C13T08934010
TACE-T0894	Sustituye a Cartucho Epson C13T08944010/T0894 Amarillo	C13T08944010
TACE-T0961	Sustituye a Cartucho Epson C13T09614010/T0961 Negro	C13T09614010
TACE-T0962	Sustituye a Cartucho Epson C13T09624010/T0962 Cian	C13T09624010
TACE-T0963	Sustituye a Cartucho Epson C13T09634010/T0963 Magenta	C13T09634010
TACE-T0964	Sustituye a Cartucho Epson C13T09644010/T0964 Amarillo	C13T09644010
TACE-T0965	Sustituye a Cartucho Epson C13T09654010/T0965 Cian Fotográfico	C13T09654010

TACE-T0966	Sustituye a Cartucho Epson C13T09664010/T0966 Magenta Fotográfico	C13T09664010
TACE-T0967	Sustituye a Cartucho Epson C13T09674010/T0967 Negro Fotográfico	C13T09674010
TACE-T0968	Sustituye a Cartucho Epson C13T09684010/T0968 Negro Mate	C13T09684010
TACE-T0969	Sustituye a Cartucho Epson C13T09694010/T0969 Gris Claro	C13T09694010
TACE-T096S4	Sustituye a Cartucho Epson T096 CMYK, Set Ahorro (4 uds.)	C13T09614010
TACE-T1281	Sustituye a Cartucho Epson C13T12814010/T1281 Negro	C13T12814010
TACE-T1282	Sustituye a Cartucho Epson C13T12824010/T1282 Cian	C13T12824010
TACE-T1283	Sustituye a Cartucho Epson C13T12834010/T1283 Magenta	C13T12834010
TACE-T1284	Sustituye a Cartucho Epson C13T12844010/T1284 Amarillo	C13T12844010
TACE-T1285S10	Sustituye a Cartucho Epson T1285 4K/2CMY, Set Ahorro (10 uds.)	C13T12814010-T1284
TACE-T1285S22	Sustituye a Cartucho Epson T1285 7K/5CMY, Set Ahorro (22 uds.)	C13T12814010-T1284
TACE-T1285S4	Sustituye a Cartucho Epson T1285 CMYK, Set Ahorro (4 uds.)	C13T12854010
TACE-T1291	Sustituye a Cartucho Epson C13T12914010/T1291 Negro	C13T12914010
TACE-T1292	Sustituye a Cartucho Epson C13T12924010/T1292 Cian	C13T12924010
TACE-T1293	Sustituye a Cartucho Epson C13T12934010/T1293 Magenta	C13T12934010
TACE-T1294	Sustituye a Cartucho Epson C13T12944010/T1294 Amarillo	C13T12944010
TACE-T1295S10	Sustituye a Cartucho Epson T1295 4K/2CMY, Set Ahorro (10 uds.)	C13T12914010-T1294
TACE-T1295S20	Sustituye a Cartucho Epson T1295 5CMYK, Set Ahorro (20 uds.)	C13T12914010-T1294
TACE-T1295S4	Sustituye a Cartucho Epson T1295 CMYK, Set Ahorro (4 uds.)	C13T12954010
TACE-T1301	Sustituye a Cartucho Epson C13T13014010/T1301 XXL Negro	C13T13014010
TACE-T1302	Sustituye a Cartucho Epson C13T13024010/T1302 XXL Cian	C13T13024010
TACE-T1303	Sustituye a Cartucho Epson C13T13034010/T1303 XXL Magenta	C13T13034010
TACE-T1304	Sustituye a Cartucho Epson C13T13044010/T1304 XXL Amarillo	C13T13044010
TACE-T1306S3	Sustituye a Cartucho Epson C13T13064010/T1306 XL CMY, Set Ahorro (3 uds.)	C13T13064010
TACE-T1306S4	Sustituye a Cartucho Epson T1306 XL CMYK, Set Ahorro (4 uds.)	C13T13014010
TACE-T1571	Sustituye a Cartucho Epson C13T15714010/T1571 Negro Fotográfico	C13T15714010
TACE-T1572	Sustituye a Cartucho Epson C13T15724010/T1572 Cian	C13T15724010
TACE-T1573	Sustituye a Cartucho Epson C13T15734010/T1573 Magenta	C13T15734010
TACE-T1574	Sustituye a Cartucho Epson C13T15744010/T1574 Amarillo	C13T15744010
TACE-T1575	Sustituye a Cartucho Epson C13T15754010/T1575 Cian Fotográfico	C13T15754010
TACE-T1576	Sustituye a Cartucho Epson C13T15764010/T1576 Magenta Fotográfico	C13T15764010
TACE-T1577	Sustituye a Cartucho Epson C13T15774010/T1577 Negro Fotográfico	C13T15774010
TACE-T1578	Sustituye a Cartucho Epson C13T15784010/T1578 Negro Mate	C13T15784010
TACE-T1579	Sustituye a Cartucho Epson C13T15794010/T1579 Gris Claro	C13T15794010
TACE-T157S4	Sustituye a Cartucho Epson T157 CMY/PK, Set Ahorro (4 uds.)	C13T15714010
TACE-T1590	Sustituye a Cartucho Epson C13T15904010/T1590 Optimizador de Brillo	C13T15904010
TACE-T1591	Sustituye a Cartucho Epson C13T15914010/T1591 Negro Fotográfico	C13T15914010
TACE-T1592	Sustituye a Cartucho Epson C13T15924010/T1592 Cian	C13T15924010
TACE-T1593	Sustituye a Cartucho Epson C13T15934010/T1593 Magenta	C13T15934010
TACE-T1594	Sustituye a Cartucho Epson C13T15944010/T1594 Amarillo	C13T15944010
TACE-T1597	Sustituye a Cartucho Epson C13T15974010/T1597 Rojo	C13T15974010
TACE-T1598	Sustituye a Cartucho Epson C13T15984010/T1598 Negro Mate	C13T15984010
TACE-T1599	Sustituye a Cartucho Epson C13T15994010/T1599 Naranja	C13T15994010
TACE-T159S4	Sustituye a Cartucho Epson T159 CMY/PK, Set Ahorro (4 uds.)	C13T15914010
TACE-T1631	Sustituye a Cartucho Epson C13T16314010/T1631 Negro	C13T16314010
TACE-T1632	Sustituye a Cartucho Epson C13T16324010/T1632 Cian	C13T16324010
TACE-T1633	Sustituye a Cartucho Epson C13T16334010/T1633 Magenta	C13T16334010
TACE-T1634	Sustituye a Cartucho Epson C13T16344010/T1634 Amarillo	C13T16344010
TACE-T1636S10	Sustituye a Cartucho Epson C13T16364010/T1636 4K/2CMY, Set Ahorro (10 uds.)	C13T1631-344010
TACE-T1636S4	Sustituye a Cartucho Epson C13T16364010/T1636 CMYK, Set Ahorro (4 uds.)	C13T16314010-T1636
TACE-T1811	Sustituye a Cartucho Epson C13T18114010/T1811/18XL Negro	C13T18114010
TACE-T1811S10	Sustituye a Cartucho Epson T1811-T1814/18XL 4K/2CMY, Set Ahorro (10 uds.)	C13T18114010-T1814
TACE-T1811S18	Sustituye a Cartucho Epson T1811-T1814/18XL 6K/4CMY, Set Ahorro (18 uds.)	C13T18114010-T1814
TACE-T1812	Sustituye a Cartucho Epson C13T18124010/T1812/18XL Cian	C13T18124010
TACE-T1813	Sustituye a Cartucho Epson C13T18134010/T1813/18XL Magenta	C13T18134010
TACE-T1814	Sustituye a Cartucho Epson C13T18144010/T1814/18XL Amarillo	C13T18144010
TACE-T18XLS4	Sustituye a Cartucho Epson C13T18164010/18 XL CMYK, Set Ahorro (4 uds.)	C13T18164010
TACE-T24XLS4	Sustituye a Cartucho Epson C13T2431-334010/24XL CMYK, Set Ahorro (4 uds.)	C13T24314010-T2434
TACE-T27XLS3	Sustituye a Cartucho Epson C13T27154010/27XL CMY, Set Ahorro (3 uds.)	C13T27154010
TACE-T5570	Sustituye a Cartucho Epson C13T557040/T5570 Fotográfico	C13T557040
TACE-T5591	Sustituye a Cartucho Epson C13T55914010/T5591 Negro XXL	C13T55914010
TACE-T5592	Sustituye a Cartucho Epson C13T55924010/T5592 Cian XXL	C13T55924010
TACE-T5593	Sustituye a Cartucho Epson C13T55934010/T5593 Magenta XXL	C13T55934010
TACE-T5594	Sustituye a Cartucho Epson C13T55944010/T5594 Amarillo XXL	C13T55944010
TACE-T5595	Sustituye a Cartucho Epson C13T55954010/T5595 Cian Fotográfico XXL	C13T55954010
TACE-T5596	Sustituye a Cartucho Epson C13T55964010/T5596 Magenta Fotográfico XXL	C13T55964010
TACE-T559740S6	Sustituye a Cartucho Epson T559740 XXL CMYK/LC/LM, Set Ahorro (6 uds.)	C13T55914010-T5596
TACE-T6161S4	Sustituye a Cartucho Epson T6161-64 CMYK, Set Ahorro con Reseteador (4 uds.)	C13T616100
TACE-T6641	Sustituye a Botella Epson C13T664140/T6641 Negra	C13T664140
TACE-T6642	Sustituye a Botella Epson C13T664240/T6642 Cian	C13T664240
TACE-T6643	Sustituye a Botella Epson C13T664340/T6643 Magenta	C13T664340

TACE-T6644	Sustituye a Botella Epson C13T664440/T6644 Amarilla	C13T664440
TACE-T7011	Sustituye a Cartucho Epson C13T70114010/T7011 Negro	C13T70114010
TACE-T7011S4	Sustituye a Cartucho Epson T7011-T7014 CMYK, Set Ahorro (4 uds.)	C13T07114010-T0714
TACE-T7012	Sustituye a Cartucho Epson C13T70124010/T7012 Cian	C13T70124010
TACE-T7013	Sustituye a Cartucho Epson C13T70134010/T7013 Magenta	C13T70134010
TACE-T7014	Sustituye a Cartucho Epson C13T70144010/T7014 Amarillo	C13T70144010
TACE-T7021	Sustituye a Cartucho Epson C13T70214010/T7021 Negro	C13T70214010
TACE-T7022	Sustituye a Cartucho Epson C13T70224010/T7022 Cian	C13T70224010
TACE-T7023	Sustituye a Cartucho Epson C13T70234010/T7023 Magenta	C13T70234010
TACE-T7024	Sustituye a Cartucho Epson C13T70244010/T7024 Amarillo	C13T70244010
TACE-T702S4	Sustituye a Cartucho Epson T702 CMYK, Set Ahorro (4 uds.)	C13T70214010
TACE-T7441	Sustituye a Cartucho Epson C13T74414010/T7441 Negro	C13T74414010
TACE-T7551	Sustituye a Cartucho Epson C13T755140/T7551 Negro	C13T755140
TACE-T7552	Sustituye a Cartucho Epson C13T755240/T7552 Cian	C13T755240
TACE-T7553	Sustituye a Cartucho Epson C13T755340/T7553 Magenta	C13T755340
TACE-T7554	Sustituye a Cartucho Epson C13T755440/T7554 Amarillo	C13T755440
TACE-T7891	Sustituye a Cartucho Epson C13T789140/T7891 Negro	C13T789140
TACE-T7892	Sustituye a Cartucho Epson C13T789240/T7892 Cian	C13T789240
TACE-T7893	Sustituye a Cartucho Epson C13T789340/T7893 Magenta	C13T789340
TACE-T7894	Sustituye a Cartucho Epson C13T789440/T7894 Amarillo	C13T789440
TACH-62S2	Sustituye a Cartucho HP J3M80AE/No 62 XL BK/CMY, Set Ahorro (2 uds.)	J3M80A
TACH-971S4	Sustituye a Cartucho HP CN62AE/No 970/971 XL CMYK, Set Ahorro (4 uds.)	CN625AE
TACK-10B	Sustituye a Cartucho Kodak 8955916/No 10 Negro	8955916
TACK-10C	Sustituye a Cartucho Kodak No 10 CMY	1967082
TACK-10S2	Sustituye a Cartucho Kodak 3949948/No 10 BK/CMY, Set Ahorro (2 uds.)	3949948/No 10
TACK-30B	Sustituye a Cartucho Kodak 3952363/No 30 XL Negro	3952363
TACK-30C	Sustituye a Cartucho Kodak 3952371/No 30 XL CMY	3952371
TACK-30S2	Sustituye a Cartucho Kodak No 30 XL BK/CMY, Set Ahorro (2 uds.)	395263/3952371
TACL-100B	Sustituye a Cartucho Lexmark 0014N1092E/100 XL Negro con Chip	0014N1092E
TACL-100BDP	Sustituye a Cartucho Lexmark 0014N1092E Negro, Pack Doble con Chip	0014N1092E
TACL-100C	Sustituye a Cartucho Lexmark 0014N1093E/100 XL Cian con Chip	0014N1093E
TACL-100M	Sustituye a Cartucho Lexmark 0014N1094E/100 XL Magenta con Chip	0014N1094E
TACL-100S10	Sustituye a Cartucho Lexmark 100XL 4K/2CMY, Set Ahorro con Chip (10 uds.)	0014N1092-95E
TACL-100S18	Sustituye a Cartucho Lexmark 100XL 6K/4CMY, Set Ahorro con Chip (18 uds.)	0014N1092E-0014N1095E
TACL-100S3	Sustituye a Cartucho Lexmark 100 XL CMY, Set Ahorro con Chip (3 uds.)	0014N1092E-0014N1095E
TACL-100S4	Sustituye a Cartucho Lexmark 100 XL CMYK, Set Ahorro con Chip (4 uds.)	0014N1921E
TACL-100Y	Sustituye a Cartucho Lexmark 0014N1095E/100 XL Amarillo con Chip	0014N1095E
TACL-13400	Sustituye a Cartucho Lexmark 13400HCE/M-10/IN-700 Negro	0013400HCE
TACL-13400DP	Sustituye a Cartucho Lexmark 13400HCE/M-10/IN-700 Negro, Pack Doble	0013400HCE
TACL-150B	Sustituye a Cartucho Lexmark 14N1614E/150XL Negro	14N1614E
TACL-150BDP	Sustituye a Cartucho Lexmark 14N1813E/150XL Negro, Pack Doble	14N1813E
TACL-150C	Sustituye a Cartucho Lexmark 14N1615E/150XL Cian	14N1615E
TACL-150M	Sustituye a Cartucho Lexmark 14N1616E/150XL Magenta	14N1616E
TACL-150S3	Sustituye a Cartucho Lexmark 150XL CMY, Set Ahorro (3 uds.)	14N1807E
TACL-150S4	Sustituye a Cartucho Lexmark 14N1919E/150XL CMYK, Set Ahorro (4 uds.)	14N1919E
TACL-150Y	Sustituye a Cartucho Lexmark 14N1618E/150XL Amarillo	14N1618E
TACOL-B0336	Sustituye a Cartucho Olivetti FJ-31/B0336 Negro	B0336
TACOL-FJ51	Sustituye a Cartucho Olivetti FJ-51/B0494 Negro	B0494
TACOL-FJ63	Sustituye a Cartucho Olivetti B0702/FJ63 Negro, Cabezal de Impresión	B0702
TACPH-PFA441	Sustituye a Cartucho Philips PFA441/253014355 Negro, Cabezal de Impresión	PFA441
TACPH-PFA441DP	Sustituye a Cartucho Philips PFA441/253014355 Negro, Cabezal de Imp., Pack Doble	PFA441
TACPI-620	Sustituye a Cartucho Pitney Bowes 620-1BI/620-1BN/620-1SB Azul para Franqueo	620-1BI
TACPI-765	Sustituye a Cartucho Pitney Bowes 765-9BN/765-9SB Azul para Franqueo	765-9BN
TACPI-766	Sustituye a Cartucho Pitney Bowes 766-B Azul para Franqueo	766-9BN
TACPI-767	Sustituye a Cartucho Pitney Bowes 767-8BI/767-8SB/767-8BN Azul para Franqueo	620-1BI
TACPI-769	Sustituye a Cartucho Pitney Bowes 769-B Azul para Franqueo	769-B
TACPI-793	Sustituye a Cartucho Pitney Bowes 793-5BI/793-5SB/K700 Azul para Franqueo	793-5BI
TACPI-797	Sustituye a Cartucho Pitney Bowes 797-0SB/797-0BI/K700 Azul para Franqueo	797-0SB
TACRI-GC21C	Sustituye a Cartucho de Gel Ricoh 405533/GC-21C Cian	405533
TACRI-GC21K	Sustituye a Cartucho de Gel Ricoh 405532/GC-21K Negro	405532
TACRI-GC21M	Sustituye a Cartucho de Gel Ricoh 405534/GC-21M Magenta	405534
TACRI-GC21Y	Sustituye a Cartucho de Gel Ricoh 405535/GC-21Y Amarillo	405535
TACRI-GC31HC	Sustituye a Cartucho de Gel Ricoh 405702/GC-31HC Cian	405702
TACRI-GC31HK	Sustituye a Cartucho de Gel Ricoh 405701/GC-31HK Negro	405701
TACRI-GC31HM	Sustituye a Cartucho de Gel Ricoh 405703/GC-31HM Magenta	405703
TACRI-GC31HY	Sustituye a Cartucho de Gel Ricoh 405704/GC-31HY Amarillo	405704
TACRI-GC41C	Sustituye a Cartucho de Gel Ricoh 405762/GC-41C Cian	405762
TACRI-GC41CL	Sustituye a Cartucho de Gel Ricoh 405766/GC-41CL Cian	405766
TACRI-GC41K	Sustituye a Cartucho de Gel Ricoh 405761/GC-41K Negro	405761
TACRI-GC41KL	Sustituye a Cartucho de Gel Ricoh 405765/GC-41KL Negro	405765
TACRI-GC41M	Sustituye a Cartucho de Gel Ricoh 405763/GC-41M Magenta	405763

TACRI-GC41ML	Sustituye a Cartucho de Gel Ricoh 405767/GC-41ML Magenta	405767
TACRI-GC41Y	Sustituye a Cartucho de Gel Ricoh 405764/GC-41Y Amarillo	405764
TACRI-GC41YL	Sustituye a Cartucho de Gel Ricoh 405768/GC-41YL Amarillo	405768
TACSA-INKC210	Sustituye a Cartucho Samsung INK-C210 CMY	INK-C210/ELS
TACSA-INKC210S2	Sustituye a Cartucho Samsung INK-M210-C210 BK/CMY, Set Ahorro (2 uds.)	INK-M210/ELS-INK-C210/ELS
TACSA-INKC210S5	Sustituye a Cartucho Samsung INK-M210/C210 BK/CMY, Set Ahorro (5 uds.)	INK-M210/C210/ELS
TACSA-INKM215	Sustituye a Cartucho Samsung INK-M210/INK-M215 Negro	INK-M215/ELS
TAOB-LC1000B	Cartucho Original Brother LC-1000BK Negro	LC-1000BK
TAOB-LC1000BDP	Cartucho Original Brother LC-1000BKBP2DR Negro, Pack Doble	LC-1000BKBP2DR
TAOB-LC1000C	Cartucho Original Brother LC-1000C Cian	LC-1000C
TAOB-LC1000HYS4	Cartucho Original Brother LC-1100HYVALBP CMYK (4 uds.)	LC-1100HYVALBP
TAOB-LC1000M	Cartucho Original Brother LC-1000M Magenta	LC-1000M
TAOB-LC1000S3	Cartucho Original Brother LC-1000RBWBP CMY (3 uds.)	LC-1000RBWBP
TAOB-LC1000S4	Cartucho Original Brother LC-1000 CMYK (4 uds.)	LC-1000VALBPDR
TAOB-LC1000XLB	Cartucho Original Brother LC-1000HYBK Negro	LC-1000HYBK
TAOB-LC1000Y	Cartucho Original Brother LC-1000Y Amarillo	LC-1000Y
TAOB-LC1100B	Cartucho Original Brother LC-1100BK Negro	LC-1100BK
TAOB-LC1100C	Cartucho Original Brother LC-1100C Cian	LC-1100C
TAOB-LC1100M	Cartucho Original Brother LC-1100M Magenta	LC-1100M
TAOB-LC1100S4	Cartucho Original Brother LC-1100VAL CMYK (4 uds.)	LC-1100VAL
TAOB-LC1100XLB	Cartucho Original Brother LC-1100HYBK Negro	LC-1100HYBK
TAOB-LC1100XLC	Cartucho Original Brother LC-1100HYC Cian	LC-1100HYC
TAOB-LC1100XLM	Cartucho Original Brother LC-1100HYM Magenta	LC-1100HYM
TAOB-LC1100XLY	Cartucho Original Brother LC-1100HYY Amarillo	LC-1100HYY
TAOB-LC1100Y	Cartucho Original Brother LC-1100Y Amarillo	LC-1100Y
TAOB-LC121B	Cartucho Original Brother LC-121BK Negro	LC-121BK
TAOB-LC121C	Cartucho Original Brother LC-121C Cian	LC-121C
TAOB-LC121M	Cartucho Original Brother LC-121M Magenta	LC-121M
TAOB-LC121S4	Cartucho Original Brother LC-121VALBPDR CMYK (4 uds.)	LC-121VALBPDR
TAOB-LC121Y	Cartucho Original Brother LC-121Y Amarillo	LC-121Y
TAOB-LC1220B	Cartucho Original Brother LC-1220BK Negro	LC-1220BK
TAOB-LC1220C	Cartucho Original Brother LC-1220C Cian	LC-1220C
TAOB-LC1220M	Cartucho Original Brother LC-1220M Magenta	LC-1220M
TAOB-LC1220S4	Cartucho Original Brother LC-1220VALBPDR CMYK (4 uds.)	LC-1220VALBPDR
TAOB-LC1220Y	Cartucho Original Brother LC-1220Y Amarillo	LC-1220Y
TAOB-LC123B	Cartucho Original Brother LC-123BK Negro	LC-123BK
TAOB-LC123C	Cartucho Original Brother LC-123C Cian	LC-123C
TAOB-LC123M	Cartucho Original Brother LC-123M Magenta	LC-123M
TAOB-LC123S4	Cartucho Original Brother LC-123VALBPDR CMYK (4 uds.)	LC-123VALBPDR
TAOB-LC123Y	Cartucho Original Brother LC-123Y Amarillo	LC-123Y
TAOB-LC1240B	Cartucho Original Brother LC-1240BK Negro	LC-1240BK
TAOB-LC1240C	Cartucho Original Brother LC-1240C Cian	LC-1240C
TAOB-LC1240M	Cartucho Original Brother LC-1240M Magenta	LC-1240M
TAOB-LC1240S4	Cartucho Original Brother LC-1240VALBPDR CMYK (4 uds.)	LC-1240VALBPDR
TAOB-LC1240Y	Cartucho Original Brother LC-1240Y Amarillo	LC-1240Y
TAOB-LC125XLC	Cartucho Original Brother LC-125XLC Cian	LC-125XLC
TAOB-LC125XLM	Cartucho Original Brother LC-125XLM Magenta	LC-125XLM
TAOB-LC125XLY	Cartucho Original Brother LC-125XLY Amarillo	LC-125XLY
TAOB-LC127XLB	Cartucho Original Brother LC-127XLBK Negro	LC-127XLBK
TAOB-LC127XLS4	Cartucho Original Brother LC-127XLVALBP CMYK (4 uds.)	LC-127XLVALBP
TAOB-LC1280C	Cartucho Original Brother LC-1280C XL Cian	LC-1280XLC
TAOB-LC1280M	Cartucho Original Brother LC-1280M XL Magenta	LC-1280XLM
TAOB-LC1280XLB	Cartucho Original Brother LC-1280BK XL Negro	LC-1280XLBK
TAOB-LC1280XLS4	Cartucho Original Brother LC-1280XLVALBPDR CMYK (4 uds.)	LC-1280XLVALBPDR
TAOB-LC1280Y	Cartucho Original Brother LC-1280Y XL Amarillo	LC-1280XLY
TAOB-LC129XLB	Cartucho Original Brother LC-129BK Negro	LC129XLBK
TAOB-LC129XLS4	Cartucho Original Brother LC-129XLVALBPDR CMYK (4 uds.)	LC129XLVALBPDR
TAOB-LC12EB	Cartucho Original Brother LC-12EBK Negro	LC-12EBK
TAOB-LC12EC	Cartucho Original Brother LC-12EC Cian	LC-12EC
TAOB-LC12EM	Cartucho Original Brother LC-12EM Magenta	LC-12EM
TAOB-LC12EY	Cartucho Original Brother LC-12EY Amarillo	LC-12EY
TAOB-LC221B	Cartucho Original Brother LC-221BK Negro	LC-221BK
TAOB-LC221C	Cartucho Original Brother LC-221C Cian	LC-221C
TAOB-LC221M	Cartucho Original Brother LC-221M Magenta	LC-221M
TAOB-LC221Y	Cartucho Original Brother LC-221Y Amarillo	LC-221Y
TAOB-LC221S4	Cartucho Original Brother LC-221VALBP CMYK (4 uds.)	LC-221VALBP
TAOB-LC223B	Cartucho Original Brother LC-223 Negro	LC-223BK
TAOB-LC223C	Cartucho Original Brother LC-223 Cian	LC-223C
TAOB-LC223M	Cartucho Original Brother LC-223 Magenta	LC-223M
TAOB-LC223S4	Cartucho Original Brother LC223VALBPR CMYK (4 uds.)	LC-223VALBPDR
TAOB-LC223Y	Cartucho Original Brother LC-223 Amarillo	LC-223Y

TAOB-LC225C	Cartucho Original Brother LC-225 XL Cian	LC-225XLC
TAOB-LC225M	Cartucho Original Brother LC-225 XL Magenta	LC-225XLM
TAOB-LC225Y	Cartucho Original Brother LC-225 XL Amarillo	LC-225XLY
TAOB-LC227XLB	Cartucho Original Brother LC-227XLBK Negro	LC227XLBK
TAOB-LC227XLS4	Cartucho Original Brother LC-227VALBP CMYK (4 uds.)	LC-227XLVALBP
TAOB-LC229XLB	Cartucho Original Brother LC-229XLBK Negro	LC229XLBK
TAOB-LC229XLS4	Cartucho Original Brother LC-229XLVALBPDR CMYK (4 uds.)	LC-229XLVALBPDR
TAOB-LC22EBB	Cartucho Original Brother LC-22EBK Negro	LC22EBK
TAOB-LC22EC	Cartucho Original Brother LC-22EC Cian	LC22EC
TAOB-LC22EM	Cartucho Original Brother LC-22EM Magenta	LC22EM
TAOB-LC22EY	Cartucho Original Brother LC-22EY Amarillo	LC22EY
TAOB-LC22UB	Cartucho Original Brother LC22UBK Negro	LC22UBK
TAOB-LC22UC	Cartucho Original Brother LC22UC Cian	LC22UC
TAOB-LC22UM	Cartucho Original Brother LC22UM Magenta	LC22UM
TAOB-LC22UY	Cartucho Original Brother LC22UY Amarillo	LC22UY
TAOB-LC900B	Cartucho Original Brother LC-900BK Negro	LC-900BK
TAOB-LC900C	Cartucho Original Brother LC-900C Cian	LC-900C
TAOB-LC900HYB	Cartucho Original Brother LC-900HYBK Negro	LC-900HYBK
TAOB-LC900M	Cartucho Original Brother LC-900M Magenta	LC-900M
TAOB-LC900S4	Cartucho Original Brother LC-900 CMYK (4 uds.)	LC-900VALBPDR
TAOB-LC900Y	Cartucho Original Brother LC-900Y Amarillo	LC-900Y
TAOB-LC970B	Cartucho Original Brother LC-970BK Negro	LC-970BK
TAOB-LC970C	Cartucho Original Brother LC-970C Cian	LC-970C
TAOB-LC970M	Cartucho Original Brother LC-970M Magenta	LC-970M
TAOB-LC970S4	Cartucho Original Brother LC-970 CMYK (4 uds.)	LC-970VALBPDR
TAOB-LC970Y	Cartucho Original Brother LC-970Y Amarillo	LC-970Y
TAOB-LC980B	Cartucho Original Brother LC-980BK Negro	LC-980BK
TAOB-LC980C	Cartucho Original Brother LC-980C Cian	LC-980C
TAOB-LC980M	Cartucho Original Brother LC-980M Magenta	LC-980M
TAOB-LC980S4	Cartucho Original Brother LC-980VALBPDR CMYK (4 uds.)	LC-980VALBPDR
TAOB-LC980Y	Cartucho Original Brother LC-980Y Amarillo	LC-980Y
TAOB-LC985B	Cartucho Original Brother LC-985BK Negro	LC-985BK
TAOB-LC985BDP	Cartucho Original Brother LC-985BKBP2 Negro, Pack Doble	LC-985BKBP2
TAOB-LC985C	Cartucho Original Brother LC-985C Cian	LC-985C
TAOB-LC985M	Cartucho Original Brother LC-985M Magenta	LC-985M
TAOB-LC985S3	Cartucho Original Brother LC-985RBWBP CMY (3 uds.)	LC-985RBWBP
TAOB-LC985S4	Cartucho Original Brother LC-985VALB CMYK (4 uds.)	LC-985VALBP
TAOB-LC985Y	Cartucho Original Brother LC-985Y Amarillo	LC-985Y
TAOC-BC1000B	Cartucho Original Canon 0930A001/BC-1000BK Negro, Cabezal de Impresión	0930A001
TAOC-BC1000C	Cartucho Original Canon 0931A001/BC-1000C Cian, Cabezal de Impresión	0931A001
TAOC-BC1000M	Cartucho Original Canon 0932A001/BC-1000M Magenta, Cabezal de Impresión	0932A001
TAOC-BC1000Y	Cartucho Original Canon 0933A001/BC-1000Y Amarillo, Cabezal de Impresión	0933A001
TAOC-BC1300	Cartucho Original Canon 8004A001/BC-1300, Cabezal de Impresión	8004A001
TAOC-BC1350	Cartucho Original Canon 0586B001/BC-1350 Negro, Cabezal de Impresión	0586B001
TAOC-BC1400	Cartucho Original Canon 8003A001/BC-1400 Negro, Cabezal de Impresión	8003A001
TAOC-BC11002B	Cartucho Original Canon 5843A001/BCI-1002BK Negro	5843A001
TAOC-BC11002C	Cartucho Original Canon 5835A001/BCI-1002C Cian	5835A001
TAOC-BC11002M	Cartucho Original Canon 5836A001/BCI-1002M Magenta	5836A001
TAOC-BC11002Y	Cartucho Original Canon 5837A001/BCI-1002Y Amarillo	5837A001
TAOC-BC11201B	Cartucho Original Canon 7337A001/BCI-1201BK Negro	7337A001
TAOC-BC11201C	Cartucho Original Canon 7338A001/BCI-1201C Cian	7338A001
TAOC-BC11201M	Cartucho Original Canon 7339A001/BCI-1201M Magenta	7339A001
TAOC-BC11201Y	Cartucho Original Canon 7340A001/BCI-1201Y Amarillo	7340A001
TAOC-BC11302B	Cartucho Original Canon 7717A001/BCI-1302BK Negro	7717A001
TAOC-BC11302C	Cartucho Original Canon 7718A001/BCI-1302C Cian	7718A001
TAOC-BC11302M	Cartucho Original Canon 7719A001/BCI-1302M Magenta	7719A001
TAOC-BC11302PC	Cartucho Original Canon 7721A001/BCI-1302PC Cian Fotográfico	7721A001
TAOC-BC11302PM	Cartucho Original Canon 7722A001/BCI-1302PM Magenta Fotográfico	7722A001
TAOC-BC11302Y	Cartucho Original Canon 7720A001/BCI-1302Y Amarillo	7720A001
TAOC-BC11401B	Cartucho Original Canon 7568A001/BCI-1401BK Negro	7568A001
TAOC-BC11401C	Cartucho Original Canon 7569A001/BCI-1401C Cian	7569A001
TAOC-BC11401M	Cartucho Original Canon 7570A001/BCI-1401M Magenta	7570A001
TAOC-BC11401PC	Cartucho Original Canon 7572A001/BCI-1401PC Cian Fotográfico	7572A001
TAOC-BC11401PM	Cartucho Original Canon 7573A001/BCI-1401PM Magenta Fotográfico	7573A001
TAOC-BC11401Y	Cartucho Original Canon 7571A001/BCI-1401Y Amarillo	7571A001
TAOC-BC11411B	Cartucho Original Canon 7574A001/BCI-1411BK Negro	7574A001
TAOC-BC11411C	Cartucho Original Canon 7575A001/BCI-1411C Cian	7575A001
TAOC-BC11411M	Cartucho Original Canon 7576A001/BCI-1411M Magenta	7576A001
TAOC-BC11411PC	Cartucho Original Canon 7578A001/BCI-1411PC Cian Fotográfico	7578A001
TAOC-BC11411PM	Cartucho Original Canon 7579A001/BCI-1411PM Magenta Fotográfico	7579A001
TAOC-BC11411Y	Cartucho Original Canon 7577A001/BCI-1411Y Amarillo	7577A001

TAOC-BCI1421B	Cartucho Original Canon 8367A001/BCI-1421BK Negro	8367A001
TAOC-BCI1421C	Cartucho Original Canon 8368A001/BCI-1421C Cian	8368A001
TAOC-BCI1421M	Cartucho Original Canon 8369A001/BCI-1421M Magenta	8369A001
TAOC-BCI1421PC	Cartucho Original Canon 8371A001/BCI-1421PC Cian Fotográfico	8371A001
TAOC-BCI1421PM	Cartucho Original Canon 8372A001/BCI-1421PM Magenta Fotográfico	8372A001
TAOC-BCI1421Y	Cartucho Original Canon 8370A001/BCI-1421Y Amarillo	8370A001
TAOC-BCI1431B	Cartucho Original Canon 8963A001/BCI-1431BK Negro	8963A001
TAOC-BCI1431C	Cartucho Original Canon 8970A001/BCI-1431C Cian	8970A001
TAOC-BCI1431M	Cartucho Original Canon 8971A001/BCI-1431M Magenta	8971A001
TAOC-BCI1431PC	Cartucho Original Canon 8973A001/BCI-1431PC Cian Fotográfico	8973A001
TAOC-BCI1431PM	Cartucho Original Canon 8974A001/BCI-1431PM Magenta Fotográfico	8974A001
TAOC-BCI1431Y	Cartucho Original Canon 8972A001/BCI-1431Y Amarillo	8972A001
TAOC-BCI1441MB	Cartucho Original Canon 0174B001/BCI-1441MBK Negro Mate	0174B001
TAOC-BCI1441Y	Cartucho Original Canon 0172B001/BCI-1441Y Amarillo	0172B001
TAOC-BCI1451MB	Cartucho Original Canon 0175B001/BCI-1451MBK Negro Mate	0175B001
TAOC-BCI1451Y	Cartucho Original Canon 0173B001/BCI-1451Y Amarillo	0173B001
TAOC-BCI15BDP	Cartucho Original Canon 8190A002/BCI-15BK Negro, Pack Doble	8190A002
TAOC-BCI15C	Cartucho Original Canon 8191A002/BCI-15C CMY	8191A002
TAOC-BCI16DP	Cartucho Original Canon 9818A002/BCI-16C CMY, Pack Doble	9818A002
TAOC-BCI24C	Cartucho Original Canon 6882A002/BCI-24C CMY	6882A002
TAOC-BCI24S2	Cartucho Original Canon 6881A051/BCI-24 BK/CMY (2 uds.)	6881A051
TAOC-BCI3E	Cartucho Original Canon 4480A262 BCI-3E CMY	4480A262
TAOC-BCI3EB	Cartucho Original Canon 4479A002/BCI-3EBK Negro	4479A002
TAOC-BCI3EBDP	Cartucho Original Canon 4479A028/BCI-3EBK Negro, Pack Doble	4479A028
TAOC-BCI3EC	Cartucho Original Canon 4480A002/BCI-3EC Cian	4480A002
TAOC-BCI3EM	Cartucho Original Canon 4481A002/BCI-3EM Magenta	4481A002
TAOC-BCI3EPC	Cartucho Original Canon 4483A002/BCI-3EPC Cian Fotográfico	4483A002
TAOC-BCI3EPM	Cartucho Original Canon 4484A002/BCI-3EPM Magenta Fotográfico	4484A002
TAOC-BCI3EY	Cartucho Original Canon 4482A002/BCI-3EY Amarillo	4482A002
TAOC-BCI6B	Cartucho Original Canon 4705A002/BCI-6BK Negro	4705A002
TAOC-BCI6C	Cartucho Original Canon 4706A002/BCI-6C Cian	4706A002
TAOC-BCI6G	Cartucho Original Canon 9473A002/BCI-6G Verde	9473A002
TAOC-BCI6M	Cartucho Original Canon 4707A002/BCI-6M Magenta	4707A002
TAOC-BCI6PC	Cartucho Original Canon 4709A002/BCI-6PC Cian Fotográfico	4709A002
TAOC-BCI6PM	Cartucho Original Canon 4710A002/BCI-6PM Magenta Fotográfico	4710A002
TAOC-BCI6R	Cartucho Original Canon 8891A002/BCI-6R Rojo	8891A002
TAOC-BCI6S3	Cartucho Original Canon 4706A022/BCI-6 CMY (3 uds.)	4706A022
TAOC-BCI6Y	Cartucho Original Canon 4708A002/BCI-6Y Amarillo	4708A002
TAOC-BJIP300C	Cartucho Original Canon 8140A003/BJI-P300C Cian	8140A003
TAOC-BJIP300LC	Cartucho Original Canon 8139A003/BJI-P300LC Cian Fotográfico	8139A003
TAOC-BJIP300LM	Cartucho Original Canon 8137A003/BJI-P300LM Magenta Fotográfico	8137A003
TAOC-BJIP300M	Cartucho Original Canon 8138A003/BJI-P300M Magenta	8138A003
TAOC-BJIP300Y	Cartucho Original Canon 8136A003/BJI-P300Y Amarillo	8136A003
TAOC-BX20	Cartucho Original Canon 0896A002/BX-20 Negro	0896A002
TAOC-CL38	Cartucho Original Canon 2146B001/CL-38 CMY	2146B001
TAOC-CL41	Cartucho Original Canon 0617B001/CL-41 CMY	0617B001
TAOC-CL41S2	Cartucho Original Canon 0615B036/PG-40/CL-41 BK/CMY (2 uds.)	0615B036
TAOC-CL51	Cartucho Original Canon 0618B001/CL-51 CMY	0618B001
TAOC-CL511	Cartucho Original Canon 2972B001/CL-511 CMY	2972B001
TAOC-CL511S2	Cartucho Original Canon 2970B010/PG-510/CL-511 BK/CMY (2 uds.)	2970B010
TAOC-CL513	Cartucho Original Canon 2971B001/CL-513 CMY	2971B001
TAOC-CL52	Cartucho Original Canon 0619B001/CL-52 Fotográfico	0619B001
TAOC-CL541	Cartucho Original Canon 5227B005/CL-541 CMY	5227B005
TAOC-CL541S2	Cartucho Original Canon 5225B006/PG-540 CL-541 BK/CMY (2 uds.)	5225B006
TAOC-CL541XL	Cartucho Original Canon 5226B005/CL-541XL CMY	5226B005
TAOC-CL546	Cartucho Original Canon 8289B001/CL-546/CMY	8289B001
TAOC-CL546S2	Cartucho Original Canon 8287B005/PG545/CL-546 BK/CMY (2 uds.)	8287B005
TAOC-CL546XL	Cartucho Original Canon 8288B001/CL-546XL/CMY	8288B001
TAOC-CLI36	Cartucho Original Canon 1511B001/CLI-36 CMY	1511B001
TAOC-CLI36DP	Cartucho Original Canon 1511B018/CLI-36 CMY, Pack Doble	1511B018
TAOC-CLI42B	Cartucho Original Canon 6384B001/CLI-42BK Negro	6384B001
TAOC-CLI42C	Cartucho Original Canon 6385B001/CLI-42C Cian	6385B001
TAOC-CLI42GY	Cartucho Original Canon 6390B001/CLI-42GY Gris	6390B001
TAOC-CLI42LGY	Cartucho Original Canon 6391B001/CLI-42LGY Gris Fotográfico	6391B001
TAOC-CLI42M	Cartucho Original Canon 6386B001/CLI-42M Magenta	6386B001
TAOC-CLI42PC	Cartucho Original Canon 6388B001/CLI-42PC Cian Fotográfico	6388B001
TAOC-CLI42PM	Cartucho Original Canon 6389B001/CLI-42PM Magenta Fotográfico	6389B001
TAOC-CLI42S8	Cartucho Original Canon 6384B010/CLI-42 CMYK LC/LM/GY/LGY (8 uds.)	6384B010
TAOC-CLI42Y	Cartucho Original Canon 6387B001/CLI-42Y Amarillo	6387B001
TAOC-CLI521B	Cartucho Original Canon 2933B001/CLI-521BK Negro Fotográfico	2933B001
TAOC-CLI521C	Cartucho Original Canon 2934B001/CLI-521C Cian	2934B001

TAOC-CLI521GY	Cartucho Original Canon 2937B001/CLI-521GY Gris	2937B001
TAOC-CLI521M	Cartucho Original Canon 2935B001/CLI-521M Magenta	2935B001
TAOC-CLI521S3	Cartucho Original Canon 2934B007/CLI-521 CMY (3 uds.)	2934B007
TAOC-CLI521Y	Cartucho Original Canon 2936B001/CLI-521Y Amarillo	2936B001
TAOC-CLI526B	Cartucho Original Canon 4540B001/CLI-526BK Negro	4540B001
TAOC-CLI526C	Cartucho Original Canon 4541B001/CLI-526C Cian	4541B001
TAOC-CLI526GY	Cartucho Original Canon 4544B001/CLI-526GY Gris	4544B001
TAOC-CLI526M	Cartucho Original Canon 4542B001/CLI-526M Magenta	4542B001
TAOC-CLI526S3	Cartucho Original Canon 4541B006/CLI-526 CMY (3 uds.)	4541B006
TAOC-CLI526Y	Cartucho Original Canon 4543B001/CLI-526Y Amarillo	4543B001
TAOC-CLI551B	Cartucho Original Canon 6508B001/CLI-551BK Negro	6508B001
TAOC-CLI551C	Cartucho Original Canon 6509B001/CLI-551C Cian	6509B001
TAOC-CLI551GY	Cartucho Original Canon 6512B001/CLI-551GY Gris	6512B001
TAOC-CLI551M	Cartucho Original Canon 6510B001/CLI-551M Magenta	6510B001
TAOC-CLI551S4	Cartucho Original Canon 6509B009/CLI-551 CMYK (4 uds.)	6509B009
TAOC-CLI551S6	Cartucho Original Canon 6496B005/PGI-550/CLI 551 CMYK/PGK/GY (6 uds.)	6496B005
TAOC-CLI551XLB	Cartucho Original Canon 6443B001/CLI-551BKXL Negro	6443B001
TAOC-CLI551XLC	Cartucho Original Canon 6444B001/CLI-551CXL Cian	6444B001
TAOC-CLI551XLY	Cartucho Original Canon 6447B001/CLI-551GYXL Gris	6447B001
TAOC-CLI551XLM	Cartucho Original Canon 6445B001/CLI-551MXL Magenta	6445B001
TAOC-CLI551XLY	Cartucho Original Canon 6446B001/CLI-551YXL Amarillo	6446B001
TAOC-CLI551Y	Cartucho Original Canon 6511B001/CLI-551Y Amarillo	6511B001
TAOC-CLI571B	Cartucho Original Canon/0385C001/CLI-571BK Negro	0385C001
TAOC-CLI571C	Cartucho Original Canon/0386C001/CLI-571C Cian	0386C001
TAOC-CLI571GY	Cartucho Original Canon/0389C001/CLI-571GY Gris	0389C001
TAOC-CLI571M	Cartucho Original Canon/0387C001/CLI-571M Magenta	0387C001
TAOC-CLI571PS4	Cartucho Original Canon 0386C005/CLI-571 CMYK (4 uds.) + Papel	0386C006
TAOC-CLI571S4	Cartucho Original Canon 0386C005/CLI-571 CMYK (4 uds.)	0386C005
TAOC-CLI571S5	Cartucho Original Canon 0372C004/PGI-57 /CLI 571 CMYK/PBK (5 uds.)	0372C004
TAOC-CLI571XLB	Cartucho Original Canon/0331C001/CLI-571BKXL Negro	0331C001
TAOC-CLI571XLC	Cartucho Original Canon/0332C001/CLI-571CXL Cian	0332C001
TAOC-CLI571XLY	Cartucho Original Canon/0335C001/CLI-571GYXL Gris	0335C001
TAOC-CLI571XLM	Cartucho Original Canon/0333C001/CLI-571MXL Magenta	0333C001
TAOC-CLI571XLY	Cartucho Original Canon/0334C001/CLI-571YXL Amarillo	0334C001
TAOC-CLI571Y	Cartucho Original Canon/0388C001/CLI-571Y Amarillo	0388C001
TAOC-CLI8B	Cartucho Original Canon 0620B001/CLI-8BK Negro	0620B001
TAOC-CLI8C	Cartucho Original Canon 0621B001/CLI-8C Cian	0621B001
TAOC-CLI8G	Cartucho Original Canon 0627B001/CLI-8G Verde	0627B001
TAOC-CLI8M	Cartucho Original Canon 0622B001/CLI-8M Magenta	0622B001
TAOC-CLI8PC	Cartucho Original Canon 0624B001/CLI-8PC Cian Fotográfico	0624B001
TAOC-CLI8PM	Cartucho Original Canon 0625B001/CLI-8PM Magenta Fotográfico	0625B001
TAOC-CLI8R	Cartucho Original Canon 0626B001/CLI-8R Rojo	0626B001
TAOC-CLI8S3	Cartucho Original Canon 0621B026/CLI-8 CMY (3 uds.)	0621B026
TAOC-CLI8S5	Cartucho Original Canon 0620B027/CLI-8 PK/LC/LM/R/G (5 uds.)	0620B027
TAOC-CLI8Y	Cartucho Original Canon 0623B001/CLI-8Y Amarillo	0623B001
TAOC-EP100	Cartucho Original Canon 1335B001/E-P100 Pack Fotográfico	1335B001
TAOC-EP25BW	Cartucho Original Canon 1251B001/E-P25BW Pack Fotográfico	1251B001
TAOC-KC181F	Cartucho Original Canon 7741A001/KC-181F CMY y 18 Hojas 54 x 86 mm	7741A001
TAOC-KC361P	Cartucho Original Canon 7739A001/KC-361P CMY y 36 Hojas 54 x 86 mm	7739A001
TAOC-KP108IN	Cartucho Original Canon 3115B001/KP-108IN CMY y 108 Hojas 100 x 148 mm	3115B001
TAOC-KP361P	Cartucho Original Canon 7737A001/KP-361P CMY y 36 Hojas 100 x 148 mm	7737A001
TAOC-PF03	Cartucho Original Canon 2251B001/PF-03, Cabezal de Impresión	2251B001
TAOC-PF04	Cartucho Original Canon 3630B001/PF-04, Cabezal de Impresión	3630B001
TAOC-PF05	Cartucho Original Canon 3872B001/PF-05, Cabezal de Impresión	3872B001
TAOC-PFI-1000BL	Cartucho Original Canon 0555C001/PFI-1000B Azul	0555C001
TAOC-PFI-1000C	Cartucho Original Canon 0547C001/PFI-1000C Cian	0547C001
TAOC-PFI-1000CO	Cartucho Original Canon 0556C001/PFI-1000 CO Optimizador de Color	0556C001
TAOC-PFI-1000GY	Cartucho Original Canon 0552C001/PFI-1000GY Gris	0552C001
TAOC-PFI-1000M	Cartucho Original Canon 0548C001/PFI-1000 M Magenta	0548C001
TAOC-PFI-1000MBK	Cartucho Original Canon 0545C001/PFI-1000 MBK Negro Mate	054C001
TAOC-PFI-1000PBK	Cartucho Original Canon 0546C001/PFI-1000 PBK Negro Fotográfico	PFI-1000 PBK
TAOC-PFI-1000PC	Cartucho Original Canon 0050C001/PFI-1000 PC Cian Fotográfico	0550C001
TAOC-PFI-1000PGY	Cartucho Original Canon 0553C001/PFI-1000 PGY Gris Claro	PFI-1000 PGY
TAOC-PFI-1000PM	Cartucho Original Canon 0551 C 001/PFI-1000 PM Light Magenta	0551C001
TAOC-PFI-1000R	Cartucho Original Canon 0554C001/PFI-1000R Rojo	PFI-1000 R
TAOC-PFI-1000Y	Cartucho Original Canon 0549C001/PFI-1000 Y Amarillo	0549C001
TAOC-PFI101B	Cartucho Original Canon 0883B001/PFI-101BK Negro	0883B001
TAOC-PFI101BL	Cartucho Original Canon 0891B001/PFI-101B Azul	0891B001
TAOC-PFI101C	Cartucho Original Canon 0884B001/PFI-101C Cian	0884B001
TAOC-PFI101G	Cartucho Original Canon 0890B001/PFI-101G Verde	0890B001
TAOC-PFI101GY	Cartucho Original Canon 0892B001/PFI-101GY Gris	0892B001

TAOC-PFI101M	Cartucho Original Canon 0885B001/PFI-101M Magenta	0885B001
TAOC-PFI101MB	Cartucho Original Canon 0882B001/PFI-101MBK Negro Mate	0882B001
TAOC-PFI101PC	Cartucho Original Canon 0887B001/PFI-101PC Cian Fotográfico	0887B001
TAOC-PFI101PGY	Cartucho Original Canon 0893B001/PFI-101PGY Gris Fotográfico	0893B001
TAOC-PFI101PM	Cartucho Original Canon 0888B001/PFI-101PM Magenta Fotográfico	0888B001
TAOC-PFI101R	Cartucho Original Canon 0889B001/PFI-101R Rojo	0889B001
TAOC-PFI101Y	Cartucho Original Canon 0886B001/PFI-101Y Amarillo	0886B001
TAOC-PFI102BK	Cartucho Original Canon 0895B001/PFI-102BK Negro	0895B001
TAOC-PFI102C	Cartucho Original Canon 0896B001/PFI-102C Cian	0896B001
TAOC-PFI102M	Cartucho Original Canon 0897B001/PFI-102M Magenta	0897B001
TAOC-PFI102MB	Cartucho Original Canon 0894B001/PFI-102MBK Negro Mate	0894B001
TAOC-PFI102Y	Cartucho Original Canon 0898B001/PFI-102Y Amarillo	0898B001
TAOC-PFI103BK	Cartucho Original Canon 2212B001/PFI-103BK Negro	2212B001
TAOC-PFI103GY	Cartucho Original Canon 2213B001/PFI-103GY Gris	2213B001
TAOC-PFI103MB	Cartucho Original Canon 2211B001/PFI-103MBK Negro Mate	2211B001
TAOC-PFI103PGY	Cartucho Original Canon 2214B001/PFI-103PGY Gris Fotográfico	2214B001
TAOC-PFI104M	Cartucho Original Canon 3631 B 001/PFI-104M Magenta	3631B001
TAOC-PFI106B	Cartucho Original Canon 6621B001/PFI-106BK Negro	6621B001
TAOC-PFI106BL	Cartucho Original Canon 6629B001/PFI-106B Azul	6629B001
TAOC-PFI106C	Cartucho Original Canon 6622B001/PFI-106C Cian	6622B001
TAOC-PFI106G	Cartucho Original Canon 6628B001/PFI-106G Verde	6628B001
TAOC-PFI106GY	Cartucho Original Canon 6630B001/PFI-106GY Gris	6630B001
TAOC-PFI106M	Cartucho Original Canon 6623B001/PFI-106M Magenta	6623B001
TAOC-PFI106MB	Cartucho Original Canon 6620B001/PFI-106MBK Negro Mate	6620B001
TAOC-PFI106PC	Cartucho Original Canon 6625B001/PFI-106PC Cian Fotográfico	6625B001
TAOC-PFI106PGY	Cartucho Original Canon 6631B001/PFI-106PGY Gris Fotográfico	6631B001
TAOC-PFI106PM	Cartucho Original Canon 6626B001/PFI-106PM Magenta Fotográfico	6626B001
TAOC-PFI106R	Cartucho Original Canon 6627B001/PFI-106R Rojo	6627B001
TAOC-PFI106Y	Cartucho Original Canon 6624B001/PFI-106Y Amarillo	6624B001
TAOC-PFI107B	Cartucho Original Canon 6705B001/PFI-107BK Negro	6705B001
TAOC-PFI107C	Cartucho Original Canon 6706B001/PFI-107C Cian	6706B001
TAOC-PFI107M	Cartucho Original Canon 6707B001/PFI-107M Magenta	6707B001
TAOC-PFI107MB	Cartucho Original Canon PFI-107MBK Negro Mate	6704B001
TAOC-PFI107Y	Cartucho Original Canon 6708B001/PFI-107Y Amarillo	6708B001
TAOC-PFI206B	Cartucho Original Canon 5303B001/PFI-206BK Negro	5303B001
TAOC-PFI206BL	Cartucho Original Canon 5311B001/PFI-206B Azul	5311B001
TAOC-PFI206C	Cartucho Original Canon 5304B001/PFI-206C Cian	5304B001
TAOC-PFI206G	Cartucho Original Canon 5310B001/PFI-206G Verde	5310B001
TAOC-PFI206GY	Cartucho Original Canon 5312B001/PFI-206GY Gris	5312B001
TAOC-PFI206M	Cartucho Original Canon 5305B001/PFI-206M Magenta	5305B001
TAOC-PFI206MB	Cartucho Original Canon 5302B001/PFI-206MBK Negro Mate	5302B001
TAOC-PFI206PC	Cartucho Original Canon 5307B001/PFI-206PC Cian Fotográfico	5307B001
TAOC-PFI206PGY	Cartucho Original Canon 5313B001/PFI-206PGY Gris Fotográfico	5313B001
TAOC-PFI206PM	Cartucho Original Canon 5308B001/PFI-206PM Magenta Fotográfico	5308B001
TAOC-PFI206R	Cartucho Original Canon 5309B001/PFI-206R Rojo	5309B001
TAOC-PFI206Y	Cartucho Original Canon 5306B001/PFI-206Y Amarillo	5306B001
TAOC-PFI207B	Cartucho Original Canon 8789B001/PFI-207BK Negro	8789 001
TAOC-PFI207C	Cartucho Original Canon 8790B001/PFI-207C Cian	8790B001
TAOC-PFI207M	Cartucho Original Canon 8791B001/PFI-207M Magenta	8791B001
TAOC-PFI207MB	Cartucho Original Canon 8788B001/PFI-207MBK Negro Mate	8788B001
TAOC-PFI207Y	Cartucho Original Canon 8792B001/PFI-207Y Amarillo	8792B001
TAOC-PFI301B	Cartucho Original Canon 1486B001/PFI-301BK Negro	1486B001
TAOC-PFI301BL	Cartucho Original Canon 1494B001/PFI-301B Azul	1494B001
TAOC-PFI301C	Cartucho Original Canon 1487B001/PFI-301C Cian	1487B001
TAOC-PFI301G	Cartucho Original Canon 1493B001/PFI-301G Verde	1493B001
TAOC-PFI301GY	Cartucho Original Canon 1495 B 001/PFI-301 GY Gris	1495B001
TAOC-PFI301M	Cartucho Original Canon 1488B001/PFI-301M Magenta	1488B001
TAOC-PFI301MB	Cartucho Original Canon 1485 B 001/PFI-301 MBK Negro Mate	1485B001
TAOC-PFI301PC	Cartucho Original Canon 1490B001/PFI-301PC Cian Fotográfico	1490B001
TAOC-PFI301PGY	Cartucho Original Canon 1496B001/PFI-301 PGY Gris Fotográfico	1496B001
TAOC-PFI301PM	Cartucho Original Canon 1491B001/PFI-301PM Magenta Fotográfico	1491B001
TAOC-PFI301R	Cartucho Original Canon 1492B001/PFI-301R Rojo	1492B001
TAOC-PFI301Y	Cartucho Original Canon 1489B001/PFI-301Y Amarillo	1489B001
TAOC-PFI302	Cartucho Original Canon 2218 B 001/PFI-302 PGY Gris Fotográfico	2218B001
TAOC-PFI302B	Cartucho Original Canon 2216B001/PFI-302BK Negro	2216B001
TAOC-PFI302GY	Cartucho Original Canon 2217B001/PFI-302GY Gris	2217B001
TAOC-PFI302MB	Cartucho Original Canon 2215B001/PFI-302MBK Negro Mate	2215B001
TAOC-PFI303B	Cartucho Original Canon 2958 B 001/PFI-303BK Negro	2958B001
TAOC-PFI303C	Cartucho Original Canon 2959 B 001/PFI-303C Cian	2959B001
TAOC-PFI303M	Cartucho Original Canon 2960 B 001/PFI-303M Magenta	2960B001
TAOC-PFI303MB	Cartucho Original Canon 2957 B 001/PFI-303MBK Negro Mate	2957B001

TAOC-PFI303Y	Cartucho Original Canon 2961 B 001/PFI-303Y Amarillo	2961B001
TAOC-PFI306B	Cartucho Original Canon 6657B001/PFI-306BK Negro	6657B001
TAOC-PFI306BL	Cartucho Original Canon 6665B001/PFI-306B Azul	6665B001
TAOC-PFI306C	Cartucho Original Canon 6658B001/PFI-306C Cian	6658B001
TAOC-PFI306G	Cartucho Original Canon 6664B001/PFI-306G Verde	6664B001
TAOC-PFI306GY	Cartucho Original Canon 6666B001/PFI-306GY Gris	6666B001
TAOC-PFI306M	Cartucho Original Canon 6659B001/PFI-306M Magenta	6659B001
TAOC-PFI306MB	Cartucho Original Canon 6656B001/PFI-306MBK Negro Mate	6656B001
TAOC-PFI306PC	Cartucho Original Canon 6661B001/PFI-306PC Cian Fotográfico	6661B001
TAOC-PFI306PGY	Cartucho Original Canon 6667B001/PFI-306PGY Gris Fotográfico	6667B001
TAOC-PFI306PM	Cartucho Original Canon 6662B001/PFI-306PM Magenta Fotográfico	6662B001
TAOC-PFI306R	Cartucho Original Canon 6663B001/PFI-306R Rojo	6663B001
TAOC-PFI306Y	Cartucho Original Canon 6660B001/PFI-306Y Amarillo	6660B001
TAOC-PFI307B	Cartucho Original Canon 9810B001/PFI-307BK Negro	9811B001
TAOC-PFI307C	Cartucho Original Canon 9812B001/PFI-307C Cian	9812B001
TAOC-PFI307M	Cartucho Original Canon 9813B001/PFI-307M Magenta	9813B001
TAOC-PFI307MB	Cartucho Original Canon 9810B001/PFI-307MBK Negro	9810B001
TAOC-PFI307Y	Cartucho Original Canon 9814B001/PFI-307Y Amarillo	9814B001
TAOC-PFI701B	Cartucho Original Canon 0900B001/PFI-701BK Negro	0900B001
TAOC-PFI701BL	Cartucho Original Canon 0908B001/PFI-701B Azul	0908B001
TAOC-PFI701C	Cartucho Original Canon 0901B001/PFI-701C Cian	0901B001
TAOC-PFI701G	Cartucho Original Canon 0907B001/PFI-701G Verde	0907B001
TAOC-PFI701GY	Cartucho Original Canon 0909B001/PFI-701GY Gris	0909B001
TAOC-PFI701M	Cartucho Original Canon 0902B001/PFI-701M Magenta	0902B001
TAOC-PFI701MB	Cartucho Original Canon 0899B001/PFI-701MBK Negro Mate	0899B001
TAOC-PFI701PC	Cartucho Original Canon 0904B001/PFI-701PC Cian Fotográfico	0904B001
TAOC-PFI701PGY	Cartucho Original Canon 0910B001/PFI-701PGY Gris Fotográfico	0910B001
TAOC-PFI701PM	Cartucho Original Canon 0905B001/PFI-701PM Magenta Fotográfico	0905B001
TAOC-PFI701R	Cartucho Original Canon 0906B001/PFI-701R Rojo	0906B001
TAOC-PFI701Y	Cartucho Original Canon 0903B001/PFI-701Y Amarillo	0903B001
TAOC-PFI702B	Cartucho Original Canon 2220B001/PFI-702BK Negro	2220B001
TAOC-PFI702GY	Cartucho Original Canon 2221B001/PFI-702GY Gris	2221B001
TAOC-PFI702MB	Cartucho Original Canon 2219B001/PFI-702MBK Negro Mate	2219B001
TAOC-PFI702PGY	Cartucho Original Canon 2222B001/PFI-702PGY Gris Fotográfico	2222B001
TAOC-PFI703B	Cartucho Original Canon 2963B001/PFI-703BK Negro	2963B001
TAOC-PFI703BS3	Cartucho Original Canon 2963B003/PFI-703BK Negro (3 uds.)	2963B003
TAOC-PFI703C	Cartucho Original Canon 2964B001/PFI-703C Cian	2964B001
TAOC-PFI703CS3	Cartucho Original Canon 2964B003/PFI-703C Cian (3 uds.)	2964B003
TAOC-PFI703M	Cartucho Original Canon 2965B001/PFI-703M Magenta	2965B001
TAOC-PFI703MB	Cartucho Original Canon 2962B001/PFI-703MBK Negro Mate	2962B001
TAOC-PFI703MBS3	Cartucho Original Canon 2962B003/PFI-703MBK Negro Mate (3 uds.)	2962B003
TAOC-PFI703MS3	Cartucho Original Canon 2965B003/PFI-703M Magenta (3 uds.)	2965B003
TAOC-PFI703Y	Cartucho Original Canon 2966B001/PFI-703Y Amarillo	2966B001
TAOC-PFI703YS3	Cartucho Original Canon 2966B003/PFI-703Y Amarillo (3 uds.)	2966B003
TAOC-PFI704B	Cartucho Original Canon 3861B005/PFI-704BK Negro	3861B005
TAOC-PFI704BL	Cartucho Original Canon 3869B005/PFI-704B Azul	3869B005
TAOC-PFI704GY	Cartucho Original Canon 3870B005/PFI-704GY Gris	3870B005
TAOC-PFI704MB	Cartucho Original Canon 3860B005/PFI-704MBK Negro Mate	3860B005
TAOC-PFI704PGY	Cartucho Original Canon 3871B005/PFI-704PGY Gris Fotográfico	3871B005
TAOC-PFI706B	Cartucho Original Canon 6681B001/PFI-706BK Negro	6681B001
TAOC-PFI706BL	Cartucho Original Canon 6689B001/PFI-706B Azul	6689B001
TAOC-PFI706C	Cartucho Original Canon 6682B001/PFI-706C Cian	6682B001
TAOC-PFI706G	Cartucho Original Canon 6688B001/PFI-706G Verde	6688B001
TAOC-PFI706GY	Cartucho Original Canon 6690B001/PFI-706GY Gris	6690B001
TAOC-PFI706M	Cartucho Original Canon 6683B001/PFI-706M Magenta	6683B001
TAOC-PFI706MB	Cartucho Original Canon 6680B001/PFI-706MBK Negro Mate	6680B001
TAOC-PFI706PC	Cartucho Original Canon 6685B001/PFI-706PC Cian Fotográfico	6685B001
TAOC-PFI706PGY	Cartucho Original Canon 6691B001/PFI-706PGY Gris Fotográfico	6691B001
TAOC-PFI706PM	Cartucho Original Canon 6686B001/PFI-706PM Magenta Fotográfico	6686B001
TAOC-PFI706R	Cartucho Original Canon 6687B001/PFI-706R Rojo	6687B001
TAOC-PFI706Y	Cartucho Original Canon 6684B001/PFI-706Y Amarillo	6684B001
TAOC-PFI707B	Cartucho Original Canon 9821B0011/PFI-707 BK Negro	9821B001
TAOC-PFI707C	Cartucho Original Canon 9822B001/PFI-707C Cian	9822B001
TAOC-PFI707M	Cartucho Original Canon 9823B001/PFI-707M Magenta	9823B001
TAOC-PFI707MB	Cartucho Original Canon 9820B001/PFI-707MBK Negro Mate	9820B001
TAOC-PFI707Y	Cartucho Original Canon 9824B001/PFI-707Y Amarillo	9824B001
TAOC-PG37	Cartucho Original Canon 2145B001/PG-37 Negro	2145B001
TAOC-PG40	Cartucho Original Canon 0615B001/PG-40 Negro	0615B001
TAOC-PG50	Cartucho Original Canon 0616B001/PG-50 Negro	0616B001
TAOC-PG510	Cartucho Original Canon 2970B001/PG-510 Negro	2970B001
TAOC-PG512	Cartucho Original Canon 2969B001/PG-512 Negro	2969B001

TAOC-PG540	Cartucho Original Canon 5225B005/PG-540 Negro	5225B005
TAOC-PG540XL	Cartucho Original Canon 5222B005/PG-540XL Negro	5222B005
TAOC-PG545B	Cartucho Original Canon 8287B001/PG-545BK/Negro	8287B001
TAOC-PG545XL	Cartucho Original Canon 8286B001/PG-545XL/Negro	8286B001
TAOC-PGI1500XLB	Cartucho Original Canon 9182B001/PGI-1500XLBK Negro	9182B001
TAOC-PGI1500XLC	Cartucho Original Canon 9193B001/PGI-1500XLC Cian	9193B001
TAOC-PGI1500XLM	Cartucho Original Canon 9194B001/PGI-1500XLM Magenta	9194B001
TAOC-PGI1500XLS4	Cartucho Original Canon 9182B004/PGI-1500XLCMYBK CMYK (4 uds.)	9182B004
TAOC-PGI1500XLY	Cartucho Original Canon 9195B001/PGI-1500XLY Amarillo	9195B001
TAOC-PGI2500XLB	Cartucho Original Canon 9254B001/PGI-2500XLBK Negro	9254B001
TAOC-PGI2500XLC	Cartucho Original Canon 9265B001/PGI-2500XLC Cian	9265B001
TAOC-PGI2500XLM	Cartucho Original Canon 9266B001/PGI-2500XLM Magenta	9266B001
TAOC-PGI2500XLS4	Cartucho Original Canon 9254B004/PGI-2500XLCMYBK CMYK (4 uds.)	9254B004
TAOC-PGI2500XLY	Cartucho Original Canon 9267B001/PGI-2500XLY Amarillo	9267B001
TAOC-PGI29C	Cartucho Original Canon 4873B001/PGI-29C Cian	4873B001
TAOC-PGI29CO	Cartucho Original Canon 4879B001/PGI-29CO Optimizador de Brillo	4879B001
TAOC-PGI29DGY	Cartucho Original Canon 4870B001/PGI-29DGY Gris Oscuro	4870B001
TAOC-PGI29GY	Cartucho Original Canon 4871B001/PGI-29GY Gris	4871B001
TAOC-PGI29LGY	Cartucho Original Canon 4872B001/PGI-29LGY Gris Fotográfico	4872B001
TAOC-PGI29M	Cartucho Original Canon 4874B001/PGI-29M Magenta	4874B001
TAOC-PGI29MB	Cartucho Original Canon 4868B001/PGI-29MBK Negro Mate	4868B001
TAOC-PGI29PB	Cartucho Original Canon 4869B001/PGI-29PBK Negro Fotográfico	4869B001
TAOC-PGI29PC	Cartucho Original Canon 4876B001/PGI-29PC Cian Fotográfico	4876B001
TAOC-PGI29PM	Cartucho Original Canon 4877B001/PGI-29PM Magenta Fotográfico	4877B001
TAOC-PGI29R	Cartucho Original Canon 4878B001/PGI-29R Rojo	4878B001
TAOC-PGI29S6	Cartucho Original Canon 4873B005/PGI-29 CMY/R/LC/LM (6 uds.)	4873B005
TAOC-PGI29Y	Cartucho Original Canon 4875B001/PGI-29Y Amarillo	4875B001
TAOC-PGI35	Cartucho Original Canon 1509B001/PGI-35 Negro	1509B001
TAOC-PGI35BDP	Cartucho Original Canon 1509B012/PGI-35BK Negro, Pack Doble	1509B012
TAOC-PGI520B	Cartucho Original Canon 2932B001/PGI-520BK Negro	2932B001
TAOC-PGI520BDP	Cartucho Original Canon 2932B009/PGI-520BK Negro, Pack Doble	2932B009
TAOC-PGI525PGB	Cartucho Original Canon 4529B001/PGI-525PGBK Negro	4529B001
TAOC-PGI525PGBDP	Cartucho Original Canon 4529B006/PGI-525PGBK Negro, Pack Doble	4529B006
TAOC-PGI550PGB	Cartucho Original Canon 6496B001/PGI-550PGBK Negro	6496B001
TAOC-PGI550XLPGB	Cartucho Original Canon 6431B001/PGI-550PGBKXL Negro	6431B001
TAOC-PGI555XLPGB	Cartucho Original Canon 8049B001/PGI-555PGBKXXL Negro	8049B001
TAOC-PGI570PGB	Cartucho Original Canon 0372C001/PGI-570PGBK Negro Pigmentado	0372C001
TAOC-PGI570PGBDP	Cartucho Original Canon 0318C007/PGI-570PGBKXL Negro Pigmentado, Pack Doble	0318C007
TAOC-PGI570XLPGB	Cartucho Original Canon 0318C001/PGI-570PGBKXL Negro Pigmentado	0318C001
TAOC-PGI5B	Cartucho Original Canon PGI-5BK Negro	0628B001
TAOC-PGI5BBDP	Cartucho Original Canon PGI-5BK Negro, Pack Doble	0628B025
TAOC-PGI72C	Cartucho Original Canon 6404B001/PGI-72C Cian	6404B001
TAOC-PGI72CO	Cartucho Original Canon 6411B001/PGI-72CO Optimizador de Brillo	6411B001
TAOC-PGI72GY	Cartucho Original Canon 6409B001/PGI-72GY Gris	6409B001
TAOC-PGI72M	Cartucho Original Canon 6405B001/PGI-72M Magenta	6405B001
TAOC-PGI72MB	Cartucho Original Canon 6402B001/PGI-72MBK Negro Mate	6402B001
TAOC-PGI72PB	Cartucho Original Canon 6403B001/PGI-72PBK Negro Fotográfico	6403B001
TAOC-PGI72PC	Cartucho Original Canon 6407B001/PGI-72PC Cian Fotográfico	6407B001
TAOC-PGI72PM	Cartucho Original Canon 6408B001/PGI-72PM Magenta Fotográfico	6408B001
TAOC-PGI72R	Cartucho Original Canon 6410B001/PGI-72R Rojo	6410B001
TAOC-PGI72S5	Cartucho Original Canon 6402B009/PGI-72 CMYK/R (5 uds.)	6402B009
TAOC-PGI72Y	Cartucho Original Canon 6406B001/PGI-72Y Amarillo	6406B001
TAOC-PGI7B	Cartucho Original Canon 2444B001 PGI-7BK Negro	2444B001
TAOC-PGI9C	Cartucho Original Canon 1035B001/PGI-9C Cian	1035B001
TAOC-PGI9CL	Cartucho Original Canon 2442B001/PGI-9CLEAR Optimizador de Brillo	2442B001
TAOC-PGI9G	Cartucho Original Canon 1041B001/PGI-9G Verde	1041B001
TAOC-PGI9GY	Cartucho Original Canon 1042B001/PGI-9GY Gris	1042B001
TAOC-PGI9M	Cartucho Original Canon 1036B001/PGI-9M Magenta	1036B001
TAOC-PGI9MB	Cartucho Original Canon 1033B001/PGI-9MBK Negro Mate	1033B001
TAOC-PGI9PB	Cartucho Original Canon 1034B001/PGI-9PBK Negro Fotográfico	1034B001
TAOC-PGI9PC	Cartucho Original Canon 1038B001/PGI-9PC Cian Fotográfico	1038B001
TAOC-PGI9PM	Cartucho Original Canon 1039B001/PGI-9PM Magenta Fotográfico	1039B001
TAOC-PGI9R	Cartucho Original Canon 1040B001/PGI-9R Rojo	1040B001
TAOC-PGI9S5	Cartucho Original Canon 1033B011/PGI-9 MBK/LC/LM/R/G (5 uds.)	1033B011
TAOC-PGI9S5P	Cartucho Original Canon 1034B011/PGI-9 PBK/CMY/GY (5 uds.)	1034B011
TAOC-PGI9Y	Cartucho Original Canon 1037B001/PGI-9Y Amarillo	1037B001
TAOC-QY60046	Cartucho Original Canon QY6-0046-000, Cabezal de Impresión	QY6-0046-000
TAOC-QY60064	Cartucho Original Canon QY6-0064-000, Cabezal de Impresión	QY6-0064-000
TAOC-QY60070	Cartucho Original Canon QY6-0070-000, Cabezal de Impresión	QY6-0070-000
TAOC-QY60072	Cartucho Original Canon QY6-0072-000, Cabezal de Impresión	QY6-0072-000
TAOC-QY60073	Cartucho Original Canon QY6-0073-000, Cabezal de Impresión	QY6-0073-000

TAOC-QY60080	Cartucho Original Canon QY6-0080, Cabezal de Impresión	QY6-0080
TAOC-QY60086	Cartucho Original Canon QY6-0086, Cabezal de Impresión	QY6-0086-000
TAOC-RP108	Cartucho Original Canon 8568B001/RP-108, Pack Fotográfico	8568B001
TAODL-37VJ4	Cartucho Original Dell 592-11807/37VJ4 Negro	592-11807
TAODL-55K2V	Cartucho Original Dell 592-11813/55K2V HC Cian Programa de Retorno	592-11813
TAODL-59210314	Cartucho Original Dell 592-10314 XL Negro	592-10314
TAODL-59210315	Cartucho Original Dell 592-10315 XL CMY	592-10315
TAODL-59210316	Cartucho Original Dell 592-10316 Negro	592-10316
TAODL-59210317	Cartucho Original Dell 592-10317 CMY	592-10317
TAODL-59210328	Cartucho Original Dell 592-10328 CMY	592-10328
TAODL-7Y743	Cartucho Original Dell 592-10043/7Y743 Negro	592-10043
TAODL-7Y745	Cartucho Original Dell 592-10045/7Y745 CMY, Cabezal de Impresión	592-10045
TAODL-9VFFV	Cartucho Original Dell 592-11817/9VFFV HC Magenta Programa de Retorno	592-11817
TAODL-CH883	Cartucho Original Dell 592-10226/CH883 Negro	592-10226
TAODL-CH884	Cartucho Original Dell 592-10227/CH884 CMY	592-10227
TAODL-DG83C	Cartucho Original Dell 592-11808/DG83C Cian	592-11808
TAODL-DH828	Cartucho Original Dell 592-10224/DH828 Negro	592-10224
TAODL-DH829	Cartucho Original Dell 592-10225/DH829 CMY	592-10225
TAODL-F63KK	Cartucho Original Dell 592-11809/F63KK Magenta	592-11809
TAODL-J5566	Cartucho Original Dell 592-10094/J5566 Negro	592-10094
TAODL-J5567	Cartucho Original Dell 592-10093/J5567 CMY	592-10093
TAODL-J56GD	Cartucho Original Dell 592-11814/J56GD HC Magenta Programa de Retorno	592-11814
TAODL-JF333	Cartucho Original Dell 592-10177/JF333 CMY	592-10177
TAODL-JP451	Cartucho Original Dell 592-10275/JP451 Negro	592-10275
TAODL-JP453	Cartucho Original Dell 592-10276/JP453 CMY	592-10276
TAODL-KX701	Cartucho Original Dell 592-10278/KX701 Negro	592-10278
TAODL-KX703	Cartucho Original Dell 592-10279/KX703 CMY	592-10279
TAODL-M4640	Cartucho Original Dell 592-10092/M4640 Negro	592-10092
TAODL-M4646	Cartucho Original Dell 592-10091/M4646 CMY	592-10091
TAODL-MCCT6	Cartucho Original Dell 592-11810/MCCT6 Amarillo	592-11810
TAODL-MK990	Cartucho Original Dell 592-10209/MK990 Negro	592-10209
TAODL-MK991	Cartucho Original Dell 592-10210/MK991 CMY	592-10210
TAODL-MK992	Cartucho Original Dell 592-10211/MK992 Negro	592-10211
TAODL-MK993	Cartucho Original Dell 592-10212/MK993 CMY	592-10212
TAODL-MK995	Cartucho Original Dell 592-10213/MK995 Fotográfico, Cabezal de Impresión	592-10213
TAODL-PT22F	Cartucho Original Dell 592-11815/PT22F HC Amarillo Programa de Retorno	592-11815
TAODL-R4YG3	Cartucho Original Dell 592-11812/R4YG3 HC Negro	592-11812
TAODL-T0529	Cartucho Original Dell 592-10039/T0529 Negro	592-10039
TAODL-T0530	Cartucho Original Dell 592-10040/T0530 CMY	592-10040
TAODL-TP684	Cartucho Original Dell 592-10325/TP684 XL Negro	592-10325
TAODL-UK852	Cartucho Original Dell 592-10306/UK852 CMY	592-10306
TAODL-WD13R	Cartucho Original Dell 592-11816/WD13R HC Cian Programa de Retorno	592-11816
TAODL-WP322	Cartucho Original Dell 592-10305/WP322 Negro	592-10305
TAODL-X737N	Cartucho Original Dell 592-11327/X737N XL HC Negro	592-11327
TAODL-X738N	Cartucho Original Dell 592-11329/X738N HC CMY	592-11329
TAODL-X739N	Cartucho Original Dell 592-11332/X739N Negro	592-11332
TAODL-X740N	Cartucho Original Dell 592-11334/X740N CMY	592-11334
TAODL-X740NS2	Cartucho Original Dell 592-11333/592-11317/Y499D/ X740N BK/CMY (2 uds.)	592-11333
TAODL-X751N	Cartucho Original Dell 592-11311/X751N Negro	592-11311
TAODL-X752N	Cartucho Original Dell 592-11313/X752N CMY	592-11313
TAODL-X768N	Cartucho Original Dell 592-11343/592-11295/X768N XL Negro	592-11343
TAODL-X769N	Cartucho Original Dell 592-11345/592-11297/X769N XL CMY	592-11345
TAODL-Y498D	Cartucho Original Dell 592-11331/592-11315/Y498D Negro	592-11331
TAODL-Y4GFJ	Cartucho Original Dell 592-11818/Y4GFJ HC Amarillo Programa de Retorno	592-11818
TAOE-16XXL	Cartucho Original Epson C13T16814010/16XXL Negro	C13T16814010
TAOE-18B	Cartucho Original Epson C13T18014010/18 Negro	C13T18014010
TAOE-18C	Cartucho Original Epson C13T18024010/18 Cian	C13T18024010
TAOE-18S4	Cartucho Original Epson C13T18064010/18 CMYK (4 uds.)	C13T18064010
TAOE-18XLB	Cartucho Original Epson C13T18114010/18XL Negro	C13T18114010
TAOE-18XLC	Cartucho Original Epson C13T18124010/18XL Cian	C13T18124010
TAOE-18XLM	Cartucho Original Epson C13T18134010/18XL Magenta	C13T18134010
TAOE-18XLS4	Cartucho Original Epson C13T18164010/18XL CMYK (4 uds.)	C13T18164010
TAOE-18XLY	Cartucho Original Epson C13T18144010/18XL Amarillo	C13T18144010
TAOE-1M	Cartucho Original Epson C13T18034010/18 Magenta	C13T18034010
TAOE-1Y	Cartucho Original Epson C13T18044010/18 Amarillo	C13T18044010
TAOE-24B	Cartucho Original Epson C13T24214010/24 Negro	C13T24214010
TAOE-24C	Cartucho Original Epson C13T24224010/24 Cian	C13T24224010
TAOE-24LC	Cartucho Original Epson C13T24254010/24 Cian Fotográfico	C13T24254010
TAOE-24LM	Cartucho Original Epson C13T24264010/24 Magenta Fotográfico	C13T24264010
TAOE-24M	Cartucho Original Epson C13T24234010/24 Magenta	C13T24234010
TAOE-24S6	Cartucho Original Epson C13T24284010/24 CMYK/LC/LM (6 uds.)	C13T24284010

TAOE-24XLB	Cartucho Original Epson C13T24314010/24XL Negro	C13T24314010
TAOE-24XLC	Cartucho Original Epson C13T24324010/24XL Cian	C13T24324010
TAOE-24XLLC	Cartucho Original Epson C13T24354010/24XL Cian Fotográfico	C13T24354010
TAOE-24XLLM	Cartucho Original Epson C13T24364010/24XL Magenta Fotográfico	C13T24364010
TAOE-24XLM	Cartucho Original Epson C13T24334010/24XL Magenta	C13T24334010
TAOE-24XLS6	Cartucho Original Epson C13T24384010/24XL CMYK/LC/LM (6 uds.)	C13T24384010
TAOE-24XLS6B	Cartucho Original Epson C13T24384011/24XL CMYK/LC/LM (6 uds.)	C13T24384011
TAOE-24XLY	Cartucho Original Epson C13T24344010/24XL Amarillo	C13T24344010
TAOE-24Y	Cartucho Original Epson C13T24244010/24 Amarillo	C13T24244010
TAOE-266	Cartucho Original Epson C13T26614010/266 Negro	C13T26614010
TAOE-267	Cartucho Original Epson C13T26704010/267 CMY	C13T26704010
TAOE-26XLB	Cartucho Original Epson C13T26214010/26XL Negro	C13T26214010
TAOE-26XLC	Cartucho Original Epson C13T26324010/26XL Cian	C13T26324010
TAOE-26XLM	Cartucho Original Epson C13T26334010/26XL Magenta	C13T26334010
TAOE-26XLPB	Cartucho Original Epson C13T26314010/26XL Negro Fotográfico	C13T26314010
TAOE-26XLS4	Cartucho Original Epson C13T26364010/26XL CMYK (4 uds.)	C13T26364010
TAOE-26XLY	Cartucho Original Epson C13T26344010/26XL Amarillo	C13T26344010
TAOE-27B	Cartucho Original Epson C13T27114010/27 Negro	C13T27014010
TAOE-27C	Cartucho Original Epson C13T27114010/27 Cian	C13T27024010
TAOE-27M	Cartucho Original Epson C13T27044010/27 Magenta	C13T27034010
TAOE-27S3	Cartucho Original Epson C13T27054010/27 CMY (3 uds.)	C13T27054010
TAOE-27XLB	Cartucho Original Epson C13T27114010/27XL Negro	C13T27114010
TAOE-27XLC	Cartucho Original Epson C13T27124010/27XL Cian	C13T27124010
TAOE-27XLM	Cartucho Original Epson C13T27134010/27XL Magenta	C13T27134010
TAOE-27XLS3	Cartucho Original Epson C13T27154010/27XL CMY (3 uds.)	C13T27154010
TAOE-27XLY	Cartucho Original Epson C13T27144010/27XL Amarillo	C13T27144010
TAOE-27XXL	Cartucho Original Epson C13T27914010/27XXL Negro	C13T27914010
TAOE-27Y	Cartucho Original Epson C13T27044010/27 Amarillo	C13T27044010
TAOE-29XLS4	Cartucho Original Epson C13T29964010/T299640/29XL CMYK (4 uds.)	C13T29964010
TAOE-33C	Cartucho Original Epson C13T33424010/33 Cian	C13T33424010
TAOE-33M	Cartucho Original Epson C13T33434010/33 Magenta	C13T33434010
TAOE-33PB	Cartucho Original Epson C13T33414010/33 Negro Fotográfico	C13T33414010
TAOE-33S5	Cartucho Original Epson C13T33374010/T333740/33 CMYK/PB (5 uds.)	C13T33374010
TAOE-33XLB	Cartucho Original Epson C13T33514010/33XL Negro XL	C13T33514010
TAOE-33XLC	Cartucho Original Epson C13T33624010/33XL Cian XL	C13T33624010
TAOE-33XLM	Cartucho Original Epson C13T33634010/33XL Magenta XL	C13T33634010
TAOE-33XLPB	Cartucho Original Epson C13T33614010/33XL Negro Fotográfico XL	C13T33614010
TAOE-33XLS5	Cartucho Original Epson C13T33574010/T335740/33XL CMYK/PB (5 uds.)	C13T33574010
TAOE-33XLY	Cartucho Original Epson C13T33644010/33XL Amarillo XL	C13T33644010
TAOE-33Y	Cartucho Original Epson C13T33444010/33 Amarillo	C13T33444010
TAOE-79B	Cartucho Original Epson C13T79114010/79 Negro	C13T79114010
TAOE-79C	Cartucho Original Epson C13T79124010/79 Cian	C13T79124010
TAOE-79M	Cartucho Original Epson C13T79134010/79 Magenta	C13T79134010
TAOE-79XLB	Cartucho Original Epson C13T79014010/79XL Negro	C13T79014010
TAOE-79XLC	Cartucho Original Epson C13T79024010/79XL Cian	C13T79024010
TAOE-79XLM	Cartucho Original Epson C13T79034010/79XL Magenta	C13T79034010
TAOE-79XLY	Cartucho Original Epson C13T79044010/79XL Amarillo	C13T79044010
TAOE-79Y	Cartucho Original Epson C13T79144010/79 Amarillo	C13T79144010
TAOE-PJIC1	Cartucho Original Epson C13S020447/PJIC1 Cian	C13S020447
TAOE-PJIC2	Cartucho Original Epson C13S020448/PJIC2 Cian Fotográfico	C13S020448
TAOE-PJIC3	Cartucho Original Epson C13S020449/PJIC3 Magenta Fotográfico	C13S020449
TAOE-PJIC4	Cartucho Original Epson C13S020450/PJIC4 Magenta	C13S020450
TAOE-PJIC5	Cartucho Original Epson C13S020451/PJIC5 Amarillo	C13S020451
TAOE-PJIC6	Cartucho Original Epson C13S020452/PJIC6 Negro	C13S020452
TAOE-S020118	Cartucho Original Epson C13S020118 Negro	C13S020118
TAOE-S020122	Cartucho Original Epson C13S020122 Amarillo	C13S020122
TAOE-S020126	Cartucho Original Epson C13S020126 Magenta	C13S020126
TAOE-S020130	Cartucho Original Epson C13S020130 Cian	C13S020130
TAOE-SJIC1	Cartucho Original Epson C13S020175/SJIC1 Negro	C13S020175
TAOE-SJIC10P	Cartucho Original Epson C33S020411/SJIC10P Negro	C33S020411
TAOE-SJIC15	Cartucho Original Epson C13S020464/SJIC15 CMY	C13S020464
TAOE-SJIC22PB	Cartucho Original Epson C33S020601/SJIC22PK Negro	C33S020601
TAOE-SJIC22PC	Cartucho Original Epson C33S020602/SJIC22PC Cian	C33S020602
TAOE-SJIC22PM	Cartucho Original Epson C33S020603/SJIC22PM Magenta	C33S020603
TAOE-SJIC22PY	Cartucho Original Epson C33S020604/SJIC22PY Amarillo	C33S020604
TAOE-SJIC6B	Cartucho Original Epson C33S020403/SJIC6 Negro	C33S020403
TAOE-SJIC6R	Cartucho Original Epson C33S020405/SJIC6 Rojo	C33S020405
TAOE-SJIC8	Cartucho Original Epson C33S020407/SJIC8 Negro	C33S020407
TAOE-SJIC9P	Cartucho Original Epson C33S020410/SJIC9P CMY	C33S020410
TAOE-T001	Cartucho Original Epson C13T00101110/T001 CMY	C13T00101110
TAOE-T005	Cartucho Original Epson C13T00501110/T005 CMY	C13T00501110

TAOE-T007	Cartucho Original Epson C13T00740110/T007 Negro	C13T00740110
TAOE-T007XL	Cartucho Original Epson C13T00740210B/T007 Negro	C13T00740210B
TAOE-T008	Cartucho Original Epson C13T00840110/T008 CMY	C13T00840110
TAOE-T008S2	Cartucho Original Epson C13T00740310/T007/T008 BK/CMY (2 uds.)	C13T00740310
TAOE-T008XL	Cartucho Original Epson C13T00840310/T008 CMY	C13T00840310
TAOE-T009	Cartucho Original Epson C13T00940110/T009 CMY	C13T00940110
TAOE-T009XL	Cartucho Original Epson C13T00940210/T009 CMY	C13T00940210
TAOE-T013	Cartucho Original Epson C13T01340110/T013 Negro	C13T01340110
TAOE-T014	Cartucho Original Epson C13T01440110/T014 CMY	C13T01440110
TAOE-T015	Cartucho Original Epson C13T01540110/T015 Negro	C13T01540110
TAOE-T017	Cartucho Original Epson C13T01740110/T017 Negro	C13T01740110
TAOE-T018	Cartucho Original Epson C13T01840110/T018 CMY	C13T01840110
TAOE-T019B	Cartucho Original Epson C13T01940110/T019 Negro	C13T01940110
TAOE-T019BDP	Cartucho Original Epson C13T01940210/T019 Negro, Pack Doble	C13T01940210
TAOE-T020	Cartucho Original Epson C13T02040110/T020 CMY	C13T02040110
TAOE-T026	Cartucho Original Epson C13T02640110/T026 Negro	C13T02640110
TAOE-T027	Cartucho Original Epson C13T02740110/T027 CMY	C13T02740110
TAOE-T027DP	Cartucho Original Epson C13T02740310/T027 CMY, Pack Doble	C13T02740310
TAOE-T029	Cartucho Original Epson C13T02940110/T029 CMY	C13T02940110
TAOE-T0321	Cartucho Original Epson C13T03214010/T0321 Negro	C13T03214010
TAOE-T0321DP	Cartucho Original Epson C13T03214210/T0321 Negro, Pack Doble	C13T03214210
TAOE-T0322	Cartucho Original Epson C13T03224010/T0322 Cian	C13T03224010
TAOE-T0323	Cartucho Original Epson C13T03234010/T0323 Magenta	C13T03234010
TAOE-T0324	Cartucho Original Epson C13T03244010/T0324 Amarillo	C13T03244010
TAOE-T0331	Cartucho Original Epson C13T03314010/T0331 Negro	C13T03314010
TAOE-T0332	Cartucho Original Epson C13T03324010/T0332 Cian	C13T03324010
TAOE-T0333	Cartucho Original Epson C13T03334010/T0333 Magenta	C13T03334010
TAOE-T0334	Cartucho Original Epson C13T03344010/T0334 Amarillo	C13T03344010
TAOE-T0335	Cartucho Original Epson C13T03354010/T0335 Cian Fotográfico	C13T03354010
TAOE-T0336	Cartucho Original Epson C13T03364010/T0336 Magenta Fotográfico	C13T03364010
TAOE-T0341	Cartucho Original Epson C13T03414010/T0341 Negro	C13T03414010
TAOE-T0342	Cartucho Original Epson C13T03424010/T0342 Cian	C13T03424010
TAOE-T0343	Cartucho Original Epson C13T03434010/T0343 Magenta	C13T03434010
TAOE-T0344	Cartucho Original Epson C13T03444010/T0344 Amarillo	C13T03444010
TAOE-T0345	Cartucho Original Epson C13T03454010/T0345 Cian Fotográfico	C13T03454010
TAOE-T0346	Cartucho Original Epson C13T03464010/T0346 Magenta Fotográfico	C13T03464010
TAOE-T0347	Cartucho Original Epson C13T03474010/T0347 Negro Fotográfico	C13T03474010
TAOE-T0348	Cartucho Original Epson C13T03484010/T0348 Negro	C13T03484010
TAOE-T036	Cartucho Original Epson C13T03614010/T036 Negro	C13T03614010
TAOE-T037	Cartucho Original Epson C13T03704010/T037 CMY	C13T03704010
TAOE-T039	Cartucho Original Epson C13T039120/T039 CMY	C13T039120
TAOE-T040	Cartucho Original Epson C13T04014010/T040 Negro	C13T04014010
TAOE-T041	Cartucho Original Epson C13T04104010/T041 CMY	C13T04104010
TAOE-T0422	Cartucho Original Epson C13T04224010/T0422 Cian	C13T04224010
TAOE-T0423	Cartucho Original Epson C13T04234010/T0423 Magenta	C13T04234010
TAOE-T0424	Cartucho Original Epson C13T04244010/T0424 Amarillo	C13T04244010
TAOE-T0431	Cartucho Original Epson C13T04314010/T0431 Negro	C13T04314010
TAOE-T0441	Cartucho Original Epson C13T04414010/T0441 Negro	C13T04414010
TAOE-T0442	Cartucho Original Epson C13T04424010/T0442 Cian	C13T04424010
TAOE-T0443	Cartucho Original Epson C13T04434010/T0443 Magenta	C13T04434010
TAOE-T0444	Cartucho Original Epson C13T04444010/T0444 Amarillo	C13T04444010
TAOE-T0445S4	Cartucho Original Epson C13T04454010/T0445 CMYK (4 uds.)	C13T04454010
TAOE-T0452	Cartucho Original Epson C13T04524010/T0452 Cian	C13T04524010
TAOE-T0453	Cartucho Original Epson C13T04534010/T0453 Magenta	C13T04534010
TAOE-T0454	Cartucho Original Epson C13T04544010/T0454 Amarillo	C13T04544010
TAOE-T0481	Cartucho Original Epson C13T04814010/T0481 Negro	C13T04814010
TAOE-T0482	Cartucho Original Epson C13T04824010/T0482 Cian	C13T04824010
TAOE-T0483	Cartucho Original Epson C13T04834010/T0483 Magenta	C13T04834010
TAOE-T0484	Cartucho Original Epson C13T04844010/T0484 Amarillo	C13T04844010
TAOE-T0485	Cartucho Original Epson C13T04854010/T0485 Cian Fotográfico	C13T04854010
TAOE-T0486	Cartucho Original Epson C13T04864010/T0486 Magenta Fotográfico	C13T04864010
TAOE-T0487S6	Cartucho Original Epson C13T04874010/T0487 CMYK/LC/LM (6 uds.)	C13T04874010
TAOE-T048BS3	Cartucho Original Epson C13T048B4010/T048B LC/LM/Y (3 uds.)	C13T048B4010
TAOE-T048CS3	Cartucho Original Epson C13T048C4010/T048C CMK (3 uds.)	C13T048C4010
TAOE-T0501	Cartucho Original Epson C13T05014010/T0501 Negro	C13T05014010
TAOE-T0501DP	Cartucho Original Epson C13T05014210/T0501 Negro, Pack Doble	C13T05014210
TAOE-T0511	Cartucho Original Epson C13T05114010/T0511 Negro	C13T05114010
TAOE-T0511DP	Cartucho Original Epson C13T05114210/T0511 Negro, Pack Doble	C13T05114210
TAOE-T0520	Cartucho Original Epson C13T05204010/T0520 CMY	C13T05204010
TAOE-T0530	Cartucho Original Epson C13T05304010/T0530 CMY	C13T05304010
TAOE-T0540	Cartucho Original Epson C13T05404010/T0540 Optimizador de Brillo	C13T05404010

TAOE-T0541	Cartucho Original Epson C13T05414010/T0541 Negro	C13T05414010
TAOE-T0542	Cartucho Original Epson C13T05424010/T0542 Cian	C13T05424010
TAOE-T0543	Cartucho Original Epson C13T05434010/T0543 Magenta	C13T05434010
TAOE-T0544	Cartucho Original Epson C13T05444010/T0544 Amarillo	C13T05444010
TAOE-T0547	Cartucho Original Epson C13T05474010/T0547 Rojo	C13T05474010
TAOE-T0548	Cartucho Original Epson C13T05484010/T0548 Negro Mate	C13T05484010
TAOE-T0549	Cartucho Original Epson C13T05494010/T0549 Azul	C13T05494010
TAOE-T0551	Cartucho Original Epson C13T05514010/T0551 Negro	C13T05514010
TAOE-T0552	Cartucho Original Epson C13T05524010/T0552 Cian	C13T05524010
TAOE-T0553	Cartucho Original Epson C13T05534010/T0553 Magenta	C13T05534010
TAOE-T0554	Cartucho Original Epson C13T05544010/T0554 Amarillo	C13T05544010
TAOE-T0556S4	Cartucho Original Epson C13T05564010/T0556 CMYK (4 uds.)	C13T05564010
TAOE-T0591	Cartucho Original Epson C13T05914010/T0591 Negro	C13T05914010
TAOE-T0592	Cartucho Original Epson C13T05924010/T0592 Cian	C13T05924010
TAOE-T0593	Cartucho Original Epson C13T05934010/T0593 Magenta	C13T05934010
TAOE-T0594	Cartucho Original Epson C13T05944010/T0594 Amarillo	C13T05944010
TAOE-T0595	Cartucho Original Epson C13T05954010/T0595 Cian Fotográfico	C13T05954010
TAOE-T0596	Cartucho Original Epson C13T05964010/T0596 Magenta Fotográfico	C13T05964010
TAOE-T0597	Cartucho Original Epson C13T05974010/T0597 Negro Fotográfico	C13T05974010
TAOE-T0598	Cartucho Original Epson C13T05984010/T0598 Negro Mate	C13T05984010
TAOE-T0599	Cartucho Original Epson C13T05994010/T0599 Negro Fotográfico	C13T05994010
TAOE-T0611	Cartucho Original Epson C13T06114010/T0611 Negro	C13T06114010
TAOE-T0612	Cartucho Original Epson C13T06124010/T0612 Cian	C13T06124010
TAOE-T0613	Cartucho Original Epson C13T06134010/T0613 Magenta	C13T06134010
TAOE-T0614	Cartucho Original Epson C13T06144010/T0614 Amarillo	C13T06144010
TAOE-T0615S4	Cartucho Original Epson C13T06154010/T0615 CMYK (4 uds.)	C13T06154010
TAOE-T066	Cartucho Original Epson C13T06614010/T066 Negro	C13T06614010
TAOE-T067	Cartucho Original Epson C13T06704010/T067 CMY	C13T06704010
TAOE-T067S2	Cartucho Original Epson C13T06624010/T066/T067 BK/CMY (2 uds.)	C13T06624010
TAOE-T0711	Cartucho Original Epson C13T07114010/T0711 Negro	C13T07114010
TAOE-T0711H	Cartucho Original Epson C13T071140H10/T0711H Negro	C13T071140H10
TAOE-T0712	Cartucho Original Epson C13T07124010/T0712 Cian	C13T07124010
TAOE-T0713	Cartucho Original Epson C13T07134010/T0713 Magenta	C13T07134010
TAOE-T0714	Cartucho Original Epson C13T07144010/T0714 Amarillo	C13T07144010
TAOE-T0715S4	Cartucho Original Epson C13T07154010/T0715 CMYK (4 uds.)	C13T07154010
TAOE-T0741	Cartucho Original Epson C13T07414010/T0741 Negro	C13T07414010
TAOE-T0742	Cartucho Original Epson C13T07424010/T0742 Cian	C13T07424010
TAOE-T0743	Cartucho Original Epson C13T07434010/T0743 Magenta	C13T07434010
TAOE-T0744	Cartucho Original Epson C13T07444010/T0744 Amarillo	C13T07444010
TAOE-T0791	Cartucho Original Epson C13T07914010/T0791 Negro	C13T07914010
TAOE-T0792	Cartucho Original Epson C13T07924010/T0792 Cian	C13T07924010
TAOE-T0793	Cartucho Original Epson C13T07934010/T0793 Magenta	C13T07934010
TAOE-T0794	Cartucho Original Epson C13T07944010/T0794 Amarillo	C13T07944010
TAOE-T0795	Cartucho Original Epson C13T07954010/T0795 Cian Fotográfico	C13T07954010
TAOE-T0796	Cartucho Original Epson C13T07964010/T0796 Magenta Fotográfico	C13T07964010
TAOE-T0801	Cartucho Original Epson C13T08014010/T0801 Negro	C13T08014010
TAOE-T0802	Cartucho Original Epson C13T08024010/T0802 Cian	C13T08024010
TAOE-T0803	Cartucho Original Epson C13T08034010/T0803 Magenta	C13T08034010
TAOE-T0804	Cartucho Original Epson C13T08044010/T0804 Amarillo	C13T08044010
TAOE-T0805	Cartucho Original Epson C13T08054010/T0805 Cian Fotográfico	C13T08054010
TAOE-T0806	Cartucho Original Epson C13T08064010/T0806 Magenta Fotográfico	C13T08064010
TAOE-T0807S6	Cartucho Original Epson C13T08074010/T0807 CMYK/LC/LM (6 uds.)	C13T08074010
TAOE-T0870	Cartucho Original Epson C13T08704010/T0870 Optimizador de Brillo	C13T08704010
TAOE-T0871	Cartucho Original Epson C13T08714010/T0871 Negro Fotográfico	C13T08714010
TAOE-T0872	Cartucho Original Epson C13T08724010/T0872 Cian	C13T08724010
TAOE-T0873	Cartucho Original Epson C13T08734010/T0873 Magenta	C13T08734010
TAOE-T0874	Cartucho Original Epson C13T08744010/T0874 Amarillo	C13T08744010
TAOE-T0877	Cartucho Original Epson C13T08774010/T0877 Rojo	C13T08774010
TAOE-T0878	Cartucho Original Epson C13T08784010/T0878 Negro Mate	C13T08784010
TAOE-T0879	Cartucho Original Epson C13T08794010/T0879 Naranja	C13T08794010
TAOE-T0891	Cartucho Original Epson C13T08914010/T0891 Negro	C13T08914010
TAOE-T0892	Cartucho Original Epson C13T08924010/T0892 Cian	C13T08924010
TAOE-T0893	Cartucho Original Epson C13T08934010/T0893 Magenta	C13T08934010
TAOE-T0894	Cartucho Original Epson C13T08944010/T0894 Amarillo	C13T08944010
TAOE-T0895	Cartucho Original Epson C13T08954010/T0895 CMYK (4 uds.)	C13T08954010
TAOE-T0961	Cartucho Original Epson C13T09614010/T0961 Negro	C13T09614010
TAOE-T0962	Cartucho Original Epson C13T09624010/T0962 Cian	C13T09624010
TAOE-T0963	Cartucho Original Epson C13T09634010/T0963 Magenta	C13T09634010
TAOE-T0964	Cartucho Original Epson C13T09644010/T0964 Amarillo	C13T09644010
TAOE-T0965	Cartucho Original Epson C13T09654010/T0965 Cian Fotográfico	C13T09654010
TAOE-T0966	Cartucho Original Epson C13T09664010/T0966 Magenta Fotográfico	C13T09664010

TAOE-T0967	Cartucho Original Epson C13T09674010/T0967 Negro Fotográfico	C13T09674010
TAOE-T0968	Cartucho Original Epson C13T09684010/T0968 Negro Mate	C13T09684010
TAOE-T0969	Cartucho Original Epson C13T09694010/T0969 Gris Claro	C13T09694010
TAOE-T1001	Cartucho Original Epson C13T10014010/T1001 Negro	C13T10014010
TAOE-T1002	Cartucho Original Epson C13T10024010/T1002 Cian	C13T10024010
TAOE-T1003	Cartucho Original Epson C13T10034010/T1003 Magenta	C13T10034010
TAOE-T1004	Cartucho Original Epson C13T10044010/T1004 Amarillo	C13T10044010
TAOE-T1006S3	Cartucho Original Epson C13T10064010/T1006 CMY (3 uds.)	C13T10064010
TAOE-T1281	Cartucho Original Epson C13T12814010/T1281 Negro	C13T12814010
TAOE-T1282	Cartucho Original Epson C13T12824010/T1282 Cian	C13T12824010
TAOE-T1283	Cartucho Original Epson C13T12834010/T1283 Magenta	C13T12834010
TAOE-T1284	Cartucho Original Epson C13T12844010/T1284 Amarillo	C13T12844010
TAOE-T1285	Cartucho Original Epson C13T12854010/T1285 CMYK (4 uds.)	C13T12854010
TAOE-T1291	Cartucho Original Epson C13T12914010/T1291 Negro	C13T12914010
TAOE-T1292	Cartucho Original Epson C13T12924010/T1292 Cian	C13T12924010
TAOE-T1293	Cartucho Original Epson C13T12934010/T1293 Magenta	C13T12934010
TAOE-T1294	Cartucho Original Epson C13T12944010/T1294 Amarillo	C13T12944010
TAOE-T1295S4	Cartucho Original Epson C13T12954010/T1295 CMYK (4 uds.)	C13T12954010
TAOE-T1301	Cartucho Original Epson C13T13014010/T1301 Negro	C13T13014010
TAOE-T1302	Cartucho Original Epson C13T13024010/T1302 Cian	C13T13024010
TAOE-T1303	Cartucho Original Epson C13T13034010/T1303 Magenta	C13T13034010
TAOE-T1304	Cartucho Original Epson C13T13044010/T1304 Amarillo	C13T13044010
TAOE-T1306S3	Cartucho Original Epson C13T13064010/T1306 XL CMY (3 uds.)	C13T13064010
TAOE-T1571	Cartucho Original Epson C13T15714010/T1571 Negro Fotográfico	C13T15714010
TAOE-T1572	Cartucho Original Epson C13T15724010/T1572 Cian	C13T15724010
TAOE-T1573	Cartucho Original Epson C13T15734010/T1573 Magenta	C13T15734010
TAOE-T1574	Cartucho Original Epson C13T15744010/T1574 Amarillo	C13T15744010
TAOE-T1575	Cartucho Original Epson C13T15754010/T1575 Cian Fotográfico	C13T15754010
TAOE-T1576	Cartucho Original Epson C13T15764010/T1576 Magenta Fotográfico	C13T15764010
TAOE-T1577	Cartucho Original Epson C13T15774010/T1577 Negro Fotográfico	C13T15774010
TAOE-T1578	Cartucho Original Epson C13T15784010/T1578 Negro Mate	C13T15784010
TAOE-T1579	Cartucho Original Epson C13T15794010/T1579 Gris Claro	C13T15794010
TAOE-T1590	Cartucho Original Epson C13T15904010/T1590 Optimizador de Brillo	C13T15904010
TAOE-T1591	Cartucho Original Epson C13T15914010/T1591 Negro Fotográfico	C13T15914010
TAOE-T1592	Cartucho Original Epson C13T15924010/T1592 Cian	C13T15924010
TAOE-T1593	Cartucho Original Epson C13T15934010/T1593 Magenta	C13T15934010
TAOE-T1594	Cartucho Original Epson C13T15944010/T1594 Amarillo	C13T15944010
TAOE-T1597	Cartucho Original Epson C13T15974010/T1597 Rojo	C13T15974010
TAOE-T1598	Cartucho Original Epson C13T15984010/T1598 Negro Mate	C13T15984010
TAOE-T1599	Cartucho Original Epson C13T15994010/T1599 Naranja	C13T15994010
TAOE-T1621	Cartucho Original Epson C13T16214010/T1621 Negro	C13T16214010
TAOE-T1622	Cartucho Original Epson C13T16224010/T1622 Cian	C13T16224010
TAOE-T1623	Cartucho Original Epson C13T16234010/T1623 Magenta	C13T16234010
TAOE-T1624	Cartucho Original Epson C13T16244010/T1624 Amarillo	C13T16244010
TAOE-T1626	Cartucho Original Epson C13T16264010/T1626 CMYK (4 uds.)	C13T16264010
TAOE-T1631	Cartucho Original Epson C13T16314010/T1631 Negro	C13T16314010
TAOE-T1632	Cartucho Original Epson C13T16324010/T1632 Cian	C13T16324010
TAOE-T1633	Cartucho Original Epson C13T16334010/T1633 Magenta	C13T16334010
TAOE-T1634	Cartucho Original Epson C13T16344010/T1634 Amarillo	C13T16344010
TAOE-T1636S4	Cartucho Original Epson C13T16364010/T1636 CMYK (4 uds.)	C13T16364010
TAOE-T2428S6	Cartucho Original Epson C13T24284011 CMYK/LC/LM (6 uds.)	C13T24284011
TAOE-T2601	Cartucho Original Epson C13T26014010/T2601 Negro	C13T26014010
TAOE-T2611	Cartucho Original Epson C13T26114010/T2611 Negro Fotográfico	C13T26114010
TAOE-T2612	Cartucho Original Epson C13T26124010/T2612 Cian	C13T26124010
TAOE-T2613	Cartucho Original Epson C13T26134010/T2613 Magenta	C13T26134010
TAOE-T2614	Cartucho Original Epson C13T26144010/T2614 Amarillo	C13T26144010
TAOE-T2616	Cartucho Original Epson C13T26164010/T2616 CMYK (4 uds.)	C13T26164010
TAOE-T2981	Cartucho Original Epson C13T29814010/T298140 Negro	C13T29814010
TAOE-T2981XL	Cartucho Original Epson C13T29914010/T298140 XL Negro	C13T29914010
TAOE-T2982	Cartucho Original Epson C13T29824010/T298240 Cian	C13T29824010
TAOE-T2983	Cartucho Original Epson C13T29834010/T298340 Magenta	C13T29834010
TAOE-T2984	Cartucho Original Epson C13T29844010/T298440 Amarillo	C13T29844010
TAOE-T298640	Cartucho Original Epson C13T29864010/T298640 CMYK (4 uds.)	C13T29864010
TAOE-T2992	Cartucho Original Epson C13T29924010/T299240 Cian XL	C13T29924010
TAOE-T2993	Cartucho Original Epson C13T29934010/T299340 XL Magenta	C13T29934010
TAOE-T2994	Cartucho Original Epson C13T29944010/T299440XL Amarillo	C13T29944010
TAOE-T3240	Cartucho Original Epson C13T32404010/T3240 Optimizador de Brillo	C13T32404010
TAOE-T3241	Cartucho Original Epson C13T32414010/T3241 Negro	C13T32414010
TAOE-T3242	Cartucho Original Epson C13T32424010/T3242 Cian	C13T32424010
TAOE-T3243	Cartucho Original Epson C13T32434010/T3243 Magenta	C13T32434010
TAOE-T3244	Cartucho Original Epson C13T32444010/T3244 Amarillo	C13T32444010

TAOE-T3247	Cartucho Original Epson C13T32474010/T3247 Rojo	C13T32474010
TAOE-T3248	Cartucho Original Epson C13T32484010/T3248 Negro Mate	C13T32484010
TAOE-T3249	Cartucho Original Epson C13T32494010/T3249 Naranja	C13T32484010
TAOE-T407	Cartucho Original Epson C13T407011/T407 Negro	C13T407011
TAOE-T408	Cartucho Original Epson C13T408011/T408 Amarillo	C13T408011
TAOE-T409	Cartucho Original Epson C13T409011/T409 Magenta	C13T409011
TAOE-T410	Cartucho Original Epson C13T410011/T410 Cian	C13T410011
TAOE-T463	Cartucho Original Epson C13T463011/T463 Cian	C13T463011
TAOE-T464	Cartucho Original Epson C13T464011/T464 Magenta Fotográfico	C13T464011
TAOE-T479	Cartucho Original Epson C13T479011/T479 Cian Fotográfico	C13T479011
TAOE-T5431	Cartucho Original Epson C13T543100/T5431 Negro Fotográfico	C13T543100
TAOE-T5432	Cartucho Original Epson C13T543200/T5432 Cian	C13T543200
TAOE-T5433	Cartucho Original Epson C13T543300/T5433 Magenta	C13T543300
TAOE-T5434	Cartucho Original Epson C13T543400/T5434 Amarillo	C13T543400
TAOE-T5435	Cartucho Original Epson C13T543500/T5435 Cian Fotográfico	C13T543500
TAOE-T5436	Cartucho Original Epson C13T543600/T5436 Magenta Fotográfico	C13T543600
TAOE-T5437	Cartucho Original Epson C13T543700/T5437 Negro Fotográfico	C13T543700
TAOE-T5438	Cartucho Original Epson C13T543800/T5438 Negro Mate	C13T543800
TAOE-T5441	Cartucho Original Epson C13T544100/T5441 Negro Fotográfico	C13T544100
TAOE-T5442	Cartucho Original Epson C13T544200/T5442 Cian	C13T544200
TAOE-T5443	Cartucho Original Epson C13T544300/T5443 Magenta	C13T544300
TAOE-T5444	Cartucho Original Epson C13T544400/T5444 Amarillo	C13T544400
TAOE-T5445	Cartucho Original Epson C13T544500/T5445 Cian Fotográfico	C13T544500
TAOE-T5446	Cartucho Original Epson C13T544600/T5446 Magenta Fotográfico	C13T544600
TAOE-T5447	Cartucho Original Epson C13T544700/T5447 Negro Fotográfico	C13T544700
TAOE-T5448	Cartucho Original Epson C13T544800/T5448 Negro Mate	C13T544800
TAOE-T5491	Cartucho Original Epson C13T549100/T5491 Negro Fotográfico	C13T549100
TAOE-T5492	Cartucho Original Epson C13T549200/T5492 Cian	C13T549200
TAOE-T5493	Cartucho Original Epson C13T549300/T5493 Magenta	C13T549300
TAOE-T5494	Cartucho Original Epson C13T549400/T5494 Amarillo	C13T549400
TAOE-T5495	Cartucho Original Epson C13T549500/T5495 Cian Fotográfico	C13T549500
TAOE-T5496	Cartucho Original Epson C13T549600/T5496 Magenta Fotográfico	C13T549600
TAOE-T5498	Cartucho Original Epson C13T549800/T5498 Negro Mate	C13T549800
TAOE-T5570	Cartucho Original Epson C13T557040/T5570 Fotográfico y Papel	C13T557040
TAOE-T5591	Cartucho Original Epson C13T55914010/T5591 Negro	C13T55914010
TAOE-T5592	Cartucho Original Epson C13T55924010/T5592 Cian	C13T55924010
TAOE-T5593	Cartucho Original Epson C13T55934010/T5593 Magenta	C13T55934010
TAOE-T5594	Cartucho Original Epson C13T55944010/T5594 Amarillo	C13T55944010
TAOE-T5595	Cartucho Original Epson C13T55954010/T5595 Cian Fotográfico	C13T55954010
TAOE-T5596	Cartucho Original Epson C13T55964010/T5596 Magenta Fotográfico	C13T55964010
TAOE-T559740S6	Cartucho Original Epson C13T55974010/T559740 CMYK/LC/LM (6 uds.)	C13T55974010
TAOE-T5621	Cartucho Original Epson C13T562100/T5621 Negro	C13T562100
TAOE-T5622	Cartucho Original Epson C13T562200/T5622 Cian	C13T562200
TAOE-T5623	Cartucho Original Epson C13T562300/T5623 Magenta	C13T562300
TAOE-T5624	Cartucho Original Epson C13T562400/T5624 Amarillo	C13T562400
TAOE-T5625	Cartucho Original Epson C13T562500/T5625 Cian Fotográfico	C13T562500
TAOE-T5626	Cartucho Original Epson C13T562600/T5626 Magenta Fotográfico	C13T562600
TAOE-T5627	Cartucho Original Epson C13T562700/T5627 Negro Fotográfico	C13T562700
TAOE-T5631	Cartucho Original Epson C13T563100/T5631 Negro	C13T563100
TAOE-T5632	Cartucho Original Epson C13T563200/T5632 Cian	C13T563200
TAOE-T5633	Cartucho Original Epson C13T563300/T5633 Magenta	C13T563300
TAOE-T5634	Cartucho Original Epson C13T563400/T5634 Amarillo	C13T563400
TAOE-T5635	Cartucho Original Epson C13T563500/T5635 Cian Fotográfico	C13T563500
TAOE-T5636	Cartucho Original Epson C13T563600/T5636 Magenta Fotográfico	C13T563600
TAOE-T5637	Cartucho Original Epson C13T563700/T5637 Negro Fotográfico	C13T563700
TAOE-T5639	Cartucho Original Epson C13T563900/T5639 Negro Fotográfico	C13T563900
TAOE-T5641	Cartucho Original Epson C13T564100/T5641 Negro Fotográfico	C13T564100
TAOE-T5642	Cartucho Original Epson C13T564200/T5642 Cian	C13T564200
TAOE-T5643	Cartucho Original Epson C13T564300/T5643 Magenta	C13T564300
TAOE-T5644	Cartucho Original Epson C13T564400/T5644 Amarillo	C13T564400
TAOE-T5645	Cartucho Original Epson C13T564500/T5645 Cian Fotográfico	C13T564500
TAOE-T5646	Cartucho Original Epson C13T564600/T5646 Magenta Fotográfico	C13T564600
TAOE-T5647	Cartucho Original Epson C13T564700/T5647 Negro Fotográfico	C13T564700
TAOE-T5649	Cartucho Original Epson C13T564900/T5649 Gris Claro	C13T564900
TAOE-T5651	Cartucho Original Epson C13T565100/T5651 Negro Fotográfico	C13T565100
TAOE-T5652	Cartucho Original Epson C13T565200/T5652 Cian	C13T565200
TAOE-T5653	Cartucho Original Epson C13T565300/T5653 Magenta	C13T565300
TAOE-T5654	Cartucho Original Epson C13T565400/T5654 Amarillo	C13T565400
TAOE-T5655	Cartucho Original Epson C13T565500/T5655 Cian Light	C13T565500
TAOE-T5656	Cartucho Original Epson C13T565600/T5656 Magenta Fotográfico	C13T565600
TAOE-T5659	Cartucho Original Epson C13T565900/T5659 Gris Claro	C13T565900

TAOE-T5662	Cartucho Original Epson C13T566200/T5662 Cian	C13T566200
TAOE-T5663	Cartucho Original Epson C13T566300/T5663 Magenta	C13T566300
TAOE-T5664	Cartucho Original Epson C13T566400/T5664 Amarillo	C13T566400
TAOE-T5668	Cartucho Original Epson C13T566800/T5668 Negro Mate	C13T566800
TAOE-T5672	Cartucho Original Epson C13T567200/T5672 Cian	C13T567200
TAOE-T5673	Cartucho Original Epson C13T567300/T5673 Magenta	C13T567300
TAOE-T5674	Cartucho Original Epson C13T567400/T5674 Amarillo	C13T567400
TAOE-T5678	Cartucho Original Epson C13T567800/T5678 Negro Mate	C13T567800
TAOE-T5730	Cartucho Original Epson C13T573040/T5730 CMYK y Papel	C13T573040
TAOE-T5801	Cartucho Original Epson C13T580100/T5801 Negro	C13T580100
TAOE-T5802	Cartucho Original Epson C13T580200/T5802 Cian	C13T580200
TAOE-T5803	Cartucho Original Epson C13T580300/T5803 Magenta	C13T580300
TAOE-T5804	Cartucho Original Epson C13T580400/T5804 Amarillo	C13T580400
TAOE-T5805	Cartucho Original Epson C13T580500/T5805 Cian Fotográfico	C13T580500
TAOE-T5806	Cartucho Original Epson C13T580600/T5806 Magenta Fotográfico	C13T580600
TAOE-T5807	Cartucho Original Epson C13T580700/T5807 Negro Fotográfico	C13T580700
TAOE-T5808	Cartucho Original Epson C13T580800/T5808 Negro Mate	C13T580800
TAOE-T5809	Cartucho Original Epson C13T580900/T5809 Gris Claro	C13T580900
TAOE-T580A	Cartucho Original Epson C13T580A00/T580A Magenta	C13T580A00
TAOE-T580B	Cartucho Original Epson C13T580B00/T580B Magenta Fotográfico	C13T580B00
TAOE-T5846	Cartucho Original Epson C13T58464010/T5846 CMYK y Papel	C13T58464010
TAOE-T5911	Cartucho Original Epson C13T591100/T5911 Negro	C13T591100
TAOE-T5912	Cartucho Original Epson C13T591200/T5912 Cian	C13T591200
TAOE-T5913	Cartucho Original Epson C13T591300/T5913 Magenta	C13T591300
TAOE-T5914	Cartucho Original Epson C13T591400/T5914 Amarillo	C13T591400
TAOE-T5915	Cartucho Original Epson C13T591500/T5915 Cian Fotográfico	C13T591500
TAOE-T5916	Cartucho Original Epson C13T591600/T5916 Magenta Fotográfico	C13T591600
TAOE-T5917	Cartucho Original Epson C13T591700/T5917 Negro Fotográfico	C13T591700
TAOE-T5918	Cartucho Original Epson C13T591800/T5918 Negro Mate	C13T591800
TAOE-T5919	Cartucho Original Epson C13T591900/T5919 Gris Claro	C13T591900
TAOE-T5961	Cartucho Original Epson C13T596100/T5961 Negro Fotográfico	C13T596100
TAOE-T5962	Cartucho Original Epson C13T596200/T5962 Cian	C13T596200
TAOE-T5963	Cartucho Original Epson C13T596300/T5963 Magenta	C13T596300
TAOE-T5964	Cartucho Original Epson C13T596400/T5964 Amarillo	C13T596400
TAOE-T5965	Cartucho Original Epson C13T596500/T5965 Cian Fotográfico	C13T596500
TAOE-T5966	Cartucho Original Epson C13T596600/T5966 Magenta Fotográfico	C13T596600
TAOE-T5967	Cartucho Original Epson C13T596700/T5967 Negro Fotográfico	C13T596700
TAOE-T5968	Cartucho Original Epson C13T596800/T5968 Negro Mate	C13T596800
TAOE-T5969	Cartucho Original Epson C13T596900/T5969 Negro Fotográfico	C13T596900
TAOE-T596A	Cartucho Original Epson C13T596A00 Naranja	C13T596A00
TAOE-T596B	Cartucho Original Epson C13T596B00 Verde	C13T596B00
TAOE-T6021	Cartucho Original Epson C13T602100/T6021 Negro	C13T602100
TAOE-T6022	Cartucho Original Epson C13T602200/T6022 Cian	C13T602200
TAOE-T6023	Cartucho Original Epson C13T602300/T6023 Magenta	C13T602300
TAOE-T6024	Cartucho Original Epson C13T602400/T6024 Amarillo	C13T602400
TAOE-T6025	Cartucho Original Epson C13T602500/T6025 Cian Fotográfico	C13T602500
TAOE-T6026	Cartucho Original Epson C13T602600/T6026 Magenta Fotográfico	C13T602600
TAOE-T6027	Cartucho Original Epson C13T602700/T6027 Negro Fotográfico	C13T602700
TAOE-T6029	Cartucho Original Epson C13T602900/T6029 Negro Fotográfico	C13T602900
TAOE-T602LM	Cartucho Original Epson C13T602C00/T602 Magenta Fotográfico	C13T602C00
TAOE-T602M	Cartucho Original Epson C13T602B00/T602 Magenta	C13T602B00
TAOE-T6031	Cartucho Original Epson C13T603100/T6031 Negro	C13T603100
TAOE-T6032	Cartucho Original Epson C13T603200/T6032 Cian	C13T603200
TAOE-T6033	Cartucho Original Epson C13T603300/T6033 Magenta	C13T603300
TAOE-T6034	Cartucho Original Epson C13T603400/T6034 Amarillo	C13T603400
TAOE-T6035	Cartucho Original Epson C13T603500/T6035 Cian Fotográfico	C13T603500
TAOE-T6036	Cartucho Original Epson C13T603600/T6036 Magenta Fotográfico	C13T603600
TAOE-T6037	Cartucho Original Epson C13T603700/T6037 Negro Fotográfico	C13T603700
TAOE-T6039	Cartucho Original Epson C13T603900/T6039 Negro Fotográfico	C13T603900
TAOE-T603LM	Cartucho Original Epson C13T603C00/T603 Magenta Fotográfico	C13T603C00
TAOE-T603M	Cartucho Original Epson C13T603B00/T603 Magenta	C13T603B00
TAOE-T6051	Cartucho Original Epson C13T605100/T6051 Negro Fotográfico	C13T605100
TAOE-T6052	Cartucho Original Epson C13T605200/T6052 Cian	C13T605200
TAOE-T6053	Cartucho Original Epson C13T605300/T6053 Magenta	C13T605300
TAOE-T6054	Cartucho Original Epson C13T605400/T6054 Amarillo	C13T605400
TAOE-T6055	Cartucho Original Epson C13T605500/T6055 Cian Fotográfico	C13T605500
TAOE-T6056	Cartucho Original Epson C13T605600/T6056 Magenta Fotográfico	C13T605600
TAOE-T6057	Cartucho Original Epson C13T605700/T6057 Negro Fotográfico	C13T605700
TAOE-T6059	Cartucho Original Epson C13T605900/T6059 Negro Fotográfico	C13T605900
TAOE-T605LM	Cartucho Original Epson C13T605C00/T605 Magenta Fotográfico	C13T605C00
TAOE-T605M	Cartucho Original Epson C13T605B00/T605 Magenta	C13T605B00

TAOE-T6061	Cartucho Original Epson C13T606100/T6061 Negro Fotográfico	C13T606100
TAOE-T6062	Cartucho Original Epson C13T606200/T6062 Cian	C13T606200
TAOE-T6063	Cartucho Original Epson C13T606300/T6063 Magenta	C13T606300
TAOE-T6064	Cartucho Original Epson C13T606400/T6064 Amarillo	C13T606400
TAOE-T6065	Cartucho Original Epson C13T606500/T6065 Cian Fotográfico	C13T606500
TAOE-T6066	Cartucho Original Epson C13T606600/T6066 Magenta Fotográfico	C13T606600
TAOE-T6067	Cartucho Original Epson C13T606700/T6067 Negro Fotográfico	C13T606700
TAOE-T6069	Cartucho Original Epson C13T606900/T6069 Gris Claro	C13T606900
TAOE-T606B	Cartucho Original Epson C13T606B00/T606B Magenta	C13T606B00
TAOE-T606C	Cartucho Original Epson C13T606C00/T606C Magenta Light	C13T606C00
TAOE-T6112	Cartucho Original Epson C13T611200/T6112 Cian	C13T611200
TAOE-T6113	Cartucho Original Epson C13T611300/T6113 Magenta	C13T611300
TAOE-T6114	Cartucho Original Epson C13T611400/T6114 Amarillo	C13T611400
TAOE-T6118	Cartucho Original Epson C13T611800/T6118 Negro Mate	C13T611800
TAOE-T6121	Cartucho Original Epson C13T612100/T6121 Negro Mate	C13T612100
TAOE-T6122	Cartucho Original Epson C13T612200/T6122 Cian	C13T612200
TAOE-T6123	Cartucho Original Epson C13T612300/T6123 Magenta	C13T612300
TAOE-T6124	Cartucho Original Epson C13T612400/T6124 Amarillo	C13T612400
TAOE-T6128	Cartucho Original Epson C13T612800/T6128 Negro Mate	C13T612800
TAOE-T6132	Cartucho Original Epson C13T613200/T6132 Cian	C13T613200
TAOE-T6133	Cartucho Original Epson C13T613300/T6133 Magenta	C13T613300
TAOE-T6134	Cartucho Original Epson C13T613400/T6134 Amarillo	C13T613400
TAOE-T6138	Cartucho Original Epson C13T613800/T6138 Negro Mate	C13T613800
TAOE-T6141	Cartucho Original Epson C13T614100/T6141 Negro Mate	C13T614100
TAOE-T6142	Cartucho Original Epson C13T614200/T6142 Cian	C13T614200
TAOE-T6143	Cartucho Original Epson C13T614300/T6143 Magenta	C13T614300
TAOE-T6144	Cartucho Original Epson C13T614400/T6144 Amarillo	C13T614400
TAOE-T6148	Cartucho Original Epson C13T614800/T6148 Negro Mate	C13T614800
TAOE-T6161	Cartucho Original Epson C13T616100/T6161 Negro	C13T616100
TAOE-T6162	Cartucho Original Epson C13T616200/T6162 Cian	C13T616200
TAOE-T6163	Cartucho Original Epson C13T616300/T6163 Magenta	C13T616300
TAOE-T6164	Cartucho Original Epson C13T616400/T6164 Amarillo	C13T616400
TAOE-T6171	Cartucho Original Epson C13T617100/T6171 Negro	C13T617100
TAOE-T6172	Cartucho Original Epson C13T617200/T6172 Cian	C13T617200
TAOE-T6173	Cartucho Original Epson C13T617300/T6173 Magenta	C13T617300
TAOE-T6174	Cartucho Original Epson C13T617400/T6174 Amarillo	C13T617400
TAOE-T6181	Cartucho Original Epson C13T618100/T6181 Negro	C13T618100
TAOE-T6241	Cartucho Original Epson C13T624100/T6241 Negro	C13T624100
TAOE-T6242	Cartucho Original Epson C13T624200/T6242 Cian	C13T624200
TAOE-T6243	Cartucho Original Epson C13T624300/T6243 Magenta	C13T624300
TAOE-T6245	Cartucho Original Epson C13T624500/T6245 Cian Fotográfico	C13T624500
TAOE-T6246	Cartucho Original Epson C13T624600/T6246 Magenta Fotográfico	C13T624600
TAOE-T6247	Cartucho Original Epson C13T624700/T6247 Verde	C13T624700
TAOE-T6248	Cartucho Original Epson C13T624800/T6248 Naranja	C13T624800
TAOE-T6361PB	Cartucho Original Epson C13T636100/T636 Negro Fotográfico	C13T636100
TAOE-T6367PB	Cartucho Original Epson C13T636700/T636 Negro Fotográfico	C13T636700
TAOE-T636C	Cartucho Original Epson C13T636200/T636 Cian	C13T636200
TAOE-T636G	Cartucho Original Epson C13T636B00/T636 Verde	C13T636B00
TAOE-T636LC	Cartucho Original Epson C13T636500/T636 Cian Fotográfico	C13T636500
TAOE-T636LM	Cartucho Original Epson C13T636600/T636 Magenta Fotográfico	C13T636600
TAOE-T636M	Cartucho Original Epson C13T636300/T636 Magenta	C13T636300
TAOE-T636MB	Cartucho Original Epson C13T636800/T 636 Negro Mate	C13T636800
TAOE-T636O	Cartucho Original Epson C13T636A00/T636 Naranja	C13T636A00
TAOE-T636PB2	Cartucho Original Epson C13T636900/T636 Negro Fotográfico	C13T636900
TAOE-T636Y	Cartucho Original Epson C13T636400/T636 Amarillo	C13T636400
TAOE-T6421	Cartucho Original Epson C13T642100/T6421 Negro	C13T642100
TAOE-T6422	Cartucho Original Epson C13T642200/T6422 Cian	C13T642200
TAOE-T6423	Cartucho Original Epson C13T642300/T6423 Magenta	C13T642300
TAOE-T6424	Cartucho Original Epson C13T642400/T6424 Amarillo	C13T642400
TAOE-T6425	Cartucho Original Epson C13T642500/T6425 Cian Fotográfico	C13T642500
TAOE-T6426	Cartucho Original Epson C13T642600/T6426 Magenta Fotográfico	C13T642600
TAOE-T6427	Cartucho Original Epson C13T642700/T6427 Negro Fotográfico	C13T642700
TAOE-T6428	Cartucho Original Epson C13T642800/T6428 Negro Mate	C13T642800
TAOE-T6429	Cartucho Original Epson C13T642900/T6429 Gris	C13T642900
TAOE-T6531	Cartucho Original Epson C13T653100/T6531 Negro Fotográfico	C13T653100
TAOE-T6532	Cartucho Original Epson C13T653200/T6532 Cian	C13T653200
TAOE-T6533	Cartucho Original Epson C13T653300/T6533 Magenta	C13T653300
TAOE-T6534	Cartucho Original Epson C13T653400/T6534 Amarillo	C13T653400
TAOE-T6535	Cartucho Original Epson C13T653500/T6535 Cian Fotográfico	C13T653500
TAOE-T6536	Cartucho Original Epson C13T653600/T6536 Magenta Fotográfico	C13T653600
TAOE-T6537	Cartucho Original Epson C13T653700/T6537 Negro Fotográfico	C13T653700

TAOE-T6538MB	Cartucho Original Epson C13T653800/T6538 Negro Mate	C13T653800
TAOE-T6539	Cartucho Original Epson C13T653900/T6539 Gris Claro	C13T653900
TAOE-T653A	Cartucho Original Epson C13T653A00/T653A Naranja	C13T653A00
TAOE-T653B	Cartucho Original Epson C13T653B00/T653B Verde	C13T653B00
TAOE-T6641	Cartucho Original Epson C13T664140/T6641 Negro	C13T664140
TAOE-T6642	Cartucho Original Epson C13T664240/T6642 Cian	C13T664240
TAOE-T6643	Cartucho Original Epson C13T664340/T6643 Magenta	C13T664340
TAOE-T6644	Cartucho Original Epson C13T664440/T6644 Amarillo	C13T664440
TAOE-T6731	Botella Original Epson C13T67314A/T6731 Negro	C13T67314A
TAOE-T6732	Botella Original Epson C13T67324A/T6732 Cyan	C13T67324A
TAOE-T6733	Botella Original Epson C13T67334A/T6733 Magenta	C13T67334A
TAOE-T6734	Botella Original Epson C13T67344A/T6734 Amarillo	C13T67344A
TAOE-T6735	Botella Original Epson C13T67354A/T6735 Cian Fotográfico	C13T67354A
TAOE-T6736	Botella Original Epson C13T67364A/T6736 Magenta Fotográfico	C13T67364A
TAOE-T6921	Cartucho Original Epson C13T692100/T6921 Negro Fotográfico	C13T692100
TAOE-T6922	Cartucho Original Epson C13T692200/T6922 Cian	C13T692200
TAOE-T6923	Cartucho Original Epson C13T692300/T6923 Magenta	C13T692300
TAOE-T6924	Cartucho Original Epson C13T692400/T6924 Amarillo	C13T692400
TAOE-T6925	Cartucho Original Epson C13T692500/T6925 Negro Mate	C13T692500
TAOE-T6931	Cartucho Original Epson C13T693100/T6931 Negro Fotográfico	C13T693100
TAOE-T6932	Cartucho Original Epson C13T693200/T6932 Cian	C13T693200
TAOE-T6933	Cartucho Original Epson C13T693300/T6933 Magenta	C13T693300
TAOE-T6934	Cartucho Original Epson C13T693400/T6934 Amarillo	C13T693400
TAOE-T6935	Cartucho Original Epson C13T693500/T6935 Negro Mate	C13T693500
TAOE-T6941	Cartucho Original Epson C13T694100/T6941 Negro Fotográfico	C13T694100
TAOE-T6942	Cartucho Original Epson C13T694200/T6942 Cian	C13T694200
TAOE-T6943	Cartucho Original Epson C13T694300/T6943 Magenta	C13T694300
TAOE-T6944	Cartucho Original Epson C13T694400/T6944 Amarillo	C13T694400
TAOE-T6945	Cartucho Original Epson C13T694500/T6945 Negro Mate	C13T694500
TAOE-T7011	Cartucho Original Epson C13T70114010/T7011 Negro	C13T70114010
TAOE-T7012	Cartucho Original Epson C13T70124010/T7012 Cian	C13T70124010
TAOE-T7013	Cartucho Original Epson C13T70134010/T7013 Magenta	C13T70134010
TAOE-T7014	Cartucho Original Epson C13T70144010/T7014 Amarillo	C13T70144010
TAOE-T7021	Cartucho Original Epson C13T70214010/T7021 Negro	C13T70214010
TAOE-T7022	Cartucho Original Epson C13T70224010/T7022 Cian	C13T70224010
TAOE-T7023	Cartucho Original Epson C13T70234010/T7023 Magenta	C13T70234010
TAOE-T7024	Cartucho Original Epson C13T70244010/T7024 Amarillo	C13T70244010
TAOE-T7031	Cartucho Original Epson C13T70314010/T7031 Negro	C13T70314010
TAOE-T7032	Cartucho Original Epson C13T70324010/T7032 Cian	C13T70324010
TAOE-T7033	Cartucho Original Epson C13T70334010/T7033 Magenta	C13T70334010
TAOE-T7034	Cartucho Original Epson C13T70344010/T7034 Amarillo	C13T70344010
TAOE-T7431	Cartucho Original Epson C13T74314010/T7431 Negro	C13T74314010
TAOE-T7441	Cartucho Original Epson C13T74414010/T7441 Negro	C13T74414010
TAOE-T7541	Cartucho Original Epson C13T754140/T7541 Negro	C13T754140
TAOE-T7542	Cartucho Original Epson C13T754240/T7542 Cian	C13T754240
TAOE-T7543	Cartucho Original Epson C13T754340/T7543 Magenta	C13T754340
TAOE-T7544	Cartucho Original Epson C13T754440/T7544 Amarillo	C13T754440
TAOE-T7551	Cartucho Original Epson C13T755140/T7551 Negro	C13T755140
TAOE-T7552	Cartucho Original Epson C13T755240/T7552 Cian	C13T755240
TAOE-T7553	Cartucho Original Epson C13T755340/T7553 Magenta	C13T755340
TAOE-T7554	Cartucho Original Epson C13T755440/T7554 Amarillo	C13T755440
TAOE-T7561	Cartucho Original Epson C13T756140/T7561 Negro	C13T756140
TAOE-T7562	Cartucho Original Epson C13T756240/T7562 Cian	C13T756240
TAOE-T7563	Cartucho Original Epson C13T756340/T7563 Magenta	C13T756340
TAOE-T7564	Cartucho Original Epson C13T756440/T7564 Amarillo	C13T756440
TAOE-T7601	Cartucho Original Epson C13T76014010/T7601 Negro Fotográfico	C13T76014010
TAOE-T7602	Cartucho Original Epson C13T76024010/T7602 Cian	C13T76024010
TAOE-T7603	Cartucho Original Epson C13T76034010/T7603 Magenta	C13T76034010
TAOE-T7604	Cartucho Original Epson C13T76044010/T7604 Amarillo	C13T76044010
TAOE-T7605	Cartucho Original Epson C13T76054010/T7605 Cian Fotográfico	C13T76054010
TAOE-T7606	Cartucho Original Epson C13T76064010/T7606 Magenta Fotográfico	C13T76064010
TAOE-T7607	Cartucho Original Epson C13T76074010/T7607 Gris	C13T76074010
TAOE-T7608	Cartucho Original Epson C13T76084010/T7608 Negro Mate	C13T76084010
TAOE-T7609	Cartucho Original Epson C13T76094010/T7609 Gris Claro	C13T76094010
TAOE-T7741	Cartucho Original Epson C13T77414A/T7741 Negro	C13T77414A
TAOE-T7891	Cartucho Original Epson C13T789140/T7891 Negro	C13T789140
TAOE-T7892	Cartucho Original Epson C13T789240/T7892 Cian	C13T789240
TAOE-T7893	Cartucho Original Epson C13T789340/T7893 Magenta	C13T789340
TAOE-T7894	Cartucho Original Epson C13T789440/T7894 Amarillo	C13T789440
TAOE-T8041	Cartucho Original Epson C13T804100/T8041 Negro Fotográfico	C 13 T 804100
TAOE-T8042	Cartucho Original Epson C13T804200/T8042 Cian	C13T804200

TAOE-T8043	Cartucho Original Epson C13T804300/T8043 Magenta	C13T804300
TAOE-T8044	Cartucho Original Epson C13T804400/T8044 Amarillo	C13T804400
TAOE-T8045	Cartucho Original Epson C13T804500/T8045 Cian Fotográfico	C13T804500
TAOE-T8046LM	Cartucho Original Epson C13T804600/T8046 Magenta Fotográfico	C13T804600
TAOE-T8046PB	Cartucho Original Epson C13T804700/T8046 Negro Fotográfico	C13T804700
TAOE-T8048	Cartucho Original Epson C13T804800/T8048 Negro Mate	C13T804800
TAOE-T8049	Cartucho Original Epson C13T804900/T8049 Gris Claro	C13T804900
TAOE-T804A	Cartucho Original Epson C13T804A00/T804A Naranja	C13T804A00
TAOE-T804B	Cartucho Original Epson C13T804B00/T804B Verde	C13T804B00
TAOE-T8241	Cartucho Original Epson C13T824100/T8241 Negro Fotográfico	C13T824100
TAOE-T8242	Cartucho Original Epson C13T824200/T8242 Cian	C13T824200
TAOE-T8243	Cartucho Original Epson C13T824300/T8243 Magenta	C13T824300
TAOE-T8244	Cartucho Original Epson C13T824400/T8244 Amarillo	C13T824400
TAOE-T8245	Cartucho Original Epson C13T824500/T8245 Cian Fotográfico	C13T824500
TAOE-T8246	Cartucho Original Epson C13T824600/T8246 Magenta Fotográfico	C13T824600
TAOE-T8247	Cartucho Original Epson C13T824700/T8247 Negro Fotográfico	C13T824700
TAOE-T8248	Cartucho Original Epson C13T824800/T8248 Negro Mate	C13T824800
TAOE-T8249	Cartucho Original Epson C13T824900/T8249 Gris Claro	C13T824900
TAOE-T824A	Cartucho Original Epson C13T824A00/T824A Naranja	C13T824A00
TAOE-T824B	Cartucho Original Epson C13T824B00/T824B Verde	C13T824B00
TAOE-T824D	Cartucho Original Epson C13T824D00/T824D Violeta	C13T824D00
TAOE-T8501	Cartucho Original Epson C13T850100/T8501 Negro Fotográfico	C13T850100
TAOE-T8502	Cartucho Original Epson C13T850200/T8502 Cian	C13T850200
TAOE-T8503	Cartucho Original Epson C13T850300/T8503 Magenta	C13T850300
TAOE-T8504	Cartucho Original Epson C13T850400/T8504 Amarillo	C13T850400
TAOE-T8505	Cartucho Original Epson C13T850500 Cian Fotográfico	C13T850500
TAOE-T8506	Cartucho Original Epson C13T850600 Magenta Fotográfico	C13T850600
TAOE-T8507	Cartucho Original Epson C13T850700 Negro Fotográfico	C13T850700
TAOE-T8508	Cartucho Original Epson C13T850800 Negro Mate	C13T850800
TAOE-T8509	Cartucho Original Epson C13T850900 Gris Claro	C13T850900
TAOE-T8651	Cartucho Original Epson C13T865140/T8651 Negro	C13T865140
TAOE-T8661	Cartucho Original Epson C13T866140/T8661 Negro	C13T866140
TAOE-T9071	Cartucho Original Epson C13T907140/T9071 Negro	C13T907140
TAOE-T9072	Cartucho Original Epson C13T907240/T9072 Cian	C13T907240
TAOE-T9073	Cartucho Original Epson C13T907340/ T9073 Magenta	C13T907340
TAOE-T9074	Cartucho Original Epson C13T907440/T9074 Amarillo	C13T907440
TAOE-T9081	Cartucho Original Epson C13T908140/T9081 XL Negro	C13T908140
TAOE-T9082	Cartucho Original Epson C13T908240/T9082 XL Cian	C13T908240
TAOE-T9083	Cartucho Original Epson C13T908340/T9083 XL Magenta	C13T908340
TAOE-T9084	Cartucho Original Epson C13T908440/T9084 Amarillo XL	C13T908440
TAOH-10	Cartucho Original HP C4844AE/No 10 Negro	C4844AE
TAOH-110	Cartucho Original HP CB304AE/No 110 CMY	CB304AE
TAOH-11BP	Cartucho Original HP C4810A/No 11 Negro, Cabezal de Impresión	C4810A
TAOH-11C	Cartucho Original HP C4836A/No 11 Cian	C4836A
TAOH-11CP	Cartucho Original HP C4811A/No 11 Cian, Cabezal de Impresión	C4811A
TAOH-11M	Cartucho Original HP C4837A/No 11 Magenta	C4837A
TAOH-11MP	Cartucho Original HP C4812A/No 11 Magenta, Cabezal de Impresión	C4812A
TAOH-11Y	Cartucho Original HP C4838A/No 11 Amarillo	C4838A
TAOH-11YP	Cartucho Original HP C4813A/No 11 Amarillo, Cabezal de Impresión	C4813A
TAOH-13B	Cartucho Original HP C4814AE/No 13 Negro	C4814AE
TAOH-13Y	Cartucho Original HP C4817AE/No 13 Amarillo	C4817AE
TAOH-15	Cartucho Original HP C6615NE/No 15 Negro	C6615NE
TAOH-15XL	Cartucho Original HP C6615DE/No 15 Negro	C6615DE
TAOH-17	Cartucho Original HP C6625AE/No 17 CMY	C6625AE
TAOH-21	Cartucho Original HP C9351AE/No 21 Negro	C9351AE
TAOH-21XL	Cartucho Original HP C9351CE/No 21 XL Negro	C9351CE
TAOH-22	Cartucho Original HP C9352AE/No 22 CMY	C9352AE
TAOH-22S2	Cartucho Original HP SD367AE/No 21 y No 22 BK/CMY (2 uds.)	SD367AE445
TAOH-22S3	Cartucho Original HP SD400AE/No 21 y No 22 BK/CMY (3 uds.)	SD400AE
TAOH-22XL	Cartucho Original HP C9352CE/No 22 XL CMY	C9352CE
TAOH-23	Cartucho Original HP C1823DE/No 23 CMY	C1823DE
TAOH-27	Cartucho Original HP C8727AE/No 27 Negro	C8727AE
TAOH-28	Cartucho Original HP C8728AE/No 28 CMY	C8728AE
TAOH-29	Cartucho Original HP 51629AE/No 29 Negro	51629AE
TAOH-300B	Cartucho Original HP CC640EE/No 300 Negro	CC640EE
TAOH-300CL	Cartucho Original HP CC643EE/No 300 CMY	CC643EE
TAOH-300CLP	Cartucho Original HP CG846EE/No 300 CMY y Papel	CG846EE
TAOH-300S2	Cartucho Original HP CN637EE/No 300 BK/CMY (2 uds.)	CN637EE
TAOH-300S3	Cartucho Original HP SD518AE/No 300 BK/CMY (3 uds.)	SD518AE
TAOH-300XLB	Cartucho Original HP CC641EE/No 300 XL Negro	CC641EE
TAOH-300XLBPD	Cartucho Original HP D8J43AE/No 300XL Negro, Pack Doble	D8J43AE

TAOH-300XLCL	Cartucho Original HP CC644EE/No 300 XL CMY	CC644EE
TAOH-300XLCLDP	Cartucho Original HP D8J44AE /No 300 XL CMY, Pack Doble	D8J44AE
TAOH-301B	Cartucho Original HP CH561EE/No 301 Negro	CH561EE
TAOH-301CL	Cartucho Original HP CH562EE/No 301 CMY	CH562EE
TAOH-301S2	Cartucho Original HP J3M81AE/No 301 BK/CMY (2 uds.) y Papel	J3M81AE
TAOH-301S3	Cartucho Original HP E5Y87EE/No 301 BK/CMY (3 uds.)	E5Y87EE
TAOH-301XLB	Cartucho Original HP CH563EE/No 301XL Negro	CH563EE
TAOH-301XLCL	Cartucho Original HP CH564EE/No 301XL CMY	CH564EE
TAOH-301XLCLDP	Cartucho Original HP D8J46AE/No 301XL CMY, Pack Doble	D8J46AE
TAOH-301XLDP	Cartucho Original HP D8J45AE/No 301XL Negro, Pack Doble	D8J45AE
TAOH-302XLB	Cartucho Original HP F6U68A/No 302XL Negro	F6U68AE
TAOH-302XLCL	Cartucho Original HP F6U67AE/No 302XL CMY	F6U67AE
TAOH-336	Cartucho Original HP C9362EE/No 336 Negro	C9362EE
TAOH-337	Cartucho Original HP C9364EE/No 337 Negro	C9364EE
TAOH-338	Cartucho Original HP C8765EE/No 338 Negro	C8765EE
TAOH-338DP	Cartucho Original HP CB331EE/No 338 Negro, Pack Doble	CB331EE
TAOH-339	Cartucho Original HP C8767EE/No 339 Negro	C8767EE
TAOH-339DP	Cartucho Original HP C9504EE/No 339 Negro, Pack Doble	C9504EE
TAOH-342	Cartucho Original HP C9361EE/No 342 CMY	C9361EE
TAOH-343	Cartucho Original HP C8766EE/No 343 CMY	C8766EE
TAOH-343DP	Cartucho Original HP CB332EE/No 343 CMY, Pack Doble	CB332EE
TAOH-343S2	Cartucho Original HP SD449EE/No 338 y No 343 BK/CMY (2 uds.)	SD449EE
TAOH-344	Cartucho Original HP C9363EE/No 344 CMY	C9363EE
TAOH-344DP	Cartucho Original HP C9505EE/No 344 CMY, Pack Doble	C9505EE
TAOH-348	Cartucho Original HP C9369EE/No 348 Fotográfico, Cabezal de Impresión	C9369EE
TAOH-350	Cartucho Original HP CB335EE/No 350 Negro	CB335EE
TAOH-350XL	Cartucho Original HP CB336EE/No 350 XL Negro	CB336EE
TAOH-351	Cartucho Original HP CB337EE/No 351 CMY	CB337EE
TAOH-351S2	Cartucho Original HP SD412EE/No 350 y No 351 BK/CMY (2 uds.)	SD412EE
TAOH-351S2P	Cartucho Original HP SD 448 AE/350+351 BK/CMY, Cabezal de Imp. (2 uds.)	SD448AE
TAOH-351XL	Cartucho Original HP CB338EE/No 351 XL CMY	CB338EE
TAOH-363B	Cartucho Original HP C8721EE/No 363 Negro	C8721EE
TAOH-363C	Cartucho Original HP C8771EE/No 363 Cian	C8771EE
TAOH-363CL	Cartucho Original HP CB333EE/No 363 CMY	CB333EE
TAOH-363LC	Cartucho Original HP C8774EE/No 363 Cian Fotográfico	C8774EE
TAOH-363LM	Cartucho Original HP C8775EE/No 363 Magenta Fotográfico	C8775EE
TAOH-363M	Cartucho Original HP C8772EE/No 363 Magenta	C8772EE
TAOH-363S6	Cartucho Original HP Q7966EE/No 363 CMYK/LC/LM (6 uds.)	Q7966EE
TAOH-363XLB	Cartucho Original HP C8719EE/No 363 XL Negro	C8719EE
TAOH-363Y	Cartucho Original HP C8773EE/No 363 Amarillo	C8773EE
TAOH-364B	Cartucho Original HP CB316EE/No 364 Negro	CB316EE
TAOH-364C	Cartucho Original HP CB318EE/No 364 Cian	CB318EE
TAOH-364M	Cartucho Original HP CB319EE/No 364 Magenta	CB319EE
TAOH-364PB	Cartucho Original HP CB317EE/No 364 Negro Fotográfico	CB317EE
TAOH-364S3	Cartucho Original HP CH082EE/No 364 CMY (3 uds.) y Papel Fotográfico	CH082EE
TAOH-364S4	Cartucho Original HP J3M82AE/No 364 CMYK (4 uds.) y Papel	J3M82AE
TAOH-364XLB	Cartucho Original HP CN684EE/No364XL Negro	CN684EE
TAOH-364XLC	Cartucho Original HP CB323EE/No 364XL Cian	CB323EE
TAOH-364XLM	Cartucho Original HP CB324EE/No 364XL Magenta	CB324EE
TAOH-364XPB	Cartucho Original HP CB322EE/No 364XL Negro Fotográfico	CB322EE
TAOH-364XLS4	Cartucho Original HP N9J74AE/364XL CMYK (4 uds.)	N9J74AE
TAOH-364XLS4P	Cartucho Original HP J3M83AE/No 364XL, Set Fotográfico y Papel	J3M83AE
TAOH-364XLY	Cartucho Original HP CB325EE/No 364XL Amarillo	CB325EE
TAOH-364Y	Cartucho Original HP CB320EE/No 364 Amarillo	CB320EE
TAOH-38B	Cartucho Original HP C9413A/No 38 Negro	C9413A
TAOH-38C	Cartucho Original HP C9415A/No 38 Cian	C9415A
TAOH-38LC	Cartucho Original HP C9418A/No 38 Cian Fotográfico	C9418A
TAOH-38LGY	Cartucho Original HP C9414A/No 38 Gris Fotográfico	C9414A
TAOH-38LM	Cartucho Original HP C9419A/No 38 Magenta Fotográfico	C9419A
TAOH-38M	Cartucho Original HP C9416A/No 38 Magenta	C9416A
TAOH-38MB	Cartucho Original HP C9412A/No 38 Negro Mate	C9412A
TAOH-38Y	Cartucho Original HP C9417A/No 38 Amarillo	C9417A
TAOH-44C	Cartucho Original HP 51644CE/No 44 Cian	51644CE
TAOH-44M	Cartucho Original HP 51644ME/No 44 Magenta	51644ME
TAOH-45	Cartucho Original HP 51645AE/No 45 Negro	51645AE
TAOH-45S	Cartucho Original HP 51645GE/No 45 Small Negro	51645GE
TAOH-49	Cartucho Original HP 51649AE/No 49 CMY	51649AE
TAOH-51604A	Cartucho Original HP 51604A Negro para Franqueo	51604A
TAOH-51605R	Cartucho Original HP 51605R Rojo para Franqueo	51605R
TAOH-56	Cartucho Original HP C6656AE/No 56 Negro	C6656AE
TAOH-56DP	Cartucho Original HP C9502AE/No 56 Negro, Pack Doble	C9502AE

TAOH-56S	Cartucho Original HP C6656GE/No 56 Small Negro	C6656GE
TAOH-57	Cartucho Original HP C6657AE/No 57 CMY	C6657AE
TAOH-57DP	Cartucho Original HP C9503AE/No 57 CMY, Pack Doble	C9503AE
TAOH-57P	Cartucho Original HP Q7942AE/No 57 CMY y Papel	Q7942AE
TAOH-57S	Cartucho Original HP C6657GE/No 57 Small CMY	C6657GE
TAOH-57S2	Cartucho Original HP SA342AE/No 56 y No 57 BK/CMY (2 uds.)	SA342AE
TAOH-58	Cartucho Original HP C6658AE/No 58 Fotográfico	C6658AE
TAOH-62B	Cartucho Original HP C2P04AE/No 62 Negro	C2P04AE
TAOH-62BCL	Cartucho Original HP N9J71AE/N9J71A No 62 BK/CMY (2 uds.)	N9J71AE
TAOH-62CL	Cartucho Original HP C2P06AE/No 62 CMY	C2P06AE
TAOH-62XLB	Cartucho Original HP C2P05AE/No 62XL Negro	C2P05AE
TAOH-62XLCL	Cartucho Original HP C2P07AE/No 62XL CMY	C2P07AE
TAOH-650B	Cartucho Original HP CZ101AE/No 650 Negro, Cabezal de Impresión	CZ101AE
TAOH-650CL	Cartucho Original HP CZ102AE/No 650 CMY, Cabezal de Impresión	CZ102AE
TAOH-651B	Cartucho Original HP C2P10AE/No 651 Negro, Cabezal de Impresión	C2P10AE
TAOH-651CL	Cartucho Original HP C2P11AE/No 651 CMY	C2P11AE
TAOH-652B	Cartucho Original HP F6V25AE/652 Negro, Cabezal de Impresión	F6V24AE
TAOH-652CL	Cartucho Original HP F6V24AE/No 652 CMY, Cabezal de Impresión	F6V24AE
TAOH-655B	Cartucho Original HP CZ109A/No 655 Negro, Cabezal de Impresión	CZ109AE
TAOH-655C	Cartucho Original HP CZ110AE/No 655 Cian, Cabezal de Impresión	CZ110AE
TAOH-655M	Cartucho Original HP CZ111AE/No 655 Magenta, Cabezal de Impresión	CZ111AE
TAOH-655Y	Cartucho Original HP CZ112AE/No 655 Amarillo, Cabezal de Impresión	CZ112AE
TAOH-701	Cartucho Original HP CC635AE/No 701 Negro	CC635AE
TAOH-703B	Cartucho Original HP CD887AE/No 703 Negro	CD887A
TAOH-704B	Cartucho Original HP CN692A/No 704 Negro, Cabezal de Impresión	CN692A
TAOH-704CL	Cartucho Original HP CN693AE/No 704 CMY, Cabezal de Impresión	CN693AE
TAOH-70BL	Cartucho Original HP C9458A/No 70 Azul	C9458A
TAOH-70BLG	Cartucho Original HP C9408A/No 70 Azul/Verde, Cabezal de Impresión	C9408A
TAOH-70BP	Cartucho Original HP C9407A/No 70 Negro, Cabezal de Impresión	C9407A
TAOH-70C	Cartucho Original HP C9452A/No 70 Cian	C9452A
TAOH-70CP	Cartucho Original HP C9405A/No 70 Cian, Cabezal de Impresión	C9405A
TAOH-70G	Cartucho Original HP C9457A/No 70 Verde	C9457A
TAOH-70GO	Cartucho Original HP C9459A/No 70 Optimizador de Brillo	C9459A
TAOH-70GY	Cartucho Original HP C9450A/No 70 Gris	C9450A
TAOH-70GYP	Cartucho Original HP C9410A/No 70 Gris, Cabezal de Impresión/Optimizador de Brillo	C9410A
TAOH-70LC	Cartucho Original HP C9390A/No 70 Cian Fotográfico	C9390A
TAOH-70LGY	Cartucho Original HP C9451A/No 70 Gris Fotográfico	C9451A
TAOH-70M	Cartucho Original HP C9453A/No 70 Magenta	C9453A
TAOH-70M2	Cartucho Original HP C9455A/No 70 Magenta	C9455A
TAOH-70MB	Cartucho Original HP C9448A/No 70 Negro Mate	C9448A
TAOH-70MBC	Cartucho Original HP C9404A/No 70, Cabezal de Impresión Negro Mate/Cian	C9404A
TAOH-70MBP	Cartucho Original HP C9409A/No 70, Cabezal de Impresión Negro Mate	C9409A
TAOH-70MY	Cartucho Original HP C9406A/No 70 Magenta/Amarillo, Cabezal de Impresión	C9406A
TAOH-70PB	Cartucho Original HP C9449A/No 70 Negro Fotográfico	C9449A
TAOH-70R	Cartucho Original HP C9456A/No 70 Rojo	C9456A
TAOH-70Y	Cartucho Original HP C9454A/No 70 Amarillo	C9454A
TAOH-711B	Cartucho Original HP/CZ133A/No 711 Negro	CZ133A
TAOH-711C	Cartucho Original HP CZ130A/No 711 Cian	CZ130A
TAOH-711CL	Cartucho Original HP C1Q10A/No 711 CMYK, Cabezal de Impresión	C1Q10A
TAOH-711CS3	Cartucho Original HP CZ134A/No 711 Cian (3 uds.)	CZ134A
TAOH-711M	Cartucho Original HP CZ131A/No 711 Magenta	CZ131A
TAOH-711MS3	Cartucho Original HP CZ135A/No 711 Magenta (3 uds.)	CZ135A
TAOH-711XLB	Cartucho Original HP CZ129A/No 711 Negro	CZ129A
TAOH-711Y	Cartucho Original HP CZ132A/No 711 Amarillo	CZ132A
TAOH-711YS3	Cartucho Original HP CZ136A/No 711 Amarillo (3 uds.)	CZ136A
TAOH-726	Cartucho Original HP CH575A/No 726 Negro	CH575A
TAOH-727C	Cartucho Original HP B3P19A/No 727 Cian	B3P19A
TAOH-727GY	Cartucho Original HP B3P24A/No 727 Gris	B3P24A
TAOH-727M	Cartucho Original HP B3P20A/No 727 Magenta	B3P20A
TAOH-727MB	Cartucho Original HP B3P22A/No 727 Negro Mate	B3P22A
TAOH-727P	Cartucho Original HP B3P06A/No 727 CMYK, Cabezal de Impresión	B3P06A
TAOH-727PB	Cartucho Original HP B3P23A/No 727 Negro Fotográfico	B3P23A
TAOH-727SC	Cartucho Original HP B3P13A/No 727 Cian	B3P13A
TAOH-727SGY	Cartucho Original HP B3P18A/No 727 Gris	B3P18A
TAOH-727SM	Cartucho Original HP B3P14A/No 727 Magenta	B3P14A
TAOH-727SMB	Cartucho Original HP C1Q11A/No 727 Negro Mate	C1Q11A
TAOH-727SPB	Cartucho Original HP B3P17A/No 727 Negro Fotográfico	B3P17A
TAOH-727XLC	Cartucho Original HP F9J76A/727 Cian	F9J76A
TAOH-727XLGY	Cartucho Original HP F9J80A/727 Gris	F9J80A
TAOH-727XLM	Cartucho Original HP F9J77A/727 Magenta	F9J77A
TAOH-727XLMB	Cartucho Original HP C1Q12A/No 727 Negro Mate	C1Q12A

TAOH-727XLPB	Cartucho Original HP F9J79A/727 Negro Fotográfico	F9J79A
TAOH-727XLY	Cartucho Original HP F9J78A/727 Amarillo	F9J78A
TAOH-727Y	Cartucho Original HP B3P21A/No 727 Amarillo	B3P21A
TAOH-728B	Cartucho Original HP F9J68A/728 Negro Mate	F9J68A
TAOH-728C	Cartucho Original HP F9J67A/728 Cian	F9J67A
TAOH-728M	Cartucho Original HP F9J66A/728 Magenta	F9J66A
TAOH-728PB	Cartucho Original HP F9J64A/728 Negro Fotográfico	F9J64A
TAOH-728SC	Cartucho Original HP F9J63A/No 728 Cian	F9J63A
TAOH-728SM	Cartucho Original HP F9J62A/No 728 Magenta	F9J62A
TAOH-728SY	Cartucho Original HP F9J61A/No 728 Amarillo	F9J61A
TAOH-728XLC	Cartucho Original HP F9K17A/728 Cian	F9K17A
TAOH-728XLM	Cartucho Original HP F9K16A/728 Magenta	F9K16A
TAOH-728XLY	Cartucho Original HP F9K15A/728 Amarillo	F9K15A
TAOH-728Y	Cartucho Original HP F9J65A/728 Amarillo	F9J65A
TAOH-729P	Cartucho Original HP F9J81A/729, Cabezal de Impresión	F9J81A
TAOH-72C	Cartucho Original HP C9398A/No 72 Cian	C9398A
TAOH-72GY	Cartucho Original HP C9401A/No 72 Gris	C9401A
TAOH-72GYP	Cartucho Original HP C9380A/No 72 Gris, Cabezal de Impresión	C9380A
TAOH-72M	Cartucho Original HP C9399A/No 72 Magenta	C9399A
TAOH-72MB	Cartucho Original HP C9403A/No 72 Negro Mate	C9403A
TAOH-72MBY	Cartucho Original HP C9384A/No 72 Negro Mate/Amarillo, Cabezal de Impresión	C9384A
TAOH-72MC	Cartucho Original HP C9383A/No 72 Magenta/Cian, Cabezal de Impresión	C9383A
TAOH-72PB	Cartucho Original HP C9397A/No 72 Negro Fotográfico	C9397A
TAOH-72XLC	Cartucho Original HP C9371A/No 72 Cian	C9371A
TAOH-72XLGY	Cartucho Original HP C9374A/No 72 Gris	C9374A
TAOH-72XLM	Cartucho Original HP C9372A/No 72 Magenta	C9372A
TAOH-72XLPB	Cartucho Original HP C9370A/No 72 Negro Fotográfico	C9370A
TAOH-72XLY	Cartucho Original HP C9400A/No 72 Amarillo	C9400A
TAOH-72Y	Cartucho Original HP C9373A/No 72 Amarillo	C9373A
TAOH-761B	Cartucho Original HP CM991A/No 761 Negro	CM991A
TAOH-761C	Cartucho Original HP CM994A/No 761 Cian	CM994A
TAOH-761CM	Cartucho Original HP CH646A/No 761 Cian/Magenta, Cabezal de Impresión	CH646A
TAOH-761DGY	Cartucho Original HP CM996A/No 761 Gris Oscuro	CM996A
TAOH-761GY	Cartucho Original HP CM995A/No 761 Gris	CM995A
TAOH-761GYP	Cartucho Original HP CH647A/No 761 Gris, Cabezal de Impresión	CH647A
TAOH-761M	Cartucho Original HP CM993A/No 761 Magenta	CM993A
TAOH-761MB	Cartucho Original HP CM997A/No 761 Negro Mate	CM997A
TAOH-761MBP	Cartucho Original HP CH648A/No 761, Cabezal de Impresión Negro Mate	CH648A
TAOH-761Y	Cartucho Original HP CM992A/No 761 Amarillo	CM992A
TAOH-761YP	Cartucho Original HP CH645A/No 761 Amarillo, Cabezal de Impresión	CH645A
TAOH-771BLGY	Cartucho Original HP CE020A/No 771 Negro/Gris Fotográfico, Cabezal de Impresión	CE020A
TAOH-771BR	Cartucho Original HP CE017A/No 771 Negro/Rojo, Cabezal de Impresión	CE017A
TAOH-771CLC	Cartucho Original HP B6Y12A/No 771C Cian Fotográfico	B6Y12A
TAOH-771CLCS3	Cartucho Original HP B6Y36A/No 771C Cian Fotográfico (3 uds.)	B6Y36A
TAOH-771CLGY	Cartucho Original HP B6Y14A/No 771C Gris Fotográfico	B6Y14A
TAOH-771C-LGYS3	Cartucho Original HP B6Y38A/No 771C Gris Fotográfico (3 uds.)	B6Y38A
TAOH-771CLM	Cartucho Original HP B6Y11A/No 771C Magenta Fotográfico	B6Y11A
TAOH-771CLMS3	Cartucho Original HP B6Y35A/No 771C Magenta Fotográfico (3 uds.)	B6Y35A
TAOH-771CM	Cartucho Original HP B6Y09A/No 771C Magenta	B6Y09A
TAOH-771CMB	Cartucho Original HP B6Y07A/No 771C Negro Mate	B6Y07A
TAOH-771CMBS3	Cartucho Original HP B6Y31A/No 771C Negro Mate (3 uds.)	B6Y31A
TAOH-771CMS3	Cartucho Original HP B6Y33A/No 771C Magenta (3 uds.)	B6Y33A
TAOH-771CPB	Cartucho Original HP B6Y13A/No 771C Negro Fotográfico	B6Y13A
TAOH-771CPBS3	Cartucho Original HP B6Y37A/No 771C Negro Fotográfico (3 uds.)	B6Y37A
TAOH-771CR	Cartucho Original HP B6Y08A/No 771C Rojo	B6Y08A
TAOH-771CRS3	Cartucho Original HP B6Y32A/No 771C Rojo (3 uds.)	B6Y32A
TAOH-771CY	Cartucho Original HP B6Y10A/No 771C Amarillo	B6Y10A
TAOH-771CYS3	Cartucho Original HP B6Y34A/No 771C Amarillo (3 uds.)	B6Y34A
TAOH-771LCLM	Cartucho Original HP CE019A/No 771 Cian/Magenta Fotográfico, Cabezal de Impresión	CE019A
TAOH-771MY	Cartucho Original HP CE018A/No 771 Magenta/Amarillo, Cabezal de Impresión	CE018A
TAOH-772C	Cartucho Original HP CN636A/No 772 Cian	CN636A
TAOH-772LC	Cartucho Original HP CN632A/No 772 Cian Fotográfico	CN632A
TAOH-772LGY	Cartucho Original HP CN634A/No 772 Gris Fotográfico	CN634A
TAOH-772LM	Cartucho Original HP CN631A/No 772 Magenta Fotográfico	CN631A
TAOH-772M	Cartucho Original HP CN629A/No 772 Magenta	CN629A
TAOH-772MB	Cartucho Original HP CN635A/No 772 Negro Mate	CN635A
TAOH-772PB	Cartucho Original HP CN633A/No 772 Negro Fotográfico	CN633A
TAOH-772Y	Cartucho Original HP CN630A/No 772 Amarillo	CN630A
TAOH-773C	Cartucho Original HP C1Q42A/No 773C Cian	C1Q42A
TAOH-773CLGY	Cartucho Original HP C1Q44A/No 773C Gris Fotográfico	C1Q44A
TAOH-773CLM	Cartucho Original HP C1Q41A/No 773C Magenta Fotográfico	C1Q41A

TAOH-773CM	Cartucho Original HP C1Q39A/No 773C Magenta	C1Q39A
TAOH-773CMB	Cartucho Original HP C1Q37A/No 773C Negro Mate	C1Q37A
TAOH-773CPB	Cartucho Original HP C1Q43A/No 773C Negro Fotográfico	C1Q43A
TAOH-773CR	Cartucho Original HP C1Q38A/No 773C Rojo Cromático	C1Q38A
TAOH-773CY	Cartucho Original HP C1Q40A/No 773C Amarillo	C1Q40A
TAOH-78	Cartucho Original HP C6578DE/No 78 CMY	C6578DE
TAOH-78XL	Cartucho Original HP C6578AE/No 78 CMY	C6578AE
TAOH-80B	Cartucho Original HP C4871A/No 80 Negro	C4871A
TAOH-80BP	Cartucho Original HP C4820A/No 80 Negro, Cabezal de Impresión	C4820A
TAOH-80C	Cartucho Original HP C4872A/No 80 Cian	C4872A
TAOH-80CP	Cartucho Original HP C4821A/No 80 Cian, Cabezal de Impresión	C4821A
TAOH-80M	Cartucho Original HP C4874A/No 80 Magenta	C4874A
TAOH-80MP	Cartucho Original HP C4822A/No 80 Magenta, Cabezal de Impresión	C4822A
TAOH-80XLC	Cartucho Original HP C4846A/No 80 Cian	C4846A
TAOH-80XLM	Cartucho Original HP C4847A/No 80 Magenta	C4847A
TAOH-80XLY	Cartucho Original HP C4848A/No 80 Amarillo	C4848A
TAOH-80Y	Cartucho Original HP C4873A/No 80 Amarillo	C4873A
TAOH-80YP	Cartucho Original HP C4823A/No 80 Amarillo, Cabezal de Impresión	C4823A
TAOH-81B	Cartucho Original HP C4930A/No 81 Negro	C4930A
TAOH-81BP	Cartucho Original HP C4950A/No 81 Negro/Limpiador, Cabezal de Impresión	C4950A
TAOH-81BS3	Cartucho Original HP C5066A/No 81 Negro (3 uds.)	C5066A
TAOH-81C	Cartucho Original HP C4931A/No 81 Cian	C4931A
TAOH-81CP	Cartucho Original HP C4951A/No 81 Cian/ Limpizador, Cabezal de Impresión	C4951A
TAOH-81CS3	Cartucho Original HP C5067A/No 81 Cian (3 uds.)	C5067A
TAOH-81LC	Cartucho Original HP C4934A/No 81 Cian Fotográfico	C4934A
TAOH-81LCP	Cartucho Original HP C4954A/No 81 Cian Fotográfico/Limpiador, Cabezal de Impresión	C4954A
TAOH-81LCS3	Cartucho Original HP C5070A/No 81 Cian Fotográfico (3 uds.)	C5070A
TAOH-81LM	Cartucho Original HP C4935A/No 81 Magenta Fotográfico	C4935A
TAOH-81LMP	Cartucho Original HP C4955A/No 81 Magenta Fotográfico/ Limpizador, Cabezal de Impresión	C4955A
TAOH-81LMS3	Cartucho Original HP C5071A/No 81 Magenta Fotográfico (3 uds.)	C5071A
TAOH-81M	Cartucho Original HP C4932A/No 81 Magenta	C4932A
TAOH-81MP	Cartucho Original HP C4952A/No 81 Magenta/Limpiador, Cabezal de Impresión	C4952A
TAOH-81MS3	Cartucho Original HP C5068A/No 81 Magenta (3 uds.)	C5068A
TAOH-81Y	Cartucho Original HP C4933A/No 81 Amarillo	C4933A
TAOH-81YP	Cartucho Original HP C4953A/No 81 Amarillo/Limpiador, Cabezal de Impresión	C4953A
TAOH-81YS3	Cartucho Original HP C5069A/No 81 Amarillo (3 uds.)	C5069A
TAOH-82B	Cartucho Original HP CH565A/No 82 Negro	CH565A
TAOH-82C	Cartucho Original HP CH566A/No 82 Cian	CH566A
TAOH-82M	Cartucho Original HP CH567A/No 82 Magenta	CH567A
TAOH-82XLC	Cartucho Original HP C4911A/No 82 Cian	C4911A
TAOH-82XLM	Cartucho Original HP C4912A/No 82 Magenta	C4912A
TAOH-82XLY	Cartucho Original HP C4913A/No 82 Amarillo	C4913A
TAOH-82Y	Cartucho Original HP CH568A/No 82 Amarillo	CH568A
TAOH-83B	Cartucho Original HP C4940A/No 83 UV Negro	C4940A
TAOH-83BP	Cartucho Original HP C4960A/No 83 UV Negro/ Limpizador, Cabezal de Impresión	C4960A
TAOH-83BS3	Cartucho Original HP C5072A/No 83 UV Negro (3 uds.)	C5072A
TAOH-83C	Cartucho Original HP C4941A/No 83 UV Cian	C4941A
TAOH-83CP	Cartucho Original HP C4961A/No 83 UV Cian/Limpiador, Cabezal de Impresión	C4961A
TAOH-83CS3	Cartucho Original HP C5073A/No 83 UV Cian (3 uds.)	C5073A
TAOH-83LC	Cartucho Original HP C4944A/No 83 Cian Fotográfico	C4944A
TAOH-83LCP	Cartucho Original HP C4964A/No 83 UV Cian Fotográfico/Limpiador, Cabezal de Impresión	C4964A
TAOH-83LCS3	Cartucho Original HP C5076A/No 83 UV Cian Fotográfico (3 uds.)	C5076A
TAOH-83LM	Cartucho Original HP C4945A/No 83 UV Magenta Fotográfico	C4945A
TAOH-83LMP	Cartucho Original HP C4965A/No 83 UV Magenta Fotográfico/Limpiador, Cabezal de Impresión	C4965A
TAOH-83LMS3	Cartucho Original HP C5077A/No 83 UV Magenta Fotográfico (3 uds.)	C5077A
TAOH-83M	Cartucho Original HP C4942A/No 83 UV Magenta	C4942A
TAOH-83MP	Cartucho Original HP C4962A/No 83 UV Magenta/Limpiador, Cabezal de Impresión	C4962A
TAOH-83MS3	Cartucho Original HP C5074A/No 83 UV Magenta (3 uds.)	C5074A
TAOH-83Y	Cartucho Original HP C4943A/No 83 UV Amarillo	C4943A
TAOH-83YP	Cartucho Original HP C4963A/No 83 UV Amarillo/ Limpizador, Cabezal de Impresión	C4963A
TAOH-83YS3	Cartucho Original HP C5075A/No 83 UV Amarillo (3 uds.)	C5075A
TAOH-84B	Cartucho Original HP C5016A/No 84 Negro	C5016A
TAOH-84BP	Cartucho Original HP C5019A/No 84 Negro, Cabezal de Impresión	C5019A
TAOH-84LC	Cartucho Original HP C5020A/No 84 Cian Fotográfico	C5020A
TAOH-84LM	Cartucho Original HP C5021A/No 84 Magenta Fotográfico	C5021A
TAOH-84XLLC	Cartucho Original HP C5017A/No 84 Cian Fotográfico	C5017A
TAOH-84XLLM	Cartucho Original HP C5018A/No 84 Magenta Fotográfico	C5018A
TAOH-85C	Cartucho Original HP C9425A/No 85 Cian	C9425A
TAOH-85CP	Cartucho Original HP C9420A/No 85 Cian, Cabezal de Impresión	C9420A
TAOH-85LC	Cartucho Original HP C9428A/No 85 Cian Fotográfico	C9428A
TAOH-85LCP	Cartucho Original HP C9423A/No 85 Cian Fotográfico, Cabezal de Impresión	C9423A

TAOH-85LM	Cartucho Original HP C9429A/No 85 Magenta Fotográfico	C9429A
TAOH-85LMP	Cartucho Original HP C9424A/No 85 Magenta Fotográfico, Cabezal de Impresión	C9424A
TAOH-85M	Cartucho Original HP C9426A/No 85 Magenta	C9426A
TAOH-85MP	Cartucho Original HP C9421A/No 85 Magenta, Cabezal de Impresión	C9421A
TAOH-85Y	Cartucho Original HP C9427A/No 85 Amarillo	C9427A
TAOH-85YP	Cartucho Original HP C9422A/No 85 Amarillo, Cabezal de Impresión	C9422A
TAOH-88B	Cartucho Original HP C9385AE/No 88 Negro	C9385AE
TAOH-88CL	Cartucho Original HP C9386AE/No 88 Cian	C9386AE
TAOH-88CM	Cartucho Original HP C9382A/No 88 Cian/Magenta, Cabezal de Impresión	C9382A
TAOH-88M	Cartucho Original HP C9387AE/No 88 Magenta	C9387AE
TAOH-88XLB	Cartucho Original HP C9396AE/No 88XL Negro	C9396AE
TAOH-88XLC	Cartucho Original HP C9391AE/No 88XL Cian	C9391AE
TAOH-88XLCL	Cartucho Original HP C9381A/No 88 Negro/Amarillo, Cabezal de Impresión	C9381A
TAOH-88XLM	Cartucho Original HP C9392AE/No 88XL Magenta	C9392AE
TAOH-88XLY	Cartucho Original HP C9393AE/No 88XL Amarillo	C9393AE
TAOH-88Y	Cartucho Original HP C9388AE/No 88 Amarillo	C9388AE
TAOH-901B	Cartucho Original HP CC653AE/No 901 Negro	CC653AE
TAOH-901CL	Cartucho Original HP CC656AE/No 901 CMY	CC656AE
TAOH-901S2	Cartucho Original HP SD519AE/No 901XL/No 901 BK/CMY (2 uds.)	SD519AE
TAOH-901XL	Cartucho Original HP CC654AE/No 901XL Negro	CC654AE
TAOH-903B	Cartucho Original HP T6L99AE/903 Negro	T6L99AE
TAOH-903C	Cartucho Original HP T6L87AE/903 Cian	T6L87AE
TAOH-903M	Cartucho Original HP T6L91AE/903 Magenta	T6L91AE
TAOH-903XLB	Cartucho Original HP T6M15AE/903XL Negro	T6M15AE
TAOH-903XLC	Cartucho Original HP T6M03AE/903XL Cian	T6M03A
TAOH-903XLM	Cartucho Original HP T6M07AE/903XL Magenta	T6M07AE
TAOH-903XLY	Cartucho Original HP T6M11AE/903XL Amarillo	T6M11AE
TAOH-903Y	Cartucho Original HP T6L95AE/903 Amarillo	T6L95AE
TAOH-907XL	Cartucho Original HP T6M19AE/907XL Negro	T6M19AE
TAOH-90B	Cartucho Original HP C5058A/No 90 Negro	C5058A
TAOH-90BP	Cartucho Original HP C5054A/No 90 Negro, Cabezal de Impresión	C5054A
TAOH-90BS3	Cartucho Original HP C5095A/No 90 Negro (3 uds.)	C5095A
TAOH-90C	Cartucho Original HP C5060A/No 90 Cian	C5060A
TAOH-90CP	Cartucho Original HP C5055A/No 90 Cian, Cabezal de Impresión	C5055A
TAOH-90CS3	Cartucho Original HP C5083A/No 90 Cian (3 uds.)	C5083A
TAOH-90M	Cartucho Original HP C5062A/No 90 Magenta	C5062A
TAOH-90MP	Cartucho Original HP C5056A/No 90 Magenta, Cabezal de Impresión	C5056A
TAOH-90MS3	Cartucho Original HP C5084A/No 90 Magenta (3 uds.)	C5084A
TAOH-90XLB	Cartucho Original HP C5059A/No 90 Negro	C5059A
TAOH-90XLC	Cartucho Original HP C5061A/No 90 Cian	C5061A
TAOH-90XLM	Cartucho Original HP C5063A/No 90 Magenta	C5063A
TAOH-90XLY	Cartucho Original HP C5065A/No 90 Amarillo	C5065A
TAOH-90Y	Cartucho Original HP C5064A/No 90 Amarillo	C5064A
TAOH-90YP	Cartucho Original HP C5057A/No 90 Amarillo, Cabezal de Impresión	C5057A
TAOH-90YS3	Cartucho Original HP C5085A/No 90 Amarillo (3 uds.)	C5085A
TAOH-913A	Cartucho Original HP F6T77AE/913A Cian	F6T77AE
TAOH-913AB	Cartucho Original HP LOR95AE/913A Negro	LOR95AE
TAOH-913AM	Cartucho Original HP F6T78AE/913A Magenta	F6T78AE
TAOH-913AY	Cartucho Original HP F6T79AE/913A Amarillo	F6T79AE
TAOH-91B	Cartucho Original HP C9465A/No 91 Negro	C9465A
TAOH-91BGY	Cartucho Original HP C9463A/No 91 Negro/Gris, Cabezal de Impresión	C9463A
TAOH-91BS3	Cartucho Original HP C9481A/No 91 Negro (3 uds.)	C9481A
TAOH-91C	Cartucho Original HP C9467A/No 91 Cian	C9467A
TAOH-91CS3	Cartucho Original HP C9483A/No 91 Cian (3 uds.)	C9483A
TAOH-91LC	Cartucho Original HP C9470A/No 91 Cian Fotográfico	C9470A
TAOH-91LCLM	Cartucho Original HP C9462A/No 91 Cian/Magenta Fotográfico, Cabezal de Impresión	C9462A
TAOH-91LCS3	Cartucho Original HP C9486A/No 91 Cian Fotográfico (3 uds.)	C9486A
TAOH-91LGY	Cartucho Original HP C9466A/No 91 Gris Fotográfico	C9466A
TAOH-91LGY3	Cartucho Original HP C9482A/No 91 Gris Fotográfico (3 uds.)	C9482A
TAOH-91LM	Cartucho Original HP C9471A/No 91 Magenta Fotográfico	C9471A
TAOH-91LMS3	Cartucho Original HP C9487A/No 91 Magenta Fotográfico (3 uds.)	C9487A
TAOH-91M	Cartucho Original HP C9468A/No 91 Magenta	C9468A
TAOH-91MB	Cartucho Original HP C9464A/No 91 Negro Mate	C9464A
TAOH-91MBP	Cartucho Original HP C9460A/No 91, Cabezal de Impresión Negro Mate	C9460A
TAOH-91MBS3	Cartucho Original HP C9480A/No 91 Negro Mate (3 uds.)	C9480A
TAOH-91MS3	Cartucho Original HP C9484A/No 91 Magenta (3 uds.)	C9484A
TAOH-91MY	Cartucho Original HP C9461A/No 91 Magenta/Amarillo, Cabezal de Impresión	C9461A
TAOH-91Y	Cartucho Original HP C9469A/No 91 Amarillo	C9469A
TAOH-91YS3	Cartucho Original HP C9485A/No 91 Amarillo (3 uds.)	C9485A
TAOH-920	Cartucho Original HP CD971AE/No 920 Negro	CD971AE
TAOH-920XLB	Cartucho Original HP CD975AE/No 920XL Negro	CD975AE

TAOH-920XLBDP	Cartucho Original HP D8J47AE/No 920XL Negro, Pack Doble	D8J47AE
TAOH-920XLC	Cartucho Original HP CD972AE/No 920XL Cian	CD972AE
TAOH-920XLm	Cartucho Original HP CD973AE/No 920XL Magenta	CD973AE
TAOH-920XLS3	Cartucho Original HP CH081AE/No 920XL CMY (3 uds.) + Papel	CH081AE
TAOH-920XLY	Cartucho Original HP CD974AE/No 920XL Amarillo	CD974AE
TAOH-932	Cartucho Original HP CN057AE/No 932 Negro	CN057AE
TAOH-932XL	Cartucho Original HP CN053AE/No 932XL Negro	CN053AE
TAOH-933XLC	Cartucho Original HP CN054AE/No 933XL Cian	CN054AE
TAOH-933XLM	Cartucho Original HP CN055AE/No 933XL Magenta	CN055AE
TAOH-933XLS3	Cartucho Original HP CR711AE/No 933XL CMY (3 uds.) + Papel	CR711AE
TAOH-933XLS4	Cartucho Original HP C2P42AE/No 932XL/No 933XL CMYK (4 uds.)	C2P42AE
TAOH-933XLY	Cartucho Original HP CN056AE/No 933XL Amarillo	CN056AE
TAOH-934	Cartucho Original HP C2P19AE/No 934 Negro	C2P19AE
TAOH-934XL	Cartucho Original HP C2P23AE/No 934XL Negro	C2P23AE
TAOH-935C	Cartucho Original HP C2P20AE/No 935 Cian	C2P20AE
TAOH-935M	Cartucho Original HP C2P21AE/No 935 Magenta	C2P21AE
TAOH-935XLC	Cartucho Original HP C2P24AE/No 935XL Cian	C2P24AE
TAOH-935XLM	Cartucho Original HP C2P25AE/No 935 XL Magenta	C2P25AE
TAOH-935XLS3	Cartucho Original HP F6U78AE/No 935XL CMY (3 uds.) + Papel	F6U78AE
TAOH-935XLY	Cartucho Original HP C2P26AE/No 935XL Amarillo	C2P26AE
TAOH-935Y	Cartucho Original HP C2P22AE/No 935 Amarillo	C2P22AE
TAOH-940B	Cartucho Original HP C4902AE/No 940 Negro	C4902AE
TAOH-940BY	Cartucho Original HP C4900A/No 940 Negro/Amarillo, Cabezal de Impresión	C4900A
TAOH-940CM	Cartucho Original HP C4901A/No 940 Cian/Magenta, Cabezal de Impresión	C4901A
TAOH-940XLB	Cartucho Original HP C4906AE/No 940XL Negro	C4906AE
TAOH-940XLBDP	Cartucho Original HP D8J48AE/No 940XL Negro, Pack Doble	D8J48AE
TAOH-940XLC	Cartucho Original HP C4907AE/No 940XL Cian	C4907AE
TAOH-940XLM	Cartucho Original HP C4908AE/No 940XL Magenta	C4908AE
TAOH-940XLS3	Cartucho Original HP CG898AE/No 940XL CMY (3 uds.) + Papel	CG898AE
TAOH-940XLS4	Cartucho Original HP C2N93AE/No 940XL CMYK (4 uds.)	C2N93AE
TAOH-940XLY	Cartucho Original HP C4909AE/No 940XL Amarillo	C4909AE
TAOH-950	Cartucho Original HP CN049AE/No 950 Negro	CN049AE
TAOH-950XL	Cartucho Original HP CN045AE/No 950XL Negro	CN045AE
TAOH-951C	Cartucho Original HP CN050AE/No 951 Cian	CN050A
TAOH-951M	Cartucho Original HP CN051A/No 951 Magenta	CN051A
TAOH-951XLC	Cartucho Original HP CN046AE/No 951XL Cian	CN046AE
TAOH-951XLM	Cartucho Original HP CN047AE/No 951XL Magenta	CN047AE
TAOH-951XLS3	Cartucho Original HP CR712AE/No 951XL CMY (3 uds.) + Papel	CR712AE
TAOH-951XLS4	Cartucho Original HP C2P43AE/No 950XL/No 951XL CMYK (4 uds.)	C2P43AE
TAOH-951XLY	Cartucho Original HP CN048AE/No 951XL Amarillo	CN048AE
TAOH-951Y	Cartucho Original HP CN052A/No 951 Amarillo	CN052A
TAOH-953B	Cartucho Original HP LOS58AE/953 Negro	LOS58AE
TAOH-953C	Cartucho Original HP F6U12AE/953 Cian	F6U12AE
TAOH-953M	Cartucho Original HP F6U13AE/953 Magenta	F6U13AE
TAOH-953XLB	Cartucho Original HP LOS70AE/953XL Negro	LOS70AE
TAOH-953XLC	Cartucho Original HP F6U16AE/953XL Cian	F6U16AE
TAOH-953XLM	Cartucho Original HP F6U17AE/953XL Magenta	F6U17AE
TAOH-953XLY	Cartucho Original HP F6U18AE/953XL Amarillo	F6U18AE
TAOH-953Y	Cartucho Original HP F6U14AE/953 Amarillo	F6U14AE
TAOH-957XLB	Cartucho Original HP LOR40AE/957XL Negro	LOR40AE
TAOH-970	Cartucho Original HP CN621AE/No 970 Negro	CN621AE
TAOH-970XL	Cartucho Original HP CN625AE/No 970XL Negro	CN625AE
TAOH-971C	Cartucho Original HP CN622AE/No 971 Cian	CN622AE
TAOH-971M	Cartucho Original HP CN623AE/No 971 Magenta	CN623AE
TAOH-971XLC	Cartucho Original HP CN626AE/No 971XL Cian	CN626AE
TAOH-971XLM	Cartucho Original HP CN627AE/No 971XL Magenta	CN627AE
TAOH-971XLY	Cartucho Original HP CN628AE/No 971XL Amarillo	CN628AE
TAOH-971Y	Cartucho Original HP CN624AE/No 971 Amarillo	CN624AE
TAOH-973X	Cartucho Original HP LOS07AE/973X Black	LOS07AE
TAOH-973XC	Cartucho Original HP F6T81AE/973X Cian	F6T81AE
TAOH-973XM	Cartucho Original HP F6T82AE/973X Magenta	F6T82AE
TAOH-973XY	Cartucho Original HP F6T83AE/973X Amarillo	F6T83AE
TAOH-980B	Cartucho Original HP D8J10A/No 980 Negro	D8J10A
TAOH-980C	Cartucho Original HP D8J07A/No 980 Cian	D8J07A
TAOH-980M	Cartucho Original HP D8J08A/No 980 Magenta	D8J08A
TAOH-980Y	Cartucho Original HP D8J09A/No 980 Amarillo	D8J09A
TAOH-981AB	Cartucho Original HP J3M71A/981A Negro	J3M71A
TAOH-981AC	Cartucho Original HP J3M68A/981A Cian	J3M68A
TAOH-981AM	Cartucho Original HP J3M69A/981A Magenta	J3M69A
TAOH-981AY	Cartucho Original HP J3M70A/981A Amarillo	J3M70A
TAOH-981XB	Cartucho Original HP LOR12A/981X Negro	LOR12A

TAOH-981XC	Cartucho Original HP LOR09A/981X Cian	LOR09A
TAOH-981XM	Cartucho Original HP LOR10A/981X Magenta	LOR10A
TAOH-981XY	Cartucho Original HP LOR11A/981X Amarillo	LOR11A
TAOH-981YB	Cartucho Original HP LOR16A/981Y Negro	LOR16A
TAOH-981YC	Cartucho Original HP LOR13A/981Y Cian	LOR13A
TAOH-981YM	Cartucho Original HP LOR14A/981Y Magenta	LOR14A
TAOH-981YY	Cartucho Original HP LOR15A/981Y Amarillo	LOR15A
TAOH-C2N92AES4	Cartucho Original HP C2N92AE CMYK (4 uds.)	C2N92AE
TAOH-C6168A	Cartucho Original HP C6168A Rojo para Franqueo	C6168A
TAOH-C6170A	Cartucho Original HP C6170A Azul para Franqueo	C6170A
TAOH-C6173A	Cartucho Original HP C6173A Amarillo para Franqueo	C6173A
TAOH-C6195A	Cartucho Original HP C6195A Negro para Franqueo	C6195A
TAOH-C6602A	Cartucho Original HP C6602A Negro para Franqueo	C6602A
TAOH-C6602B	Cartucho Original HP C6602B Azul para Franqueo	C6602B
TAOH-C6602R	Cartucho Original HP C6602R Rojo para Franqueo	C6602R
TAOH-C8750A	Cartucho Original HP C8750A Negro, Cabezal de Impresión	C8750A
TAOH-C8751A	Cartucho Original HP C8751A Cian, Cabezal de Impresión	C8751A
TAOH-C8752A	Cartucho Original HP C8752A Magenta, Cabezal de Impresión	C8752A
TAOH-C8753A	Cartucho Original HP C8753A Amarillo, Cabezal de Impresión	C8753A
TAOH-C8754A	Cartucho Original HP C8754A con Agente Adherente	C8754A
TAOH-C8842A	Cartucho Original HP C8842A Negro para Franqueo	C8842A
TAOH-CD949A	Cartucho Original HP CD949A, Cabezal de Impresión Negro Mate	CD949A
TAOH-CD951A	Cartucho Original HP CD951A, Cabezal de Impresión Rojo	CD951A
TAOH-F6U65AE	Cartucho Original HP F6U65AE CMY	F6U65AE
TAOH-F6U66AE	Cartucho Original HP F6U66AE Negro	F6U66AE
TAOH-F9J50A	Cartucho Original HP F9J50A Amarillo	F9J50A
TAOH-F9J51A	Cartucho Original HP F9J51A Magenta	F9J51A
TAOH-F9J52A	Cartucho Original HP F9J52A Cian	F9J52A
TAOH-F9J53A	Cartucho Original HP F9J53A Gris	F9J53A
TAOH-F9J54A	Cartucho Original HP F9J54A Gris Oscuro	F9J54A
TAOH-F9J55A	Cartucho Original HP F9J55A Negro Mate	F9J55A
TAOH-N9J72A	Cartucho Original HP N9J72AE/N9J72A BK/CMY (2 uds.)	N9J72AE
TAOH-N9J73AB	Cartucho Original HP N9J73AE/N9J73A BK/CMY (2 uds.)	N9J73AE
TAOH-Q7456A	Cartucho Original HP Q7456A Negro, Cabezal de Impresión	Q7456A
TAOH-Q7457A	Cartucho Original HP Q7457A Negro	Q7457A
TAOKD-10B	Cartucho Original Kodak 3949914/No 10 Negro	3949914
TAOKD-10CL	Cartucho Original Kodak 3947066/No 10 CMY	3947066
TAOKD-10S2	Cartucho Original Kodak 3949948/No 10 BK/CMY (2 uds.)	8203374
TAOKD-10XL	Cartucho Original Kodak 3949922/No 10XL Negro	3949922
TAOKD-30	Cartucho Original Kodak 3952330/No 30 Negro	3952330
TAOKD-30S2	Cartucho Original Kodak 3952355/No 30 BK/CMY (2 uds.)	3952355
TAOKD-30XL	Cartucho Original Kodak 3952363/No 30 XL Negro	3952363
TAOL-1	Cartucho Original Lexmark 018CX781E/No 1 HC CMY	018CX781E
TAOL-100B	Cartucho Original Lexmark 014N0820E/No 100 Negro PR	014N0820E
TAOL-100C	Cartucho Original Lexmark 014N0900E/No 100 Cian PR	014N0900E
TAOL-100M	Cartucho Original Lexmark 014N0901E/No 100 Magenta PR	014N0901E
TAOL-100S3	Cartucho Original Lexmark 0014N0849E/100 CMY (3 uds.)	0014N0849E
TAOL-100S4	Cartucho Original Lexmark 14N1912E/100 CMYK (4 uds.)	14N1912E
TAOL-100XLAB	Cartucho Original Lexmark 0014N1092E/No 100XLA HC Negro	0014N1092E
TAOL-100XLAC	Cartucho Original Lexmark 0014N1093E/No 100XLA HC Cian	0014N1093E
TAOL-100XLAM	Cartucho Original Lexmark 0014N1094E/No 100XLA HC Magenta	0014N1094E
TAOL-100XLAY	Cartucho Original Lexmark 0014N1095E/No 100XLA HC Amarillo	0014N1095E
TAOL-100XLB	Cartucho Original Lexmark 014N1068E/No 100XL HC Negro PR	014N1068E
TAOL-100XBDP	Cartucho Original Lexmark 0014N0848E/No 100XL HC Negro, Pack Doble PR	0014N0848E
TAOL-100XLC	Cartucho Original Lexmark 014N1069E/No 100XL HC Cian PR	014N1069E
TAOL-100XLM	Cartucho Original Lexmark 014N1070E/No 100XL HC Magenta PR	014N1070E
TAOL-100XLS3	Cartucho Original Lexmark 0014N0850E/100XL HC CMY (3 uds.)	0014N0850E
TAOL-100XLS4	Cartucho Original Lexmark 14N1921E/No 100XL CMYK (4 uds.)	14N1921E
TAOL-100XLY	Cartucho Original Lexmark 014N1071E/No 100XL HC Amarillo PR	014N1071E
TAOL-100Y	Cartucho Original Lexmark 014N0902E/No 100 Amarillo PR	014N0902E
TAOL-105XL	Cartucho Original Lexmark 0014N0822E/No 105XL Negro	0014N0822E
TAOL-14	Cartucho Original Lexmark 018C2090E/No 14 Negro, Cabezal de Impresión	018C2090E
TAOL-14A	Cartucho Original Lexmark 018C2080E/No 14A Negro, Cabezal de Impresión	018C2080E
TAOL-15	Cartucho Original Lexmark 018C2110E/No 15 CMY, Cabezal de Impresión	018C2110E
TAOL-150B	Cartucho Original Lexmark 14N1607E/No 150 Negro	14N1607E
TAOL-150C	Cartucho Original Lexmark 14N1608E/No 150 Cian	14N1608E
TAOL-150M	Cartucho Original Lexmark 14N1609E/No 150 Magenta	14N1609E
TAOL-150S3	Cartucho Original Lexmark 14N1805E/No 150 CMY (3 uds.)	14N1805E
TAOL-150S4	Cartucho Original Lexmark 14N1910E/No 150 CMYK (4 uds.)	14N1910E
TAOL-150XLAC	Cartucho Original Lexmark 14N1642/No 150XLA Cian	14N1642
TAOL-150XLAM	Cartucho Original Lexmark 14N1646/No 150XLA Magenta	14N1646

TAOL-150XLAY	Cartucho Original Lexmark 14N1650/No 150XLA Amarillo	14N1650
TAOL-150XLB	Cartucho Original Lexmark 14N1614E/No 150XL Negro	14N1614E
TAOL-150XLC	Cartucho Original Lexmark 14N1615E/No 150XL Cian	14N1615E
TAOL-150XLM	Cartucho Original Lexmark 14N1616E/No 150XL Magenta	14N1616E
TAOL-150XLS3	Cartucho Original Lexmark 14N1807E/No 150XL CMY (3 uds.)	14N1807E
TAOL-150XLS4	Cartucho Original Lexmark 14N1919E/No 150XL CMYK (4 uds.)	14N1919E
TAOL-150XLY	Cartucho Original Lexmark 14N1618E/No 150XL Amarillo	14N1618E
TAOL-150Y	Cartucho Original Lexmark 14N1610E/No 150 Amarillo	14N1610E
TAOL-155XL	Cartucho Original Lexmark 14N1619E/No 155XL Negro	14N1619E
TAOL-15A	Cartucho Original Lexmark 018C2100E/No 15A CMY, Cabezal de Impresión	018C2100E
TAOL-15S2	Cartucho Original Lexmark 0080D2979/No 14 y No 15 BK/CMY, Cabezal de Impresión (2 uds.)	0080D2979
TAOL-16	Cartucho Original Lexmark 010N0016E/No 16 Negro	010N0016E
TAOL-17HC	Cartucho Original Lexmark 010NX217E/No 17HC Negro	010NX217E
TAOL-17HCDP	Cartucho Original Lexmark 0080D2954/No 17HC Negro, Pack Doble	0080D2954
TAOL-1HCDP	Cartucho Original Lexmark 0080D2955/No 1HC CMY, Pack Doble	0080D2955
TAOL-200XLAB	Cartucho Original Lexmark 14L0197/No 200XLA Negro	14L0197
TAOL-200XLAC	Cartucho Original Lexmark 14L0198/No 200XLA Cian	14L0198
TAOL-200XLAM	Cartucho Original Lexmark 14L0199/No 200XLA Magenta	14L0199
TAOL-200XLAY	Cartucho Original Lexmark 14L0200/No 200XLA Amarillo	14L0200
TAOL-20HC	Cartucho Original Lexmark 015MX120E/No 20HC CMY	015MX120E
TAOL-210M	Cartucho Original Lexmark 14L0087E/No 210 Magenta	14L0087E
TAOL-210XLB	Cartucho Original Lexmark 14L0174E/No 210XL Negro	14L0174E
TAOL-210XLC	Cartucho Original Lexmark 14L0175E/No 210XL Cian	14L0175E
TAOL-210XLM	Cartucho Original Lexmark 14L0176E/No 210XL Magenta	14L0176E
TAOL-210XLS3	Cartucho Original Lexmark 14L0269E/No 210XL CMY (3 uds.)	14L0269E
TAOL-210XLY	Cartucho Original Lexmark 14L0177E/No 210XL Amarillo	14L0177E
TAOL-23	Cartucho Original Lexmark 018C1523E/No 23 Negro, Cabezal de Impresión	018C1523E
TAOL-24	Cartucho Original Lexmark 018C1524E/No 24 CMY, Cabezal de Impresión	018C1524E
TAOL-24A	Cartucho Original Lexmark 018C1624E/No 24A CMY, Cabezal de Impresión	018C1624E
TAOL-24S2	Cartucho Original Lexmark 018C1419E/No 23 y No 24 BK/CMY, Cabezal de Impresión (2 uds.)	018C1419E
TAOL-26	Cartucho Original Lexmark 010N0026E/No 26 CMY	010N0026E
TAOL-26S2	Cartucho Original Lexmark 0080D2126/No 16 y No 26 BK/CMY (2 uds.)	0080D2126
TAOL-27HC	Cartucho Original Lexmark 010NX227E/No 27HC CMY	010NX227E
TAOL-27S2	Cartucho Original Lexmark 0080D2952/No 17 y No 27HC BK/CMY (2 uds.)	0080D2952
TAOL-28	Cartucho Original Lexmark 018C1428E/No 28 Negro, Cabezal de Impresión	018C1428E
TAOL-28A	Cartucho Original Lexmark 018C1528E/No 28A Negro, Cabezal de Impresión	018C1528E
TAOL-29	Cartucho Original Lexmark 018C1429E/No 29 CMY	018C1429E
TAOL-29A	Cartucho Original Lexmark 018C1529E/No 29A CMY, Cabezal de Impresión	018C1529E
TAOL-29S2	Cartucho Original Lexmark 018C1520E/No 28 y No 29 BK/CMY (2 uds.)	018C1520E
TAOL-31	Cartucho Original Lexmark 018C0031E/No 31 Fotográfico	018C0031E
TAOL3-105XLS4	Cartucho Original Lexmark 14N0845E/No 105XL Negro (4 uds.)	14N0845E
TAOL-32HC	Cartucho Original Lexmark 018CX032E/No 32HC Negro	018CX032E
TAOL-32HCDP	Cartucho Original Lexmark 0080D2956/No 32HC Negro, Pack Doble	0080D2956
TAOL-33HC	Cartucho Original Lexmark 018CX033E/No 33HC CMY	018CX033E
TAOL-33S2	Cartucho Original Lexmark 0080D2951/No 32 y No 33 BK/CMY (2 uds.)	0080D2951
TAOL-34XL	Cartucho Original Lexmark 018C0034E/No 34XL Negro	018C0034E
TAOL-35XL	Cartucho Original Lexmark 018C0035E/No 35XL CMY	018C0035E
TAOL-36	Cartucho Original Lexmark 018C2130E/No 36 Negro PR	018C2130E
TAOL-36A	Cartucho Original Lexmark 0018C2150E/No 36A Negro	0018C2150E
TAOL-36XL	Cartucho Original Lexmark 018C2170E/No 36XL Negro HC PR	018C2170E
TAOL-36XLA	Cartucho Original Lexmark 018C2190E/No 36XLA Negro HC	018C2190E
TAOL-37	Cartucho Original Lexmark 018C2140E/No 37 CMY PR	018C2140E
TAOL-37A	Cartucho Original Lexmark 0018C2160E/No 37A CMY	0018C2160E
TAOL-37S2	Cartucho Original Lexmark 0080D2978/No 36XL y No 37XL BK/CMY (2 uds.)	0080D2978
TAOL-37XL	Cartucho Original Lexmark 018C2180E/No 37XL CMY HC PR	018C2180E
TAOL-37XLA	Cartucho Original Lexmark 018C2200E/No 37XLA CMY HC	018C2200E
TAOL-40	Cartucho Original Lexmark 018Y0340E/No 40 Fotográfico	018Y0340E
TAOL-41	Cartucho Original Lexmark 018Y0141E/No 41 CMY	018Y0141E
TAOL-41A	Cartucho Original Lexmark 018Y0341E/No 41A CMY	0018Y0341E
TAOL-42	Cartucho Original Lexmark 018Y0142E/No 42 Negro	018Y0142E
TAOL-42A	Cartucho Original Lexmark 0018Y0342E/No 42A Negro	0018Y0342E
TAOL-43	Cartucho Original Lexmark 018YX143E/No 43 XXL CMY	018YX143E
TAOL-44	Cartucho Original Lexmark 018Y0144E/No 44 XXL Negro	018Y0144E
TAOL-44XL	Cartucho Original Lexmark 0080D2966/No 43XL y No 44XL CMYK (4 uds.)	0080D2966
TAOL-50	Cartucho Original Lexmark 017G0050E/No 50 Negro, Cabezal de Impresión	017G0050E
TAOL-70HC	Cartucho Original Lexmark 012AX970E/No 70HC XXL Negro	012AX970E
TAOL-82	Cartucho Original Lexmark 018L0032E/No 82 Negro	018L0032E
TAOL-83HC	Cartucho Original Lexmark 018LX042E/No 83HC CMY, Cabezal de Impresión	018LX042E
TAOOC-10616924	Cartucho Original OCE 106.001.6924 Negro, Cabezal de Impresión	1.060.016.924
TAOOC-10616925	Cartucho Original OCE 106.001.6925 Cian, Cabezal de Impresión	1060016925
TAOOC-10616926	Cartucho Original OCE 106.001.6926 Magenta, Cabezal de Impresión	1060016926

TAOOC-10616927	Cartucho Original OCE 106.001.6927 Amarillo, Cabezal de Impresión	1060016927
TAOOC-10619424	Cartucho Original OCE 106.001.9424 Negro	1060019424
TAOOC-10619425	Cartucho Original OCE 106.001.9425 Amarillo	1060019425
TAOOC-10619426	Cartucho Original OCE 106.001.9426 Cian	1060019426
TAOOC-10691360	Cartucho Original OCE 106.009.1360 Negro	1060091360
TAOOC-29951268	Cartucho Original OCE 299.522.68 Magenta	299.512.68
TAOOC-29952264	Cartucho Original OCE 299.522.64 Negro	299.522.64
TAOOC-29952265	Cartucho Original OCE 299.522.65 Negro	299.522.65
TAOOC-29952266	Cartucho Original OCE 299.522.66 Cian	299.522.66
TAOOC-29952267	Cartucho Original OCE 299.522.67 Magenta	299.522.67
TAOOC-29952268	Cartucho Original OCE 299.522.68 Amarillo	299.522.68
TAOOC-29953719	Cartucho Original OCE 299.53.719, Cabezal de Impresión y Cian	299.53.719
TAOOC-29953720	Cartucho Original OCE 299.53.720, Cabezal de Impresión y Negro	299.53.720
TAOOC-29953721	Cartucho Original OCE 299.53.721, Cabezal de Impresión y Magenta	299.53.721
TAOOC-29953722	Cartucho Original OCE 299.53.722, Cabezal de Impresión y Amarillo	299.53.722
TAOOC-29953725	Cartucho Original OCE 299.53.725, Cabezal de Impresión y Magenta	299.53.725
TAOOC-29953813	Cartucho Original OCE 299.53.813 Negro	299.53.813
TAOOC-29953814	Cartucho Original OCE 299.53.814 Cian	299.53.814
TAOOC-29953815	Cartucho Original OCE 299.53.815 Magenta	299.53.815
TAOOC-29953816	Cartucho Original OCE 299.53.816 Amarillo	299.53.816
TAOOC-29953901	Cartucho Original OCE 299.53.901, Cabezal de Impresión y Cian	299.53.901
TAOOC-29953902	Cartucho Original OCE 299.53.902, Cabezal de Impresión y Magenta	299.53.902
TAOOC-29953903	Cartucho Original OCE 299.53.903, Cabezal de Impresión y Amarillo	299.53.903
TAOOC-29953904	Cartucho Original OCE 299.53.904, Cabezal de Impresión y Negro	299.53.904
TAOOC-IJC224B	Cartucho Original OCE 299.52.208/IJC224 Negro	299.52.208
TAOOC-IJC224C	Cartucho Original OCE 299.52.203/IJC224 Cian	299.52.203
TAOOC-IJC224LM	Cartucho Original OCE 299.52.206/IJC224 Magenta Fotográfico	299.52.206
TAOOC-IJC224M	Cartucho Original OCE 299.52.205/IJC224 Magenta	299.52.205
TAOOC-IJC224Y	Cartucho Original OCE 299.52.207/IJC224 Amarillo	299.52.207
TAOOC-IJC244B	Cartucho Original OCE 299.52.214/IJC244 Negro	299.52.214
TAOOC-IJC244C	Cartucho Original OCE 299.52.209/IJC244 Cian	299.52.209
TAOOC-IJC244LC	Cartucho Original OCE 299.52.210/IJC244 Cian Fotográfico	299.52.210
TAOOC-IJC244LM	Cartucho Original OCE 299.52.212/IJC244 Magenta Fotográfico	299.52.212
TAOOC-IJC244M	Cartucho Original OCE 299.52.211/IJC244 Magenta	299.52.211
TAOOC-IJC244Y	Cartucho Original OCE 299.52.213/IJC244 Amarillo	299.52.213
TAOOC-J2B	Cartucho Original OCE 299.53.807/J2BK Negro, Cabezal de Impresión	299.53.807
TAOOC-J2C	Cartucho Original OCE 299.53.808/J2C Cian, Cabezal de Impresión	299.53.808
TAOOC-J2Y	Cartucho Original OCE 299.53.810/J2Y Amarillo, Cabezal de Impresión	299.53.810
TAOOL-FJ31	Cartucho Original Olivetti B0336/FJ31 Negro, Cabezal de Impresión	B0336
TAOOL-FJ63	Cartucho Original Olivetti B0702/FJ63 Negro, Cabezal de Impresión	B0702
TAOOL-FPJ20	Cartucho Original Olivetti B0384/FPJ20 Negro	B0384
TAOOL-FPJ26	Cartucho Original Olivetti 84436/FPJ26 CMY	84436
TAOOL-IN501	Cartucho Original Olivetti B0508/IN501 Negro, Cabezal de Impresión	B0508
TAOOL-IN703	Cartucho Original Olivetti B0632/IN703 CMY, Cabezal de Impresión	B0632
TAOOL-IN704	Cartucho Original Olivetti B0629/IN704 CMY, Cabezal de Impresión	B0629
TAOOL-XP03	Cartucho Original Olivetti B0261/XP03 XXL CMYK	B0261
TAOPH-PFA431	Cartucho Original Philips PFA431/906115308019 Negro	PFA431
TAOPH-PFA432	Cartucho Original Philips PFA432/906115308029 Negro, Cabezal de Impresión	PFA432
TAOPH-PFA441	Cartucho Original Philips PFA441/253014355 Negro, Cabezal de Impresión	PFA441
TAOPH-PFA531	Cartucho Original Philips PFA531/906115308039 Negro, Cabezal de Impresión	PFA531
TAOPH-PFA534	Cartucho Original Philips PFA534/906115309039 CMY, Cabezal de Impresión	PFA534
TAOPH-PFA541	Cartucho Original Philips PFA541/906115314001 Negro, Cabezal de Impresión	PFA541
TAOPH-PFA542	Cartucho Original Philips PFA542/906115314201 Negro, Cabezal de Impresión	PFA542
TAOPH-PFA544	Cartucho Original Philips PFA544/906115314101 CMY, Cabezal de Impresión	PFA544
TAOPH-PFA546	Cartucho Original Philips PFA546/906115314301 CMY, Cabezal de Impresión	PFA546
TAOPR-53330	Cartucho Original Primera 53330 CMY, Cabezal de Impresión	53330
TAOPR-53331	Cartucho Original Primera 53331 Negro, Cabezal de Impresión	53331
TAOPR-53332	Cartucho Original Primera 53332 CMY, Cabezal de Impresión	53332
TAOPR-53335	Cartucho Original Primera 53335 CMY, Cabezal de Impresión	53335
TAOPR-53336	Cartucho Original Primera 53336 Negro, Cabezal de Impresión	53336
TAOPR-53422	Cartucho Original Primera 53422 Cian	53422
TAOPR-53423	Cartucho Original Primera 53423 Magenta	53423
TAOPR-53424	Cartucho Original Primera 53424 Amarillo	53424
TAOPR-53425	Cartucho Original Primera 53425 Negro	53425
TAOPR-53601	Cartucho Original Primera 53601 Cian	53601
TAOPR-53602	Cartucho Original Primera 53602 Magenta	53602
TAOPR-53603	Cartucho Original Primera 53603 Amarillo	53603
TAOPR-53604	Cartucho Original Primera 53604 Negro	53604
TAORI-405836	Cartucho de Gel Original Ricoh 405836 Negro	405836
TAORI-817140	Cartucho Original Ricoh 817140 Negro	817140
TAORI-841635	Cartucho Original Ricoh 841635 Negro	841635

TAORI-841636	Cartucho Original Ricoh 841636 Cian	841636
TAORI-841637	Cartucho Original Ricoh 841637 Magenta	841637
TAORI-841638	Cartucho Original Ricoh 841638 Amarillo	841638
TAORI-888547	Cartucho Original Ricoh 888547 Negro	888547
TAORI-888548	Cartucho Original Ricoh 888548 Amarillo	888548
TAORI-888549	Cartucho Original Ricoh 888549 Magenta	888549
TAORI-888550	Cartucho Original Ricoh 888550 Cian	888550
TAORI-893174	Cartucho Original Ricoh 893174 Magenta	893174
TAORI-893188S5	Cartucho Original Ricoh 893188/JP40HQ Negro (5 uds.)	893188
TAORI-893506	Cartucho Original Ricoh 893506 Negro	893506
TAORI-893788	Cartucho Original Ricoh 893788 Negro	893788
TAORI-GC21B	Cartucho de Gel Original Ricoh 405532/GC-21K Negro	405532
TAORI-GC21BH	Cartucho de Gel Original Ricoh 405536/GC-21KH Negro	405536
TAORI-GC21C	Cartucho de Gel Original Ricoh 405533/GC-21C Cian	405533
TAORI-GC21CH	Cartucho de Gel Original Ricoh 405537/GC-21CH Cian	405537
TAORI-GC21M	Cartucho de Gel Original Ricoh 405534/GC-21M Magenta	405534
TAORI-GC21MH	Cartucho de Gel Original Ricoh 405538/GC-21MH Magenta	405538
TAORI-GC21Y	Cartucho de Gel Original Ricoh 405535/GC-21Y Amarillo	405535
TAORI-GC21YH	Cartucho de Gel Original Ricoh 405539/GC-21YH Amarillo	405539
TAORI-GC31B	Cartucho de Gel Original Ricoh 405688/GC-31K Negro	405688
TAORI-GC31BH	Cartucho de Gel Original Ricoh 405701/GC-31HK Negro	405701
TAORI-GC31C	Cartucho de Gel Original Ricoh 405689/GC-31C Cian	405689
TAORI-GC31HC	Cartucho de Gel Original Ricoh 405702/GC-31HC Cian	405702
TAORI-GC31M	Cartucho de Gel Original Ricoh 405690/GC-31M Magenta	405690
TAORI-GC31MH	Cartucho de Gel Original Ricoh 405703/GC-31HM Magenta	405703
TAORI-GC31Y	Cartucho de Gel Original Ricoh 405691/GC-31Y Amarillo	405691
TAORI-GC31YH	Cartucho de Gel Original Ricoh 405704/GC-31HY Amarillo	405704
TAORI-GC41B	Cartucho de Gel Original Ricoh 405761/GC-41K Negro	405761
TAORI-GC41BL	Cartucho de Gel Original Ricoh 405765/GC-41KL Negro	405765
TAORI-GC41C	Cartucho de Gel Original Ricoh 405762/GC-41C Cian	405762
TAORI-GC41CL	Cartucho de Gel Original Ricoh 405766/GC-41CL Cian	405766
TAORI-GC41M	Cartucho de Gel Original Ricoh 405763/GC-41M Magenta	405763
TAORI-GC41ML	Cartucho de Gel Original Ricoh 405767/GC-41ML Magenta	405767
TAORI-GC41Y	Cartucho de Gel Original Ricoh 405764/GC-41Y Amarillo	405764
TAORI-GC41YL	Cartucho de Gel Original Ricoh 405768/GC-41YL Amarillo	405768
TAORI-HQ90	Cartucho Original Ricoh 817161/HQ90 Negro (6 uds.)	817161
TAORI-JP12	Cartucho Original Ricoh 817104/JP12 Negro	817104
TAORI-JP6S5	Cartucho Original Ricoh 893058/JP6 Negro (5 uds.)	893058
TAORI-JP7	Cartucho Original Ricoh 893713/JP7 Negro	893713
TAORI-JP800HD	Cartucho Original Ricoh 893107/JP800HD Negro	893107
TAORI-M817551	Cartucho Original Ricoh 817551 Máster	817551
TAORI-M817612	Cartucho Original Ricoh 817612 Máster	817612
TAORI-MHQ90	Cartucho Original Ricoh 893265/HQ90 Máster	893265
TAORI-MJP10M	Cartucho Original Ricoh 893027/JP10M Máster	893027
TAORI-MJP10S	Cartucho Original Ricoh 893023/JP10S Máster A4	893023
TAORI-MJP12M	Cartucho Original Ricoh 817542/JP12M Máster	817542
TAORI-MJP12S	Cartucho Original Ricoh 817534/JP12S Máster Pack Doble	817534
TAORI-MJP7M	Cartucho Original Ricoh 817562/JP7M Máster	817562
TAORI-MJP7S	Cartucho Original Ricoh 817564/JP7S Máster	817564
TAORI-MVTIIL	Cartucho Original Ricoh 893952/VTIIL Máster	893952
TAORI-MVTIIM	Cartucho Original Ricoh 893951/VTIIM Máster	893951
TAORI-VT600	Cartucho Original Ricoh 817101/VT600 Negro	817101
TAORS-IS4671	Cartucho Original Riso S-4671 Cian	S-4671
TAORS-MS132	Cartucho Original Riso S-132 Máster	S-132
TAORS-MS2500	Cartucho Original Riso S-2500 Máster	S-2500
TAORS-MS2632	Cartucho Original Riso S-2632/Z-TYPE87 Máster A3	S-2632
TAORS-MS2659	Cartucho Original Riso S-2659 Máster	S-2659
TAORS-MS3192	Cartucho Original Riso S-3192 Máster A4	S-3192
TAORS-MS3379	Cartucho Original Riso S-3379 Máster A3	S-3379
TAORS-MS3384	Cartucho Original Riso S-3384 Máster A3	S-3384
TAORS-MS4249	Cartucho Original Riso S-4249/Z-TYPE33 Máster B4	S-4249
TAORS-MS4250	Cartucho Original Riso S-4250/Z-TYPE30 Máster A4	S-4250
TAORS-MS4363	Cartucho Original Riso S-4363/Z-TYPE37 Máster	S-4363
TAORS-MS549LA	Cartucho Original Riso S-549LA Máster A4	S-549LA
TAORS-MS568LA	Cartucho Original Riso S-568LA Máster A4	S-568LA
TAORS-MS7609	Cartucho Original Riso S-7609 Máster	S-7609
TAORS-MS7611	Cartucho Original Riso S-7611 Máster	S-7611
TAORS-S2314DP	Cartucho Original Riso S-2314 Negro, Pack Doble	S-2314
TAORS-S2487	Cartucho Original Riso S-2487 Negro	S-2487
TAORS-S3195	Cartucho Original Riso S-3195 Negro	S-3195
TAORS-S3380	Cartucho Original Riso S-3380 Negro	S-3380

TAORS-S3919E	Cartucho Original Riso S-3919E Negro	S-3919E
TAORS-S3975E	Cartucho Original Riso S-3975E Azul	S-3975E
TAORS-S3981E	Cartucho Original Riso S-3981E Azul Medio	S-3981E
TAORS-S4253E	Cartucho Original Riso S-4253E Negro	S-4253E
TAORS-S4257EDP	Cartucho Original Riso S-4257E Cian, Pack Doble	S-4257E
TAORS-S4259EDP	Cartucho Original Riso S-4259E Verde, Pack Doble	S-4259E
TAORS-S4263EDP	Cartucho Original Riso S-4263E Magenta Fotográfico, Pack Doble	S-4263E
TAORS-S4265EDP	Cartucho Original Riso S-4265E Azul Marino, Pack Doble	S-4265E
TAORS-S4267EDP	Cartucho Original Riso S-4267E Púrpura Pack Doble	S-4267E
TAORS-S4275DP	Cartucho Original Riso S-4275/S-7205E Rojo, Pack Doble	S-4275
TAORS-S4279EDP	Cartucho Original Riso S-4279E Amarillo, Pack Doble	S-4279E
TAORS-S4386DP	Cartucho Original Riso S-4386E Negro, Pack Doble	S-4386E
TAORS-S4389E	Cartucho Original Riso S-4389E Verde	S-4389E
TAORS-S4397EDP	Cartucho Original Riso S-4397E Rojo, Pack Doble	S-4397E
TAORS-S4670	Cartucho Original Riso S-4670 Negro	S-4670
TAORS-S4672	Cartucho Original Riso S-4672 Magenta	S-4672
TAORS-S4673	Cartucho Original Riso S-4673 Amarillo	S-4673
TAORS-S4841E	Cartucho Original Riso S-4841E Negro	S-4841E
TAORS-S539	Cartucho Original Riso S-539 Negro	S-539
TAORS-S569	Cartucho Original Riso S-569 Negro	S-569
TAORS-S6300	Cartucho Original Riso S-6300E Negro	S-6300E
TAORS-S7612E	Cartucho Original Riso S-7612E Negro	S-7612E
TAORS-S952	Cartucho Original Riso S-952 Negro	S-952
TAOSA-C210	Cartucho Original Samsung INK-C210/ELS CMY	INK-C210/ELS
TAOSAG-400T	Cartucho Original Sagem DSR400T/251559434 Fotográfico + Papel	DSR400T
TAOSA-M210	Cartucho Original Samsung INK-M210/ELS Negro	INK-M210/ELS
TAOSA-M215	Cartucho Original Samsung INK-M215/ELS Negro	INK-M215/ELS
TAOSA-M40	Cartucho Original Samsung INK-M40/M40 Negro	INK-M40
TAOSA-M40VDP	Cartucho Original Samsung INK-M40V/M40 Negro, Pack Doble	INK-M40V
TAOSA-M41	Cartucho Original Samsung INK-M41/M41 Negro	INK-M41
TAOSA-M41VDP	Cartucho Original Samsung INK-M41V/M41 Negro, Pack Doble	INK-M41V
TAOSH-UXC70B	Cartucho Original Sharp UX-C70B Negro, Cabezal de Impresión	UX-C70B
TAOSH-UXC80B	Cartucho Original Sharp UX-C80B Negro, Cabezal de Impresión	UX-C80B
TAOXE-8R7881	Cartucho Original Xerox 008R07881 Negro	008R07881
TAOXE-IC601	Cartucho Original Xerox IC601 Negro	IC601
TARC-BX20	Sustituye a Cartucho Canon 0896A002/BX-20 Negro	0896A002
TARC-BX20S4	Sustituye a Cartucho Canon 0896A002/BX-20 Negro, Set Ahorro (4 uds.)	0896A002
TARC-BX3	Sustituye a Cartucho Canon 0884A002/BX-3 Negro	0884A002
TARC-BX3DP	Sustituye a Cartucho Canon 0884A002/BX-3 Negro, Pack Doble	0884A002
TARC-CL38	Sustituye a Cartucho Canon 2146B001/CL-38 CMY	2146B001
TARC-CL38S2	Sustituye a Cartucho Canon PG-37/CL-38 BK/CMY, Set Ahorro (2 uds.)	2145B001/2146B01
TARC-CL41	Sustituye a Cartucho Canon 0617B001/CL-41 XXL CMY	0617B001
TARC-CL41S2	Sustituye a Cartucho Canon PG-40/CL-41 XXL BK/CMY, Set Ahorro (2 uds.)	0615B001/0617B001
TARC-CL51	Sustituye a Cartucho Canon 0618B001/CL-51 CMY	0618B001
TARC-CL511	Sustituye a Cartucho Canon 2972B001/CL-511 XXL CMY	2972B001
TARC-CL511S2	Sustituye a Cartucho Canon PG-510/CL-511 BK/CMY, Set Ahorro (2 uds.)	2970B010
TARC-CL513	Sustituye a Cartucho Canon 2971B001/CL-513 CMY	2971B001
TARC-CL513S2	Sustituye a Cartucho Canon PG-512/CL-513 BK/CMY, Set Ahorro (2 uds.)	2969B001/2971B001
TARC-CL541S2	Sustituye a Cartucho Canon PG-540/CL-541 XL BK/CMY, Set Ahorro (2 uds.)	5225B006
TARC-CL541XL	Sustituye a Cartucho Canon 5226B005/CL-541XL CMY	5226B005
TARC-CL545XL	Sustituye a Cartucho Canon 8286B001/PG-545XL Negro	8286B001
TARC-CL546XL	Sustituye a Cartucho Canon 8288B001/CL-546XL CMY	8288B001
TARC-PG37	Sustituye a Cartucho Canon 2145B001/PG-37 Negro	2145B001
TARC-PG40	Sustituye a Cartucho Canon PG-40/PG-50 Negro	0615B001
TARC-PG510	Sustituye a Cartucho Canon 2970B001/PG-510 Negro XXL	2970B001
TARC-PG510DP	Sustituye a Cartucho Canon PG-510 XXL Negro, Pack Doble	2970B001
TARC-PG512	Sustituye a Cartucho Canon 2969B001/PG-512 Negro	2969B001
TARC-PG540XL	Sustituye a Cartucho Canon 5222B005/PG-540XL Negro	5222B005
TARDL-7Y743	Sustituye a Cartucho Dell 592-10043/7Y743 Negro	592-10043
TARDL-7Y745	Sustituye a Cartucho Dell 592-10045/7Y745 CMY	592-10045
TARDL-7Y745S2	Sustituye a Cartucho Dell 7Y743/7Y745 BK/CMY, Set Ahorro (2 uds.)	592-10043/592-10045
TARDL-CH883	Sustituye a Cartucho Dell 592-10226/CH883 XXL Negro	592-10226
TARDL-CH884	Sustituye a Cartucho Dell 592-10227/CH884 XXL CMY	592-10227
TARDL-KX701	Sustituye a Cartucho Dell 592-10278/KX701 XXL Negro	592-10278
TARDL-KX703	Sustituye a Cartucho Dell 592-10279/KX703 XXL CMY	592-10279
TARDL-KX703S2	Sustituye a Cartucho Dell KX701/KX703 XXL BK/CMY, Set Ahorro (2 uds.)	592-10278/592-10279
TARDL-M4640	Sustituye a Cartucho Dell 592-10092/M4640 Negro	592-10092
TARDL-M4646	Sustituye a Cartucho Dell 592-10091/M4646 CMY	592-10091
TARDL-M4646S2	Sustituye a Cartucho Dell M4640/M4646 BK/CMY, Set Ahorro (2 uds.)	592-10091/92
TARDL-MK992	Sustituye a Cartucho Dell 592-10211/MK992 XXL Negro	592-10211
TARDL-MK992S2	Sustituye a Cartucho Dell MK992/MK993 BK/CMY, Set Ahorro (2 uds.)	592-10211

TARDL-MK993	Sustituye a Cartucho Dell 592-10212/MK993 XXL CMY	592-10212
TARDL-T0529	Sustituye a Cartucho Dell 592-10039/T0529 Negro	592-10039
TARDL-T0530	Sustituye a Cartucho Dell 592-10040/T0530 CMY	592-10040
TARDL-T0530S2	Sustituye a Cartucho Dell T0529/T0530 BK/CMY, Set Ahorro (2 uds.)	592-10039/592-10040
TARH-04A	Sustituye a Cartucho HP 51604A Negro	51604A
TARH-100LG	Sustituye a Cartucho HP No 100/C9368AE Gris Fotográfico	C9368AE
TARH-10B	Sustituye a Cartucho HP No 10/C4844AE Negro	C4844AE
TARH-10BDP	Sustituye a Cartucho HP No 10/C4844AE Negro, Pack Doble	C4844AE
TARH-10C	Sustituye a Cartucho HP C4841AE/No 10 Cian	C4841AE
TARH-10M	Sustituye a Cartucho HP C4843AE/No 10 Magenta	C4843AE
TARH-10S4	Sustituye a Cartucho HP C4844AE-C4841AE/No 10 CMYK, Set Ahorro (4 uds.)	C4841-C4844
TARH-10Y	Sustituye a Cartucho HP C4842AE/No 10 Amarillo	C4842AE
TARH-110	Sustituye a Cartucho HP CB304AE/No 110 CMY	CB304AE
TARH-11C	Sustituye a Cartucho HP C4836A/No 11 Cian	C4836AE
TARH-11M	Sustituye a Cartucho HP C4837A/No 11 Magenta	C4837AE
TARH-11S3	Sustituye a Cartucho HP No 11 CMY, Set Ahorro (3 uds.)	C4836AE-C4838AE
TARH-11Y	Sustituye a Cartucho HP No 11/C4838A Amarillo	C4838AE
TARH-12C	Sustituye a Cartucho HP C4804A/No 12 Cian	C4804A
TARH-12M	Sustituye a Cartucho HP C4805A/No 12 Magenta	C4805A
TARH-12Y	Sustituye a Cartucho HP C4806A/No 12 Amarillo	C4806A
TARH-14B	Sustituye a Cartucho HP C5011DE/No 14 Negro	C5011DE
TARH-14CL	Sustituye a Cartucho HP C5010DE/No 14 CMY	C5010DE
TARH-14S2	Sustituye a Cartucho HP C5011-10DE/No 14 BK/CMY, Set Ahorro (2 uds.)	C5010DE/C5011DE
TARH-15	Sustituye a Cartucho HP No 15/C6615DE Negro	C6615DE
TARH-15S2	Sustituye a Cartucho HP No 15/No 78 BK/CMY, Set Ahorro (2 uds.)	SA310AE
TARH-17	Sustituye a Cartucho HP No 17/C6625AE CMY	C6625AE
TARH-20	Sustituye a Cartucho HP C6614DE/No 20 Negro	C6614DE
TARH-21	Sustituye a Cartucho HP No 21/C9351CE Negro XXL	C9351CE
TARH-21DP	Sustituye a Cartucho HP SD366AE/No 21 XXL Negro, Pack Doble	SD366AE
TARH-21S2	Sustituye a Cartucho HP No 21/No 22 BK/CMY, Set Ahorro (2 uds.)	SD367AE445
TARH-21S3	Sustituye a Cartucho HP No 21/No 22 BK/CMY, Set Ahorro (3 uds.)	SD400AE
TARH-22	Sustituye a Cartucho HP No 22/C9352CE XL CMY	C9352CE
TARH-22DP	Sustituye a Cartucho HP No 22/C9352CE XXL CMY, Pack Doble	C9352CE
TARH-23	Sustituye a Cartucho HP No 23/C1823DE CMY	C1823DE
TARH-25	Sustituye a Cartucho HP 51625AE/No 25 CMY	51625AE
TARH-26	Sustituye a Cartucho HP No 26/51626AE Negro	51626AE
TARH-26DP	Sustituye a Cartucho HP No 26/51626AE Negro, Pack Doble	51626AE
TARH-27	Sustituye a Cartucho HP No 27/C8727AE Negro	C8727AE
TARH-27DP	Sustituye a Cartucho HP No 27/C8727AE Negro, Pack Doble	C8727AE
TARH-28	Sustituye a Cartucho HP No 28/C8728AE CMY	C8728AE
TARH-28DP	Sustituye a Cartucho HP No 28/C8728AE CMY, Pack Doble	C8728AE
TARH-29	Sustituye a Cartucho HP No 29/51629AE Negro	51629AE
TARH-300B	Sustituye a Cartucho HP CC641EE/No 300 XXL Negro	CC641EE
TARH-300BCL	Sustituye a Cartucho HP SD518AE/300 XXL BK/CMY, Set Ahorro (3 uds.)	CC641EE
TARH-300CL	Sustituye a Cartucho HP CC644EE/No 300 XXL CMY	CC644EE
TARH-300XLBDP	Sustituye a Cartucho HP D8J43AE/300XL Negro, Pack Doble	D8J43AE
TARH-300XLCLDP	Sustituye a Cartucho HP D8J44AE/300XL CMY, Pack Doble	D8J44AE
TARH-300XLS2	Sustituye a Cartucho HP CN637EE/300 XXL BK/CMY, Set Ahorro (2 uds.)	CC641EE
TARH-301S3	Sustituye a Cartucho HP E5Y87EE/No 301 BK/CMY, Set Ahorro (3 uds.)	E5Y87EE
TARH-301XLB	Sustituye a Cartucho HP CH563EE/301XL Negro	CH563EE
TARH-301XLCL	Sustituye a Cartucho HP CH564EE/301XL CMY	CH564EE
TARH-301XLCLDP	Sustituye a Cartucho HP D8J46AE/301XL CMY, Pack Doble	D8J46AE
TARH-301XLS2	Sustituye a Cartucho HP CH563-64EE/301XL BK/CMY, Set Ahorro (2 uds.)	CH563EE/CH564EE
TARH-302XLB	Sustituye a Cartucho HP F6U68A/302XL Negro	F6U68AE
TARH-302XLCL	Sustituye a Cartucho HP F6U67AE 302XL CMY	F6U67AE
TARH-302XLS2	Sustituye a Cartucho HP F6U68-67AE/302XL BK/CMY, Set Ahorro (2 uds.)	F6U68AE
TARH-336	Sustituye a Cartucho HP No 336/C9362EE Negro	C9362EE
TARH-336DP	Sustituye a Cartucho HP No 336/C9362EE Negro, Pack Doble	C9362EE
TARH-337	Sustituye a Cartucho HP C9364EE/No 337 Negro	C9364EE
TARH-337DP	Sustituye a Cartucho HP C9364EE/No 337 Negro, Pack Doble	C9364EE
TARH-338	Sustituye a Cartucho HP No 338/C8765EE Negro	C8765EE
TARH-338DP	Sustituye a Cartucho HP CB331EE/No 338 Negro, Pack Doble	C8765EE
TARH-339	Sustituye a Cartucho HP C8767EE/No 339 Negro	C8767EE
TARH-339DP	Sustituye a Cartucho HP C9504EE/No 339 Negro, Pack Doble	C8767EE
TARH-342	Sustituye a Cartucho HP No 342/C9361EE CMY	C9361EE
TARH-343	Sustituye a Cartucho HP C8766EE/No 343 CMY	C8766EE
TARH-343DP	Sustituye a Cartucho HP CB332EE/No 343 CMY, Pack Doble	C8766EE
TARH-343S2	Sustituye a Cartucho HP No 338/No 343 BK/CMY, Set Ahorro (2 uds.)	SD449EE
TARH-343S5	Sustituye a Cartucho HP No 338/No 343 BK/CMY, Set Ahorro (5 uds.)	C8765EE
TARH-344	Sustituye a Cartucho HP C9363EE/No 344 CMY	C9363EE
TARH-344DP	Sustituye a Cartucho HP C9505EE/No 344 CMY, Pack Doble	C9505EE

TARH-348	Sustituye a Cartucho HP C9369EE/No 348 Fotográfico	C9369EE
TARH-350XL	Sustituye a Cartucho HP No 350 XL/CB336EE Negro	CB336EE
TARH-351S2	Sustituye a Cartucho HP No 350/No 351 XXL BK/CMY, Set Ahorro (2 uds.)	CB336EE
TARH-351XL	Sustituye a Cartucho HP No 351 XL/CB338EE CMY	CB338EE
TARH-363BP	Sustituye a Cartucho HP No 363/C8721EE XL Negro	C8721EE
TARH-363BXP	Sustituye a Cartucho HP No 363/C8719EE XL Negro	C8719EE
TARH-363C	Sustituye a Cartucho HP No 363/C8771EE Cian	C8771EE
TARH-363M	Sustituye a Cartucho HP No 363/C8772EE Magenta	C8772EE
TARH-363P	Sustituye a Cartucho HP No 363/C8771EE Cian	C8771EE
TARH-363S3	Sustituye a Cartucho HP CB333EE/No 363 CMY, Set Ahorro (3 uds.)	CB333EE
TARH-363XL	Sustituye a Cartucho HP No 363/C8719EE XL Negro	C8719EE
TARH-363XLLC	Sustituye a Cartucho HP No 363/C8774EE XL Cian Fotográfico	C8774EE
TARH-363XLLM	Sustituye a Cartucho HP No 363/C8775EE XL Magenta Fotográfico	C8775EE
TARH-363XLM	Sustituye a Cartucho HP No 363/C8772EE XL Magenta	C8772EE
TARH-363XLS6	Sustituye a Cartucho HP Q7966EE/No 363XL CMYK/LC/LM, Set Ahorro (6 uds.)	Q7966EE
TARH-363Y	Sustituye a Cartucho HP No 363/C8773EE Amarillo	C8773EE
TARH-364XLB	Sustituye a Cartucho HP CN684EE/No 364XL Negro con Chip	CN684EE
TARH-364XLC	Sustituye a Cartucho HP CB323EE/No 364XL Cian con Chip	CB323EE
TARH-364XLC	Sustituye a Cartucho HP CB323EE/No 364XL Cian	CB323EE
TARH-364XLD	Sustituye a Cartucho HP CN684EE/No 364XL Negro, Pack Doble con Chip	CN684EE
TARH-364XLM	Sustituye a Cartucho HP CB324EE/No 364XL Magenta con Chip	CB324EE
TARH-364XLMP	Sustituye a Cartucho HP No 364 XL/CB324EE Magenta	CB324EE
TARH-364XLPB	Sustituye a Cartucho HP CB322EE/No 364XL Negro Fotográfico con Chip	CB322EE
TARH-364XLS10	Sustituye a Cartucho HP No 364 XL 4K/2CMY, Set Ahorro con chip (10 uds.)	CN684EE
TARH-364XLS20	Sustituye a Cartucho HP No 364 XL 5CMYK, Set Ahorro (20 uds.)	CB323EE-CB325EE/CN684EE
TARH-364XLS20PB	Sustituye a Cartucho HP No 364 XL 4PK/4CMYK, Set Ahorro (20 uds.)	CB322EE-CB325EE/CN684EE
TARH-364XLS3	Sustituye a Cartucho HP CH082EE/No 364 XL CMY, Set Ahorro con chip (3 uds.)	CB323EE
TARH-364XLS4	Sustituye a Cartucho HP No 364 XL CMYK, Set Ahorro con chip (4 uds.)	SD534EE
TARH-364XLY	Sustituye a Cartucho HP CB325EE/No 364XL Amarillo con Chip	CB325EE
TARH-364XLYP	Sustituye a Cartucho HP No 364 XL/CB325EE Amarillo	CB325EE
TARH-40B	Sustituye a Cartucho HP 51640AE/No 40 Negro	51640AE
TARH-40BDP	Sustituye a Cartucho HP 51640AE/No 40 Negro, Pack Doble	51640AE
TARH-40C	Sustituye a Cartucho HP 51640CE/No 40 Cian	51640CE
TARH-40M	Sustituye a Cartucho HP 51640ME/No 40 Magenta	51640ME
TARH-40S3	Sustituye a Cartucho HP No 40 CMY, Set Ahorro (3 uds.)	51640
TARH-40Y	Sustituye a Cartucho HP 51640YE/No 40 Amarillo	51640YE
TARH-41	Sustituye a Cartucho HP 51641AE/No 41 CMY	51641AE
TARH-41S2	Sustituye a Cartucho HP No 45/No 41 BK/CMY, Set Ahorro (2 uds.)	51645AE/51641AE
TARH-44C	Sustituye a Cartucho HP 51644CE/No 44 Cian	51644CE
TARH-44M	Sustituye a Cartucho HP 51644ME/No 44 Magenta	51644ME
TARH-44Y	Sustituye a Cartucho HP 51644YE/No 44 Amarillo	51644YE
TARH-45	Sustituye a Cartucho HP No 45/51645AE Negro	51645AE
TARH-45DP	Sustituye a Cartucho HP No 45/51645AE Negro, Pack Doble	51645AE
TARH-45S2	Sustituye a Cartucho HP No 45/No 78 BK/CMY, Set Ahorro (2 uds.)	SA308AE
TARH-49	Sustituye a Cartucho HP No 49/51649AE CMY	51649AE
TARH-54	Sustituye a Cartucho HP CB334AE/No 54 Negro	CB334AE
TARH-56	Sustituye a Cartucho HP No 56/C6656AE Negro	C6656AE
TARH-56DP	Sustituye a Cartucho HP C9502AE/No 56 Negro, Pack Doble	C9502AE
TARH-57	Sustituye a Cartucho HP No 57/C6657AE CMY	C6657AE
TARH-57DP	Sustituye a Cartucho HP C9503AE/No 57 CMY, Pack Doble	C6657AE
TARH-57S2	Sustituye a Cartucho HP No 56/No 57 BK/CMY, Set Ahorro (2 uds.)	C6656AE
TARH-57S3	Sustituye a Cartucho HP No 56/No 57 BK/CMY, Set Ahorro (3 uds.)	C6656AE
TARH-58	Sustituye a Cartucho HP No 58/C6658AE Fotográfico	C6658AE
TARH-62XLB	Sustituye a Cartucho HP C2P05AE/No 62XL Negro	C2P05AE
TARH-62XLCL	Sustituye a Cartucho HP C2P07AE/No 62XL CMY	C2P07AE
TARH-650B	Sustituye a Cartucho HP CZ101AE/No 650XL Negro, Cabezal de Impresión	CZ101AE
TARH-650CL	Sustituye a Cartucho HP CZ102AE/No 650 CMY, Cabezal de Impresión	CZ102AE
TARH-650XLB	Sustituye a Cartucho HP CZ101AE/No 650 XL Negro, Cabezal de Impresión	CZ101AE
TARH-650XLCL	Sustituye a cartucho HP CZ102AE/Nr. 650 XL CMY, Cabezal de Impresión	CZ102AE
TARH-701B	Sustituye a Cartucho HP CC635AE/701 Negro	CC635AE
TARH-70C	Sustituye a Cartucho HP C9452A/No 70 Cian	C9452A
TARH-70M	Sustituye a Cartucho HP C9453A/No 70 Magenta	C9453A
TARH-70MB	Sustituye a Cartucho HP C9448A/No 70 Negro Mate	C9448A
TARH-70Y	Sustituye a Cartucho HP C9454A/No 70 Amarillo	C9454A
TARH-711B	Sustituye a Cartucho HP CZ133A/711 Negro	CZ133A
TARH-711C	Sustituye a Cartucho HP CZ130A/711 Cian	CZ130A
TARH-711M	Sustituye a Cartucho HP CZ131A/711 Magenta	CZ131A
TARH-711S3	Sustituye a Cartucho HP CZ130A-CZ132A/711 CMY, Set Ahorro (3 uds.)	CZ130A-CZ132A
TARH-711S4	Sustituye a Cartucho HP CZ130A-CZ133A/711 CMYK, Set Ahorro (4 uds.)	CZ130A-CZ133A
TARH-711Y	Sustituye a Cartucho HP CZ132A/711 Amarillo	CZ132A
TARH-72C	Sustituye a Cartucho HP C9371A/No 72 Cian	C9371A

TARH-72GY	Sustituye a Cartucho HP C9374A/No 72 Grey	C9374A
TARH-72M	Sustituye a Cartucho HP C9372A/No 72 Magenta	C9372A
TARH-72MB	Sustituye a Cartucho HP C9403A/No 72 Negro Mate	C9403A
TARH-72PB	Sustituye a Cartucho HP C9370A/No 72 Negro Fotográfico	C9370A
TARH-72Y	Sustituye a Cartucho HP C9373A/No 72 Amarillo	C9373A
TARH-78	Sustituye a Cartucho HP No 78/C6578AE CMY	C6578AE
TARH-80B	Sustituye a Cartucho HP C4871A/No 80 Negro	C4871A
TARH-80C	Sustituye a Cartucho HP C4846A/No 80 Cian	C4846A
TARH-80M	Sustituye a Cartucho HP C4847A/No 80 Magenta	C4847A
TARH-80S4	Sustituye a Cartucho HP C4871A/No 80 CMYK, Set Ahorro (4 uds.)	C4846A-C4848A/C4871A
TARH-80Y	Sustituye a Cartucho HP C4848A/No 80 Amarillo	C4848A
TARH-82B	Sustituye a Cartucho HP CH565A/No 82 Negro	CH565A
TARH-82C	Sustituye a Cartucho HP C4911A/No 82 Cian	C4911A
TARH-82M	Sustituye a Cartucho HP C4912A/No 82 Magenta	C4912A
TARH-82S3	Sustituye a Cartucho HP C4911A-C4913A/No 82 CMY, Set Ahorro (3 uds.)	C4911A-C4913A
TARH-82Y	Sustituye a Cartucho HP C4913A/No 82 Amarillo	C4913A
TARH-84B	Sustituye a Cartucho HP C5016A/No 84 Negro	C5016A
TARH-84LC	Sustituye a Cartucho HP C5017A/No 84 Cian Fotográfico	C5017A
TARH-84LM	Sustituye a Cartucho HP C5018A/No 84 Magenta Fotográfico	C5018A
TARH-85C	Sustituye a Cartucho HP C9425A/No 85 Cian	C9425A
TARH-85LC	Sustituye a Cartucho HP C9428A/No 85 Cian Fotográfico	C9428A
TARH-85LM	Sustituye a Cartucho HP C9429A/No 85 Magenta Fotográfico	C9429A
TARH-85M	Sustituye a Cartucho HP C9426A/No 85 Magenta	C9426A
TARH-85-S5	Sustituye a Cartucho HP C942/No 85 CMY/LC/LM, Set Ahorro (5 uds.)	C9425A-C9429A
TARH-85Y	Sustituye a Cartucho HP C9427A/No 85 Amarillo	C9427A
TARH-88XLB	Sustituye a Cartucho HP C9396AE/No 88XL Negro	C9396AE
TARH-88XBDP	Sustituye a Cartucho HP C9396AE/No 88XL Negro, Pack Doble	C9396AE
TARH-88XLC	Sustituye a Cartucho HP C9391AE/No 88XL Cian	C9391AE
TARH-88XLM	Sustituye a Cartucho HP C9392AE/No 88XL Magenta	C9392AE
TARH-88XLS10	Sustituye a Cartucho HP No 88XL 4K/2CMY, Set Ahorro (10 uds.)	C9396AE/CE9391AE-CE9393/
TARH-88XLS22	Sustituye a Cartucho HP No 88XL 7K/5CMY, Set Ahorro (22 uds.)	C9396AE/CE9391AE-CE9393/
TARH-88XLS4	Sustituye a Cartucho HP No 88XL CMYK, Set Ahorro (4 uds.)	C9396AE/C9391AE-C9393AE
TARH-88XLY	Sustituye a Cartucho HP C9393AE/No 88XL Amarillo	C9393AE
TARH-901B	Sustituye a Cartucho HP CC654AE/No 901XL Negro	CC654AE
TARH-901BCL	Sustituye a Cartucho HP No 901XL/No 901 BK/CMY, Set Ahorro (2 uds.)	CC654AE
TARH-901CL	Sustituye a Cartucho HP CC656AE/No 901XL CMY	CC656AE
TARH-920XLB	Sustituye a Cartucho HP CD975AE/No 920XL Negro XXL	CD975AE
TARH-920XBDP	Sustituye a Cartucho HP DBJ47AE/920XL Negro, Pack Doble	DBJ47AE
TARH-920XLC	Sustituye a Cartucho HP CD972AE/No 920XL Cian XXL	CD972AE
TARH-920XLM	Sustituye a Cartucho HP CD973AE/No 920XL Magenta XXL	CD973AE
TARH-920XLS10	Sustituye a Cartucho HP No 920 XL 4K/2CMY, Set Ahorro (10 uds.)	CD972AE-CD975AE
TARH-920XLS3	Sustituye a Cartucho HP CH081AE/No 920XL CMY, Set Ahorro (3 uds.)	CD972AE-CD974AE
TARH-920XLS4	Sustituye a Cartucho HP C2N92AE/No 920XL CMYK, Set Ahorro (4 uds.)	C2N92AE
TARH-920XLY	Sustituye a Cartucho HP CD974AE/No 920XL Amarillo XXL	CD974AE
TARH-932XLB	Sustituye a Cartucho HP CN053AE/932XL Negro	CN053AE
TARH-933XLC	Sustituye a Cartucho HP CN054AE/933XL Cian	CN054AE
TARH-933XLM	Sustituye a Cartucho HP CN055AE/933XL Magenta	CN055AE
TARH-933XLS3	Sustituye a Cartucho HP CR711AE/933XL CMY, Set Ahorro (3 uds.)	CR711AE
TARH-933XLS4	Sustituye a Cartucho HP C2P42AE/No 932XL/No 933XL CMYK, Set Ahorro (4 uds.)	C2P42AE
TARH-933XLY	Sustituye a Cartucho HP CN056AE/933XL Amarillo	CN056AE
TARH-934XL	Sustituye a Cartucho HP No 934XL/C2P23AE Negro	C2P23AE
TARH-935C	Sustituye a Cartucho HP No 935XL/C2P24AE Cian	C2P24AE
TARH-935M	Sustituye a Cartucho HP No 935XL/C2P25AE Magenta	C2P25AE
TARH-935S10	Sustituye a Cartucho HP No 934/935XL 4K/2CMY, Set Ahorro (10 uds.)	C2P23AE
TARH-935S4	Sustituye a Cartucho HP No 934/935XL CMYK, Set Ahorro (4 uds.)	C2P23AE
TARH-935Y	Sustituye a Cartucho HP No 935XL/C2P26AE Amarillo	C2P26AE
TARH-940XLB	Sustituye a Cartucho HP C4906AE/No 940XL Negro con Chip	C4906AE
TARH-940XLBP	Sustituye a Cartucho HP C4906AE/No 940XL Negro	C4906AE
TARH-940XLC	Sustituye a Cartucho HP C4907AE/No 940 XL Cian con Chip	C4907AE
TARH-940XLCP	Sustituye a Cartucho HP C4907AE/No 940XL Cian	C4907AE
TARH-940XLDP	Sustituye a Cartucho HP DBJ48AE/940XL Negro, Pack Doble	DBJ48AE
TARH-940XLM	Sustituye a Cartucho HP C4908AE/No 940XL Magenta con Chip	C4908AE
TARH-940XLMP	Sustituye a Cartucho HP C4908AE/No 940XL Magenta	C4908AE
TARH-940XLS10	Sustituye a Cartucho HP No 940 XL 4K/2CMY, Set Ahorro con chip (10 uds.)	C4906AE-C4909AE
TARH-940XLS18	Sustituye a Cartucho HP No 940 XL 6K/4CMY, Set Ahorro con chip (18 uds.)	C4906AE-C4909AE
TARH-940XLS3	Sustituye a Cartucho HP No 940 XL CMY, Set Ahorro con chip (3 uds.)	CD4906AE-CD4909AE
TARH-940XLS4	Sustituye a Cartucho HP C2N93AE/No 940XL CMYK, Set Ahorro con chip (4 uds.)	C2N93AE
TARH-940XLY	Sustituye a Cartucho HP C4909AE/No 940XL Amarillo con Chip	C4909AE
TARH-950XL	Sustituye a Cartucho HP CN045AE/950XL Negro	CN045AE
TARH-951S10	Sustituye a Cartucho HP C2P43AE/No 950 XL/951 XL 4K/2CMY, Set Ahorro (10 uds.)	C2P43AE
TARH-951S20	Sustituye a Cartucho HP C2P43AE/No 950 XL/951 XL 8K/4CMY, Set Ahorro (10 uds.)	C2P43AE

TARH-951XLC	Sustituye a Cartucho HP CN046AE/951XL Cian	CN046AE
TARH-951XLM	Sustituye a Cartucho HP CN047AE/951XL Magenta	CN047AE
TARH-951XLS3	Sustituye a Cartucho HP CR712AE/No 951XL CMY, Set Ahorro (3 uds.)	CR712AE
TARH-951XLS4	Sustituye a Cartucho HP C2P43AE/No 950XL/No 951XL CMYK, Set Ahorro (4 uds.)	C2P43AE
TARH-951XLY	Sustituye a Cartucho HP CN048AE/951XL Amarillo	CN048AE
TARH-970BLK	Sustituye a Cartucho HP CN625AE/No 970XL Negro	CN625AE
TARH-971XLC	Sustituye a Cartucho HP CN626AE/No 971XL Cian	CN626AE
TARH-971XLM	Sustituye a Cartucho HP CN627AE/No 971XL Magenta	CN627AE
TARH-971XLY	Sustituye a Cartucho HP CN628AE/No 971XL Amarillo	CN628AE
TARH-980B	Sustituye a Cartucho HP D8J10A/980 Negro	D8J10A
TARH-980C	Sustituye a Cartucho HP D8J07A/980 Cian	D8J07A
TARH-980M	Sustituye a Cartucho HP D8J08A/980 Magenta	D8J08A
TARH-980Y	Sustituye a Cartucho HP D8J09A/980 Amarillo	D8J09A
TARL-1	Sustituye a Cartucho Lexmark No 1/018CX781E CMY	018CX781E
TARL-13400	Sustituye a Cartucho Lexmark 13400HCE/M-10/IN-700 Negro	0013400HCE
TARL-14B	Sustituye a cartucho HP Lexmark 018C2090E/NO14 Negro, Cabezal de Impresión	018C2090E
TARL-16	Sustituye a Cartucho Lexmark No 16/No 17 Negro	0010NX217E
TARL-16DP	Sustituye a Cartucho Lexmark No 16/No 17 Negro, Pack Doble	0010NX217E
TARL-1DP	Sustituye a Cartucho Lexmark 0080D2955/No 1 HC CMY, Pack Doble	0080D2955
TARL-20	Sustituye a Cartucho Lexmark No 20/No 25 CMY	0015M0125E
TARL-26	Sustituye a Cartucho Lexmark No 26/No 27 CMY	0010N0026E
TARL-26DP	Sustituye a Cartucho Lexmark No 26/No 27 CMY, Pack Doble	0010N0026E
TARL-26S2	Sustituye a Cartucho Lexmark No 16/17 y No 26/27 BK/CMY, Set Ahorro (2 uds.)	0010NX217E/0010N0026E
TARL-28	Sustituye a Cartucho Lexmark 018C1528E/No 28 Negro	018C1528E
TARL-29CL	Sustituye a Cartucho Lexmark 018C1429E/No 29 CMY	0018C1429E
TARL-31	Sustituye a Cartucho Lexmark 018C0031E/No 31 Fotográfico	0018C0031E
TARL-31DP	Sustituye a Cartucho Lexmark 018C0031E/No 31 Fotográfico, Pack Doble	0018C0031E
TARL-32HC	Sustituye a Cartucho Lexmark 018CX032E/No 32HC XXL Negro	018CX032E
TARL-33HC	Sustituye a Cartucho Lexmark 018CX033E/No 33HC CMY	0018CX033E
TARL-34XL	Sustituye a Cartucho Lexmark 018C0034E/No 34XL Negro	0018C0034E
TARL-35XL	Sustituye a Cartucho Lexmark 018C0035E/No 35XL CMY	0018C0035E
TARL-35XLS4	Sustituye a Cartucho Lexmark No 34XL/No 35XL BK/CMY, Set Ahorro (2 uds.)	0018C0034E/0018C0035E
TARL-43	Sustituye a Cartucho Lexmark 018YX143E/No 43 XXL CMY	018YX143E
TARL-43S2	Sustituye a Cartucho Lexmark No 43/No 44 XXL BK/CMY, Set Ahorro (2 uds.)	018Y0144E/018YX143E
TARL-44	Sustituye a Cartucho Lexmark 018Y0144E/No 44 XXL Negro	018Y0144E
TARL-50	Sustituye a Cartucho Lexmark 017G0050E/No 50 Negro	017G0050E
TARL-60	Sustituye a Cartucho Lexmark 017G0060E/No 60 CMY	0017G0060E
TARL-70	Sustituye a Cartucho Lexmark No 70/No 75/M50 Negro	0012A1975E
TARL-70S3	Sustituye a Cartucho Lexmark No 70/No 75/M50 Negro, Set Ahorro (3 uds.)	0012A1975E
TARL-80	Sustituye a Cartucho Lexmark 012A1980E/No 80 CMY	012A1980E
TARL-80S2	Sustituye a Cartucho Lexmark No 70/No 80 BK/CMY, Set Ahorro (2 uds.)	0012A1975E/012A1980E
TARL-82	Sustituye a Cartucho Lexmark 018L0032E/No 82 Negro	018L0032E
TARL-83	Sustituye a Cartucho Lexmark 018LX042E/No 83HC XXL CMY	018LX042E
TARN-IS420D	Sustituye a Cartucho Neopost 7210585J/IS-420 DE Azul para Franqueo (Alemania)	7210585J
TARN-IS420F	Sustituye a Cartucho Neopost 7210585J FR Azul para Franqueo (Francia)	7210585J
TARN-NJ35	Sustituye a Cartucho Neopost NJ35/01NC354678/16900035 Azul para Franqueo	01NC354678
TARN-NJ65	Sustituye a Cartucho Neopost NJ65/01NC354679/16900036 Azul para Franqueo	01NC354679
TAROL-FPJ20	Sustituye a Cartucho Olivetti B0384/FPJ20 Negro	B0384
TARPH-PFA421	Sustituye a Cartucho Philips PFA421/906115308009 Negro	PFA421
TARPH-PFA431	Sustituye a Cartucho Philips PFA431/906115308019 Negro	PFA431
TARPH-PFA431DP	Sustituye a Cartucho Philips PFA431/906115308019 Negro, Pack Doble	PFA431
TARSA-M40	Sustituye a Cartucho Samsung INK-M40/M40 Negro	INK-M40
TARSA-M40DP	Sustituye a Cartucho Samsung INK-M40V/M40 Negro, Pack Doble	INK-M40
TARSA-M41	Sustituye a Cartucho Samsung INK-M41/M41 Negro	INK-M41
TARSA-M41DP	Sustituye a Cartucho Samsung INK-M41/M41 Negro, Pack Doble	INK-M41V
TARSH-UXC70B	Sustituye a Cartucho Sharp UX-C70B Negro	UX-C70B
KPOBCL-CR2	Unidad de Limpieza Original Brother CR-2CL/26934	CR-2CL
KPOBCL-CR3	Unidad de Limpieza Original Brother CR-3CL	CR-3CL
KPOBFK-194	TAT de Fusor Original Brother LJ1940001	LJ1940001
KPOBFK-215	TAT de Fusor Original Brother LU0215001	LU0215001
KPOBFK-410	TAT de Fusor Original Brother LU4104001	LU4104001
KPOBFK-716	TAT de Fusor Original Brother LJ7162001	LJ7162001
KPOBFK-8000	TAT de Fusor Original Brother FP-8000	FP-8000
KPOBFK-FP4	TAT de Fusor Original Brother FP-4CL	FP-4CL
KPOBTB-100	Cinturón de Transferencia Original Brother BU-100CL	BU-100CL
KPOBTB-200	Cinturón de Transferencia Original Brother BU-200CL	BU-200CL
KPOBTB-220	Cinturón de Transferencia Original Brother BU-220CL	BU-220CL
KPOBTB-300	Cinturón de Transferencia Original Brother BU-300CL	BU-300CL
KPOBTB-320	Cinturón de Transferencia Original Brother BU-320CL	BU-320CL
KPOBWT-100	Depósito de Tóner Residual Original Brother WT-100CL	WT-100CL
KPOBWT-2	Depósito de Tóner Residual Original Brother WT-2CL/26937	WT-2CL

KPOBWT-200	Depósito de Tóner Residual Original Brother WT-200CL	WT-200CL
KPOBWT-220	Depósito de Tóner Residual Original Brother WT-220CL	WT-220CL
KPOBWT-300	Depósito de Tóner Residual Original Brother WT-300CL	WT-300CL
KPOBWT-320	Depósito de Tóner Residual Original Brother WT-320CL	WT-320CL
KPOBWT-4	Depósito de Tóner Residual Original Brother WT-4CL	WT-4CL
KPOCDU-ADFP2	ADF P2 Unidad Dúplex Original Canon DADFP2	0415B006AA
KPOCMK-1	TAt de Mantenimiento Original Canon 9004A005/MC01	9004A005
KPOCMK-10	TAt de Mantenimiento Original Canon 1320B014/MC10	1320B014
KPOCMK-16	TAt de Mantenimiento Original Canon 1320B010/MC16	1320B010
KPOCMK-4	TAt de Mantenimiento Original Canon 0170B003/MC04	0170B003
KPOCMK-5	TAt de Mantenimiento Original Canon 1320B003/MC05	1320B003
KPOCMK-7	TAt de Mantenimiento Original Canon 1320B008/MC07	1320B008
KPOCMK-8	TAt de Mantenimiento Original Canon 1320B006/MC08	1320B006
KPOCMK-9	TAt de Mantenimiento Original Canon 1320B012/MC09	1320B012
KPOCSW-250	Cartucho de Grapas Original Canon 0250A013	0250A013
KPOCSW-6707	Cartucho de Grapas Original Canon 6707A001/J1	6707A001
KPOCWI-300	Depósito de Tinta Residual Original Canon 8124A002/WTX300	8124A002
KPOCWT-3338	Depósito de Tóner Residual Original Canon 3338B003/WT723	3338B003
KPOCWT-361	Depósito de Tóner Residual Original Canon 0361B009/WT98C	0361B009
KPOCWT-9549	Depósito de Tóner Residual Original Canon 9549B002	9549B002
KPOCWT-FG68992	Depósito de Tóner Residual Original Canon FG6-8992-020	FG6-8992-020
KPOCWT-FM2083	Depósito de Tóner Residual Original Canon FM2-0083-000	FM2-0083-000
KPOCWT-FM25383	Depósito de Tóner Residual Original Canon FM25-383-000	FM25-383-000
KPOCWT-FM25533	Depósito de Tóner Residual Original Canon FM25-533-000	FM25-533-000
KPOCWT-FM35945	Depósito de Tóner Residual Original Canon FM3-5945-010	FM3-5945-010
KPOCWT-FM38137	Depósito de Tóner Residual Original Canon FM3-8137-000	FM3-8137-000
KPOCWT-FY97006	Depósito de Tóner Residual Original Canon FY9-006-020	FY9-006-020
KPODLFK-724071	TAt de Fusor Original Dell 724-10071	724-10071
KPODLFK-724072	TAt de Fusor Original Dell 724-10072/U592F	724-10072
KPODLFK-724230	TAt de Fusor Original Dell 72410230	724-10230
KPODLFK-724BBNL	TAt de Fusor Original Dell 724-BBNL/H87JH	724-BBNL
KPODLMK-593BBEL	TAt de Mantenimiento Original Dell 593BBEL/W8W01	593-BBEL
KPODLTB-59310931	Cinturón de Transferencia Original Dell 593-10931	593-10931
KPODLTR-59310107	Rodillo de Transferencia Original Dell 593-10107/J6343	593-10107
KPODLWT-59310503	Depósito de Tóner Residual Original Dell 593-10503/H681K	593-10503
KPODLWT-59310874	Depósito de Tóner Residual Original Dell 593-10874/1HKN6	593-10874
KPODLWT-59310930	Depósito de Tóner Residual Original Dell 593-10930/J353R	593-10930
KPODLWT-593BBE1	Depósito de Tóner Residual Original Dell 742-10355/M20HF	593-BBE1
KPODLWT-724BBNF	Depósito de Tóner Residual Original Dell 724BBNF/WHD04	724-BBNF
KPODVDU-89362160	Revelador Original Develop 8936-2160-00/8936 214/TYPE 104	8936-2160-00
KPODVDU-89364520	Revelador Original Develop 8936-4520-00/TYPE 106	8936-4520-00
KPODVDU-A0TK13	Revelador Original Develop A0TK13H/DV612	A0TK13H
KPODVDU-A0XV13	Revelador Original Develop A0XV13D/DV311 Negro	A0XV13D
KPODVDU-A0XV18	Revelador Original Develop A0XV18D/DV311 Cian	A0XV18D
KPODVDU-A0XV1E	Revelador Original Develop A0XV1ED/DV311 Magenta	A0XV1ED
KPODVDU-A0XV1KP	Revelador Original Develop A0XV1KD/DV311 Amarillo	A0XV1KD
KPODVDU-A202561	Revelador Original Develop A202561/DV411 Negro	A202561
KPODVDU-A2XN18	Revelador Original Develop A2XN18H/DV512Y Amarillo	A2XN18H
KPODVWT-A7XWWWY2	Depósito de Tóner Residual Original Develop A7XWWWY2/WX-104	A7XWWWY2
KPOEFK-3003	TAt de Fusor Original Epson C13S053003	C13S053003
KPOEFK-3012	TAt de Fusor Original Epson C13S053012	C13S053012
KPOEFK-3017	TAt de Fusor Original Epson C13S053017	C13S053017
KPOEFK-3021	TAt de Fusor Original Epson C13S053021/3021	C13S053021
KPOEFK-3023	TAt de Fusor Original Epson C13S053023/3023	C13S053023
KPOEFK-3025	TAt de Fusor Original Epson C13S053025/3025	C13S053025
KPOEFK-3038	TAt de Fusor Original Epson C13S053038	C13S053038
KPOEFK-3043	TAt de Fusor Original Epson C13S053043	C13S053043
KPOEFK-3046	TAt de Fusor Original Epson C13S053046/3046	C13S053046
KPOEFK-3049	TAt de Fusor Original Epson C13S053049/3049	C13S053049
KPOEFK-471	TAt de Fusor Original Epson 2090471	2090471
KPOEMK-1199	TAt de Mantenimiento Original Epson C13S051199	C13S051199
KPOEMK-1206	TAt de Mantenimiento Original Epson C13S051206	C13S051206
KPOEMK-3057	TAt de Mantenimiento Original Epson C13S053057/3057	C13S053057
KPOEMK-B3500	TAt de Mantenimiento Original Epson C33S020580/SJMB3500	C33S020580
KPOEMK-C890191	TAt de Mantenimiento Original Epson C12C890191	C12C890191
KPOEMK-GS6000	TAt de Mantenimiento Original Epson C13T623000	C13T623000
KPOEMK-SP7700	TAt de Mantenimiento Original Epson C12C890501	C12C890501
KPOEMK-T2950	TAt de Mantenimiento Original Epson C13T295000/T2950	C13T295000
KPOEMK-T5820	TAt de Mantenimiento Original Epson C13T582000	C13T582000
KPOEMK-T6190	TAt de Mantenimiento Original Epson C13T619000/T6190	C13T619000
KPOEMK-T6191	TAt de Mantenimiento Original Epson C13T619100/T6191	C13T619100

KPOEMK-T6193	TAt de Mantenimiento Original Epson C13T619300/T6193	C13T619300
KPOEMK-T6420	TAt de Mantenimiento Original Epson C13T642000/T6420	C13T642000
KPOEMK-T6710	TAt de Mantenimiento Original Epson C13T671000/T6710	C13T671000
KPOEMK-T6997	TAt de Mantenimiento Original Epson C13T699700	C13T699700
KPOETB-3001	Cinturón de Transferencia Original Epson C13S053001	C13S053001
KPOETB-3022	Cinturón de Transferencia Original Epson C13S053022/3022	C13S053022
KPOETB-3024	Cinturón de Transferencia Original Epson C13S053024/3024	C13S053024
KPOETB-3048	Cinturón de Transferencia Original Epson C13S053048/3048	C13S053048
KPOEWT-101	Depósito de Tóner Residual Original Epson C13S050101	C13S050101
KPOEWT-194	Depósito de Tóner Residual Original Epson C13S050194	C13S050194
KPOEWT-233	Depósito de Tóner Residual Original Epson C13S050233	C13S050233
KPOEWT-478	Depósito de Tóner Residual Original Epson C13S050478	C13S050478
KPOEWT-498	Depósito de Tóner Residual Original Epson C13S050498	C13S050498
KPOEWT-595	Depósito de Tóner Residual Original Epson C13S050595	C13S050595
KPOEWT-610	Depósito de Tóner Residual Original Epson C13S050610/0610	C13S050610
KPOEWT-664	Depósito de Tóner Residual Original Epson C13S050664/0664	C13S050664
KPOEWT-F8000	Depósito de Tóner Residual Original Epson C13T671200/WF 8000	C13T671200
KPOHCL-C8554A	Unidad de Limpieza Original HP C8554A	C8554A
KPOHFK-C411869012	TAt de Fusor Original HP C4118-69012	C4118-69012
KPOHFK-C4198A	TAt de Fusor Original HP C4198A	C4198A
KPOHFK-C426569007	TAt de Fusor Original HP C426569007/RG56533010CN	C426569007
KPOHFK-C8556A	TAt de Fusor Original HP C8556A	C8556A
KPOHFK-C9726A	TAt de Fusor Original HP C9726A	C9726A
KPOHFK-C9736A	TAt de Fusor Original HP C9736A	C9736A
KPOHFK-CB458A	TAt de Fusor Original HP CB458A	CB458A
KPOHFK-CB50667902	TAt de Fusor Original HP CB506-67902	CB506-67902
KPOHFK-CE247A	TAt de Fusor Original HP CE247A	CE247A
KPOHFK-CE978A	TAt de Fusor Original HP CE978A	CE978A
KPOHFK-H397860002	TAt de Fusor Original HP H3978-60002	H3978-60002
KPOHFK-Q186069033	TAt de Fusor Original HP Q186069033	Q186069033
KPOHFK-Q2430A	TAt de Fusor Original HP Q2430A	Q2430A
KPOHFK-Q2437A	TAt de Fusor Original HP Q2437A	Q2437A
KPOHFK-Q3656A	TAt de Fusor Original HP Q3656A	Q3656A
KPOHFK-Q3677A	TAt de Fusor Original HP Q3677A	Q3677A
KPOHFK-Q3985A	TAt de Fusor Original HP Q3985A	Q3985A
KPOHFK-Q7503A	TAt de Fusor Original HP Q7503A	Q7503A
KPOHFK-RG55064	TAt de Fusor Original HP RG5-5064-340CN	RG5-5064-340CN
KPOHFK-RG55569	TAt de Fusor Original HP RG5-5569-110CN	RG5-5569-110CN
KPOHFK-RG56913	TAt de Fusor Original HP RG5-6913-000CN	RG5-6913-000CN
KPOHFK-RG57573	TAt de Fusor Original HP RG5-7573-110CN	RG5-7573-110CN
KPOHFK-RG57603	TAt de Fusor Original HP RG5-7603-080CN	RG5-7603-080CN
KPOHFK-RG91494	TAt de Fusor Original HP RG9-1494-000CN	RG9-1494-000CN
KPOHFK-RM10014	TAt de Fusor Original HP RM1-0014-040CN	RM1-0014-040CN
KPOHFK-RM10355	TAt de Fusor Original HP RM1-0355-050CN	RM1-0355-050CN
KPOHFK-RM11044	TAt de Fusor Original HP RM1-1044-080CN	RM1-1044-080CN
KPOHFK-RM11083	TAt de Fusor Original HP RM1-1083-070CN	RM1-1083-070CN
KPOHFK-RM11821	TAt de Fusor Original HP RM1-1821-080CN	RM1-1821-080CN
KPOHFK-RM11825	TAt de Fusor Original HP RM1-1825-050CN	RM1-1825-050CN
KPOHFK-RM12337	TAt de Fusor Original HP RM1-2337-000CN	RM1-2337-000CN
KPOHFK-RM12743	TAt de Fusor Original HP RM1-2743-180CN	RM1-2743-180CN
KPOHFK-RM13008	TAt de Fusor Original HP RM1-3008-040CN	RM1-3008-040CN
KPOHFK-RM13741	TAt de Fusor Original HP RM1-3741-000CN	RM1-3741-000CN
KPOHFK-RM13761	TAt de Fusor Original HP RM1-3761-000CN	RM1-3761-000CN
KPOHFK-RM16406	TAt de Fusor Original HP RM1-6406-000CN	RM1-6406-000CN
KPOHFK-RM16739	TAt de Fusor Original HP RM1-6739-000CN	RM1-6739-000CN
KPOHFK-RM18073	TAt de Fusor Original HP RM1-8073-000CN	RM1-8073-000CN
KPOHMK-771	TAt de Mantenimiento Original HP CH644A/771	CH644A
KPOHMK-90	TAt de Mantenimiento Original HP C5096A/90	C5096A
KPOHMK-C1N58A	TAt de Mantenimiento Original HP C1N58A	C1N58A
KPOHMK-C3915A	TAt de Mantenimiento Original HP C3915A/C391569004	C3915A
KPOHMK-C8058A	TAt de Mantenimiento Original HP C8058A	C8058A
KPOHMK-C9153A	TAt de Mantenimiento Original HP C9153A	C9153A
KPOHMK-C9518A	TAt de Mantenimiento Original HP C9518A/91	C9518A
KPOHMK-CB389A	TAt de Mantenimiento Original HP CB389A	CB389A
KPOHMK-CE506A	TAt de Mantenimiento Original HP CE506A	CE506A
KPOHMK-CE515A	TAt de Mantenimiento Original HP CE515A	CE515A
KPOHMK-CE732A	TAt de Mantenimiento Original HP CE732A	CE732A
KPOHMK-CF065A	TAt de Mantenimiento Original HP CF065A	CF065A
KPOHMK-CH649A	TAt de Mantenimiento Original HP CH649A/761	CH649A
KPOHMK-H39806	TAt de Mantenimiento Original HP H398060002	H3980-60002
KPOHMK-Q5422A	TAt de Mantenimiento Original HP Q5422A	Q5422A

KPOHMK-Q5997A	TAt de Mantenimiento Original HP Q5997A	Q5997A
KPOHMK-Q5999A	TAt de Mantenimiento Original HP Q5999A	Q5999A
KPOHMK-Q7833A	TAt de Mantenimiento Original HP Q7833A	Q7833A
KPOHMK-U61806	TAt de Mantenimiento Original HP U618060002	U618060002
KPOHSW-C8091A	Cartucho de Grapas Original HP C8091A	C8091A
KPOHSW-C8092A	Cartucho de Grapas Original HP C8092A	C8092A
KPOHSW-Q3216A	Cartucho de Grapas Original HP Q3216A	Q3216A
KPOHSW-Q7432A	Cartucho de Grapas Original HP Q7432A	Q7432A
KPOHTK-C4196A	Transfer TAt Original HP C4196A	C4196A
KPOHTK-C8555A	Transfer TAt Original HP C8555A	C8555A
KPOHTK-C9734A	Transfer TAt Original HP C9734A	C9734A
KPOHTK-C9734B	Transfer TAt Original HP C9734B	C9734B
KPOHTK-CB463A	Transfer TAt Original HP CB463A	CB463A
KPOHTK-CE249A	Transfer TAt Original HP CE249A	CE249A
KPOHTK-CE516A	Transfer TAt Original HP CE516A	CE516A
KPOHTK-Q3658A	Transfer TAt Original HP Q3658A	Q3658A
KPOHTK-Q3675A	Transfer TAt Original HP Q3675A	Q3675A
KPOHTK-Q7504A	Transfer TAt Original HP Q7504A	Q7504A
KPOHTK-RM11885	Transfer TAt Original HP RM1-1885-020CN	RM1-1885-020CN
KPOHTK-RM12752	Transfer TAt Original HP RM1-2752-060CN	RM1-2752-060CN
KPOHTK-RM12759	Transfer TAt Original HP RM1-2759-000CN	RM1-2759-000CN
KPOHTR-CB459A	Rodillo de Transferencia Original HP CB459A	CB459A
KPOHWT-6102764	Depósito de Tóner Residual Original HP 6102764	6102764
KPOHWT-CE254A	Depósito de Tóner Residual Original HP CE254A	CE254A
KPOHWT-CE265A	Depósito de Tóner Residual Original HP CE265A	CE265A
KPOIDU-1402823	Revelador Original IBM 1402823	1402823
KPOIFK-40X0957	TAt de Fusor Original IBM 40X0957	40X0957
KPOIFK-40X1402	TAt de Fusor Original IBM 40X1402	40X1402
KPOIFK-56P0885	TAt de Fusor Original IBM 56P0885	56P0885
KPOIFK-56P2911	TAt de Fusor Original IBM 56P2911	56P2911
KPOIFK-56P9752	TAt de Fusor Original IBM 56P9752	56P9752
KPOIMK-39V2321	TAt de Mantenimiento Original IBM 39V2321	39V2321
KPOIMK-39V2604	TAt de Mantenimiento Original IBM 39V2604	39V2604
KPOIMK-40X0101	TAt de Mantenimiento Original IBM 40X0101	40X0101
KPOITB-56P9694	Cinturón de Transferencia Original IBM 56P9694	56P9694
KPOIWT-39V0384	Depósito de Tóner Residual Original IBM 39V0384	39V0384
KPOIWT-39V2699	Depósito de Tóner Residual Original IBM 39V2699	39V2699
KPOIWT-53P9372	Depósito de Tóner Residual Original IBM 53P9372	53P9372
KPOKMDU-01XL	Revelador Original Konica Minolta 01ZL/950 565	01ZL
KPOKMDU-020Q	Revelador Original Konica Minolta 020Q/DV 510K	020Q
KPOKMDU-024G	Revelador Original Konica Minolta 024G/DV511	024G
KPOKMDU-02XG	Revelador Original Konica Minolta 02XG/DV710	02XG
KPOKMDU-1710202	Revelador Original Konica Minolta 171-0202-001	171-0202-001
KPOKMDU-8935215	Revelador Original Konica Minolta 8935-215/EP101	8935-215
KPOKMDU-8936488	Revelador Original Konica Minolta 8936-488/DV110	8936-488
KPOKMDU-8937852	Revelador Original Konica Minolta 8937-852 Negro	8937-852
KPOKMDU-8937853	Revelador Original Konica Minolta 8937-853 Amarillo	8937-853
KPOKMDU-8937854	Revelador Original Konica Minolta 8937-854 Magenta	8937-854
KPOKMDU-8937855	Revelador Original Konica Minolta 8937-855 Cian	8937-855
KPOKMDU-8938451	Revelador Original Konica Minolta 8938-451 Negro	8938-451
KPOKMDU-A04P600	Revelador Original Konica Minolta A04P600/DV610K Negro	A04P600
KPOKMDU-A04P700	Revelador Original Konica Minolta A04P700/DV610Y Amarillo	A04P700
KPOKMDU-A04P800	Revelador Original Konica Minolta A04P800/DV610M Magenta	A04P800
KPOKMDU-A04P900	Revelador Original Konica Minolta A04P900/DV610C Cian	A04P900
KPOKMDU-A0TH500	Revelador Original Konica Minolta A0TH500/DV011	A0TH500
KPOKMDU-A0TK03D	Revelador Original Konica Minolta A0TK03D/DV612K Negro	A0TK03D
KPOKMDU-A0XV03D	Revelador Original Konica Minolta A0XV03D/DV311K Negro	A0XV03D
KPOKMDU-A0XV08D	Revelador Original Konica Minolta A0XV08D/DV311Y Amarillo	A0XV08D
KPOKMDU-A0XV0ED	Revelador Original Konica Minolta A0XV0ED/DV311M Magenta	A0XV0ED
KPOKMDU-A0XV0KD	Revelador Original Konica Minolta A0XV0KD/DV311C Cian	A0XV0KD
KPOKMDU-A1UC550	Revelador Original Konica Minolta A1UC550/DV116	A1UC550
KPOKMDU-A202500	Revelador Original Konica Minolta A202500/DV411	A202500
KPOKMDU-A2X208D	Revelador Original Konica Minolta A2X208D/IU711Y Amarillo	A2X208D
KPOKMDU-A2X20ED	Revelador Original Konica Minolta A2X20ED/IU711M Magenta	A2X20ED
KPOKMDU-A2X20KD	Revelador Original Konica Minolta A2X20KD/IU711C Cian	A2X20KD
KPOKMDU-A2XN03D	Revelador Original Konica Minolta A2XN03D/DV512K Negro	A2XN03D
KPOKMDU-A2XN08D	Revelador Original Konica Minolta A2XN08D/DV512Y Amarillo	A2XN08D
KPOKMDU-A2XN0ED	Revelador Original Konica Minolta A2XN0ED/DV512M Magenta	A2XN0ED
KPOKMDU-A2XN0KD	Revelador Original Konica Minolta A2XN0KD/DV512C Cian	A2XN0KD
KPOKMDU-A63X03V	Revelador Original Konica Minolta A63X03V/IUP16	A63X03V
KPOKMDU-A6W903W	Revelador Original Konica Minolta A6W903W/IUP18	A6W903W

KPOKMDU-A7U403D	Revelador Original Konica Minolta A7U403D/DV-313K Negro	DV-313K
KPOKMDU-A7U408D	Revelador Original Konica Minolta A7U408D/DV-313Y Amarillo	A7U408D
KPOKMDU-A7U40ED	Revelador Original Konica Minolta A7U40ED/DV-313M Magenta	A7U40ED
KPOKMDU-A7U40KD	Revelador Original Konica Minolta A7U40KD/DV-313C Cian	A7U40KD
KPOKMDU-A7Y003D	Revelador Original Konica Minolta A7Y003D/DV-312K Negro	A7Y003D
KPOKMDU-A85Y03D	Revelador Original Konica Minolta A85Y03D/DV-512K Negro	A85Y03D
KPOKMFK-366	TAT de Fusor Original Konica Minolta 9960A171 0366 001	9960A171-0366-001
KPOKMFK-4039R74011	TAT de Fusor Original Konica Minolta 4039R74011	4039R74011
KPOKMFK-4049522	TAT de Fusor Original Konica Minolta 4049522	4049522
KPOKMFK-4138R70100	TAT de Fusor Original Konica Minolta 4138R70100	4138R70100
KPOKMFK-495	TAT de Fusor Original Konica Minolta 9960A171 0495 002	9960A171-0495-002
KPOKMFK-555	TAT de Fusor Original Konica Minolta 9960A171 0555 002	9960A171-0555-002
KPOKMFK-9J06R70700	TAT de Fusor Original Konica Minolta 9J06R70700	9J06R70700
KPOKMFK-A00JR722	TAT de Fusor Original Konica Minolta A00JR72200	A00JR72200
KPOKMFK-A02ER721	TAT de Fusor Original Konica Minolta A02ER721000	A02ER721000
KPOKMFK-A06X0Y5	TAT de Fusor Original Konica Minolta A06X0Y5	A06X0Y5
KPOKMFK-A0P0R734	TAT de Fusor Original Konica Minolta A0P0R73400	A0P0R73400
KPOKMFK-A12J021	TAT de Fusor Original Konica Minolta A12J021	A12J021
KPOKMFK-A12J022	TAT de Fusor Original Konica Minolta A12J022	A12J022
KPOKMFK-A148021	TAT de Fusor Original Konica Minolta A148021	A148021
KPOKMMK-A0FMOY1	TAT de Mantenimiento Original Konica Minolta A0FMOY1	A0FMOY1
KPOKMTB-1710592	Cinturón de Transferencia Original Konica Minolta 171-0592-001	171-0592-001
KPOKMTB-4038R74	Cinturón de Transferencia Original Konica Minolta 4038R74300	4038R74300
KPOKMTB-4049212	Cinturón de Transferencia Original Konica Minolta 4049-212	4049-212
KPOKMTB-494	Cinturón de Transferencia Original Konica Minolta 9960A171 0494 001	9960A171-0494-001
KPOKMTB-9J06R704	Cinturón de Transferencia Original Konica Minolta 9J06R70400 C352	9J06R70400
KPOKMTB-A00JR714	Cinturón de Transferencia Original Konica Minolta A00JR71400	A00JR71400
KPOKMTB-A02ER7300	Cinturón de Transferencia Original Konica Minolta A02ER73000	A02ER73000
KPOKMTB-A02ER7301	Cinturón de Transferencia Original Konica Minolta A02ER73011	A02ER73011
KPOKMTB-A02ER7302	Cinturón de Transferencia Original Konica Minolta A02ER73022	A02ER73022
KPOKMTR-AJR71500	Rodillo de Transferencia Original Konica Minolta A00JR71500	A00JR71500
KPOKMWT-1710190	Depósito de Tóner Residual Original Konica Minolta 171-0190-001	171-0190-001
KPOKMWT-1710584	Depósito de Tóner Residual Original Konica Minolta 171-0584-001	171-0584-001
KPOKMWT-1710593	Depósito de Tóner Residual Original Konica Minolta 171-0593-001	171-0593-001
KPOKMWT-368	Depósito de Tóner Residual Original Konica Minolta 9960A171 0368 001	9960A171-0368-001
KPOKMWT-4039R71	Depósito de Tóner Residual Original Konica Minolta 4039R71600	4039R71600
KPOKMWT-4049111	Depósito de Tóner Residual Original Konica Minolta 4049-111	4049-111
KPOKMWT-4049411	Depósito de Tóner Residual Original Konica Minolta 4049-411	4049-411
KPOKMWT-4065611	Depósito de Tóner Residual Original Konica Minolta 4065-611	4065-611
KPOKMWT-4065621	Depósito de Tóner Residual Original Konica Minolta 4065-621	4065-621
KPOKMWT-4697104	Depósito de Tóner Residual Original Konica Minolta 4697-104	4697-104
KPOKMWT-A02ER7130	Depósito de Tóner Residual Original Konica Minolta A02ER71300	A02ER71300
KPOKMWT-A06X0Y0	Depósito de Tóner Residual Original Konica Minolta A06X0Y0	A06X0Y0
KPOKMWT-A06X0Y1	Depósito de Tóner Residual Original Konica Minolta A06X0Y1	A06X0Y1
KPOKMWT-A06X0Y2	Depósito de Tóner Residual Original Konica Minolta A06X0Y2	A06X0Y2
KPOKMWT-A06X0Y4	Depósito de Tóner Residual Original Konica Minolta A06X0Y4	A06X0Y4
KPOKMWT-A0ATWY0	Depósito de Tóner Residual Original Konica Minolta A0ATWY0	A0ATWY0
KPOKMWT-A0D0YA	Depósito de Tóner Residual Original Konica Minolta A0D0YA	A0D0YA
KPOKMWT-A0DTWY0	Depósito de Tóner Residual Original Konica Minolta A0DTWY0	A0DTWY0
KPOKMWT-A0EDR716	Depósito de Tóner Residual Original Konica Minolta A0EDR71600	A0EDR71600
KPOKMWT-A0P0R7001	Depósito de Tóner Residual Original Konica Minolta A0P0R70011	A0P0R70011
KPOKMWT-A0XPWY1	Depósito de Tóner Residual Original Konica Minolta A0XPWY1	A0XPWY1
KPOKMWT-A1480Y1	Depósito de Tóner Residual Original Konica Minolta A1480Y1	A1480Y1
KPOKMWT-A1480Y2	Depósito de Tóner Residual Original Konica Minolta A1480Y2	A1480Y2
KPOKMWT-A162WY1	Depósito de Tóner Residual Original Konica Minolta A162WY1	A162WY1
KPOKMWT-A1AU0Y1	Depósito de Tóner Residual Original Konica Minolta A1AU0Y1	A1AU0Y1
KPOKMWT-A1AU0Y3	Depósito de Tóner Residual Original Konica Minolta A1AU0Y3	A1AU0Y3
KPOKMWT-A4NNWY1	Depósito de Tóner Residual Original Konica Minolta A4NNWY1/WX 103	A4NNWY1
KPOKMWT-A4Y5WY1	Depósito de Tóner Residual Original Konica Minolta A0DTWY0	A4Y5WY1
KPOKYDU-11	Revelador Original Kyocera 5PLPZQ4APKE/DV11	5PLPZQ4APKE
KPOKYDU-110	Revelador Original Kyocera 302FV93020/DV110	302FV93020
KPOKYDU-130	Revelador Original Kyocera 302HS93021/DV130	302HS93021
KPOKYDU-140	Revelador Original Kyocera 302H593011/DV140	302H593011
KPOKYDU-160	Revelador Original Kyocera 302LY93010/DV160	302LY93010
KPOKYDU-170	Revelador Original Kyocera 302LZ93010/DV170	302LZ93010
KPOKYDU-2AR86	Revelador Original Kyocera 2AR86010	2AR86010
KPOKYDU-3100	Revelador Original Kyocera 302LV93080/DV-3100	302LV93080
KPOKYDU-320E	Revelador Original Kyocera 302F993020/DV320E	302F993020
KPOKYDU-340	Revelador Original Kyocera 302J093020/DV340	302J093020
KPOKYDU-350	Revelador Original Kyocera 302J193010/DV350	302J193010
KPOKYDU-360	Revelador Original Kyocera 302J293010/DV360	302J293010

KPOKYDU-370	Revelador Original Kyocera 370AE100	370AE100
KPOKYDU-37016	Revelador Original Kyocera 37016100	37016100
KPOKYDU-37026	Revelador Original Kyocera 37026100	37026100
KPOKYDU-37045	Revelador Original Kyocera 37045110	37045110
KPOKYDU-37089	Revelador Original Kyocera 37089110	37089110
KPOKYDU-510B	Revelador Original Kyocera 302F393022/DV510K Negro	302F393022
KPOKYDU-510C	Revelador Original Kyocera 2F393041/DV510C Cian	2F393041
KPOKYDU-510M	Revelador Original Kyocera 2F393051/DV510M Magenta	2F393051
KPOKYDU-510Y	Revelador Original Kyocera 2F393031/DV510Y Amarillo	2F393031
KPOKYDU-540B	Revelador Original Kyocera 302HL93010/DV540K Negro	302HL93010
KPOKYDU-540C	Revelador Original Kyocera 302HL93030/DV540C Cian	302HL93030
KPOKYDU-540M	Revelador Original Kyocera 302HL93040/DV540M Magenta	302HL93040
KPOKYDU-560B	Revelador Original Kyocera 302HN93010/DV560K Negro	302HN93010
KPOKYDU-560C	Revelador Original Kyocera 302HN93030/DV560C Cian	302HN93030
KPOKYDU-560M	Revelador Original Kyocera 302HN93040/DV560M Magenta	302HN93040
KPOKYDU-62	Revelador Original Kyocera 5PLPXCVPKX/DV62	5PLPXCVPKX
KPOKYDU-67	Revelador Original Kyocera 5PLPXZLAPKX/DV67	5PLPXZLAPKX
KPOKYFK-101	TAt de Fusor Original Kyocera 302FM93015/FK101	302FM93015
KPOKYFK-310	TAt de Fusor Original Kyocera 302F893033/FK310	302F893033
KPOKYFK-3100	TAt de Fusor Original Kyocera 302MS93074/FK-3100	302MS93074
KPOKYFK-3130	TAt de Fusor Original Kyocera 302LV93114/FK-3130	302LV93114
KPOKYFK-350	TAt de Fusor Original Kyocera 302J193050/FK350	302J193050
KPOKYFK-540	TAt de Fusor Original Kyocera 302HL93150/FK540	302HL93150
KPOKYFK-560	TAt de Fusor Original Kyocera 302HN93070/FK560	302HN93070
KPOKYMK-1130	TAt de Mantenimiento Original Kyocera MK1130	1702MJ0NLO
KPOKYMK-1140	TAt de Mantenimiento Original Kyocera 1702ML0NLO/MK1140	1702ML0NLO
KPOKYMK-130	TAt de Mantenimiento Original Kyocera 1702H98EU0/MK130	1702H98EU0
KPOKYMK-160	TAt de Mantenimiento Original Kyocera 1702LY8NLO/MK160	1702LY8NLO
KPOKYMK-170	TAt de Mantenimiento Original Kyocera 1702LZ8NLO/MK170	1702LZ8NLO
KPOKYMK-310	TAt de Mantenimiento Original Kyocera 1702F88EU0/MK310	1702F88EU0
KPOKYMK-3130	TAt de Mantenimiento Original Kyocera 1702MT8NLO/MK3130	1702MT8NLO
KPOKYMK-320	TAt de Mantenimiento Original Kyocera 1702F98EU0/MK320	1702F98EU0
KPOKYMK-340	TAt de Mantenimiento Original Kyocera 1702J08EU0/MK340	1702J08EU0
KPOKYMK-350	TAt de Mantenimiento Original Kyocera MK350	1702J18EU0
KPOKYMK-3502	TAt de Mantenimiento Original Kyocera 1702LX8NLO/MK350	1702LX8NLO
KPOKYMK-360	TAt de Mantenimiento Original Kyocera 1702J28EU0/MK360	1702J28EU0
KPOKYMK-410	TAt de Mantenimiento Original Kyocera 2C982010/MK410	2C982010
KPOKYMK-420	TAt de Mantenimiento Original Kyocera 1702FT8NLO/MK420	1702FT8NLO
KPOKYMK-440	TAt de Mantenimiento Original Kyocera 1702F78EU0/MK-440	1702F78EU0
KPOKYMK-450	TAt de Mantenimiento Original Kyocera 1702J58EU0/MK-450	1702J58EU0
KPOKYMK-460	TAt de Mantenimiento Original Kyocera 1702KH0UN0/MK460	1702KH0UN0
KPOKYMK-475	TAt de Mantenimiento Original Kyocera 1702K38NLO/MK475	1702K38NLO
KPOKYMK-5140	TAt de Mantenimiento Original Kyocera 1702NR8NLO/MK-5140	1702NR8NLO
KPOKYMK-5150	TAt de Mantenimiento Original Kyocera 1702NS8NLO/MK-5150	1702NS8NLO
KPOKYMK-550	TAt de Mantenimiento Original Kyocera 1702HM3EU0/MK550	1702HM3EU0
KPOKYMK-560	TAt de Mantenimiento Original Kyocera 1702HN3EU0/MK560	1702HN3EU0
KPOKYMK-570	TAt de Mantenimiento Original Kyocera 1702HG8EU0/MK570	1702HG8EU0
KPOKYMK-580	TAt de Mantenimiento Original Kyocera 1702K88NLO/MK-580	1702K88NLO
KPOKYMK-590	TAt de Mantenimiento Original Kyocera 1702KV8NLO/MK590	1702KV8NLO
KPOKYMK-6305	TAt de Mantenimiento Original Kyocera 1702LH8KLO/MK-6305	1702LH8KLO
KPOKYMK-650	TAt de Mantenimiento Original Kyocera 072FB8NL/MK650A	072FB8NL
KPOKYMK-67	TAt de Mantenimiento Original Kyocera 2FP93080/MK67	2FP93080
KPOKYMK-671	TAt de Mantenimiento Original Kyocera 1702K58NLO/MK671	1702K58NLO
KPOKYMK-702	TAt de Mantenimiento Original Kyocera 2FJ82020/MK702	2FJ82020
KPOKYMK-703	TAt de Mantenimiento Original Kyocera 2FH82030/MK703	2FH82030
KPOKYMK-705E	TAt de Mantenimiento Original Kyocera 2BJ82080/MK705E	2BJ82080
KPOKYMK-706E	TAt de Mantenimiento Original Kyocera 2FD82030/MK706E	2FD82030
KPOKYMK-707E	TAt de Mantenimiento Original Kyocera 2FG82030/MK707E	2FG82030
KPOKYMK-710	TAt de Mantenimiento Original Kyocera 1702G13EU0/MK710	1702G13EU0
KPOKYMK-715	TAt de Mantenimiento Original Kyocera 1702GN8NLO/MK715	1702GN8NLO
KPOKYMK-716	TAt de Mantenimiento Original Kyocera 1702GR8NLO/MK716	1702GR8NLO
KPOKYMK-8505C	TAt de Mantenimiento Original Kyocera 1702LC0UN2/MK-8505C	1702LC0UN2
KPOKYMK-865B	TAt de Mantenimiento Original Kyocera MK865B	MK865B
KPOKYMK-895B	TAt de Mantenimiento Original Kyocera 1702K00UN0/MK	1702K00UN0
KPOKYMK-PU100	TAt de Mantenimiento Original Kyocera 2DC93037/2DC93038/PU100	2DC93037
KPOKYTB-590	Cinturón de Transferencia Original Kyocera 302KV93070/TR-590	302KV93070
KPOKYWT-100	Depósito de Tóner Residual Original Kyocera 305JK70010/WT100	305JK70010
KPOKYWT-20	Depósito de Tóner Residual Original Kyocera 5PLPZWKAPKE/TB20	5PLPZWKAPKE
KPOKYWT-330	Depósito de Tóner Residual Original Kyocera 302F994090	302F994090
KPOKYWT-500	Depósito de Tóner Residual Original Kyocera 2D993240/WT500	2D993240
KPOKYWT-5190	Depósito de Tóner Residual Original Kyocera 1902R60UN0/WT-5190	1902R60UN0

KPOKYWT-560	Depósito de Tóner Residual Original Kyocera 302HN93180	302HN93180
KPOKYWT-570	Depósito de Tóner Residual Original Kyocera 302HG93140/WT570	302HG93140
KPOKYWT-60	Depósito de Tóner Residual Original Kyocera 302DH68012/TB60	302DH68012
KPOKYWT-700A	Depósito de Tóner Residual Original Kyocera 2BL93130/TB700	2BL93130
KPOKYWT-700B	Depósito de Tóner Residual Original Kyocera 302BL93131	302BL93131
KPOKYWT-710	Depósito de Tóner Residual Original Kyocera 302FZ00700	302FZ00700
KPOKYWT-860	Depósito de Tóner Residual Original Kyocera 1902LC0UN0/WT860	1902LC0UN0
KPOKYWT-94420	Depósito de Tóner Residual Original Kyocera 302H794420	302H794420
KPOKYWT-KPM4530	Depósito de Tóner Residual Original Kyocera 2BC60010	2BC60010
KPOLCK-C92035X	TAT de Revestimiento Original Lexmark 00C92035X	00C92035X
KPOLCR-99A1017	Rodillo de Carga Original Lexmark 99A1017	99A1017
KPOLDU-700D1	Revelador Original Lexmark 70C0D10/700D1 Negro	70C0D10
KPOLDU-700D2	Revelador Original Lexmark 70C0D20/700D2 Cian	70C0D20
KPOLDU-700D3	Revelador Original Lexmark 70C0D30/700D3 Magenta	70C0D30
KPOLDU-700D4	Revelador Original Lexmark 70C0D40/700D4 Amarillo	70C0D40
KPOLDU-72K0D10	Revelador Original Lexmark 72K0D10 Negro	72K0D10
KPOLDU-72K0D20	Revelador Original Lexmark 72K0D20 Cian	72K0D20
KPOLDU-72K0D30	Revelador Original Lexmark 72K0D30 Magenta	72K0D30
KPOLDU-72K0D40	Revelador Original Lexmark 72K0D40 Amarillo	72K0D40
KPOLDU-72K0DC0	Revelador Original Lexmark 72K0DC0 Cian RP	72K0DC0
KPOLDU-72K0DK0	Revelador Original Lexmark 72K0DK0 Negro RP	72K0DK0
KPOLDU-72K0DM0	Revelador Original Lexmark 72K0DM0 Magenta	72K0DM0
KPOLDU-72K0DV0	Revelador Original Lexmark 72K0DV0 CMY RP	72K0DV0
KPOLDU-72K0DY0	Revelador Original Lexmark 72K0DY0 Amarillo	72K0DY0
KPOLDU-C540X31G	Revelador Original Lexmark 0C540X31G Negro	0C540X31G
KPOLDU-C540X32G	Revelador Original Lexmark 0C540X32G Cian	0C540X32G
KPOLDU-C540X33G	Revelador Original Lexmark 0C540X33G Magenta	0C540X33G
KPOLDU-C540X34G	Revelador Original Lexmark 0C540X34G Amarillo	0C540X34G
KPOLDV-74C0D20	Revelador Original Lexmark 74C0D20 Cian	74C0D20
KPOLDV-74C0D30	Revelador Original Lexmark 74C0D30 Magenta	74C0D30
KPOLDV-74C0D40	Revelador Original Lexmark 74C0D40 Amarillo	74C0D40
KPOLFK-12G4185	TAT de Fusor Original Lexmark 12G4185	12G4185
KPOLFK-12G6302	TAT de Fusor Original Lexmark 12G6302	12G6302
KPOLFK-40X1832	TAT de Fusor Original Lexmark 40X1832	40X1832
KPOLFK-40X1871	TAT de Fusor Original Lexmark 40X1871	40X1871
KPOLFK-40X2590	TAT de Fusor Original Lexmark 40X2590	40X2590
KPOLFK-40X3570	TAT de Fusor Original Lexmark SP/LE	40X3570
KPOLFK-40X3748	TAT de Fusor Original Lexmark 40X3748	40X3748
KPOLFK-40X5094	TAT de Fusor Original Lexmark 40X5094	40X5094
KPOLFK-40X5345	TAT de Fusor Original Lexmark 40X5345	40X5345
KPOLFK-40X6093	TAT de Fusor Original Lexmark 40X6093	40X6093
KPOLFK-40X8421	TAT de Fusor Original Lexmark 40X8421	40X8421
KPOLFK-56P2544	TAT de Fusor Original Lexmark 56P2544	56P2544
KPOLFK-56P2852	TAT de Fusor Original Lexmark 56P2852	56P2852
KPOLFK-99A1661	TAT de Fusor Original Lexmark 99A1661	99A1661
KPOLFK-99A2401	TAT de Fusor Original Lexmark 99A2401	99A2401
KPOLFK-C500X29G	TAT de Fusor Original Lexmark 0C500X29G	0C500X29G
KPOLMK-12G6497	TAT de Mantenimiento Original Lexmark 12G6497	12G6497
KPOLMK-400662	TAT de Mantenimiento Original Lanier 400662	400662
KPOLMK-40X0101	TAT de Mantenimiento Original Lexmark 40X0101	40X0101
KPOLMK-40X5401	TAT de Mantenimiento Original Lexmark 40X5401	40X5401
KPOLMK-56P9903	TAT de Mantenimiento Original Lexmark 56P9903	56P9903
KPOLMK-99A1196	TAT de Mantenimiento Original Lexmark 99A1196	99A1196
KPOLMK-99A1763	TAT de Mantenimiento Original Lexmark 99A1763	99A1763
KPOLMK-99A1765	TAT de Mantenimiento Original Lexmark 99A1765	99A1765
KPOLMK-99A2407	TAT de Mantenimiento Original Lexmark 99A2407	99A2407
KPOLMK-99A2410	TAT de Mantenimiento Original Lexmark 99A2410	99A2410
KPOLMK-99A2421	TAT de Mantenimiento Original Lexmark 99A2421	99A2421
KPOLSW-11K3188	Cartucho de Grapas Original Lexmark 11K3188	11K3188
KPOLTB-40X1401	Cinturón de Transferencia Original Lexmark 40X1401	40X1401
KPOLTB-40X3572	Cinturón de Transferencia Original Lexmark 40X3572/C53X	40X3572
KPOLTB-40X6401	Cinturón de Transferencia Original Lexmark 40X6401	40X6401
KPOLTB-56P2848	Cinturón de Transferencia Original Lexmark 56P2848	56P2848
KPOLTB-99A1015	Cinturón de Transferencia Original Lexmark 99A1015	99A1015
KPOLWT-0010B3100	Depósito de Tóner Residual Original Lexmark 0010B3100	0010B3100
KPOLWT-00C52025X	Depósito de Tóner Residual Original Lexmark 00C52025X	00C52025X
KPOLWT-020K0505	Depósito de Tóner Residual Original Lexmark 020K0505	020K0505
KPOLWT-0C500X27G	Depósito de Tóner Residual Original Lexmark 0C500X27G	0C500X27G
KPOLWT-0C540X75G	Depósito de Tóner Residual Original Lexmark 0C540X75G	0C540X75G
KPOLWT-0C734X77G	Depósito de Tóner Residual Original Lexmark 0C734X77G	0C734X77G
KPOLWT-0C930X76G	Depósito de Tóner Residual Original Lexmark 0C930X76G	0C930X76G

KPOLWT-54G0W00	Depósito de Tóner Residual Original Lexmark 54G0W00	54G0W00
KPOLWT-72K0W00	Depósito de Tóner Residual Original Lexmark 72K0W00	72K0W00
KPOLWT-74C0W00	Depósito de Tóner Residual Original Lexmark 74C0W00	74C0W00
KPOLWT-C792X77G	Depósito de Tóner Residual Original Lexmark C792X77G	C792X77G
KPOLWT-C925X76G	Depósito de Tóner Residual Original Lexmark C925X76G	C925X76G
KPOLWT-C950X76G	Depósito de Tóner Residual Original Lexmark C950X76G	C950X76G
KPONAWT-406043	Depósito de Tóner Residual Original Nashuatec 406043/TYPER220	406043
KPONRDU-3013	Revelador Original NRG B223-3013 Negro	B223-3013
KPONRDU-3023	Revelador Original NRG B223-3023 Magenta	B223-3023
KPONRDU-3033	Revelador Original NRG B223-3033 Cian	B223-3033
KPONRDU-3043	Revelador Original NRG B223-3043 Amarillo	B223-3043
KPOOCMK-29952216	TAt de Mantenimiento Original OCE 299.52.216	299.52.216
KPOOKDU-9004020	Revelador Original OTA 9004020	9004020
KPOOKFK-42931703	TAt de Fusor Original OTA 42931703	42931703
KPOOKFK-43363203	TAt de Fusor Original OTA 43363203	43363203
KPOOKFK-43377003	TAt de Fusor Original OTA 43377003	43377003
KPOOKFK-43377103	TAt de Fusor Original OTA 43377103	43377103
KPOOKFK-43529405	TAt de Fusor Original OTA 43529405	43529405
KPOOKFK-43853103	TAt de Fusor Original OTA 43853103	43853103
KPOOKFK-43854903	TAt de Fusor Original OTA 43854903	43854903
KPOOKFK-44289103	TAt de Fusor Original OTA 44289103	44289103
KPOOKFK-44472603	TAt de Fusor Original OTA 44472603	44472603
KPOOKFK-44848805	TAt de Fusor Original OTA 44848805	44848805
KPOOKFK-44848806	TAt de Fusor Original OTA 44848806	44848806
KPOOKFK-45380003	TAt de Fusor Original OTA 45380003	45380003
KPOOKFK-45531113	TAt de Fusor Original OTA 45531113	45531113
KPOOKFK-604KP28540	TAt de Fusor Original OTA 604K28540	604K28540
KPOOKMK-45435104	TAt de Mantenimiento Original OTA 45435104	45435104
KPOOKSW-42937603	Cartucho de Grapas Original OTA 42937603	42937603
KPOOTAB-41945503	Cinturón de Transferencia Original OTA 41945503	41945503
KPOOTAB-42158712	Cinturón de Transferencia Original OTA 42158712	42158712
KPOOTAB-42931603	Cinturón de Transferencia Original OTA 42931603	42931603
KPOOTAB-43363412	Cinturón de Transferencia Original OTA 43363412	43363412
KPOOTAB-43378002	Cinturón de Transferencia Original OTA 43378002	43378002
KPOOTAB-43449705	Cinturón de Transferencia Original OTA 43449705	43449705
KPOOTAB-44341902	Cinturón de Transferencia Original OTA 44341902	44341902
KPOOTAB-44472202	Cinturón de Transferencia Original OTA 44472202	44472202
KPOOTAB-44846204	Cinturón de Transferencia Original OTA 44846204	44846204
KPOOTAB-45381102	Cinturón de Transferencia Original OTA 45381102	45381102
KPOOTAB-45531213	Cinturón de Transferencia Original OTA 45531213	45531213
KPOOKWT-42869403	Depósito de Tóner Residual Original OTA 42869403	42869403
KPOOKWT-45531503	Depósito de Tóner Residual Original OTA 45531503	45531503
KPOOLDU-B0345	Revelador Original Olivetti B0345	B0345
KPOOLDU-B0849	Revelador Original Olivetti B0849 Amarillo	B0849
KPOOLDU-B0850	Revelador Original Olivetti B0850 Magenta	B0850
KPOOLDU-B0851	Revelador Original Olivetti B0851 Cian	B0851
KPOOLMK-B0447	TAt de Mantenimiento Original Olivetti B0447	B0447
KPOOLMK-B0827	Depósito de Tóner Residual Original Olivetti B0827	B0827
KPOOLWT-B0880	Depósito de Tóner Residual Original Olivetti B0880	B0880
KPOOLWT-B0899	Depósito de Tóner Residual Original Olivetti B0899	B0899
KPOOLWT-B0935	Depósito de Tóner Residual Original Olivetti B0935	B0935
KPOOLWT-B0989	Depósito de Tóner Residual Original Olivetti B0989	B0989
KPOPADU-DQZ120E	Revelador Original Panasonic DQZ120E	DQ-Z120E
KPOPADU-DQZ240R	Revelador Original Panasonic DQZ240R	DQZ240R
KPOPADU-DQZ60J	Revelador Original Panasonic DQZ60J	DQ-Z60J
KPOPADU-DQZN480B	Revelador Original Panasonic DQZN480K Negro	DQZN480K
KPOPADU-DQZN480C	Revelador Original Panasonic DQZN480C Cian	DQZN480C
KPOPADU-DQZN480M	Revelador Original Panasonic DQZN480M Magenta	DQZN480M
KPOPADU-DQZN480Y	Revelador Original Panasonic DQZN480Y Amarillo	DQZN480Y
KPOPADU-FQZKP10	Revelador Original Panasonic FQZK10	FQ-ZK10
KPOPADU-FQZKP20	Revelador Original Panasonic FQZK20	FQ-ZK20
KPOPADU-KXPDP2	Revelador Original Panasonic KXPDP2	KX-PDP2
KPOPAWT-DQBFN45	Depósito de Tóner Residual Original Panasonic DQBFN45	DQBFN45
KPOPAWT-KPXF505	Depósito de Tóner Residual Original Panasonic KXF505	KX-FAW505
KPORIDU-400661	Revelador Original Ricoh 400661/TYPED	400661
KPORIDU-400961	Revelador Original Ricoh 400961/TYPEB	400961
KPORIDU-400962	Revelador Original Ricoh 400962/TYPED	400962
KPORIDU-402306	Revelador Original Ricoh 402306/PMK7300B0 CMY	402306
KPORIDU-885281	Revelador Original Ricoh 885281/TYPE24	885281
KPORIDU-888002	Revelador Original Ricoh 888002/TYPE15	888002
KPORIDU-888073	Revelador Original Ricoh 888073/TYPE18	888073

KPORIDU-888095	Revelador Original Ricoh 888095/TYPE19	888095
KPORIDU-888114	Revelador Original Ricoh 888114/TYPE16W	888114
KPORIDU-888190	Revelador Original Ricoh 888190/TYPE26	888190
KPORIDU-888224	Revelador Original Ricoh 888224/888220/B1219640/TYPE28	888224
KPORIDU-B1163011	Revelador Original Ricoh B1163011 Negro	B1163011
KPORIDU-B1163013	Revelador Original Ricoh B1163013 Magenta	B1163013
KPORIDU-B1163014	Revelador Original Ricoh B1163014 Amarillo	B1163014
KPORIDU-B1259640	Revelador Original Ricoh B1259640/TYPE30W	B1259640
KPORIDU-B1540152	Revelador Original Ricoh B1540152	B1540152
KPORIDU-B1540155	Revelador Original Ricoh B1540155 Cian	B1540155
KPORIDU-B2309640	Revelador Original Ricoh B2309640 Negro	B2309640
KPORIDU-B2309660	Revelador Original Ricoh B2309660 Cian	B2309660
KPORIDU-B2309670	Revelador Original Ricoh B2309670 Magenta	B2309670
KPORIDU-B2309680	Revelador Original Ricoh B2309680 Amarillo	B2309680
KPORIDU-B2349640	Revelador Original Ricoh B2349640/TYPE27WDK	B234-9640
KPORIDU-B2969640	Revelador Original Ricoh B2969640/TYPE4500	B2969640
KPORIDU-D0239640	Revelador Original Ricoh D0239640 Negro	D0239640
KPORIDU-D0239660	Revelador Original Ricoh D0239660 Cian	D0239660
KPORIDU-D0239670	Revelador Original Ricoh D0239670 Magenta	D0239670
KPORIDU-D0239680	Revelador Original Ricoh D0239680 Amarillo	D0239680
KPORIDU-D0819640	Revelador Original Ricoh D0819640 Negro	D0819640
KPORIDU-D0819660	Revelador Original Ricoh D0819660 Cian	D0819660
KPORIDU-D0819670	Revelador Original Ricoh D0819670 Magenta	D0819670
KPORIDU-D0819680	Revelador Original Ricoh D0819680 Amarillo	D0819680
KPORIDU-D8093001	Revelador Original Ricoh D8093001/G0335	D8093001
KPORIFK-400549	TAt de Fusor Original Ricoh 3800G	400549
KPORIFK-400589	TAt de Fusor Original Ricoh 400589/TYPEC	400589
KPORIFK-400720	TAt de Fusor Original Ricoh 400720/TYPE5000	400720
KPORIFK-400845	TAt de Fusor Original Ricoh 400845/TYPE125	400845
KPORIFK-400877	TAt de Fusor Original Ricoh 400877	400877
KPORIFK-400878	TAt de Fusor Original Ricoh 400878	400878
KPORIFK-402451	TAt de Fusor Original Ricoh 402451/TYPE165	402451
KPORIFK-402719	TAt de Fusor Original Ricoh 402719	402719
KPORIFK-403119	TAt de Fusor Original Ricoh 403119	403119
KPORIFK-406795	TAt de Fusor Original Ricoh 406795	406795
KPORIFK-411744	TAt de Fusor Original Ricoh 411744	411744
KPORIFK-B2374054	TAt de Fusor Original Ricoh B2374054	B2374054
KPORIMK-400548	TAt de Mantenimiento Original Ricoh 400548 TAt	400548
KPORIMK-400951	TAt de Mantenimiento Original Ricoh 400951/DMK400000	400951
KPORIMK-402322	TAt de Mantenimiento Original Ricoh 402322	402322
KPORIMK-402347	TAt de Mantenimiento Original Ricoh 402347/AP610	402347
KPORIMK-402594	TAt de Mantenimiento Original Ricoh 402594	402594
KPORIMK-402816	TAt de Mantenimiento Original Ricoh 402816	402816
KPORIMK-406068	TAt de Mantenimiento Original Ricoh 406068	406068
KPORIMK-406687	TAt de Mantenimiento Original Ricoh 406687/SP 5200	406687
KPORIMK-430378	TAt de Mantenimiento Original Ricoh 430378	430378
KPORISW-410802	Cartucho de Grapas Original Ricoh 410802/TYPEK	410802
KPORITB-400846	Cinturón de Transferencia Original Ricoh 400846/TYPE125	400846
KPORITB-402452	Cinturón de Transferencia Original Ricoh 402452/TYPE165	402452
KPORITB-402717	Cinturón de Transferencia Original Ricoh 402717	402717
KPORITB-403117	Cinturón de Transferencia Original Ricoh 403117	403117
KPORITB-406664	Cinturón de Transferencia Original Ricoh 406664	406664
KPORITB-407097	Cinturón de Transferencia Original Ricoh 407097	407097
KPORITB-420246	Cinturón de Transferencia Original Ricoh 420246	420246
KPORIWI-405660	Depósito de Tinta Residual Original Ricoh 405660	405660
KPORIWI-405661	Depósito de Tinta Residual Original Ricoh 405661	405661
KPORIWI-405662	Depósito de Tinta Residual Original Ricoh 405662	405662
KPORIWI-405663	Depósito de Tinta Residual Original Ricoh 405663	405663
KPORIWI-405700	Depósito de Tinta Residual Original Ricoh 405700	405700
KPORIWI-405714	Depósito de Tinta Residual Original Ricoh 405714	405714
KPORIWI-405783	Depósito de Tinta Residual Original Ricoh 405783/IC-41	405783
KPORIWT-400662	Depósito de Tóner Residual Original Ricoh 400662	400662
KPORIWT-402075	Depósito de Tóner Residual Original Ricoh 402075/TYPE140	402075
KPORIWT-402324	Depósito de Tóner Residual Original Ricoh 402324	402324
KPORIWT-402450	Depósito de Tóner Residual Original Ricoh 402450/TYPE165	402450
KPORIWT-402716	Depósito de Tóner Residual Original Ricoh 402716	402716
KPORIWT-406043	Depósito de Tóner Residual Original Ricoh 406043/TYPE 220	406043
KPORIWT-406066	Depósito de Tóner Residual Original Ricoh 406066	406066
KPORIWT-406665	Depósito de Tóner Residual Original Ricoh 406665	406665
KPORIWT-407100	Depósito de Tóner Residual Original Ricoh 407100	407100
KPORIWT-420131	Depósito de Tóner Residual Original Ricoh 420131/TYPE 155	420131

KPORIWT-B0512100	Depósito de Tóner Residual Original Ricoh B0512100/TYPE1	B0512100
KPORIWT-B2236510	Depósito de Tóner Residual Original Ricoh B2236510	B2236510
KPORIWT-B2236542	Depósito de Tóner Residual Original Ricoh B2236542	B2236542
KPORIWT-D0296509	Depósito de Tóner Residual Original Ricoh D0296509	D0296509
KPORIWT-D0396405	Depósito de Tóner Residual Original Ricoh D0396405	D0396405
KPOSAFK-JC9100971A	TAT de Fusor Original Samsung JC9100971A	JC9100971A
KPOSAFK-JC910966A	TAT de Fusor Original Samsung JC91-00966A	JC91-00966A
KPOSAFK-JC910978A	TAT de Fusor Original Samsung JC91-00978A	JC91-00978A
KPOSAFK-JC962693B	TAT de Fusor Original Samsung JC96-02693B	JC96-02693B
KPOSAFK-JC962813A	TAT de Fusor Original Samsung JC96-02813A	JC96-02813A
KPOSAFK-JC963891A	TAT de Fusor Original Samsung JC96-03891A	JC96-03891A
KPOSAFK-JC964389B	TAT de Fusor Original Samsung JC96-04389B	JC96-04389B
KPOSAFK-JC964545A	TAT de Fusor Original Samsung JC96-04545A	JC96-04545A
KPOSAFK-JC965491B	TAT de Fusor Original Samsung JC96-05491B	JC96-05491B
KPOSASW-SCXSTP	Cartucho de Grapas Original Samsung SCX-STP000/SEE	SCX-STP000/SEE
KPOSATB-CLPT660B	Cinturón de Transferencia Original Samsung CLP-T660B	CLP-T660B
KPOSATB-CLTT508	Cinturón de Transferencia Original Samsung CLT-T508	CLT-T508
KPOSATB-CLTT609S	Cinturón de Transferencia Original Samsung CLT-T609S/SEE	CLT-T609S
KPOSATB-JC964840C	Cinturón de Transferencia Original Samsung JC96-04840C	JC96-04840C
KPOSATB-JC966292A	Cinturón de Transferencia Original Samsung JC96-06292A	JC96-06292A
KPOSATB-JC9703046A	Cinturón de Transferencia Original Samsung JC9703046A	JC9703046A
KPOSAWT-406	Depósito de Tóner Residual Original Samsung CLT-W406/SEE	CLT-W406/SEE
KPOSAWT-409	Depósito de Tóner Residual Original Samsung CLT-W409	CLT-W409
KPOSAWT-504	Depósito de Tóner Residual Original Samsung CLT-W504	CLT-W504
KPOSAWT-506	Depósito de Tóner Residual Original Samsung CLT-W506	CLT-W506
KPOSAWT-659	Depósito de Tóner Residual Original Samsung CLT-W659/SEE/W659	CLT-W659/SEE
KPOSAWT-706	Depósito de Tóner Residual Original Samsung MLT-W706	MLT-W706
KPOSAWT-708	Depósito de Tóner Residual Original Samsung MLTW708/SEE	MLT-W708
KPOSAWT-709	Depósito de Tóner Residual Original Samsung MLT-W709/SEE	MLT-W709/SEE
KPOSAWT-806	Depósito de Tóner Residual Original Samsung CLT-W806/SEE	CLT-W806
KPOSAWT-808	Depósito de Tóner Residual Original Samsung CLT-W808/SEE	CLT-W808
KPOSAWT-809	Depósito de Tóner Residual Original Samsung CLT-W809/SEE	CLT-W809/SEE
KPOSAWT-8380A	Depósito de Tóner Residual Original Samsung CLX-W8380A	CLX-W8380A
KPOSAWT-CLT606	Depósito de Tóner Residual Original Samsung CLT-W606	CLT-W606
KPOSAWT-MLT606	Depósito de Tóner Residual Original Samsung MLT-W606/SEE	MLT-W606/SEE
KPOSHCL-MX410WC	Unidad de Limpieza Original Sharp MX-410WC	MX-410WC
KPOSHDU-AR152DL	Revelador Original Sharp AR-152LD	AR-152LD
KPOSHDU-AR202DV	Revelador Original Sharp AR-202DV	AR-202DV
KPOSHDU-AR270LD	Revelador Original Sharp AR-270LD	AR-270LD
KPOSHDU-AR450LD	Revelador Original Sharp AR-450LD	AR-450LD
KPOSHDU-AR455LD	Revelador Original Sharp AR-455LD	AR-455LD
KPOSHDU-AR620LD	Revelador Original Sharp AR-620LD	AR-620LD
KPOSHDU-C38GVB	Revelador Original Sharp MX-C38GVB Negro	MX-C38GVB
KPOSHDU-C38GVC	Revelador Original Sharp MX-C38GVC Cian	MX-C38GVC
KPOSHDU-C38GVM	Revelador Original Sharp MX-C38GVM Magenta	MX-C38GVM
KPOSHDU-C38GVY	Revelador Original Sharp MX-C38GVY Amarillo	MX-C38GVY
KPOSHDU-MX205LD	Revelador Original Sharp AR-205DV	AR-205LD
KPOSHDU-MX208LD	Revelador Original Sharp AR-208LD	AR-208LD
KPOSHDU-MX27GVBA	Revelador Original Sharp MX-27GVBA	MX-27GVBA
KPOSHDU-MX27GVSA	Revelador Original Sharp MX-27GVSA CMY	MX-27GVSA
KPOSHDU-MX312ND	Revelador Original Sharp MX-312ND	MX-312ND
KPOSHDU-MX31GVBA	Revelador Original Sharp MX-31	MX-31GVBA
KPOSHDU-MX31GVSA	Revelador Original Sharp MX-31GVSA	MX-31GVSA
KPOSHDU-MX36GVBA	Revelador Original Sharp MX-36GVBA	MX-36GVBA
KPOSHDU-MX36GVSA	Revelador Original Sharp MX-36GVSA CMY	MX-36GVSA
KPOSHDU-MX500GV	Revelador Original Sharp MX-500GV	MX-500GV
KPOSHDU-MX51GVBA	Revelador Original Sharp MX-51GVBA	MX-51GVBA
KPOSHDU-MX51GVSA	Revelador Original Sharp MX-51GVSA CMY	MX-51GVSA
KPOSHDU-MX560GV	Revelador Original Sharp MX-560	MX-560GV
KPOSHDU-MX753GV	Revelador Original Sharp MX-753GV	MX-753GV
KPOSHDU-MX850GV	Revelador Original Sharp MX-850GV	MX-850GV
KPOSHMK-AR451KA	TAT de Mantenimiento Original Sharp AR-451KA	AR-451KA
KPOSHMK-AR620KA	TAT de Mantenimiento Original Sharp AR-620KA	AR-620KA
KPOSHTB-MX270B1	TAT de Transferencia Primario Original Sharp MX-270B1	MX-270B1
KPOSHTB-MX270B2	TAT de Transferencia Secundario Original Sharp MX-270B2	MX-270B2
KPOSHTB-MX450B1	Cinturón de Transferencia Original Sharp MX-450B1	MX-450B1
KPOSHWT-MX230HB	Depósito de Tóner Residual Original Sharp MX-230HB	MX-230HB
KPOSHWT-MX270HB	Depósito de Tóner Residual Original Sharp MX-270HB	MX-270HB
KPOSHWT-MX310HB	Depósito de Tóner Residual Original Sharp MX310HB	MX-310HB
KPOSHWT-MX503HB	Depósito de Tóner Residual Original Sharp MX-503HB	MX-503HB
KPOSHWT-MX510HB	Depósito de Tóner Residual Original Sharp MX-510HB	MX-510HB

KPOSHWT-MXC31HB	Depósito de Tóner Residual Original Sharp MX-C31HB	MX-C31HB
KPOTAFK-43626	TAT de Fusor Original Tally Genicom 43626	43626
KPOTAMK-43850	TAT de Mantenimiento Original Tally Genicom 43850	43850
KPOTAWT-43007	Depósito de Tóner Residual Original Tally Genicom 43007	43007
KPOTSDU-6LE201851	Revelador Original Toshiba 6LE20185100/D-FC35M Magenta	6LE20185100
KPOTSDU-6LJ048110	Revelador Original Toshiba 6LJ04811000 Amarillo	6LJ04811000
KPOTSDU-6LJ048111	Revelador Original Toshiba 6LJ04811100 Magenta	6LJ04811100
KPOTSDU-6LJ048112	Revelador Original Toshiba 6LJ04811200 Cian	6LJ04811200
KPOTSDU-6LJ048113	Revelador Original Toshiba 6LJ04811300 Negro	6LJ04811300
KPOTSDU-D2320	Revelador Original Toshiba 6LA27715000/D2320	6LA27715000
KPOTSDU-D3500	Revelador Original Toshiba 44295004000/D3500	44295004000
KPOTSDU-D3511B	Revelador Original Toshiba 6LA27227000/D3511K Negro	6LA27227000
KPOTSDU-D3511C	Revelador Original Toshiba 6LA27230000/D3511C Cian	6LA27230000
KPOTSDU-D3511M	Revelador Original Toshiba 6LA27229000/D3511M Magenta	6LA27229000
KPOTSDU-D3511Y	Revelador Original Toshiba 6LA27228000/D3511Y Amarillo	6LA27228000
KPOTSDU-D4530	Revelador Original Toshiba 6LH58317000/D4530	6LH58317000
KPOTSDU-D6000	Revelador Original Toshiba 6LE19277000/D6000	6LE19277000
KPOTSDU-DFC28EB	Revelador Original Toshiba 6LE98164300/D-FC28EK Negro	6LE98164300
KPOTSDU-DFC28EC	Revelador Original Toshiba 6LE98164200/D-FC28EC Cian	6LE98164200
KPOTSDU-DFC30B	Revelador Original Toshiba 6LJ70384300/D-FC30K Negro	6LJ70384300
KPOTSDU-DFC35KP	Revelador Original Toshiba 6LE20185300/D-FC35K Negro	6LE20185300
KPOTSWT-2460	Depósito de Tóner Residual Original Toshiba 66089164/TB2460	66089164
KPOTSWT-281C	Depósito de Tóner Residual Original Toshiba 6AR00000230/6AG000000846/TB281C	6AR00000230
KPOTSWT-3500	Depósito de Tóner Residual Original Toshiba 66089634/TB3500	66089634
KPOTSWT-3520	Depósito de Tóner Residual Original Toshiba 6AG00000148/TB3520	6AG00000148
KPOTSWT-6550E	Depósito de Tóner Residual Original Toshiba 2231227/TB6550E	2231227
KPOTSWT-FC28E	Depósito de Tóner Residual Original Toshiba 6AG00002039/TBFC28E	6AG00002039
KPOTSWT-FC30E	Depósito de Tóner Residual Original Toshiba 6AG00004479/TBFC30E	6AG00004479
KPOTSWT-FC30P	Depósito de Tóner Residual Original Toshiba 6B000000756/TBFC30P/Depósito	6B000000756
KPOTSWT-FC35E	Depósito de Tóner Residual Original Toshiba 6AG00001615/6AG0001515/TBFC35E	6AG00001615
KPOTSWT-FC50E	Depósito de Tóner Residual Original Toshiba 6AG00005101/TBFC50E	6AG00005101
KPOTSWT-FC55	Depósito de Tóner Residual Original Toshiba 6AG00002332/TBFC55	6AG00002332
KPOXEBC-108R01036	Unidad de Limpieza del Cinturón Original Xerox 108R01036	108R01036
KPOXECL-108R00580	Unidad de Limpieza Original Xerox 108R00580	108R00580
KPOXEFK-008R07982	TAT de Fusor Original Xerox 008R07982	008R07982
KPOXEFK-008R12905	TAT de Fusor Original Xerox 008R12905	008R12905
KPOXEFK-008R12934	TAT de Fusor Original Xerox 008R12934	008R12934
KPOXEFK-008R12989	TAT de Fusor Original Xerox 008R12989	008R12989
KPOXEFK-008R13023	TAT de Fusor Original Xerox 008R13023	008R13023
KPOXEFK-008R13028	TAT de Fusor Original Xerox 008R13028	008R13028
KPOXEFK-008R13045	TAT de Fusor Original Xerox 008R13045	008R13045
KPOXEFK-008R13088	TAT de Fusor Original Xerox 008R13088	008R13088
KPOXEFK-108R00093	TAT de Fusor Original Xerox 108R00093	108R00093
KPOXEFK-108R00329	TAT de Fusor Original Xerox 108R00329	108R00329
KPOXEFK-108R00498	TAT de Fusor Original Xerox 108R00498	108R00498
KPOXEFK-108R00657	TAT de Fusor Original Xerox 108R00657	108R00657
KPOXEFK-109R00634	TAT de Fusor Original Xerox 109R00634	109R00634
KPOXEFK-109R00732	TAT de Fusor Original Xerox 109R00732	109R00732
KPOXEFK-109R00751	TAT de Fusor Original Xerox 109R00751	109R00751
KPOXEFK-115R00026	TAT de Fusor Original Xerox 115R00026	115R00026
KPOXEFK-115R00030	TAT de Fusor Original Xerox 115R00030	115R00030
KPOXEFK-115R00036	TAT de Fusor Original Xerox 115R00036	115R00036
KPOXEFK-115R00038	TAT de Fusor Original Xerox 115R00038	115R00038
KPOXEFK-115R00050	TAT de Fusor Original Xerox 115R00050	115R00050
KPOXEFK-115R00056	TAT de Fusor Original Xerox 115R00056	115R00056
KPOXEFK-115R00060	TAT de Fusor Original Xerox 115R00060	115R00060
KPOXEFK-115R00062	TAT de Fusor Original Xerox 115R00062	115R00062
KPOXEFK-115R00070	TAT de Fusor Original Xerox 115R00070	115R00070
KPOXEFK-115R00074	TAT de Fusor Original Xerox 115R00074	115R00074
KPOXEFK-16199900	TAT de Fusor Original Xerox 016-1999-00	016-1999-00
KPOXEMK-108R00601	TAT de Mantenimiento Original Xerox 108R00601	108R00601
KPOXEMK-108R00602	TAT de Mantenimiento Original Xerox 108R00602	108R00602
KPOXEMK-108R00603	TAT de Mantenimiento Original Xerox 108R00603	108R00603
KPOXEMK-108R00675	TAT de Mantenimiento Original Xerox 108R00675	108R00675
KPOXEMK-108R00676	TAT de Mantenimiento Original Xerox 108R00676	108R00676
KPOXEMK-108R00718	TAT de Mantenimiento Original Xerox 108R00718	108R00718
KPOXEMK-108R00736	TAT de Mantenimiento Original Xerox 108R00736	108R00736
KPOXEMK-109R00522	TAT de Mantenimiento Original Xerox 109R00522	109R00522
KPOXEMK-109R00783	TAT de Mantenimiento Original Xerox 109R00783	109R00783
KPOXEMK-109R00784	TAT de Mantenimiento Original Xerox 109R00784	109R00784
KPOXESW-008R12897	Cartucho de Grapas Original Xerox 008R12897	008R12897

KPOXESW-008R12898	Cartucho de Grapas Original Xerox 008R12898	008R12898
KPOXESW-008R12915	Cartucho de Grapas Original Xerox 008R12915	008R12915
KPOXESW-008R12925	Cartucho de Grapas Original Xerox 008R12925	008R12925
KPOXESW-008R12941	Cartucho de Grapas Original Xerox 008R12941	008R12941
KPOXESW-108R00493	Cartucho de Grapas Original Xerox 108R00493	108R00493
KPOXESW-108R00823	Cartucho de Grapas Original Xerox 108R00823	108R00823
KPOXETK-001R00610	TAt de Transferencia Original Xerox 001R00610	001R00610
KPOXETK-101R00421	TAt de Transferencia Original Xerox 101R00421	101R00421
KPOXETK-108R00594	TAt de Transferencia Original Xerox 108R00594	108R00594
KPOXETR-108R00579	Rodillo de Transferencia Original Xerox 108R00579	108R00579
KPOXETR-108R00592	Rodillo de Transferencia Original Xerox 108R00592	108R00592
KPOXETR-108R00646	Rodillo de Transferencia Original Xerox 108R00646	108R00646
KPOXEWI-754	Depósito de Tinta Residual Original Xerox 108R00754	108R00754
KPOXEWT-008R12896	Depósito de Tóner Residual Original Xerox 008R12896	008R12896
KPOXEWT-008R12903	Depósito de Tóner Residual Original Xerox 008R12903	008R12903
KPOXEWT-008R12990	Depósito de Tóner Residual Original Xerox 008R12990	008R12990
KPOXEWT-008R13021	Depósito de Tóner Residual Original Xerox 008R13021	008R13021
KPOXEWT-008R13061	Depósito de Tóner Residual Original Xerox 008R13061	008R13061
KPOXEWT-008R13089	Depósito de Tóner Residual Original Xerox 008R13089	008R13089
KPOXEWT-106R01081	Depósito de Tóner Residual Original Xerox 106R01081	106R01081
KPOXEWT-106R01368	Depósito de Tóner Residual Original Xerox 106R01368	106R01368
KPOXEWT-106R02624	Depósito de Tóner Residual Original Xerox 106R02624	106R02624
KPOXEWT-108R00575	Depósito de Tóner Residual Original Xerox 108R00575	108R00575
KPOXEWT-108R00722	Depósito de Tóner Residual Original Xerox 108R00722	108R00722
KPOXEWT-108R00865	Depósito de Tóner Residual Original Xerox 108R00865	108R00865
KPOXEWT-108R00975	Depósito de Tóner Residual Original Xerox 108R00975	108R00975
KPOXEWT-108R00982	Depósito de Tóner Residual Original Xerox 108R00982	108R00982
KPOXEWT-108R01124	Depósito de Tóner Residual Original Xerox 108R01124	108R01124
KPOXEWT-109R00736	Depósito de Tóner Residual Original Xerox 109R00736	109R00736
KPOXEWT-109R00754	Depósito de Tóner Residual Original Xerox 109R00754	109R00754
KRCB-PC102RF	Brother PC102RF TTR Negro, Pack Doble	PC102RF
KRCB-PC202RF	Brother PC202RF TTR Negro, Pack Doble	PC202RF
KRCB-PC204RF	Brother PC204RF TTR Negro (4 uds.)	PC204RF
KRCB-PC302RF	Brother PC302RF TTR Negro, Pack Doble	PC302RF
KRCB-PC402RF	Brother PC402RF TTR Negro, Pack Doble	PC402RF
KRCB-PC72RF	Brother PC72RF TTR Negro, Pack Doble	PC72RF
KRCB-PC92RF	Brother PC92RF/27792 TTR Negro, Pack Doble	PC92RF
KRCCA-EP102	Canon 4202A002 EP-102 Negro/Rojo	4202A002
KRCCI-GR621	Citizen 3000017 Negro	3000017
KRCE-C135019	Epson C13S015019/8750 Negro	C13S015019
KRCE-C135021	Epson C13S015021/7753 Negro	C13S015021
KRCE-C135021S10	Epson C13S015021/7753 Negro (10 uds.)	C13S015021
KRCE-C135022	Epson C13S015022/LQ1000/7754 Negro	C13S015022
KRCE-C135032	Epson C13S015032/LQ100 Negro	C13S015032
KRCE-C135055	Epson C13S015055/8766 Negro	C13S015055
KRCE-C135086	Epson C13S015086 Negro	C13S015086
KRCE-C135262	Epson C13S015262/LQ680 Negro	C13S015262
KRCE-C135262S10	Epson C13S015262 Negro (10 uds.)	C13S015262
KRCE-C135307	Epson C13S015307 Negro	C13S015307
KRCE-C135327	Epson C13S015327 Negro	C13S015327
KRCE-C135337	Epson C13S015337/LQ-590/FX-890 Negro	C13S015337
KRCE-C135337S10	Epson C13S015337 Negro (10 uds.)	C13S015337
KRCE-C135339	Epson C13S015339 Negro	C13S015339
KRCE-C135339DP	Epson C13S015339 Negro Pack Doble	C13S015339
KRCE-C135384	Epson C13S015384 Negro	C13S015384
KRCE-C135610	Epson C13S015610 Negro	C13S015610
KRCE-C435227	Epson C43S015227/C43S015435/ERC28B Negro	C43S015227
KRCE-C435350	Epson C43S015350/20021 Negro	C43S015350
KRCE-C435352	Epson C43S015352/ERC05B Negro	C43S015352
KRCE-C435354	Epson C43S015354/ERC09B Negro	C43S015354
KRCE-C435356	Epson C43S015356/ERC18B Negro	C43S015356
KRCE-C435358	Epson C43S015358/ERC22B Negro	C43S015358
KRCE-C435360	Epson C43S015360/ERC23B Negro	C43S015360
KRCE-C435360S10	Epson C43S015360 Negro (10 uds.)	C43S015360
KRCE-C435362	Epson C43S015362/ERC23BR Negro sobre Rojo	C43S015362
KRCE-C435366	Epson C43S015366/ERC27B Negro	C43S015366
KRCE-C435369	Epson C43S015369/ERC31B Negro	C43S015369
KRCE-C435369S10	Epson C43S015369/ERC31B Negro (10 uds.)	C43S015369
KRCE-C435371	Epson C43S015371/ERC32B Negro	C43S015371
KRCE-C435376	Epson C43S015376/ERC38BR Negro sobre Rojo	C43S015376
KRCE-C435451	Epson C43S015451/ERC30B Negro	C43S015451

KRCE-C435451S10	Epson C43S015451 Negro (10 uds.)	C43S015451
KRCFP-195303	Francotyp Postalia 510019530300 Azul (3 uds.)	RF-510019530300
KRCFP-343071	Francotyp Postalia 580034307100 Azul (3 uds.)	580034307100
KRCFU-0601	Fujitsu D30L-9001-0601 Negro	D30L-9001-0601
KRCFU-0939	Fujitsu D30L-9001-0939 Negro	D30L-9001-0939
KRCFU-2374	Fujitsu CA02374-C104 Negro	CA02374-C104
KRCL-1040888	Lexmark 1040888 Negro	1040888
KRCN-23255	NEC 50023255 Negro	50023255
KRCOK-092308	OTA 09002308 Microline 3410 Negro	9002308
KRCOK-092309	OTA 09002309 Negro	9002309
KRCOK-092310	OTA 09002310 Negro	9002310
KRCOK-092311	OTA 09002311 Negro	9002311
KRCOK-9002315	OTA 09002315 Negro	9002315
KRCOK-ML1120	OTA 43571802 Negro	43571802
KRCOK-ML182B	OTA 52102001/ML 182 Negro	52102001
KRCOK-ML182P	OTA 52102001/ML 182 Púrpura	52102001
KRCOK-ML182S10	OTA 52102001/ML 182 Negro (10 uds.)	52102001
KRCOK-ML5590	OTA ML-5590/5520/199105012 Negro	199105012
KRCOK-ML590	OTA 09002316/ML-590 Negro	9002316
KRCOL-B0321	Olivetti B0321 Negro	B0321
KRCOL-B0375	Olivetti B0375 Negro	B0375
KRCOL-B0375S10	Olivetti B0375 Negro (10 uds.)	B0375
KRCPA-FA134X	Panasonic KX-FA134X TTR Negro, Pack Doble	KX-FA134X
KRCPA-FA136X	Panasonic KX-FA136X TTR Negro, Pack Doble	KX-FA136X
KRCPA-FA52X	Panasonic KX-FA52X TTR Negro, Pack Doble	KX-FA52X
KRCPA-FA54X	Panasonic KX-FA54X TTR Negro, Pack Doble	KX-FA54X
KRCPA-FA55X	Panasonic KX-FA55X TTR Negro, Pack Doble	KX-FA55X
KRCPA-FA93	Panasonic KX-FA 93/KX-FA 57 E TTR Negro Pack Doble	KX-FA93
KRCPA-P115	Panasonic KX-P115 Negro	KX-P115
KRCPH-PFA301	Philips PFA301/906115301009 TTR Negro, Pack Doble	PFA301
KRCPH-PFA322	Philips PFA322/PFA321 TTR Negro	PFA322
KRCPH-PFA331	Philips PFA331/Magic 3 TTR Negro	PFA331
KRCPH-PFA351	Philips PFA351/Magic 5 TTR Negro	PFA351
KRCPI-795014	Pitney Bowes B795014 Azul	B795014
KRCSE-91611	Seikosha SP-16051/91611 Negro	SP-16051
KRCSE-95520	Seikosha SBP-10051/95520 Negro	SBP-10051
KRCSG-TTR81	Sagem TTR900/TTR81 TTR Negro	TTR900
KRCSH-FO15CR	Sharp FO15CR TTR Negro	FO-15CR
KRCSH-UX16CR	Sharp UX-16CR TTR Negro, Pack Doble	UX-16CR
KRCSH-UX3CR	Sharp UX-3CR TTR Negro	UX-3CR
KRCSH-UX3CRDP	Sharp UX-3CR TTR Negro, Pack Doble	UX-3CR
KRCSM-80981610	Star Micronics 80981610 Negro	80981610
KRCSM-80981610S10	Star Micronics 80981610 Negro (10 uds.)	80981610
KRCSM-RC200B	Star Micronics RC-200B Negro	RC-200B
KRCSM-RC200RB	Star Micronics RC-200RB Negro/Rojo	RC-200RB
KRCSM-RC700B	Star Micronics 30980730/RC700B Negro	30980730
KRCW-15940	Wincor-Nixdorf 10600015940 Negro	1750075146
KRCW-3210	Wincor-Nixdorf 10600003210 Negro	1770007393
KRCW-3247	Wincor-Nixdorf 10600003247 Negro	1750070810
KROB-1030	Brother 1030 Negro sobre Blanco	TZE231
KROB-1032	Brother 1032 Negro	1032
KROB-12270	Brother 12270	12270
KROB-17020	Brother 17020 Negro sobre Blanco	17020
KROB-2230	Brother 2230/31072 Negro	2230
KROB-DK11201	Brother DK-11201 P-Touch Negro sobre Blanco	DK-11201
KROB-DK11202	Brother DK-11202 P-Touch Negro sobre Blanco	DK-11202
KROB-DK11203	Brother DK-11203 P-Touch Negro sobre Blanco	DK-11203
KROB-DK11204	Brother DK-11204 P-Touch Negro sobre Blanco	DK-11204
KROB-DK11208	Brother DK-11208 P-Touch Negro sobre Blanco	DK-11208
KROB-DK11209	Brother DK-11209 P-Touch Negro sobre Blanco	DK-11209
KROB-DK11218	Brother DK-11218 P-Touch Negro sobre Blanco	DK-11218
KROB-DK11221	Brother DK-11221 P-Touch Negro sobre Blanco	DK-11221
KROB-DK11240	Brother DK-11240 P-Touch Negro sobre Blanco	DK-11240
KROB-DK11241	Brother DK-11241 P-Touch Blanco	DK-11241
KROB-DK22113	Brother DK-22113 P-Touch Negro sobre Transparente	DK-22113
KROB-DK22205	Brother DK-22205 P-Touch Negro sobre Blanco	DK-22205
KROB-DK22210	Brother DK-22210 P-Touch Negro sobre Blanco	DK-22210
KROB-DK22211	Brother DK-22211 P-Touch Negro sobre Blanco	DK-22211
KROB-DK22212	Brother DK-22212 P-Touch Negro sobre Blanco	DK-22212
KROB-DK22214	Brother DK-22214 P-Touch Negro sobre Blanco	DK-22214
KROB-DK22223	Brother DK-22223 Negro sobre Blanco	DK-22223

KROB-DK22606	Brother DK-22606 P-Touch Negro sobre Amarillo	DK-22606
KROB-DK44205	Brother DK-44205 P-Touch Negro sobre Blanco	DK-44205
KROB-DK44605	Brother DK-44605 P-Touch Negro sobre Amarillo	DK-44605
KROB-DKCL99	Brother DK-CL99 P-Touch (10 uds.)	DK-CL99
KROB-HGE231V5	Brother HGE-231V5 P-Touch Negro-Blanco	HGE-231V5
KROB-HGE261V5	Brother HGE-261V5 P-Touch Negro sobre Blanco	HGE-261V5
KROB-HGE631V5	Brother HGE-631V5 P-Touch Negro sobre Amarillo	HGE-631V5
KROB-HGEM931V5	Brother HGE-M931V5 P-Touch Negro sobre Plata	HGE-M931V5
KROB-HGEM951V5	Brother HGE-M951V5 P-Touch Negro sobre Plata	HGE-M951V5
KROB-MK221BZ	Brother MK-221BZ/22812 P-Touch Negro sobre Blanco	MK-221BZ
KROB-MK221SBZ	Brother MK-221SBZ P-Touch Negro Blanco	MK-221SBZ
KROB-MK222BZ	Brother MK-222BZ/22812 P-Touch Rojo sobre Blanco	MK-222BZ
KROB-MK223BZ	Brother MK-223BZ/22812 P-Touch Azul sobre Blanco	MK-223BZ
KROB-MK231BZ	Brother MK-231BZ P-Touch Negro sobre Blanco	MK-231BZ
KROB-MK231SBZ	Brother MK-231SBZ P-Touch Negro sobre Blanco	MK-231SBZ
KROB-MK232BZ	Brother MK-232BZ P-Touch Rojo sobre Blanco	MK-232BZ
KROB-MK233BZ	Brother MK-233BZ P-Touch Azul sobre Blanco	MK-233BZ
KROB-MK521BZ	Brother MK-521BZ P-Touch Negro sobre Azul	MK-521BZ
KROB-MK531BZ	Brother MK-531BZ P-Touch Negro sobre Azul	MK-531BZ
KROB-MK621BZ	Brother MK-621BZ P-Touch Negro sobre Amarillo	MK-621BZ
KROB-MK631BZ	Brother MK-631BZ P-Touch Negro sobre Amarillo	MK-631BZ
KROB-PC201	Brother PC201 TTR Negro	PC201
KROB-PC202RF	Brother PC202RF TTR Negro, Pack Doble	PC202RF
KROB-PC204RF	Brother PC204RF TTR Negro (4 uds.)	PC204RF
KROB-PC300RF	Brother PC300RF TTR Negro	PC300RF
KROB-PC301	Brother PC301 TTR Negro	PC301
KROB-PC302RF	Brother PC302RF TTR Negro, Pack Doble	PC302RF
KROB-PC304RF	Brother PC304RF TTR Negro (4 uds.)	PC304RF
KROB-PC70	Brother PC70/27717 TTR Negro	PC70
KROB-PC71RF	Brother PC71RF/27719 TTR Negro	PC71RF
KROB-PC72RF	Brother PC72RF/27720 TTR Negro, Pack Doble	PC72RF
KROB-PC74RF	Brother PC74RF/27723 TTR Negro (4 uds.)	PC74RF
KROB-PC75	Brother PC75/27719 TTR Negro	PC75
KROB-RD-S02E1	Brother RD-S02E1 Negro sobre Blanco	RD-S02E1
KROB-RDS03E1	Brother RD-S03E1 Negro sobre Blanco	RD-S03E1
KROB-RDS05E1	Brother RD-S05E1	RD-S05E1
KROB-ST151	Brother ST-151 P-Touch Negro sobre Blanco	ST-151
KROB-ST161	Brother ST-161 P-Touch Negro sobre Blanco	ST-161
KROB-STE141	Brother STE-141 P-Touch Negro sobre Blanco	STE-141
KROB-STE151	Brother STE-151 P-Touch Negro sobre Blanco	STE-151
KROB-STE161	Brother STE-161 P-Touch Negro sobre Blanco	STE-161
KROB-TC101	Brother TC-101 P-Touch Negro sobre Transparente	TC-101
KROB-TC101A	Brother TC-101A P-Touch Negro sobre Transparente	TC-101A
KROB-TC102	Brother TC-102 P-Touch Rojo sobre Transparente	TC-102
KROB-TC103	Brother TC-103 P-Touch Azul sobre Transparente	TC-103
KROB-TC195	Brother TC-195 P-Touch Negro sobre Blanco	TC-195
KROB-TC201	Brother TC-201 P-Touch Negro sobre Blanco	TC-201
KROB-TC201A	Brother TC-201A P-Touch Negro sobre Blanco	TC-201A
KROB-TC202	Brother TC-202 P-Touch Rojo sobre Blanco	TC-202
KROB-TC203	Brother TC-203 P-Touch Azul sobre Blanco	TC-203
KROB-TC291	Brother TC-291 P-Touch Negro sobre Blanco	TC-291
KROB-TC292	Brother TC-292 P-Touch Rojo sobre Blanco	TC-292
KROB-TC293	Brother TC-293 P-Touch Azul sobre Blanco	TC-293
KROB-TC301	Brother TC-301 P-Touch Negro sobre Oro	TC-301
KROB-TC395	Brother TC-395 P-Touch Negro sobre Blanco	TC-395
KROB-TC401	Brother TC-401 P-Touch Negro sobre Rojo	TC-401
KROB-TC491	Brother TC-491 P-Touch Negro sobre Rojo	TC-491
KROB-TC495	Brother TC-495 P-Touch Rojo sobre Blanco	TC-495
KROB-TC501	Brother TC-501 P-Touch Negro sobre Azul	TC-501
KROB-TC591	Brother TC-591 P-Touch Negro sobre Azul	TC-591
KROB-TC595	Brother TC-595 P-Touch Azul sobre Blanco	TC-595
KROB-TC601	Brother TC-601 P-Touch Negro sobre Amarillo	TC-601
KROB-TC691	Brother TC-691 P-Touch Negro sobre Amarillo	TC-691
KROB-TC701	Brother TC-701 P-Touch Negro sobre Verde	TC-701
KROB-TC791	Brother TC-791 P-Touch Negro sobre Verde	TC-791
KROB-TCB01	Brother TCB-01 P-Touch Negro sobre Naranja	TC-B01
KROB-TCC01	Brother TCC-01 P-Touch Negro sobre Amarillo	TC-C01
KROB-TCM91	Brother TCM-91 P-Touch Negro sobre Transparente	TC-M91
KROB-TX131	Brother TX-131 P-Touch Negro sobre Transparente	TX-131
KROB-TX141	Brother TX-141 P-Touch Negro sobre Transparente	TX-141
KROB-TX151	Brother TX-151 P-Touch Negro sobre Transparente	TX-151

KROB-TX211	Brother TX-211 P-Touch Negro sobre Blanco	TX-211
KROB-TX221	Brother TX-221 P-Touch Negro sobre Blanco	TX-221
KROB-TX231	Brother TX-231 P-Touch Negro sobre Blanco	TX-231
KROB-TX241	Brother TX-241 P-Touch Negro sobre Blanco	TX-241
KROB-TX251	Brother TX-251 P-Touch Negro sobre Blanco	TX-251
KROB-TX315	Brother TX-315 P-Touch Negro sobre Blanco	TX-315
KROB-TX335	Brother TX-335 P-Touch Negro sobre Blanco	TX-335
KROB-TX355	Brother TX-355 P-Touch Negro sobre Blanco	TX-355
KROB-TX431	Brother TX-431 P-Touch Negro sobre Rojo	TX-431
KROB-TX451	Brother TX-451 P-Touch Negro sobre Rojo	TX-451
KROB-TX531	Brother TX-531 P-Touch Negro sobre Azul	TX-531
KROB-TX551	Brother TX-551 P-Touch Negro sobre Azul	TX-551
KROB-TX611	Brother TX-611 P-Touch Negro sobre Amarillo	TX-611
KROB-TX621	Brother TX-621 P-Touch Negro sobre Amarillo	TX-621
KROB-TX631	Brother TX-631 P-Touch Negro sobre Amarillo	TX-631
KROB-TX641	Brother TX-641 P-Touch Negro sobre Amarillo	TX-641
KROB-TX651	Brother TX-651 P-Touch Negro sobre Amarillo	TX-651
KROB-TX731	Brother TX-731 P-Touch Negro sobre Verde	TX-731
KROB-TX751	Brother TX-751 P-Touch Negro sobre Verde	TX-751
KROB-TZ325	Brother TZ-325/22418 P-Touch Negro sobre Blanco	TZ-325
KROB-TZ334	Brother TZ-334/22434 P-Touch Negro sobre Oro	TZ-334
KROB-TZ661	Brother TZ-661/22566 P-Touch Negro sobre Amarillo	TZ-661
KROB-TZ721	Brother TZ-721/22414 P-Touch Negro sobre Verde	TZ-721
KROB-TZE111	Brother TZ-111/22400 P-Touch Negro sobre Transparente	TZE-111
KROB-TZE121	Brother TZ-121/22407 P-Touch Negro sobre Transparente	TZE-121
KROB-TZE131	Brother TZE-131 P-Touch Negro sobre Transparente	TZE-131
KROB-TZE132	Brother TZE-132 P-Touch Rojo sobre Transparente	TZE-132
KROB-TZE133	Brother TZE-133 P-Touch Azul sobre Transparente	TZE-133
KROB-TZE135	Brother TZE-135 P-Touch Blanco	TZE-135
KROB-TZE141	Brother TZE-141 P-Touch Negro sobre Transparente	TZE-141
KROB-TZE145	Brother TZE-145 P-Touch Negro sobre Blanco	TZE-145
KROB-TZE151	Brother TZ-151/22451 P-Touch Negro sobre Transparente	TZE-151
KROB-TZE161	Brother TZE-161 P-Touch Negro sobre Transparente	TZE-161
KROB-TZE211	Brother TZE-211 P-Touch Negro sobre Blanco	TZE-211
KROB-TZE221	Brother TZ-221/22410 P-Touch Negro sobre Blanco	TZE-221
KROB-TZE222	Brother TZE-222/22415 P-Touch Rojo sobre Blanco	TZE-222
KROB-TZE223	Brother TZE-223 P-Touch Azul sobre Blanco	TZE-223
KROB-TZE231	Brother TZE-231 P-Touch Negro sobre Blanco	TZE-231
KROB-TZE231S	Brother TZE-231S P-Touch Negro sobre Blanco	TZE-231S
KROB-TZE232	Brother TZE-232 P-Touch Rojo sobre Blanco	TZE-232
KROB-TZE233	Brother TZ-233/22430 P-Touch Azul sobre Blanco	TZE-233
KROB-TZE241	Brother TZE-241 P-Touch Negro sobre Blanco	TZE-241
KROB-TZE242	Brother TZE-242 P-Touch Rojo sobre Blanco	TZE-242
KROB-TZE243	Brother TZE-243 P-Touch Azul sobre Blanco	TZE-243
KROB-TZE251	Brother TZ-251/22454 P-Touch Negro sobre Blanco	TZE-251
KROB-TZE252	Brother TZE-252 P-Touch Rojo sobre Blanco	TZE-252
KROB-TZE253	Brother TZE-253 P-Touch Azul sobre Blanco	TZE-253
KROB-TZE261	Brother TZE-261 P-Touch Negro sobre Blanco	TZE-261
KROB-TZE262	Brother TZE-262 P-Touch Rojo sobre Blanco	TZE-262
KROB-TZE263	Brother TZE-263 P-Touch Azul sobre Blanco	TZE-263
KROB-TZE315	Brother TZE-315 P-Touch Negro sobre Blanco	TZE-315
KROB-TZE31M3	Brother TZE-31M3 P-Touch Negro sobre Blanco	TZE-31M3
KROB-TZE325	Brother TZE-325 P-Touch Negro sobre Blanco	TZE-325
KROB-TZE334	Brother TZE-334 P-Touch Negro sobre Oro	TZE-334
KROB-TZE335	Brother TZ-335/22435 P-Touch Negro sobre Blanco	TZE-335
KROB-TZE344	Brother TZE-344 P-Touch Negro sobre Oro	TZE-344
KROB-TZE345	Brother TZ-345/22449 P-Touch Negro sobre Blanco	TZE-345
KROB-TZE354	Brother TZE-354 P-Touch Negro sobre Oro	TZE-354
KROB-TZE355	Brother TZE-355 P-Touch Negro sobre Blanco	TZE-355
KROB-TZE365	Brother TZE-365 P-Touch Negro sobre Blanco	TZE-365
KROB-TZE421	Brother TZE-421 P-Touch Negro sobre Rojo	TZE-421
KROB-TZE431	Brother TZE-431 P-Touch Negro sobre Rojo	TZE-431
KROB-TZE435	Brother TZE-435 P-Touch Rojo sobre Blanco	TZE-435
KROB-TZE441	Brother TZE-441 P-Touch Negro sobre Rojo	TZE-441
KROB-TZE451	Brother TZ-451/22459 P-Touch Negro sobre Rojo	TZE-451
KROB-TZE461	Brother TZE-461 P-Touch Negro Rojo	TZE-461
KROB-TZE521	Brother TZE-521 P-Touch Negro sobre Azul	TZE-521
KROB-TZE531	Brother TZ-531/22426 P-Touch Negro sobre Azul	TZE-531
KROB-TZE535	Brother TZE-535 P-Touch Azul sobre Blanco	TZE-535
KROB-TZE541	Brother TZE-541 P-Touch Negro sobre Azul	TZE-541
KROB-TZE551	Brother TZE-551 P-Touch Negro sobre Azul	TZE-551

KROB-TZE555	Brother TZE-555 P-Touch Azul sobre Blanco	TZE-555
KROB-TZE561	Brother TZE-561 P-Touch Negro sobre Azul	TZE-561
KROB-TZE611	Brother TZ-611/22402 P-Touch Negro sobre Amarillo	TZE-611
KROB-TZE621	Brother TZE-621 P-Touch Negro sobre Amarillo	TZE-621
KROB-TZE631	Brother TZE-631 P-Touch Negro sobre Amarillo	TZE-631
KROB-TZE641	Brother TZE-641 P-Touch Negro sobre Amarillo	TZE-641
KROB-TZE651	Brother TZ-651/22463 P-Touch Negro sobre Amarillo	TZE-651
KROB-TZE661	Brother TZE-661 P-Touch Negro sobre Amarillo	TZE-661
KROB-TZE721	Brother TZE-721 P-Touch Negro sobre Verde	TZE-721
KROB-TZE731	Brother TZE-731 P-Touch Negro sobre Verde	TZE-731
KROB-TZE741	Brother TZE-741 P-Touch Negro sobre Verde	TZE-741
KROB-TZE751	Brother TZE-751 P-Touch Negro sobre Verde	TZE-751
KROB-TZEB31	Brother TZE-B31 P-Touch Negro sobre Naranja	TZE-B31
KROB-TZEB51	Brother TZE-B51 P-Touch Negro sobre Naranja	TZE-B51
KROB-TZEC31	Brother TZE-C31 P-Touch Negro sobre Amarillo	TZE-C31
KROB-TZEC51	Brother TZE-C51 P-Touch Negro sobre Amarillo	TZE-C51
KROB-TZECL4	Brother TZE-CL4 P-Touch Cinta Limpiadora	TZE-CL4
KROB-TZEFA3	Brother TZE-FA3 P-Touch Azul sobre Blanco	TZE-FA3
KROB-TZEFA4B	Brother TZE-FA4B P-Touch Azul sobre Blanco	TZE-FA4B
KROB-TZEFX211	Brother TZE-FX211 P-Touch Negro sobre Blanco	TZE-FX211
KROB-TZEFX221	Brother TZ-FX221 P-Touch Negro sobre Blanco	TZE-FX221
KROB-TZEFX231	Brother TZE-FX231 P-Touch Negro sobre Blanco	TZE-FX231
KROB-TZEFX241	Brother TZ-FX241 P-Touch Negro sobre Blanco	TZE-FX241
KROB-TZEFX251	Brother TZE-FX251 P-Touch Negro sobre Blanco	TZE-FX251
KROB-TZEFX261	Brother TZE-FX261 P-Touch Negro sobre Blanco	TZE-FX261
KROB-TZEFX611	Brother TZE-FX611 P-Touch Negro sobre Amarillo	TZE-FX611
KROB-TZEFX621	Brother TZE-FX621 P-Touch Negro sobre Amarillo	TZE-FX621
KROB-TZEFX631	Brother TZ-FX631 P-Touch Negro sobre Amarillo	TZE-FX631
KROB-TZEFX641	Brother TZE-FX641 P-Touch Negro sobre Amarillo	TZE-FX641
KROB-TZEFX651	Brother TZE-FX651 P-Touch Negro sobre Amarillo	TZE-FX651
KROB-TZEFX661	Brother TZE-FX661 P-Touch Negro sobre Amarillo	TZE-FX661
KROB-TZEM31	Brother TZE-M31 P-Touch Negro sobre Transparente	TZE-M31
KROB-TZEM931	Brother TZE-M931 P-Touch Negro sobre Plata	TZE-M931
KROB-TZEM951	Brother TZE-M951 P-Touch Negro sobre Plata	TZE-M951
KROB-TZEM961	Brother TZE-M961 P-Touch Negro sobre Plata	TZE-M961
KROB-TZEMQG35	Brother TZE-MQG35 P-Touch Verde sobre Blanco	TZE-MQG35
KROB-TZEMQL35	Brother TZE-MQL35 P-Touch Gray sobre Blanco	TZE-MQL35
KROB-TZEMQP35	Brother TZE-MQP35 P-Touch Blanco sobre Rosa	TZE-MQP35
KROB-TZEN201	Brother TZE-N201 P-Touch Negro sobre Blanco	TZE-N201
KROB-TZEN221	Brother TZN-221/22720 P-Touch Negro sobre Blanco	TZE-N221
KROB-TZEN231	Brother TZN-231/22730 P-Touch Negro sobre Blanco	TZE-N231
KROB-TZEN241	Brother TZE-N241 P-Touch Negro sobre Blanco	TZE-N241
KROB-TZEN251	Brother TZN-251/22750 P-Touch Negro sobre Blanco	TZE-N251
KROB-TZES121	Brother TZE-S121 P-Touch Negro sobre Transparente	TZE-S121
KROB-TZES131	Brother TZE-S131 P-Touch Negro sobre Transparente	TZE-S131
KROB-TZES141	Brother TZE-S141 P-Touch Negro sobre Transparente	TZE-S141
KROB-TZES151	Brother TZE-S151 P-Touch Negro sobre Transparente	TZE-S151
KROB-TZES211	Brother TZE-S211 P-Touch Negro sobre Blanco	TZE-S211
KROB-TZES221	Brother TZE-S221 P-Touch Negro sobre Blanco	TZE-S221
KROB-TZES231	Brother TZ-S231 P-Touch Negro sobre Blanco	TZE-S231
KROB-TZES241	Brother TZ-S241 P-Touch Negro sobre Blanco	TZE-S241
KROB-TZES251	Brother TZ-S251 P-Touch Negro sobre Blanco	TZE-S251
KROB-TZES261	Brother TZE-S261 P-Touch Negro sobre Blanco	TZE-S261
KROB-TZES621	Brother TZE-S621 P-Touch Negro sobre Amarillo	TZE-S621
KROB-TZES631	Brother TZE-S631 P-Touch Negro sobre Amarillo	TZE-S631
KROB-TZES641	Brother TZE-S641 P-Touch Negro sobre Amarillo	TZE-S641
KROB-TZES651	Brother TZE-S651 P-Touch Negro sobre Amarillo	TZE-S651
KROB-TZESE4	Brother TZE-SE4 P-Touch Negro sobre Blanco	TZE-SE4
KROB-TZFX251	Brother TZ-FX251 P-Touch Negro sobre Blanco	TZ-FX251
KROB-TZM931	Brother TZM-931 P-Touch Negro sobre Plata	TZ-M931
KROB-TZM951	Brother TZM-951 P-Touch Azul sobre Plata	TZM-951
KROB-TZS261	Brother TZ-S261 Negro sobre Blanco	TZ-S261
KROB-TZSE4	Brother TZ-SE4 Negro sobre Blanco	TZ-SE4
KROCA-AP01	Canon N91-2290-410/AP01 Negro	N91-2290-410
KROCA-CP13	Canon 4191A001/CP-13 Púrpura	4191A001
KROCA-CP16	Canon 4195A001/CP-16 Púrpura	4195A001
KROCA-XR12BU1	Casio XR-12BU1 Negro sobre Azul	XR-12BU1
KROCA-XR12GD1	Casio XR-12GD1 Negro sobre Oro	XR-12GD1
KROCA-XR12GN1	Casio XR-12GN1 Negro sobre Verde	XR-12GN1
KROCA-XR12RD1	Casio XR-12RD1 Negro sobre Rojo	XR-12RD1
KROCA-XR12SR1	Casio XR-12SR1 Negro sobre Plata	XR-12SR1

KROCA-XR12WE1	Casio XR-12WE1 Negro sobre Blanco	XR-12WE1
KROCA-XR12WEB1	Casio XR-12WEB1 Azul sobre Blanco	XR-12WEB1
KROCA-XR12WER1	Casio XR-12WER1 Rojo sobre Blanco	XR-12WER1
KROCA-XR12YW1	Casio XR-12YW1 Negro sobre Amarillo	XR-12YW1
KROCA-XR18BU1	Casio XR-18BU1 Negro sobre Azul	XR-18BU1
KROCA-XR18GD1	Casio XR-18GD1 Negro sobre Oro	XR-18GD1
KROCA-XR18GN1	Casio XR-18GN1 Negro sobre Verde	XR-18GN1
KROCA-XR18SR1	Casio XR-18SR1 Negro sobre Plata	XR-18SR1
KROCA-XR18WE1	Casio XR-18WE1 Negro sobre Blanco	XR-18WE1
KROCA-XR18WEB1	Casio XR-18WEB1 Azul sobre Blanco	XR-18WEB1
KROCA-XR18WER1	Casio XR-18WER1 Rojo sobre Blanco	XR-18WER1
KROCA-XR18X1	Casio XR-18X1 Negro sobre Transparente	XR-18X1
KROCA-XR18YW1	Casio XR-18YW1 Negro sobre Amarillo	XR-18YW1
KROCA-XR24GN1	Casio XR-24GN1 Negro sobre Verde	XR-24GN1
KROCA-XR24RD1	Casio XR-24RD1 Negro sobre Rojo	XR-24RD1
KROCA-XR24WE1	Casio XR-24WE1 Negro sobre Blanco	XR-24WE1
KROCA-XR24X1	Casio XR-24X1 Negro	XR-24X1
KROCA-XR6GN1	Casio XR-6GN1 Negro sobre Verde	XR-6GN1
KROCA-XR6RD1	Casio XR-6RD1 Negro sobre Rojo	XR-6RD1
KROCA-XR6YW1	Casio XR-6YW1 Negro sobre Amarillo	XR-6YW1
KROCA-XR9BU1	Casio XR-9BU1 Negro sobre Azul	XR-9BU1
KROCA-XR9GD1	Casio XR-9GD1 Negro sobre Oro	XR-9GD1
KROCA-XR9GN1	Casio XR-9GN1 Negro sobre Verde	XR-9GN1
KROCA-XR9RD1	Casio XR-9RD1 Negro sobre Rojo	XR-9RD1
KROCA-XR9SR1	Casio XR-9SR1 Negro sobre Plata	XR-9SR1
KROCA-XR9WER1	Casio XR-9WER1 Rojo sobre Blanco	XR-9WER1
KROCA-XR9X1	Casio XR-9X1 Negro sobre Transparente	XR-9X1
KROCA-XR9YW1	Casio XR-9YW1 Negro sobre Amarillo	XR-9YW1
KROCI-GR621	Citizen 3000017 Negro	3000017
KROCI-IR61B	Citizen 3000098/IR61B Negro	3000098
KROCI-IR61RB	Citizen 3000097/IR61RB Negro/Rojo	3000097
KROCI-IR72P	Citizen 3000100/IR72P Violeta	3000100
KROCI-IR91B	Citizen 3000101/IR91B Negro	3000101
KROCP-46011	Compuprint PRK4601-1 Negro	PRK4601-1
KROCP-N1021	Compuprint PRKN102-1 Negro	PRKN102-1
KROCP-N407	Compuprint PRKN407 Negro	PRKN407
KROCT-C605B	C.Itoh MPR-C605B/C270 Negro	MPR-C605B
KROCT-C650B	C.Itoh MPR-C650B/C102 Negro	MPR-C650B
KROCT-C650PB	C.Itoh MPR-C650PB Negro	MPR-C650PB
KRODI-ILA30RKA	Digital Equipment Corp LA30R-KA Negro	LA30R-KA
KRODY-04980	Dymo S0904980 Negro sobre Blanco	S0929110
KRODY-11352	Dymo 11353/S0722520 Negro sobre Blanco	11352
KRODY-11353	Dymo 11353/S0722530 Negro sobre Blanco	11353
KRODY-11354	Dymo 11354/S0722540 Negro sobre Blanco	11354
KRODY-11355	Dymo 11355/S0722550 Negro sobre Blanco	11355
KRODY-11356	Dymo 11356/S0722560 Negro sobre Blanco	11356
KRODY-13186	Dymo 13186/S0722420 Negro sobre Blanco	13186
KRODY-14681	Dymo S0719250 Negro sobre Blanco	14681
KRODY-16951	Dymo 16951/S0721550 LetraTAG Negro sobre Transparente	16951
KRODY-16957	Dymo 16957/S0718040 D1 Negro sobre Blanco	16957
KRODY-16958	Dymo 16958/S0718050 D1 Negro sobre Blanco	16958
KRODY-16959	Dymo 16959/S0718060 D1 Negro sobre Blanco	16959
KRODY-16960	Dymo 16960/S0718070 D1 Negro sobre Blanco	16960
KRODY-18051	Dymo 18051/S0718260 Negro sobre Blanco	18051
KRODY-18052	Dymo 18052/S0718270 Negro sobre Amarillo	18052
KRODY-18053	Dymo 18053/S0718280 Negro sobre Blanco	18053
KRODY-18054	Dymo 18054/S0718290 Negro sobre Amarillo	18054
KRODY-1805441	Dymo 1805441 Negro sobre Blanco	1805441
KRODY-18055	Dymo 18055/S0718300 Negro sobre Blanco	18055
KRODY-18056	Dymo 18056/S0718310 Negro sobre Amarillo	18056
KRODY-18057	Dymo 18057/S0718330 Negro sobre Blanco	18057
KRODY-18058	Dymo 18058/S0718340 Negro sobre Amarillo	18058
KRODY-18432	Dymo 18432/S0718450 Negro sobre Amarillo	18432
KRODY-18433	Dymo 18433/S0718470 Negro sobre Amarillo	18433
KRODY-18435	Dymo 18435/S0718490 Rhino Negro sobre Naranja	18435
KRODY-18436	Dymo 18436/S0718500 Rhino Negro sobre Naranja	18436
KRODY-18443	Dymo 18443/S0718580 Rhino Negro sobre Blanco	18443
KRODY-18444	Dymo 18444/S0718600 Negro sobre Blanco	18444
KRODY-18445	Dymo 18445/S0718620 Negro sobre Blanco	18445
KRODY-18508	Dymo 18508 Negro sobre Blanco	18508
KRODY-18756	Dymo 18756/S0718080 Negro sobre Amarillo	18756

KRODY-18757	Dymo 18757/S0718090 Negro sobre Blanco	18757
KRODY-18758	Dymo 18758/S0718100 Negro sobre Blanco	18758
KRODY-18759	Dymo 18759/S0718120 Negro sobre Blanco	18759
KRODY-18761	Dymo 18761/S0718180 Negro sobre Plata	18761
KRODY-18764	Dymo 18764/S0718210 Negro sobre Blanco	18764
KRODY-18765	Dymo 18765/S0718220 Negro sobre Blanco	18765
KRODY-18766	Dymo 18766/S0718240 Negro sobre Blanco	18766
KRODY-18768	Dymo 18768/S0718840 LetraTAG Negro sobre Blanco	18768
KRODY-31000	Dymo 31000/S0720160 Rhino Plata sobre Plata	31000
KRODY-32500	Dymo 32500/S0720170 Rhino Plata sobre Plata	32500
KRODY-35800	Dymo 35800/S0720180 Rhino Plata sobre Plata	35800
KRODY-40910	Dymo 40910/S0720670 D1 Negro sobre Transparente	40910
KRODY-40913	Dymo 40913/S0720680 D1 Negro sobre Blanco	40913
KRODY-40914	Dymo 40914/S0720690 D1 Azul sobre Blanco	40914
KRODY-40915	Dymo 40915/S0720700 D1 Rojo sobre Blanco	40915
KRODY-40916	Dymo 40916/S0720710 D1 Negro sobre Azul	40916
KRODY-40917	Dymo 40917/S0720720 D1 Negro sobre Rojo	40917
KRODY-40918	Dymo 40918/S0720730 D1 Negro sobre Amarillo	40918
KRODY-40919	Dymo 40919/S0720740 D1 Negro sobre Verde	40919
KRODY-4144053	Dymo S0773840 Rhino Negro sobre Blanco	S0773840
KRODY-43610	Dymo 43610/S0720770 D1 Negro sobre Transparente	43610
KRODY-43613	Dymo 43613/S0720780 D1 Negro sobre Blanco	43613
KRODY-43618	Dymo 43618/S0720790 D1 Negro sobre Amarillo	43618
KRODY-45010	Dymo 45010/S0720500 D1 Negro sobre Transparente	45010
KRODY-45011	Dymo 45011/S0720510 D1 Azul sobre Transparente	45011
KRODY-45012	Dymo 45012/S0720520 D1 Rojo sobre Transparente	45012
KRODY-45014	Dymo 45014/S0720540 D1 Azul sobre Blanco	45014
KRODY-45015	Dymo 45015/S0720550 D1 Rojo sobre Blanco	45015
KRODY-45016	Dymo 45016/S0720560 D1 Negro sobre Azul	45016
KRODY-45017	Dymo 45017/S0720570 D1 Negro sobre Rojo	45017
KRODY-45018	Dymo 45018/S0720580 D1 Negro sobre Amarillo	45018
KRODY-45019	Dymo 45019/S0720590 Negro sobre Verde	45019
KRODY-45020	Dymo 45020/S0720600 D1 Blanco sobre Transparente	45020
KRODY-45021	Dymo 45021/S0720610 D1 Blanco sobre Negro	45021
KRODY-45800	Dymo 45800/S0720820 D1 Negro sobre Transparente	45800
KRODY-45803	Dymo 45803/S0720830 D1 Negro sobre Blanco	45803
KRODY-45804	Dymo 45804/S0720840 D1 Azul sobre Blanco	45804
KRODY-45805	Dymo 45805/S0720850 D1 Rojo sobre Blanco	45805
KRODY-45806	Dymo 45806/S0720860 D1 Negro sobre Azul	45806
KRODY-45807	Dymo 45807/S0720870 D1 Negro sobre Rojo	45807
KRODY-45808	Dymo 45808/S0720880 D1 Negro sobre Amarillo	45808
KRODY-45809	Dymo 45809/S0720890 D1 Negro sobre Verde	45809
KRODY-45810	Dymo 45810/S0720900 D1 Blanco sobre Transparente	45810
KRODY-45811	Dymo 45811/S0720910 D1 Negro sobre Blanco	45811
KRODY-53710	Dymo 53710/S0720920 D1 Negro sobre Transparente	53710
KRODY-53713	Dymo 53713/S0720930 D1 Negro sobre Blanco	53713
KRODY-53714	Dymo 53714/S0720940 D1 Azul sobre Blanco	53714
KRODY-53715	Dymo 53715/S0720950 D1 Rojo sobre Blanco	53715
KRODY-53716	Dymo 53716/S0720960 D1 Negro sobre Azul	53716
KRODY-53717	Dymo 53717/S0720970 D1 Negro sobre Rojo	53717
KRODY-53718	Dymo 53718/S0720980 D1 Negro sobre Amarillo	53718
KRODY-53719	Dymo 53719/S0720990 D1 Negro sobre Verde	53719
KRODY-53721	Dymo 53721/S0721010 D1 Negro sobre Blanco	53721
KRODY-60611	Dymo 60611/S0721030 D2 Negro sobre Blanco	60611
KRODY-61211	Dymo 61211/S0721090 D2 Negro sobre Blanco	61211
KRODY-61214	Dymo 61214/S0721120 D2 Negro sobre Amarillo	61214
KRODY-61910	Dymo 61910/S0721140 D2 Negro sobre Transparente	61910
KRODY-61914	Dymo 61914/S0721180 D2 Negro sobre Amarillo	61914
KRODY-69241	Dymo 69241/S0721210 D2 Negro sobre Blanco	69241
KRODY-69324	Dymo 69324/S0721280 D2 Negro sobre Amarillo	69324
KRODY-91201	Dymo 91201/S0721610 Negro sobre Blanco	91201
KRODY-91220	Dymo 91220/S0721520 LetraTAG Negro sobre Blanco	91220
KRODY-91221	Dymo 91221/S0721660 LetraTAG Negro sobre Blanco	91221
KRODY-91222	Dymo 91222/S0721670 Negro sobre Amarillo	91222
KRODY-91223	Dymo 91223/S0721680 LetraTAG Negro sobre Rojo	91223
KRODY-91224	Dymo 91224/S0721690 LetraTAG Negro sobre Verde	91224
KRODY-91225	Dymo 91225/S0721700 LetraTAG Negro sobre Azul	91225
KRODY-91228	Dymo 91228/S0721750 LetraTAG Negro sobre Plata	91228
KRODY-91229	Dymo 91229/S0721760 LetraTAG Negro sobre Verde	91229
KRODY-91241	Dymo 91241/S0721800 Pack Starter Blanco/Amarillo/Plata (3 uds.)	91241
KRODY-99010	Dymo 99010/S0722370 Negro sobre Blanco	99010

KRODY-99012	Dymo 99012/S0722400 Negro sobre Blanco	99012
KRODY-99013	Dymo 990132/S0722410 Negro sobre Blanco	99013
KRODY-99014	Dymo 99014/S0722430 Negro sobre Blanco	99014
KRODY-99015	Dymo 99015/S0722440 Negro sobre Blanco	99015
KRODY-99017	Dymo 99017/S0722460 Negro sobre Blanco	99017
KRODY-99018	Dymo 99018 Negro sobre Blanco	99018
KRODY-99019	Dymo 99019/S0722480 Negro sobre Blanco	99019
KROE-2RBP9	Epson C53S623400/LC-2RBP9 Negro sobre Rojo	C53S623400
KROE-2TBN9	Epson C53S623403/LC-2TBN9 Negro sobre Transparente	C53S623403
KROE-2WBN9	Epson C53S623402/LC-2WBN9 Negro sobre Blanco	C53S623402
KROE-2YBP9	Epson C53S623401/LC-2YBP9 Negro sobre Amarillo	C53S623401
KROE-3BTN9	Epson C53S624403/LC-3BTN9 Negro sobre Transparente	C53S624403
KROE-3RBP9	Epson C53S624400/LC-3RBP9 Negro sobre Rojo	C53S624400
KROE-3TBW9	Epson C53S624405/LC-3TBW9 Negro sobre Transparente	C53S624405
KROE-3WBN9	Epson C53S624402/LC-3WBN9 Negro sobre Blanco	C53S624402
KROE-3WBW9	Epson C53S624406/LC-3WBW9 Negro sobre Blanco	C53S624406
KROE-3YBP9	Epson C53S624401/LC-3YBP9 Negro sobre Amarillo	C53S624401
KROE-3YBW9	Epson C53S624404/LC-3YBW9 Negro sobre Amarillo	C53S624404
KROE-4BWW9	Epson C53S625404/LC-4BWW9 Negro sobre Blanco	C53S625404
KROE-4KBM9	Epson C53S625415/LC-4KBM9 Negro sobre Oro	C53S625415
KROE-4SBE9	Epson C53S625412/LC-4SBE9 Negro sobre Plata	C53S625412
KROE-4SBM9	Epson C53S625414/LC-4SBM9 Negro sobre Plata	C53S625414
KROE-4TBN9	Epson C53S625407/LC-4TBN9 Negro sobre Transparente	C53S625407
KROE-4TBW9	Epson C53S625410/LC-4TBW9 Negro sobre Transparente	C53S625410
KROE-4WBB9	Epson C53S625418/LC-4WBB9 Negro sobre Blanco	C53S625418
KROE-4WBN9	Epson C53S625416/LC-4WBN9 Negro sobre Blanco	C53S625416
KROE-4WLN9	Epson C53S625417/LC-4WLN9 Azul sobre Blanco	C53S625417
KROE-4WRN9	Epson C53S625406/LC-4WRN9 Rojo sobre Blanco	C53S625406
KROE-4WTN9	Epson C53S625408/LC-4WTN9 Blanco sobre Transparente	C53S625408
KROE-4YBF9	Epson C53S625405/LC-4YBF9 Negro sobre Amarillo	C53S625405
KROE-4YBW9	Epson C53S625409/LC-4YBW9 Negro sobre Amarillo	C53S625409
KROE-5RBP9	Epson C53S626400/LC-5RBP9 Negro sobre Rojo	C53S626400
KROE-5SBE9	Epson C53S626411/LC-5SBE9 Negro sobre Plata	C53S626411
KROE-5TBN9	Epson C53S626406/LC-5TBN9 Negro sobre Transparente	C53S626406
KROE-5TBW9	Epson C53S626409/LC-5TBW9 Negro sobre Transparente	C53S626409
KROE-5WBN9	Epson C53S626404/LC-5WBN9 Negro sobre Blanco	C53S626404
KROE-5WRN9	Epson C53S626405/LC-5WRN9 Rojo sobre Blanco	C53S626405
KROE-5YBF9	Epson C53S626402/LC-5YBF9 Negro sobre Amarillo	C53S626402
KROE-5YBP9	Epson C53S626401/LC-5YBP9 Negro sobre Amarillo	C53S626401
KROE-6RBP9	Epson C53S627400/LC-6RBP9 Negro sobre Rojo	C53S627400
KROE-6SBE9	Epson C53S627405/LC-6SBE9 Negro sobre Plata	C53S627405
KROE-6TBN9	Epson C53S627403/LC-6TBN9 Negro sobre Transparente	C53S627403
KROE-6YBP9	Epson C53S627401/LC-6YBP9 Negro sobre Amarillo	C53S627401
KROE-7RBP9	Epson C53S628401/LC-7RBP9 Negro sobre Rojo	C53S628401
KROE-7TBN9	Epson C53S628404/LC-7TBN9 Negro sobre Transparente	C53S628404
KROE-7WBN9	Epson C53S628403/LC-7WBN9 Negro sobre Blanco	C53S628403
KROE-7YBP9	Epson C53S628402/LC-7YBP9 Negro sobre Amarillo	C53S628402
KROE-C135013	Epson C13S015013 Negro	C13S015013
KROE-C135019	Epson C13S015019/8750 Negro	C13S015019
KROE-C135021	Epson C13S015021/7753 Negro	C13S015021
KROE-C135022	Epson C13S015022/7754 Negro	C13S015022
KROE-C135032	Epson C13S015032 Negro	C13S015032
KROE-C135047	Epson C13S015047 Negro	C13S015047
KROE-C135053	Epson C13S015053/8762L Negro	C13S015053
KROE-C135054	Epson C13S015054/8763 Negro	C13S015054
KROE-C135055	Epson C13S015055/8766 Negro	C13S015055
KROE-C135056	Epson C13S015056/7763 Color	C13S015056
KROE-C135066	Epson C13S015066 Negro	C13S015066
KROE-C135067	Epson C13S015067 Color	C13S015067
KROE-C135073	Epson C13S015073 Color	C13S015073
KROE-C135077	Epson C13S015077 Color	C13S015077
KROE-C135086	Epson C13S015086 Negro	C13S015086
KROE-C135091	Epson C13S015091 Negro	C13S015091
KROE-C135139	Epson C13S015139 Negro	C13S015139
KROE-C135262	Epson C13S015262 Negro	C13S015262
KROE-C135307	Epson C13S015307 Negro	C13S015307
KROE-C135327	Epson C13S015327 Negro	C13S015327
KROE-C135329	Epson C13S015329 Negro	C13S015329
KROE-C135336	Epson C13S015336 Negro	C13S015336
KROE-C135337	Epson C13S015337 Negro	C13S015337
KROE-C135339	Epson C13S015339 Negro	C13S015339

KROE-C135384	Epson C13S015384 Negro	C13S015384
KROE-C135610	Epson C13S015610 Negro	C13S015610
KROE-C135613	Epson C13S015613 Negro	C13S015613
KROE-C135624	Epson C13S015624 Negro	C13S015624
KROE-C135633	Epson C13S015633 Negro	C13S015633
KROE-C135637	Epson C13S015637 Negro	C13S015637
KROE-C135642	Epson C13S015642 Negro	C13S015642
KROE-C435166	Epson C43S015166/ERC09B Negro	C43S015166
KROE-C435224	Epson C43S015224/29001B Negro	C43S015224
KROE-C435227	Epson C43S015227/C43S015435/ERC28B Negro	C43S015227
KROE-C435244	Epson C43S015244/ERC38B Negro	C43S015244
KROE-C435350	Epson C43S015350/20021 Negro	C43S015350
KROE-C435352	Epson C43S015352/ERC05B Negro	C43S015352
KROE-C435354	Epson C43S015354/ERC09B Negro	C43S015354
KROE-C435356	Epson C43S015356/ERC18B Negro	C43S015356
KROE-C435358	Epson C43S015358/ERC22B Negro	C43S015358
KROE-C435360	Epson C43S015360/ERC23B Negro	C43S015360
KROE-C435362	Epson C43S015362/ERC23BR Negro/Rojo	C43S015362
KROE-C435366	Epson C43S015366/ERC27B Negro	C43S015366
KROE-C435369	Epson C43S015369/ERC31B Negro	C43S015369
KROE-C435371	Epson C43S015371/ERC32B Negro	C43S015371
KROE-C435374	Epson C43S015374/ERC-38-B Negro	C43S015374
KROE-C435376	Epson C43S015376/ERC38BR Negro/Rojo	C43S015376
KROE-C435426	Epson C43S015426/ERC-11-B Negro	C43S015426
KROE-C435451	Epson C43S015451/ERC30B Negro	C43S015451
KROE-C435453	Epson C43S015453/ERC-35-B Negro	C43S015453
KROE-ERC15B	Epson M 170/ERC15B Negro sobre Blanco	C43S015184
KROE-LC3WRN9	Epson C53S624407/LC-3WRN9 Rojo	C53S624407
KROE-LC4YBP9	Epson C53S625403/LC-4YBP9 Negro sobre Amarillo	C53S625403
KROE-LC5GBF9	Epson C53S626403/LC-5GBF9 Negro sobre Verde	C53S626403
KROE-LC5YBW9	Epson C53S626408/LC-5YBW9 Negro sobre Amarillo	C53S626408
KROE-LC6WBC9	Epson C53S627404/LC-6WBC9 Negro sobre Blanco	C53S627404
KROE-RCR1BNA	Epson C53S635001/RC-R1BNA Negro sobre Blanco	C53S635001
KROE-RCT1WNA	Epson C53S633001/RC-T1WNA Negro sobre Blanco	C53S633001
KROE-RCT1YNA	Epson C53S633003/RC-T1YNA Negro sobre Amarillo	C53S633003
KROFU-2374	Fujitsu CA02374-C104 Negro	CA02374-C104
KROG-1AB04	Genicom 1A3000B04 Negro	1A3000B04
KROG-3AB01	Genicom 3A1600B01 Negro	3A1600B01
KROG-3AB02	Genicom 3A0100B02 Negro	3A0100B02
KROG-3AB21	Genicom 3A1600B21 Negro	3A1600B21
KROG-44AG02	Genicom 44A509160-G02 Negro	44A509160-G02
KROG-44AG03	Genicom 44A509160-G03 Negro	44A509160-G03
KROG-4AB02	Genicom 4A0040-B02 Negro	4A0040-B02
KROG-4AB05	Genicom 4A0040-B05 Negro	4A0040-B05
KROG-LA30RKC	Genicom EO-LA30R-KC Color	EO-LA30R-KC
KROI-45U3895	IBM 45U3895 Negro (4 uds.)	45U3895
KROIB-1040993	IBM/Lexmark 1040993 Negro	1040993
KROIB-1040995	IBM 1040995 Negro	1040995
KROIB-1040998	IBM 1040998 Negro	1040998
KROIB-1053685	IBM 1053685 Negro	1053685
KROIB-39U2551	IBM 39U2551 Negro (6 uds.)	39U2551
KROIB-41U2235	IBM 41U2235 Negro	41U2235
KROIB-54P1095	IBM 54P1095 Negro	54P1095
KROIB-57P1743	IBM 57P1743 Negro	57P1743
KROL-1040990	Lexmark 1040990 Negro	1040990
KROL-11A3540	Lexmark 0011A3540 Negro	0011A3540
KROL-11A3550	Lexmark 0011A3550 Negro	0011A3550
KROL-13L0034	Lexmark 13L0034 Negro	13L0034
KROL-3070166	Lexmark 3070166 Negro	3070166
KRON-00173	NEC 50000173 Negro	50000173
KRON-23255	NEC 50023255 Negro	50023255
KRON-23284	NEC 50023284 Negro	50023284
KROOK-092303	OTA 09002303 Negro	9002303
KROOK-092308	OTA 09002308 Negro	9002308
KROOK-092309	OTA 09002309 Negro	9002309
KROOK-092310	OTA 09002310 Negro	9002310
KROOK-092311	OTA 09002311 Negro	9002311
KROOK-092312	OTA 09002312 Color	9002312
KROOK-092315	OTA 09002315 Negro	9002315
KROOK-092316	OTA 09002316 Negro	9002316
KROOK-1126301	OTA 01126301 Negro	1126301

KROOK-40629303	OTA 40629303 Negro	40629303
KROOK-43503601	OTA 43503601 Negro	43503601
KROOK-43571802	OTA 43571802 Negro	43571802
KROOK-44173405	OTA 44173405 Negro	44173405
KROOK-44173406	OTA 44173406 Negro	44173406
KROOL-80670	Olivetti 80670 Negro	80670
KROOL-80673	Olivetti 80673	80673
KROOL-80836	Olivetti 80836 Negro	80836
KROOL-80940	Olivetti 80940 Negro	80940
KROOL-82025	Olivetti 82025 Negro	82025
KROOL-82094	Olivetti 82094 Negro	82094
KROOL-82575	Olivetti 82575	82575
KROOL-B0375	Olivetti B0375 Negro	B0375
KROPA-BP082	Panasonic KX-BP082 TTR Negro	KX-BP082
KROPA-FA133X	Panasonic KX-FA133X TTR Negro	KX-FA133X
KROPA-FA135X	Panasonic KX-FA135X TTR Negro	KX-FA135X
KROPA-FA136X	Panasonic KX-FA136X TTR Negro Pack Doble	KX-FA136X
KROPA-FA52X	Panasonic KX-FA52X TTR Negro Pack Doble	KX-FA52X
KROPA-FA54X	Panasonic KX-FA54X TTR Negro	KX-FA54X
KROPA-FA55X	Panasonic KX-FA55X TTR Negro	KX-FA55X
KROPA-FA57E	Panasonic KX-FA57E TTR Negro	KX-FA57E
KROPH-PFA301	Philips PFA301/906115301009 TTR Negro	PFA301
KROPH-PFA322	Philips PFA322/906115306011 TTR Negro	PFA322
KROPH-PFA324	Philips PFA324/251294976 TTR Negro	PFA324
KROPH-PFA331	Philips PFA331/906115312009 TTR Negro	PFA331
KROPH-PFA351	Philips PFA351/252422040 TTR Negro	PFA351
KROPH-PFA352	Philips PFA 352/253049762 TTR Negro	PFA352
KROPH-PFA363	Philips PFA-363/253503000 TTR Negro	PFA363
KROPH-SRC78	Philips SRC78 Negro	SRC78
KROPH-SRC96	Philips SRC96 Negro	SRC96
KROPH-SRC97	Philips SRC97/870900239702 Negro	SRC97
KROPH-SRC98	Philips SRC98/870900239802 Negro	SRC98
KROPR-56130	Primera Signature Z1 56130 TTR Negro	56130
KROPS-239901	PSI 870900239901 Negro	870900239901
KROPX-1076751	Printronix 107675-001 Negro	107675-001
KROPX-1076755	Printronix 107675-005 Negro	107675-005
KROPX-1076757	Printronix 107675-007 Negro	107675-007
KROPX-179499	Printronix 179499-001 Negro	179499-001
KRORI-920616	Ricoh 920616/TYPE500 TTR Negro	920616
KROSAG-TTR200	Sagem TTR200/906115312012 Negro	TTR200
KROSAG-TTR300	Sagem TTR300/906115312011 Negro	TTR300
KROSAG-TTR400	Sagem TTR400/252422074 Negro	TTR400
KROSAG-TTR480R	Sagem TTR480R/252601633 Negro	TTR480R
KROSAG-TTR900	Sagem TTR900/TTR815 Negro	TTR900
KROSAG-TTR900DUO	Sagem TTR900DUO/236902123 Negro, Pack Doble	TTR900DUO
KROSE-90375	Seikosha FB37551/90375 Negro	FB37551
KROSE-90380	Seikosha FB38051/90380 Negro	FB38051
KROSE-91611	Seikosha SP-16051/91611 Negro	SP-16051
KROSE-95520	Seikosha SBP-10051/95520 Negro	SBP-10051
KROSE-FB60051	Seiko Precision FB-60051/90600 Negro	FB-60051
KROSH-EA732R	Sharp EA-732R Púrpura	EA-732R
KROSH-EA781RBK	Sharp EA-781RBK Negro	EA-781RBK
KROSH-EA781RRD	Sharp EA-781RRD Rojo	EA-781RRD
KROSH-FO15CR	Sharp FO-15CR TTR Negro	FO-15CR
KROSH-UX15CR	Sharp UX-15CR TTR Negro	UX-15CR
KROSH-UX31CR	Sharp UX-31 CR TTR Negro	UX-31CR
KROSH-UX32CR	Sharp UX-32CR TTR Negro	UX-32CR
KROSH-UX3CR	Sharp UX-3CR TTR Negro, Pack Doble	UX-3CR
KROSH-UX91CR	Sharp UX-91CR TTR Negro	UX-91CR
KROSH-UX92CR	Sharp UX-92CR TTR Negro, Pack Doble	UX-92CR
KROSH-UX93CR	Sharp UX-93CR TTR Negro (3 uds.)	UX-93CR
KROSM-80981610	Star Micronics 80981610 Negro	80981610
KROSM-RC200B	Star Micronics RC-200B Negro	RC-200B
KROSM-RC200RB	Star Micronics RC-200RB Negro/Rojo	RC-200RB
KROSM-RC700B	Star Micronics 30980730/RC700B Negro	30980730
KROSM-RC700BR	Star Micronics 30980740/RC700B Negro/Rojo	30980740
KROTA-255670	Tally Genicom 255670-101 Negro	255670-101
KROTA-380124	Tally Genicom 380124 Negro	380124
KROTA-397995	Tally Genicom 397995 Negro	397995
KROTA-43393	Tally Genicom 043393 Negro	43393
KROTA-43446	Tally Genicom 043446 Negro	43446

KROTA-43837	Tally Genicom 043837 Negro	43837
KROTA-44810	Tally Genicom 044810 Negro	44810
KROTA-44829	Tally Genicom 044829 Negro	44829
KROTA-44830	Tally Genicom 044830 Negro	44830
KROTA-60097	Tally Genicom 060097 Negro	60097
KROTA-60425	Tally Genicom 060425 Negro	60425
KROTA-60426	Tally Genicom 060426 Negro	60426
KROTA-62471	Tally Genicom 062471 Negro	62471
KROTA-80294	Tally Genicom 080294 Negro	80294
KROTA-80296	Tally Genicom 080296 Negro	80296
KROTA-81905	Tally Genicom 081905 Negro	81905
KROTA-82725	Tally Genicom 082725 Negro	82725
KROTA-83683	Tally Genicom 083683 Negro	83683
KROTA-86039	Tally Genicom 086039 Negro	86039
KROTA-86041	Tally Genicom 086041 Negro	86041
KROTA-86043	Tally Genicom 086043 Negro	86043
KROTA-MIP480	Tally Genicom MIP480-KA Negro	MIP480-KA
KROW-15940	Wincor-Nixdorf 01750075146/10600015940 Negro	1750075146
KROW-202890	Wincor-Nixdorf 01750039419/10600202890 Negro	1750039419
KROW-203761	Wincor-Nixdorf 01750075523/10600203761 Negro	1750075523
KROW-211992	Wincor-Nixdorf 01750076156/10600211992 Negro	1750076156
KROW-3103	Wincor-Nixdorf 01770007379/10600003103 Negro	1770007379
KROW-3158	Wincor-Nixdorf 01750080000/10600003158 Negro	1750080000
KROW-3194	Wincor-Nixdorf 04107900408/10600003194 Negro	4107900408
KROW-3205	Wincor-Nixdorf 01750075154/10600003205 Negro	1750075154
KROW-3210	Wincor-Nixdorf 01770007393/10600003210 Negro	1770007393
KROW-3230	Wincor-Nixdorf 04151600008/10600003230 Negro	4151600008
KROW-3247	Wincor-Nixdorf 01750070810/10600003247 Negro	1750070810
KROW-3301	Wincor-Nixdorf 01770007383/10600003301 Negro	1770007383
KROW-3451	Wincor-Nixdorf 01554119900/10600003451 Negro	1554119900
KROXE-TC401	Xerox TC401 TTR Negro	TC401
KSIOXE-CQ8570B	Tinta Sólida Original Xerox 108R00934 Negra (2 barras)	108R00934
KSIOXE-CQ8570B4	Tinta Sólida Original Xerox 108R00935 Negra (4 barras)	108R00935
KSIOXE-CQ8570C	Tinta Sólida Original Xerox 108R00931 Cian (2 barras)	108R00931
KSIOXE-CQ8570M	Tinta Sólida Original Xerox 108R00932 Magenta (2 barras)	108R00932
KSIOXE-CQ8570Y	Tinta Sólida Original Xerox 108R00933 Amarilla (2 barras)	108R00933
KSIOXE-CQ8700B	Tinta Sólida Original Xerox 108R00998 Negra (2 barras)	108R00998
KSIOXE-CQ8700B4	Tinta Sólida Original Xerox 108R00999 Negra (4 barras)	108R00999
KSIOXE-CQ8700C	Tinta Sólida Original Xerox 108R00995 Cian (2 barras)	108R00995
KSIOXE-CQ8700M	Tinta Sólida Original Xerox 108R00996 Magenta (2 barras)	108R00996
KSIOXE-CQ8700Y	Tinta Sólida Original Xerox 108R00997 Amarilla (2 barras)	108R00997
KSIOXE-CQ8880B	Tinta Sólida Original Xerox 108R00957 Negra (6 barras)	108R00957
KSIOXE-CQ8880C	Tinta Sólida Original Xerox 108R00954 Cian (6 barras)	108R00954
KSIOXE-CQ8880M	Tinta Sólida Original Xerox 108R00955 Magenta (6 barras)	108R00955
KSIOXE-CQ8880Y	Tinta Sólida Original Xerox 108R00956 Amarilla (6 barras)	108R00956
KSIOXE-CQ9201B	Tinta Sólida Original Xerox 108R00832 Negra (4 barras)	108R00832
KSIOXE-CQ9201C	Tinta Sólida Original Xerox 108R00829 Cian (4 barras)	108R00829
KSIOXE-CQ9201M	Tinta Sólida Original Xerox 108R00830 Magenta (4 barras)	108R00830
KSIOXE-CQ9201Y	Tinta Sólida Original Xerox 108R00831 Amarilla (4 barras)	108R00831
KSIOXE-PH8200B	Tinta Sólida Original Xerox 016-2040-00 Negra (5 barras)	016-2040-00
KSIOXE-PH8200B10	Tinta Sólida Original Xerox 016-2044-00 Negra (10 barras)	016-2044-00
KSIOXE-PH8200C	Tinta Sólida Original Xerox 016-2041-00 Cian (2 barras)	016-2041-00
KSIOXE-PH8200C5	Tinta Sólida Original Xerox 016-2045-00 Cian (5 barras)	016-2045-00
KSIOXE-PH8200M	Tinta Sólida Original Xerox 016-2042-00 Magenta (2 barras)	016-2042-00
KSIOXE-PH8200M5	Tinta Sólida Original Xerox 016-2046-00 Magenta (5 barras)	016-2046-00
KSIOXE-PH8400B	Tinta Sólida Original Xerox 108R00604 (3 barras)	108R00604
KSIOXE-PH8400B6	Tinta Sólida Original Xerox 108R00608 (6 barras)	108R00608
KSIOXE-PH8400C	Tinta Sólida Original Xerox 108R00605 Cian (3 barras)	108R00605
KSIOXE-PH8400M	Tinta Sólida Original Xerox 108R00606 Magenta (3 barras)	108R00606
KSIOXE-PH8400Y	Tinta Sólida Original Xerox 108R00607 Amarilla (3 barras)	108R00607
KSIOXE-PH8500B	Tinta Sólida Original Xerox 108R00668 Negra (3 barras)	108R00668
KSIOXE-PH8500B6	Tinta Sólida Original Xerox 108R00672 Negra (6 barras)	108R00672
KSIOXE-PH8500C	Tinta Sólida Original Xerox 108R00669 Cian (3 barras)	108R00669
KSIOXE-PH8500M	Tinta Sólida Original Xerox 108R00670 Magenta (3 barras)	108R00670
KSIOXE-PH8500Y	Tinta Sólida Original Xerox 108R00671 Amarilla (3 barras)	108R00671
KSIOXE-PH8560B	Tinta Sólida Original Xerox 108R00726 Negra (3 barras)	108R00726
KSIOXE-PH8560B6	Tinta Sólida Original Xerox 108R00727 Negra (6 barras)	108R00727
KSIOXE-PH8560C	Tinta Sólida Original Xerox 108R00723 Cian (3 barras)	108R00723
KSIOXE-PH8560M	Tinta Sólida Original Xerox 108R00724 Magenta (3 barras)	108R00724
KSIOXE-PH8560Y	Tinta Sólida Original Xerox 108R00725 Amarilla (3 barras)	108R00725
KSIOXE-PH8860B	Tinta Sólida Original Xerox 108R00749 Negra (6 barras)	108R00749

KSIOXE-PH8860C	Tinta Sólida Original Xerox 108R00746 Cian (6 barras)	108R00746
KSIOXE-PH8860M	Tinta Sólida Original Xerox 108R00747 Magenta (6 barras)	108R00747
KSIOXE-PH8860Y	Tinta Sólida Original Xerox 108R00748 Amarilla (6 barras)	108R00748
KSIOXE-WC2424B	Tinta Sólida Original Xerox 108R00663 Negra (3 barras)	108R00663
KSIOXE-WC2424B6	Tinta Sólida Original Xerox 108R00664 Negra (6 barras)	108R00664
KSIOXE-WC2424C	Tinta Sólida Original Xerox 108R00660 Cian (3 barras)	108R00660
KSIOXE-WC2424M	Tinta Sólida Original Xerox 108R00661 Magenta (3 barras)	108R00661
KSIOXE-WC2424Y	Tinta Sólida Original Xerox 108R00662 Amarilla (3 barras)	108R00662
TACB-TN1050	Sustituye a Tóner Brother TN-1050	TN-1050
TACB-TN1050DP	Sustituye a Tóner Brother TN-1050 Negro, Pack Doble	TN-1050
TACB-TN200	Sustituye a Tóner Brother TN-200 Negro	TN-200
TACB-TN2000	Sustituye a Tóner Brother TN-2000	TN-2000
TACB-TN2000S4	Sustituye a Tóner Brother TN-2000 Negro, Set Ahorro (4 uds.)	TN-2000
TACB-TN2000XL	Sustituye a Tóner Brother TN-2000 XXL Negro	TN-2000
TACB-TN2000XLS4	Sustituye a Tóner Brother TN-2000 XXL Negro, Set Ahorro (4 uds.)	TN-2000
TACB-TN2005	Sustituye a Tóner Brother TN-2005 XL Negro	TN-2005
TACB-TN2005S4	Sustituye a Tóner Brother TN-2005 XL Negro, Set Ahorro (4 uds.)	TN-2005
TACB-TN2005XL	Sustituye a Tóner Brother TN-2005 XXL Negro	TN-2005
TACB-TN200S4	Sustituye a Tóner Brother TN-200 Negro, Set Ahorro (4 uds.)	TN-200
TACB-TN2010	Sustituye a Tóner Brother TN-2010 XXL Negro	TN-2010
TACB-TN2010S4	Sustituye a Tóner Brother TN-2010 XXL Negro, Set Ahorro (4 uds.)	TN-2010
TACB-TN2010XL	Sustituye a Tóner Brother TN-2010 XXL Negro	TN-2010
TACB-TN2120	Sustituye a Tóner Brother TN-2110/TN-2120 Negro	TN-2120
TACB-TN2120S4	Sustituye a Tóner Brother TN-2110/TN-2120 Negro, Set Ahorro (4 uds.)	TN-2120
TACB-TN2120XL	Sustituye a Tóner Brother TN-2120 XL Negro	TN-2120
TACB-TN2120XLS4	Sustituye a Tóner Brother TN-2120 XXL Negro, Set Ahorro (4 uds.)	TN-2120
TACB-TN2210	Sustituye a Tóner Brother TN-2210 Negro	TN-2210
TACB-TN2220	Sustituye a Tóner Brother TN-2220 Negro	TN-2220
TACB-TN2220	Sustituye a Tóner Brother TN-2220 Negro	TN-2220
TACB-TN2220XL	Sustituye a Tóner Brother TN-2220 XXL Negro	TN-2220
TACB-TN2220XL	Sustituye a Tóner Brother TN-2220 XXL Negro	TN-2220
TACB-TN2220XLS4	Sustituye a Tóner Brother TN-2220 XXL Negro, Set Ahorro (4 uds.)	TN-2220
TACB-TN2220XXL	Sustituye a Tóner Brother TN-2220 XXL Negro	TN-2220
TACB-TN230B	Sustituye a Tóner Brother TN-230BK Negro	TN-230BK
TACB-TN230C	Sustituye a Tóner Brother TN-230C Cian	TN-230C
TACB-TN230M	Sustituye a Tóner Brother TN-230M Magenta	TN-230M
TACB-TN230S4	Sustituye a Tóner Brother TN-230 CMYK, Set Ahorro (4 uds.)	TN-230
TACB-TN230Y	Sustituye a Tóner Brother TN-230Y Amarillo	TN-230Y
TACB-TN2310	Sustituye a Tóner Brother TN-2310 Negro	TN-2310
TACB-TN2320	Sustituye a Tóner Brother TN-2320 Negro	TN-2320
TACB-TN2320S4	Sustituye a Tóner Brother TN-2320 Negro, Set Ahorro 4 uds.	TN-2320
TACB-TN2320XL	Sustituye a Tóner Brother TN-2320 Negro XXL	TN-2320
TACB-TN2320XLS4	Sustituye a Tóner Brother TN-2320 XXL Negro, Set Ahorro (4 uds.)	TN-2320
TACB-TN241B	Sustituye a Tóner Brother TN-241BK Negro	TN-241BK
TACB-TN241C	Sustituye a Tóner Brother TN-241C XXL Cian	TN-241C
TACB-TN241M	Sustituye a Tóner Brother TN-241M XXL Magenta	TN-241M
TACB-TN241XLS3	Sustituye a Tóner Brother TN-241 XXL CMY, Set Ahorro (3 uds.)	TN-241 XXL
TACB-TN241XLS4	Sustituye a Tóner Brother TN-241 XXL CMYK, Set Ahorro (4 uds.)	TN-241
TACB-TN241Y	Sustituye a Tóner Brother TN-241Y XXL Amarillo	TN-241Y
TACB-TN242B	Sustituye a Tóner Brother TN-242 BK Negro	TN-242BK
TACB-TN242C	Sustituye a Tóner Brother TN-242C XXL Cian	TN-242C
TACB-TN242M	Sustituye a Tóner Brother TN-242M XXL Magenta	TN-242M
TACB-TN242S4	Sustituye a Tóner Brother TN-242 CMYK, Set Ahorro (4 uds.)	TN-242BK/TN-242Y
TACB-TN242Y	Sustituye a Tóner Brother TN-242Y XXL Amarillo	TN-242Y
TACB-TN245C	Sustituye a Tóner Brother TN-245C Cian	TN-245C
TACB-TN245M	Sustituye a Tóner Brother TN-245M Magenta	TN-245M
TACB-TN245S3	Sustituye a Tóner Brother TN-245 CMY, Set Ahorro (3 uds.)	TN-245
TACB-TN245S4	Sustituye a Tóner Brother TN-241BK/245CMY CMYK, Set Ahorro (4 uds.)	TN-241/TN245
TACB-TN245Y	Sustituye a Tóner Brother TN-245Y Amarillo	TN-245Y
TACB-TN246C	Sustituye a Tóner Brother TN-246C Cian	TN-246C
TACB-TN246M	Sustituye a Tóner Brother TN-246M Magenta	TN-246M
TACB-TN246Y	Sustituye a Tóner Brother TN-246Y Amarillo	TN-246Y
TACB-TN300	Sustituye a Tóner Brother TN-300 Negro	TN-300
TACB-TN300S4	Sustituye a Tóner Brother TN-300 Negro, Set Ahorro (4 uds.)	TN-300
TACB-TN3030	Sustituye a Tóner Brother TN-3030 XXL Negro	TN-3030
TACB-TN3060	Sustituye a Tóner Brother TN-3060 Negro	TN-3060
TACB-TN3060S4	Sustituye a Tóner Brother TN-3060 Negro, Set Ahorro (4 uds.)	TN-3060
TACB-TN3060XLS4	Sustituye a Tóner Brother TN-3060 XXL Negro, Set Ahorro (4 uds.)	TN-3060
TACB-TN3130	Sustituye a Tóner Brother TN-3130 XXL Negro	TN-3130
TACB-TN3170	Sustituye a Tóner Brother TN-3170 Negro	TN-3170
TACB-TN3170S4	Sustituye a Tóner Brother TN-3130/70 Negro, Set Ahorro (4 uds.)	TN-3170

TACB-TN3170XLS4	Sustituye a Tóner Brother TN-3130/70 XXL Negro, Set Ahorro (4 uds.)	TN-3170
TACB-TN320B	Sustituye a Tóner Brother TN-320BK XXL Negro	TN-320BK
TACB-TN320C	Sustituye a Tóner Brother TN-320C XXL Cian	TN-320C
TACB-TN320M	Sustituye a Tóner Brother TN-320M XXL Magenta	TN-320M
TACB-TN320Y	Sustituye a Tóner Brother TN-320Y XXL Amarillo	TN-320Y
TACB-TN3230	Sustituye a Tóner Brother TN-3230 XXL Negro	TN-3230
TACB-TN325B	Sustituye a Tóner Brother TN-325BK Negro	TN-325BK
TACB-TN325C	Sustituye a Tóner Brother TN-325C Cian	TN-325C
TACB-TN325M	Sustituye a Tóner Brother TN-325M Magenta	TN-325M
TACB-TN325S4	Sustituye a Tóner Brother TN-325 CMYK, Set Ahorro (4 uds.)	TN-325
TACB-TN325Y	Sustituye a Tóner Brother TN-325Y Amarillo	TN-325Y
TACB-TN3280	Sustituye a Tóner Brother TN-3280 Negro	TN-3280
TACB-TN3280DP	Sustituye a Tóner Brother TN-3280 TWIN Negro, Pack Doble	TN-3280TWIN/2PK
TACB-TN3280S4	Sustituye a Tóner Brother TN-3280 Negro, Set Ahorro (4 uds.)	TN-3280
TACB-TN3280XL	Sustituye a Tóner Brother TN-3230/TN-3280 XXL Negro	TN-3280
TACB-TN328M	Sustituye a Tóner Brother TN-328M Magenta	TN-328M
TACB-TN3330	Sustituye a Tóner Brother TN-3330 Negro	TN-3330
TACB-TN3330DP	Sustituye a Tóner Brother TN-3330 Negro, Pack Doble	TN-3330
TACB-TN3380	Sustituye a Tóner Brother TN-3380 Negro	TN-3380
TACB-TN3380DP	Sustituye a Tóner Brother TN-3380 TWIN Negro, Pack Doble	TN-3380TWIN/2PK
TACB-TN3390	Sustituye a Tóner Brother TN-3390 Negro	TN-3390
TACB-TN3390DP	Sustituye a Tóner Brother TN-3390 Negro, Pack Doble	TN3390TWIN
TACB-TN7300	Sustituye a Tóner Brother TN-7300 XXL Negro	TN-7300
TACB-TN7600	Sustituye a Tóner Brother TN-7600 Negro	TN-7600
TACB-TN7600S4	Sustituye a Tóner Brother TN-7600 Negro, Set Ahorro (4 uds.)	TN-7600
TACB-TN7600XL	Sustituye a Tóner Brother TN-7600 XXL Negro	TN-7600
TACB-TN7600XL	Sustituye a Tóner Brother TN-7600 XXL Negro	TN-7600
TACB-TN7600XLS4	Sustituye a Tóner Brother TN-7600 XXL Negro, Set Ahorro (4 uds.)	TN-7600
TACB-TN8000	Sustituye a Tóner Brother TN-8000 Negro	TN-8000
TACB-TN8000S4	Sustituye a Tóner Brother TN-8000 Negro, Set Ahorro (4 uds.)	TN-8000
TACC-1366A	Sustituye a Tóner Canon 1366A004 Negro	1366A004
TACC-1435A	Sustituye a Tóner Canon 1435A002 Magenta	1435A002
TACC-703	Sustituye a Tóner Canon 703 Negro	7616A005
TACC-703H	Sustituye a Tóner Canon 703H Negro XXL	7616A005
TACC-706	Sustituye a Tóner Canon 0264B002/706 Negro	0264B002
TACC-706DP	Sustituye a Tóner Canon 0264B002/706 Negro, Pack Doble	0264B002
TACC-708	Sustituye a Tóner Canon 708/0266B002 Negro	0266B002
TACC-708H	Sustituye a Tóner Canon 0917B002/708H Negro	0917B002
TACC-712	Sustituye a Tóner Canon 1870B002/712 Negro	1870B002
TACC-712XL	Sustituye a Tóner Canon 1870B002/712 XXL Negro	1870B002XXL
TACC-713	Sustituye a Tóner Canon 1871B002/713 Negro	1871B002
TACC-713XL	Sustituye a Tóner Canon 1871B002/713 XXL Negro	1871B002XXL
TACC-715	Sustituye a Tóner Canon 1975B002/715 Negro	1975B002
TACC-715HXL	Sustituye a Tóner Canon 1976B002/715H XL Negro	1976B002
TACC-719	Sustituye a Tóner Canon 3479B002/719 Negro	3479B002
TACC-719H	Sustituye a Tóner Canon 3480B002/719H Negro	3480B002
TACC-719XL	Sustituye a Tóner Canon 3479B002/719 XXL Negro	3479B002XXL
TACC-720	Sustituye a Tóner Canon 2617B002/720 Negro	2617B002
TACC-720DP	Sustituye a Tóner Canon 2617B002/720 Negro, Pack Doble	2617B002
TACC-724	Sustituye a Tóner Canon 724 Negro	3481B002
TACC-725	Sustituye a Tóner Canon 3484B002/725 Negro	3484B002
TACC-725XL	Sustituye a Tóner Canon 3484B002/725 XXL Negro	3484B002XXL
TACC-726	Sustituye a Tóner Canon 3483B002/726 Negro	3483B002
TACC-726XL	Sustituye a Tóner Canon 3483B002/726 XXL Negro	3483B002XXL
TACC-728	Sustituye a Tóner Canon 3500B002/728 Negro	3500B002
TACC-728S4	Sustituye a Tóner Canon 3500B002/728 Negro, Set Ahorro (4 uds.)	3500B002
TACC-737	Sustituye a Tóner Canon 9435B002/737 Negro	9435B002
TACC-CEXV1	Sustituye a Tóner Canon 4234A002/CEXV1 Negro	4234A002
TACC-CEXV11	Sustituye a Tóner Canon 9629A002/CEXV11 Negro	9629A002
TACC-CEXV11DP	Sustituye a Tóner Canon 9629A002/CEXV11 Negro, Pack Doble	9629A002
TACC-CEXV12	Sustituye a Tóner Canon 9634A002/CEXV12 Negro	9634A002
TACC-CEXV12DP	Sustituye a Tóner Canon 9634A002/CEXV12 Negro, Pack Doble	9634A002
TACC-CEXV13	Sustituye a Tóner Canon 0279B002/CEXV13 Negro	0279B002
TACC-CEXV13DP	Sustituye a Tóner Canon 0279B002/CEXV13 Negro, Pack Doble	0279B002
TACC-CEXV14	Sustituye a Tóner Canon 0384B002/CEXV14 Negro	0384B002
TACC-CEXV15	Sustituye a Tóner Canon 0387B002/CEXV15 Negro	0387B002
TACC-CEXV15DP	Sustituye a Tóner Canon 0387B002/CEXV15 Negro, Pack Doble	0387B002
TACC-CEXV17B	Sustituye a Tóner Canon 0262B002/CEXV17 Negro	0262B002
TACC-CEXV17C	Sustituye a Tóner Canon 0261B002/CEXV17 Cian	0261B002
TACC-CEXV17M	Sustituye a Tóner Canon 0260B002/CEXV17 Magenta	0260B002
TACC-CEXV17Y	Sustituye a Tóner Canon 0259B002/CEXV17 Amarillo	0259B002

TACC-CEXV18	Sustituye a Tóner Canon 0386B002/CEXV18 Negro	0386B002
TACC-CEXV21B	Sustituye a Tóner Canon 0452B002/CEXV21 Negro	0452B002
TACC-CEXV21C	Sustituye a Tóner Canon 0453B002/CEXV21 Cian	0453B002
TACC-CEXV21M	Sustituye a Tóner Canon 0454B002/CEXV21 Magenta	0454B002
TACC-CEXV21S4	Sustituye a Tóner Canon CEXV21 CMYK, Set Ahorro (4 uds.)	0452B002-0455B002
TACC-CEXV21Y	Sustituye a Tóner Canon 0455B002/CEXV21 Amarillo	0455B002
TACC-CEXV22	Sustituye a Tóner Canon 1872B002/CEXV22 Negro	1872B002
TACC-CEXV28B	Sustituye a Tóner Canon 2789B003/C-EXV28 Negro	2789B003
TACC-CEXV28C	Sustituye a Tóner Canon 2793B003/C-EXV28 Cian	2793B003
TACC-CEXV28M	Sustituye a Tóner Canon 2797B003/C-EXV28 Magenta	2797B003
TACC-CEXV28Y	Sustituye a Tóner Canon 2801B003/C-EXV28 Amarillo	2801B003
TACC-CEXV29B	Sustituye a Tóner Canon 2790B003/C-EXV29 Negro	2790B003
TACC-CEXV29C	Sustituye a Tóner Canon 2794B003/C-EXV29 Cian	2794B003
TACC-CEXV29M	Sustituye a Tóner Canon 2798B003/C-EXV29 Magenta	2798B003
TACC-CEXV29S4	Sustituye a Tóner Canon CEXV29 CMYK, Set Ahorro (4 uds.)	1657B006-1660B006
TACC-CEXV29Y	Sustituye a Tóner Canon 2802B003/C-EXV29 Amarillo	2802B003
TACC-CEXV3	Sustituye a Tóner Canon 6647A002/CEXV3 Negro	6647A002
TACC-CEXV34B	Sustituye a Tóner Canon 3782B002/C-EXV34/Negro	3782B002
TACC-CEXV34C	Sustituye a Tóner Canon 3783B002/C-EXV34 Cian	3783B002
TACC-CEXV34M	Sustituye a Tóner Canon 3784B002/C-EXV34 Magenta	3784B002
TACC-CEXV34Y	Sustituye a Tóner Canon 3785B002/C-EXV34 Amarillo	3785B002
TACC-CEXV37	Sustituye a Tóner Canon 2787B002/C-EXV37 Negro	2787B002
TACC-CEXV3DP	Sustituye a Tóner Canon 6647A002/CEXV3 Negro, Pack Doble	6647A002
TACC-CEXV4	Sustituye a Tóner Canon 6748A002/CEXV4 Negro	6748A002
TACC-CEXV43	Sustituye a Tóner Canon 2788B002/C-EXV43 Negro	2788B002
TACC-CEXV5	Sustituye a Tóner Canon 6836A002/CEXV5 Negro	6836A002
TACC-CEXV7	Sustituye a Tóner Canon 7814A002/CEXV7 Negro	7814A002
TACC-CEXV7DP	Sustituye a Tóner Canon 7814A002/CEXV7 Negro, Pack Doble	7814A002
TACC-CEXV8B	Sustituye a Tóner Canon 7629A002/CEXV8 Negro	7629A002
TACC-CEXV8C	Sustituye a Tóner Canon 7628A002/CEXV8 Cian	7628A002
TACC-CEXV8M	Sustituye a Tóner Canon 7627A002/CEXV8 Magenta	7627A002
TACC-CEXV8S4	Sustituye a Tóner Canon 7629-26A002 CMYK, Set Ahorro (4 uds.)	7626A002-7629A002
TACC-CEXV8Y	Sustituye a Tóner Canon 7626A002/CEXV8 Amarillo	7626A002
TACC-CRG710	Sustituye a Tóner Canon CRG710/0985B001 Negro	0985B001
TACC-CRG710H	Sustituye a Tóner Canon CRG-710H Negro	CRG-710H
TACC-CRG724H	Sustituye a Tóner Canon 3482B002/CRG-724H Negro	3482B002
TACC-E30	Sustituye a Tóner Canon E16/E30 Negro	1491A003
TACC-E30DP	Sustituye a Tóner Canon E16/E30 Negro, Pack Doble	1491A003
TACC-EP25	Sustituye a Tóner Canon 5773A004/EP-25	5773A004
TACC-EP27	Sustituye a Tóner Canon EP-27/8489 A 002	8489A002
TACC-EXV34S4	Sustituye a Tóner Canon C-EXV34 CMYK, Set Ahorro (4 uds.)	3782-85B002
TACC-FX1	Sustituye a Tóner Canon FX-1 Negro	1551A003
TACC-FX10	Sustituye a Tóner Canon FX-10 Negro	0263B002
TACC-FX10S4	Sustituye a Tóner Canon FX-10 Negro, Set Ahorro (4 uds.)	0263B002
TACC-FX6	Sustituye a Tóner Canon FX-6 Negro	1559A003/FX-6
TACC-GP215	Sustituye a Tóner Canon 1388A002/GP215 Negro	1388A002
TACC-GPR2	Sustituye a Tóner Canon 1389A003/GPR-2 Negro	1389A003
TACC-NP1010	Sustituye a Tóner Canon 1369A002/NP 1010 Negro, Pack Doble	1369A002
TACC-NPG10	Sustituye a Tóner Canon 1381A003/NPG-10 Negro	1381A003
TACC-NPG11	Sustituye a Tóner Canon 1382A002/NPG-11 Negro	1382A002/NPG-11
TACC-NPG11DP	Sustituye a Tóner Canon 1382A002/NPG-11 Negro, Pack Doble	1382A002/NPG-11
TACC-NPG13	Sustituye a Tóner Canon 1384A002/NPG-13 Negro	1384A002
TACC-NPG14	Sustituye a Tóner Canon 1385A001/NPG-14 Negro	1385A001
TACC-NPG1S4	Sustituye a Tóner Canon NPG-1 Negro, Set Ahorro (4 uds.)	1372A005
TACC-NPG3	Sustituye a Tóner Canon 1374A002/NPG-3 Negro	1374A002
TACC-NPG4	Sustituye a Tóner Canon 1375A002/NPG-4 Negro	1375A002
TACC-NPG5	Sustituye a Tóner Canon 1376A002/NPG-5 Negro	1376A002
TACC-NPG7	Sustituye a Tóner Canon 1377A003/NPG-7 Negro	1377A003
TACD-2660B	Sustituye a Tóner Dell 593-BBBU/RD80W Negro	593-BBBU
TACDL-1130	Sustituye a Tóner Dell 593-10962/P9H7G Negro	593-10962
TACDL-1130XL	Sustituye a Tóner Dell 593-10961/7H53W Negro	593-10961
TACDL-1130XLDP	Sustituye a Tóner Dell 593-10961/7H53W Negro, Pack Doble	593-10961
TACDL-1160	Sustituye a Tóner Dell 593-11108/HF44N Negro	593-11108
TACDL-1160DP	Sustituye a Tóner Dell 593-11108/HF44N Negro, Pack Doble	593-11108
TACDL-1235B	Sustituye a Tóner Dell 593-10493/N012K Negro	593-10493
TACDL-1235C	Sustituye a Tóner Dell 593-10494/J069K Cian	593-10494
TACDL-1235M	Sustituye a Tóner Dell 593-10495/J506K Magenta	593-10495
TACDL-1235S4	Sustituye a Tóner Dell 1235 CMYK, Set Ahorro (4 uds.)	593-1093-5931096
TACDL-1235Y	Sustituye a Tóner Dell 593-10496/M127K Amarillo	593-10496
TACDL-1250B	Sustituye a Tóner Dell 593-11016 Negro	593-11016
TACDL-1250B2	Sustituye a Tóner Dell 593-11140/DC9NW Negro	593-11140

TACDL-1250C	Sustituye a Tóner Dell 593-11021 Cian	593-11021
TACDL-1250C2	Sustituye a Tóner Dell 593-11141/79K5P Cian	593-11141
TACDL-1250M	Sustituye a Tóner Dell 593-11018 Magenta	593-11018
TACDL-1250M2	Sustituye a Tóner Dell 593-11142/4DV2W Magenta	593-11142
TACDL-1250S4	Sustituye a Tóner Dell 1250 CMYK, Set Ahorro (4 uds.)	592-11016-592-11019/21
TACDL-1250S4B	Sustituye a Tóner Dell 593-11140-43 CMYK, Set Ahorro (4 uds.)	593-11140-593-11143
TACDL-1250Y	Sustituye a Tóner Dell 593-11019 Amarillo	593-11019
TACDL-1250Y2	Sustituye a Tóner Dell 593-11143/W8X8P Amarillo	593-11143
TACDL-1260	Sustituye a Tóner Dell 593-11109/RWXNT Negro	593-11109
TACDL-1320B	Sustituye a Tóner Dell 593-10258 Negro	593-10258/DT615
TACDL-1320C	Sustituye a Tóner Dell 593-10259 Cian	593-10259/KU051
TACDL-1320M	Sustituye a Tóner Dell 593-10261 Magenta	593-10261/WM138
TACDL-1320S4	Sustituye a Tóner Dell 1320 CMYK, Set Ahorro (4 uds.)	593-1028-593-10261
TACDL-1320Y	Sustituye a Tóner Dell 593-10260 Amarillo	593-10260
TACDL-1600	Sustituye a Tóner Dell P4210/593-10082/1600 Negro	593-10082
TACDL-1600DP	Sustituye a Tóner Dell P4210/593-10082/1600 Negro, Pack Doble	593-10082
TACDL-1660B	Sustituye a Tóner Dell 593-11130/7C6F7 Negro	593-11130
TACDL-1660C	Sustituye a Tóner Dell 593-11129/5R6J0 Cian	593-11129
TACDL-1660M	Sustituye a Tóner Dell 593-11128/4J0X7 Magenta	593-11128
TACDL-1660S4	Sustituye a Tóner Dell C1660W CMYK, Set Ahorro (4 uds.)	593-11128-593-11131
TACDL-1660Y	Sustituye a Tóner Dell 593-11131/XY7N4 Amarillo	593-11131
TACDL-1815	Sustituye a Tóner Dell RF223/593-10153 Negro	593-10153
TACDL-2130B	Sustituye a Tóner Dell 593-10312/593-10320 Negro	593-10312
TACDL-2130C	Sustituye a Tóner Dell 593-10313/593-10321 Cian	593-10313
TACDL-2130M	Sustituye a Tóner Dell 593-10315/593-10323 Magenta	593-10315
TACDL-2130S4	Sustituye a Tóner Dell 2130/2135 CMYK, Set Ahorro (4 uds.)	593-10312/593-10315
TACDL-2130Y	Sustituye a Tóner Dell 593-10314/593-10322 Amarillo	593-10314
TACDL-2145M	Sustituye a Tóner Dell 593-10370 Magenta	593-10370
TACDL-2145Y	Sustituye a Tóner Dell 593-10371 Amarillo	593-10371
TACDL-2150B	Sustituye a Tóner Dell 593-11040/MY5TJ Negro	593-11040
TACDL-2150C	Sustituye a Tóner Dell 592-11674 Cian	592-11674
TACDL-2150M	Sustituye a Tóner Dell 592-11666 Magenta	592-11666
TACDL-2150Y	Sustituye a Tóner Dell 592-11670 Amarillo	592-11670
TACDL-2335	Sustituye a Tóner Dell 593-10330 Negro	593-10330
TACDL-2335XL	Sustituye a Tóner Dell 593-10329 Negro	593-10329
TACDL-2660B	Sustituye a Tóner Dell 593-BBBQ/Y5CW4 Negro	593-BBBQ
TACDL-2660C	Sustituye a Tóner Dell 593-BBBT/488NH Cian	593-BBBT
TACDL-2660M	Sustituye a Tóner Dell 593-BBBS/VXCWK Magenta	593-BBBS
TACDL-2660Y	Sustituye a Tóner Dell 593-BBBR/YR3W3 Amarillo	593-BBBR
TACDL-3010Y	Sustituye a Tóner Dell 3010 Amarillo	593-10156
TACDL-3460	Sustituye a Tóner Dell 593-11171/HJ0DH Negro	593-11171
TACDL-3760B	Sustituye a Tóner Dell 593-11115/86W6H Negro	593-11115
TACDL-3760C	Sustituye a Tóner Dell 593-11118/9FY32 Cian	593-11118
TACDL-3760M	Sustituye a Tóner Dell 593-11117/H5XJP Magenta	593-11117
TACDL-3760S4	Sustituye a Tóner Dell 593-11119-22 CMYK, Set Ahorro (4 uds.)	593-11119
TACDL-3760XLB	Sustituye a Tóner Dell 593-11119/4CHT7 Negro	593-11119
TACDL-3760XLC	Sustituye a Tóner Dell 593-11122/FMRYP Cian	593-11122
TACDL-3760XLM	Sustituye a Tóner Dell 593-11121/40W00 Magenta	593-11121
TACDL-3760XLY	Sustituye a Tóner Dell 593-11120/F8N91 Amarillo	593-11120
TACDL-3760Y	Sustituye a Tóner Dell 593-11116/RGJCW Amarillo	593-11116
TACDL-5110M	Sustituye a Tóner Dell 593-10124/5110 Magenta	593-10124
TACDL-5110S4	Sustituye a Tóner Dell 593-10119-25/5110 CMYK, Set Ahorro (4 uds.)	593-10120/593-10125
TACDL-5110XLB	Sustituye a Tóner Dell 593-10121/GD898/5110 Negro	593-10121
TACDL-5110Y	Sustituye a Tóner Dell 593-10122/5110 Amarillo	593-10122
TACDL-5130C	Sustituye a Tóner Dell 593-10922/5130 Cian	593-10922
TACDL-5130Y	Sustituye a Tóner Dell 593-10924/5130 Amarillo	593-10924
TACDL-546020B	Sustituye a Tóner Dell 593-11184/KM2NC Negro	593-11184
TACDL-7Y610	Sustituye a Tóner Dell 310-3545/7Y610 Negro	310-3545
TACDL-E310B	Sustituye a Tóner Dell 593-BBLR/2RMPPM Negro	593-BBLR
TACE-0709B	Sustituye a Tóner Epson C13S050709/0709 Negro	C13S050709
TACE-C2600C	Sustituye a Tóner Epson C13S050228/C2600 Cian	C13S050228
TACE-C2600S4	Sustituye a Tóner Epson C2600 CMYK, Set Ahorro (4 uds.)	C13S050226-29
TACE-C4100C	Sustituye a Tóner Epson C13S050146 Cian	C13S050146
TACE-C4100M	Sustituye a Tóner Epson C13S050147 Magenta	C13S050147
TACE-C4100S3	Sustituye a Tóner Epson C13S050146-48 CMY, Set Ahorro (3 uds.)	C13S050146
TACE-C4100Y	Sustituye a Tóner Epson C13S050148 Amarillo	C13S050148
TACE-C8500B	Sustituye a Tóner Epson C13S050038 Negro	C13S050038
TACE-C8500C	Sustituye a Tóner Epson C13S050041 Cian	C13S050041
TACE-C8500M	Sustituye a Tóner Epson C13S050040 Magenta	C13S050040
TACE-C8500S4	Sustituye a Tóner Epson C13S050038-41 CMYK, Set Ahorro (4 uds.)	C13S050038-41
TACE-C8500Y	Sustituye a Tóner Epson C13S050039 Amarillo	C13S050039

TACE-EPLN1600	Sustituye a Tóner Epson C13S051056 Negro	C13S051056
TACE-EPLN2700	Sustituye a Tóner Epson C13S051068 Negro	C13S051068
TACE-M1200	Sustituye a Tóner Epson C13S050522/M1200 Negro	C13S050522
TACE-M1400	Sustituye a Tóner Epson C13S050651 Negro	C13S050651
TACE-M2000	Sustituye a Tóner Epson M2000 Negro	C13S050437
TACE-M2000DP	Sustituye a Tóner Epson M2000 Negro, Pack Doble	C13S050437
TACE-M2300	Sustituye a Tóner Epson C13S050585/M2300 Negro	C13S050585
TACE-M2400	Sustituye a Tóner Epson C13S050582/C13S050584 Negro	C13S050582
TACH-92274AS4	Sustituye a Tóner HP 92274A Negro, Set Ahorro (4 uds.)	92274A
TACH-C4192A	Sustituye a Tóner HP C4192A Cian	C4192A
TACH-C4193A	Sustituye a Tóner HP C4193A Magenta	C4193A
TACH-C7115X	Sustituye a Tóner HP C7115X	C7115X
TACH-CB435A	Sustituye a Tóner HP CB435A/35A Negro	CB435A/35A
TACH-CB435ADP	Sustituye a Tóner HP CB435AD/35A Negro, Pack Doble	CB435A/35A
TACH-CB435AS4	Sustituye a Tóner HP CB435A/35A Negro, Set Ahorro (4 uds.)	CB435A/35A
TACH-CB435AXL	Sustituye a Tóner HP CB435A/35A XXL Negro	CB435A/35A
TACH-CB436A	Sustituye a Tóner HP CB436A/36A Negro	CB436A/36A
TACH-CB436ADP	Sustituye a Tóner HP CB436AD/36A Negro, Pack Doble	CB436A/36A
TACH-CB436AS4	Sustituye a Tóner HP CB436A/36A Negro, Set Ahorro (4 uds.)	CB436A
TACH-CB436AXL	Sustituye a Tóner HP CB436A/36A XXL Negro	CB436A/36A
TACH-CC364A	Sustituye a Tóner HP CC364A Negro	CC364A/64A
TACH-CC364AS4	Sustituye a Tóner HP CC364A Negro, Set Ahorro (4 uds.)	CC364A
TACH-CC364X	Sustituye a Tóner HP CC364X Negro	CC364X/64X
TACH-CC364XDP	Sustituye a Tóner HP CC364XD/64XD Negro, Pack Doble	CC364X/64X
TACH-CC364XS4	Sustituye a Tóner HP CC364X Negro, Set Ahorro (4 uds.)	CC364X
TACH-CE255A	Sustituye a Tóner HP CE255A Negro	CE255A
TACH-CE255AS4	Sustituye a Tóner HP CE255A Negro, Set Ahorro (4 uds.)	CE255A
TACH-CE255X	Sustituye a Tóner HP CE255X Negro	CE255X
TACH-CE255XDP	Sustituye a Tóner HP CE255XD/55X Negro, Pack Doble	CE255X
TACH-CE255XS4	Sustituye a Tóner HP CE255X Negro, Set Ahorro (4 uds.)	CE255X
TACH-CE264X	Sustituye a Tóner HP CE264X/64X Negro	CE264X
TACH-CE278A	Sustituye a Tóner HP CE278A Negro	CE278A
TACH-CE278ADDP	Sustituye a Tóner HP CE278AD/78A Negro, Pack Doble	CE278AD
TACH-CE278AS4	Sustituye a Tóner HP CE278A Negro, Set Ahorro (4 uds.)	CE278A
TACH-CE278AXL	Sustituye a Tóner HP CE278A XL Negro	CE278A
TACH-CE278L	Sustituye a Tóner HP CE278L XXL Negro	CE278L
TACH-CE278XS4	Sustituye a Tóner HP CE278A XXL Negro, Set Ahorro (4 uds.)	CE278X
TACH-CE285A	Sustituye a Tóner HP CE285A Negro	CE285A
TACH-CE285ADDP	Sustituye a Tóner HP CE285AD/85A Negro, Pack Doble	CE285AD
TACH-CE285AS4	Sustituye a Tóner HP CE285A Negro, Set Ahorro (4 uds.)	CE285A
TACH-CE285AXL	Sustituye a Tóner HP CE285A XXL Negro	CE285A
TACH-CE285AXLS4	Sustituye a Tóner HP CE285A XXL Negro, Set Ahorro (4 uds.)	CE285A
TACH-CE285L	Sustituye a Tóner HP CE285L XXL Negro	CE285L
TACH-CE390A	Sustituye a Tóner HP CE390A/90A Negro	CE390A
TACH-CE390AS4	Sustituye a Tóner HP CE390A Negro, Set Ahorro (4 uds.)	CE390A
TACH-CE390X	Sustituye a Tóner HP CE390X/90X Negro	CE390X
TACH-CE390XDP	Sustituye a Tóner HP CE390XD/90X Negro, Pack Doble	CE390X
TACH-CE390XS4	Sustituye a Tóner HP CE390X Negro, Set Ahorro (4 uds.)	CE390X
TACH-CE413L	Sustituye a Tóner HP CE413LXXL Magenta	CE413L
TACH-CE505A	Sustituye a Tóner HP CE505A Negro	CE505A
TACH-CE505AXL	Sustituye a Tóner HP CE505A XXL Negro	CE505A
TACH-CE505L	Sustituye a Tóner HP CE505L XXL Negro	CE505L
TACH-CE505X	Sustituye a Tóner HP CE505X Negro	CE505X
TACH-CE505XDDP	Sustituye a Tóner HP CE505XD/05X Negro, Pack Doble	CE505XD
TACH-CE505XS4	Sustituye a Tóner HP CE505X Negro, Set Ahorro (4 uds.)	CE505X
TACH-CF031A	Sustituye a Tóner HP CF031A Cian	CF031A
TACH-CF032A	Sustituye a Tóner HP CF032A Amarillo	CF032A
TACH-CF033A	Sustituye a Tóner HP CF033A Magenta	CF033A
TACH-CF201XS4	Sustituye a Tóner HP CF201X CMYK, Set Ahorro (4 uds.)	CF201X
TACH-CF226A	Sustituye a Tóner HP CF226A/26A Negro	CF226A
TACH-CF226X	Sustituye a Tóner HP CF226X/26A Negro	CF226X
TACH-CF280A	Sustituye a Tóner HP CF280A/80A Negro	CF280A
TACH-CF280ADP	Sustituye a Tóner HP CF280A/80A Negro, Pack Doble	CF280A
TACH-CF280X	Sustituye a Tóner HP CF280X/80X Negro	CF280X
TACH-CF280XDDP	Sustituye a Tóner HP CF280XD/80X Negro, Pack Doble	CF280XD
TACH-CF281A	Sustituye a Tóner HP CF281A/81A Negro	CF281A
TACH-CF281X	Sustituye a Tóner HP CF281X/81X Negro	CF281X
TACH-CF283A	Sustituye a Tóner HP CF283A /83A Negro	CF283A
TACH-CF283AXL	Sustituye a Tóner HP CF283A /83A XL Negro	CF283A
TACH-CF283X	Sustituye a Tóner HP CF283X/83X Negro	CF283X
TACH-CF360A	Sustituye a Tóner HP CF360A/508A Negro	CF360A

TACH-CF360X	Sustituye a Tóner HP CF360X/508X Negro	CF360X
TACH-CF361A	Sustituye a Tóner HP CF361A/508A Cian	CF361A
TACH-CF361X	Sustituye a Tóner HP CF361X/508X Cian	CF361X
TACH-CF362A	Sustituye a Tóner HP CF362A/508A Amarillo	CF362A
TACH-CF362X	Sustituye a Tóner HP CF362X/508X Amarillo	CF362X
TACH-CF363A	Sustituye a Tóner HP CF363A/508A Magenta	CF363A
TACH-CF363X	Sustituye a Tóner HP CF363X/508X Magenta	CF363X
TACH-CF400A	Sustituye a Tóner HP CF400A/201A Negro XL	CF400A
TACH-CF400X	Sustituye a Tóner HP CF400X/201X Negro	CF400X
TACH-CF401A	Sustituye a Tóner HP CF401A/201A Cian XL	CF401A
TACH-CF401X	Sustituye a Tóner HP CF401X/201X Cian	CF401X
TACH-CF402A	Sustituye a Tóner HP CF402A/201A Amarillo XL	CF402A
TACH-CF402X	Sustituye a Tóner HP CF402X/201X Amarillo	CF402X
TACH-CF403A	Sustituye a Tóner HP CF403A/201A Magenta XL	CF403A
TACH-CF403X	Sustituye a Tóner HP CF403X/201X Magenta	CF403X
TACH-CF410A	Sustituye a Tóner HP CF410A Negro	CF410A
TACH-CF410AS4	Sustituye a Tóner HP CF410A/410A CMYK, Set Ahorro (4 uds.)	CF410A
TACH-CF410X	Sustituye a Tóner HP CF410X/410X Negro	CF410X
TACH-CF410XS4	Sustituye a Tóner HP CF410X CMYK, Set Ahorro (4 uds.)	CF410X
TACH-CF411A	Sustituye a Tóner HP CF411A/410A Cian	CF411A
TACH-CF411X	Sustituye a Tóner HP CF411X/410X Cian	CF411X
TACH-CF412A	Sustituye a Tóner HP CF412A/410A Amarillo	CF412A
TACH-CF412X	Sustituye a Tóner HP CF412X/410X Amarillo	CF412X
TACH-CF413A	Sustituye a Tóner HP CF413A/410A Magenta	CF413A
TACH-CF413X	Sustituye a Tóner HP CF413X/410X Magenta	CF413X
TACH-Q1338A	Sustituye a Tóner HP Q1338A Negro	Q1338A/38A
TACH-Q1338ADP	Sustituye a Tóner HP Q1338D/38A Negro, Pack Doble	Q1338A/38A
TACH-Q1338AS4	Sustituye a Tóner HP Q1338A Negro, Set Ahorro (4 uds.)	Q1338A
TACH-Q1338AXL	Sustituye a Tóner HP Q1338A XXL Negro	Q1338A
TACH-Q1338AXLS4	Sustituye a Tóner HP Q1338A XXL Negro, Set Ahorro (4 uds.)	Q1338A
TACH-Q1339A	Sustituye a Tóner HP Q1339A Negro	Q1339A/39A
TACH-Q1339ADP	Sustituye a Tóner HP Q1339A Negro, Pack Doble	Q1339A/39A
TACH-Q2612A	Sustituye a Tóner HP Q2612A Negro	Q2612A
TACH-Q2612ADP	Sustituye a Tóner HP Q2612AD/12AD Negro, Pack Doble	Q2612A/12A
TACH-Q2612AS4	Sustituye a Tóner HP Q2612A Negro, Set Ahorro (4 uds.)	Q2612A/12A
TACH-Q2612L	Sustituye a Tóner HP Q2612L XXL Negro	Q2612L
TACH-Q2612X	Sustituye a Tóner HP Q2612X Negro XXL	Q2612X
TACH-Q2612XDP	Sustituye a Tóner HP Q2612XD/12XD Negro, Pack Doble	Q2612X/12X
TACH-Q2612XS4	Sustituye a Tóner HP Q2612X Negro, Set Ahorro (4 uds.)	Q2612X
TACH-Q2613XS4	Sustituye a Tóner HP Q2613X Negro, Set Ahorro (4 uds.)	Q2613X/13X
TACH-Q5942A	Sustituye a Tóner HP Q5942A Negro	Q5942A/42A
TACH-Q5942X	Sustituye a Tóner HP Q5942X Negro	Q5942X
TACH-Q5942XDP	Sustituye a Tóner HP Q5942XD/42X Negro, Pack Doble	Q5942X
TACH-Q5945A	Sustituye a Tóner HP Q5945A XXL Negro	Q5945A
TACH-Q5949A	Sustituye a Tóner HP Q5949A Negro	Q5949A
TACH-Q5949AS4	Sustituye a Tóner HP Q5949A Negro, Set Ahorro (4 uds.)	Q5949A
TACH-Q5949X	Sustituye a Tóner HP Q5949X Negro	Q5949X
TACH-Q5949XDP	Sustituye a Tóner HP Q5949XD/49 X Negro, Pack Doble	Q5949X/49X
TACH-Q5949XS4	Sustituye a Tóner HP Q5949X Negro, Set Ahorro (4 uds.)	Q5949X
TACH-Q6511A	Sustituye a Tóner HP Q6511A Negro	Q6511A
TACH-Q6511X	Sustituye a Tóner HP Q6511X Negro	Q6511X
TACH-Q6511XDP	Sustituye a Tóner HP Q6511XD/11X Negro, Pack Doble	Q6511X/11X
TACH-Q7553A	Sustituye a Tóner HP Q7553A Negro	Q7553A
TACH-Q7553X	Sustituye a Tóner HP Q7553X Negro	Q7553X
TACH-Q7553XDP	Sustituye a Tóner HP Q7553XD/53X Negro, Pack Doble	Q7553X
TACH-Q7553XS4	Sustituye a Tóner HP Q7553X Negro, Set Ahorro (4 uds.)	Q7553X
TACIB-75P4684	Sustituye a Tóner IBM 75P4684 Negro	75P4684
TACIB-75P4684DP	Sustituye a Tóner IBM 75P4684 Negro, Pack Doble	75P4684
TACIN-7121	Sustituye a Tóner Intec 43837121 Amarillo	43837121
TACIN-7122	Sustituye a Tóner Intec 43837122 Magenta	43837122
TACIN-7123	Sustituye a Tóner Intec 43837123 Cian	43837123
TACIN-7124	Sustituye a Tóner Intec 43837124 Negro	43837124
TACKM-1600B	Sustituye a Tóner Konica Minolta A0V301H Negro	A0V301H
TACKM-1600C	Sustituye a Tóner Konica Minolta A0V30HH Cian	A0V30HH
TACKM-1600M	Sustituye a Tóner Konica Minolta A0V30CH Magenta	A0V30CH
TACKM-1600S3	Sustituye a Tóner Konica Minolta A0V30NH CMY, Set Ahorro (3 uds.)	A0V30NH
TACKM-1600S4	Sustituye a Tóner Konica Minolta 1600W CMYK, Set Ahorro (4 uds.)	A0V301H-A0V30HH
TACKM-1600Y	Sustituye a Tóner Konica Minolta A0V306H Amarillo	A0V306H
TACKM-162	Sustituye a Tóner Konica Minolta 8937-784/TN114 Negro, Pack Doble	8937-784
TACKM-200	Sustituye a Tóner Konica Minolta 8938-415/TN211 Negro	8938-415
TACKM-223	Sustituye a Tóner Konica Minolta A202031/A202051/TN217 Negro	A202031

TACKM-350	Sustituye a Tóner Konica Minolta 8938-404/TN311 Negro	8938-404
TACKM-360	Sustituye a Tóner Konica Minolta 024B/TN511 Negro	024B
TACKM-363	Sustituye a Tóner Konica Minolta A202050/TN414 Negro	A202050
TACKM-451	Sustituye a Tóner Konica Minolta A070151/TN411K Negro	A070151
TACKM-5440M	Sustituye a Tóner Konica Minolta 171-0604-007 XXL Magenta	4539-233
TACKM-600	Sustituye a Tóner Konica Minolta 02XF/TN710 Negro	02XF
TACKM-C203B	Sustituye a Tóner Konica Minolta A0D7152/TN213K Negro	A0D7152
TACKM-C203C	Sustituye a Tóner Konica Minolta A0D7452/TN213C Cian	A0D7452
TACKM-C203M	Sustituye a Tóner Konica Minolta A0D7352/TN213M Magenta	A0D7352
TACKM-C203Y	Sustituye a Tóner Konica Minolta A0D7252/TN213Y Amarillo	A0D7252
TACKM-C220B	Sustituye a Tóner Konica Minolta A11G130/TN319K Negro	A11G130
TACKM-C220B2	Sustituye a Tóner Konica Minolta A11G131/TN216K Negro	A11G131
TACKM-C220C	Sustituye a Tóner Konica Minolta A11G430/TN319C Cian	A11G430
TACKM-C220C2	Sustituye a Tóner Konica Minolta A11G431/TN216C Cian	A11G431
TACKM-C220M	Sustituye a Tóner Konica Minolta A11G330/TN319M Magenta	A11G330
TACKM-C220M2	Sustituye a Tóner Konica Minolta A11G331/TN216M Magenta	A11G331
TACKM-C220Y	Sustituye a Tóner Konica Minolta A11G230/TN319Y Amarillo	A11G230
TACKM-C220Y2	Sustituye a Tóner Konica Minolta A11G231/TN216Y Amarillo	A11G231
TACKM-C550B	Sustituye a Tóner Konica Minolta A070150/TN611K Negro	A070150
TACKM-C550C	Sustituye a Tóner Konica Minolta A070450/TN611C Cian	A070450
TACKM-C550M	Sustituye a Tóner Konica Minolta A070350/TN611M Magenta	A070350
TACKM-C550Y	Sustituye a Tóner Konica Minolta A070250/TN611Y Amarillo	A070250
TACKM-DR113	Sustituye a Tambor Konica Minolta 4519-601/DR-113	4519-601
TACKM-EP103BS4	Sustituye a Tóner Konica Minolta 8935-804/EP103B Negro, Set Ahorro (4 uds.)	8935-804
TACKM-EP302B	Sustituye a Tóner Konica Minolta 8936-404/EP302B Negro, Pack Doble	8936-404
TACKM-EP410-S6	Sustituye a Tóner Konica Minolta 8916-402 Negro, Set Ahorro (6 uds.)	8916-402
TACKM-EP502B	Sustituye a Tóner Konica Minolta 8936-904/EP502B Negro	8936-904
TACKM-EP603B	Sustituye a Tóner Konica Minolta 8935-904/EP603B Negro	8935-904
TACKM-EP604B	Sustituye a Tóner Konica Minolta 8937-801/EP604B Negro	8937-801
TACKM-EP701B	Sustituye a Tóner Konica Minolta 8971-111/EP701B Negro	EP701B
TACKM-EP701BDP	Sustituye a Tóner Konica Minolta 8971-111/EP701B Negro, Pack Doble	8971-111
TACKM-PP1300	Sustituye a Tóner Konica Minolta 171-0566-002/PagePro 1300 Negro	171-0567-002
TACKM-PP5650	Sustituye a Tóner Konica Minolta A0FP021 Negro	A0FP021
TACKM-TB500D	Sustituye a Tóner Konica Minolta 30313/TK 500 D Negro	TK500D
TACKM-TN116BDP	Sustituye a Tóner Konica Minolta A1UC050/TN116 Negro, Pack Doble	A1UC050
TACKM-TN321B	Sustituye a Tóner Konica Minolta A33K150/TN-321K Negro	A33K150
TACKM-TN321C	Sustituye a Tóner Konica Minolta A33K450/TN-321C Cian	A33K450
TACKM-TN321M	Sustituye a Tóner Konica Minolta A33K350/TN-321M Magenta	A33K350
TACKM-TN321Y	Sustituye a Tóner Konica Minolta A33K250/TN-321Y Amarillo	A33K250
TACKY-1505	Sustituye a Tóner Kyocera 37029010 Negro	37029010
TACKY-1505DP	Sustituye a Tóner Kyocera 37029010 Negro, Pack Doble	37029010
TACKY-2530	Sustituye a Tóner Kyocera 370AB000/5PLPXLMPKX Negro	370AB000
TACKY-TK100	Sustituye a Tóner Kyocera TK-100 Negro	370PU5KW/TK100
TACKY-TK110	Sustituye a Tóner Kyocera TK-110 Negro	1T02FCODEO/TK110
TACKY-TK110S4	Sustituye a Tóner Kyocera TK-110 Negro, Set Ahorro (4 uds.)	1T02FCODEO
TACKY-TK110XL	Sustituye a Tóner Kyocera TK-110 XXL Negro	1T02FCODEO/TK110
TACKY-TK110XLS4	Sustituye a Tóner Kyocera TK-110XXL Negro, Set Ahorro (4 uds.)	1T02FCODEO
TACKY-TK1115	Sustituye a Tóner Kyocera 1T02M50NLO/TK-1115 Negro	1T02M50NLO
TACKY-TK1125	Sustituye a Tóner Kyocera 1T02M70NLO/TK-1125 Negro	1T02M70NLO
TACKY-TK1130	Sustituye a Tóner Kyocera 1T02MJ0NLO/TK-1130 Negro	1T02MJ0NLO
TACKY-TK1140	Sustituye a Tóner Kyocera 1T02ML0NLO/TK-1140 Negro	1T02ML0NLO
TACKY-TK1140DP	Sustituye a Tóner Kyocera 1T02ML0NLO/TK-1140 Negro, Pack Doble	1T02ML0NLO
TACKY-TK120	Sustituye a Tóner Kyocera TK-120 Negro	1T02G60DEO/TK120
TACKY-TK120S4	Sustituye a Tóner Kyocera TK-120 Negro, Set Ahorro (4 uds.)	1T02G60DEO/TK120
TACKY-TK120XL	Sustituye a Tóner Kyocera TK-120 XXL Negro	1T02G60DEO/TK120
TACKY-TK120XLS4	Sustituye a Tóner Kyocera TK-120XXL Negro, Set Ahorro (4 uds.)	1T02G60DEO/TK120
TACKY-TK130	Sustituye a Tóner Kyocera TK-130 Negro	TK-130
TACKY-TK130S4	Sustituye a Tóner Kyocera TK-130 Negro, Set Ahorro (4 uds.)	1T02H20EUO
TACKY-TK130XL	Sustituye a Tóner Kyocera TK-130 XXL Negro	1T02H20EUO
TACKY-TK130XLS4	Sustituye a Tóner Kyocera TK-130XXL Negro, Set Ahorro (4 uds.)	1T02H20EUO
TACKY-TK140	Sustituye a Tóner Kyocera TK-140 Negro	1T02H50EUO
TACKY-TK140S4	Sustituye a Tóner Kyocera TK-140 Negro, Set Ahorro (4 uds.)	1T02H50EUO
TACKY-TK140XL	Sustituye a Tóner Kyocera TK-140 XXL Negro	1T02H50EUO
TACKY-TK140XLS4	Sustituye a Tóner Kyocera TK-140XXL Negro, Set Ahorro (4 uds.)	1T02H50EUO
TACKY-TK160	Sustituye a Tóner Kyocera 1T02LY0NLO/TK-160 Negro	1T02LY0NLO
TACKY-TK160DP	Sustituye a Tóner Kyocera 1T02LY0NLO/TK-160 Negro, Pack Doble	1T02LY0NLO
TACKY-TK160XL	Sustituye a Tóner Kyocera 1T02LY0NLO/TK-160 XXL Negro	1T02LY0NLO
TACKY-TK160XLDP	Sustituye a Tóner Kyocera 1T02LY0NLO/TK-160 XXL Negro, Pack Doble	1T02LY0NLO
TACKY-TK17	Sustituye a Tóner Kyocera TK-17 Negro	370PT5KW/TK17
TACKY-TK170	Sustituye a Tóner Kyocera 1T02LZ0NLO/TK-170 Negro	1T02LZ0NLO/TK-170
TACKY-TK170S4	Sustituye a Tóner Kyocera TK-170 Negro, Set Ahorro (4 uds.)	1T02LZ0NLO

TACKY-TK170XL	Sustituye a Tóner Kyocera 1T02LZ0NLO/TK-170 XXL Negro	1T02LZ0NLO
TACKY-TK170XLS4	Sustituye a Tóner Kyocera TK-170XXL Negro, Set Ahorro (4 uds.)	1T02LZ0NLO
TACKY-TK17S4	Sustituye a Tóner Kyocera TK-17 Negro, Set Ahorro (4 uds.)	370PT5KW
TACKY-TK17XL	Sustituye a Tóner Kyocera TK-17 XXL Negro	370PT5KW/TK17
TACKY-TK17XLS4	Sustituye a Tóner Kyocera TK-17XXL Negro, Set Ahorro (4 uds.)	370PT5KW
TACKY-TK18	Sustituye a Tóner Kyocera TK-18 Negro	370QB0KX/TK18
TACKY-TK18S4	Sustituye a Tóner Kyocera TK-18 Negro, Set Ahorro (4 uds.)	370QB0KX
TACKY-TK18XL	Sustituye a Tóner Kyocera TK-18XXL Negro	370QB0KX/TK18
TACKY-TK18XLS4	Sustituye a Tóner Kyocera TK-18XXL Negro, Set Ahorro (4 uds.)	370QB0KX
TACKY-TK30	Sustituye a Tóner Kyocera TK-30 Negro	37027030
TACKY-TK30DP	Sustituye a Tóner Kyocera TK-30 Negro, Pack Doble	37027030
TACKY-TK310	Sustituye a Tóner Kyocera TK-310 Negro	1T02F80EU0/TK310
TACKY-TK3100	Sustituye a Tóner Kyocera 1T02MS0NLO/TK-3100 Negro	1T02MS0NLO
TACKY-TK310S4	Sustituye a Tóner Kyocera TK-310 Negro, Set Ahorro (4 uds.)	1T02F80EU0
TACKY-TK3110	Sustituye a Tóner Kyocera 1T02MT0NLO/TK-3110 Negro	1T02MT0NLO
TACKY-TK3130	Sustituye a Tóner Kyocera 1T02LV0NLO/TK-3130 Negro	1T02LV0NLO
TACKY-TK320	Sustituye a Tóner Kyocera TK-320 Negro	1T02F90EU0/TK320
TACKY-TK320S4	Sustituye a Tóner Kyocera TK-320 Negro, Set Ahorro (4 uds.)	1T02F90EU0
TACKY-TK320XL	Sustituye a Tóner Kyocera TK-320 XXL Negro	1T02F90EU0/TK320
TACKY-TK330	Sustituye a Tóner Kyocera TK-330 Negro	1T02GA0EU0/TK330
TACKY-TK340K	Sustituye a Tóner Kyocera 1T02J00EU0/TK-340 Negro	1T02J00EU0
TACKY-TK340KS4	Sustituye a Tóner Kyocera TK-340 Negro, Set Ahorro (4 uds.)	1T02J00EU0
TACKY-TK350	Sustituye a Tóner Kyocera 1T02J10EU0/TK-350 Negro	1T02J10EU0
TACKY-TK350S4	Sustituye a Tóner Kyocera TK 350 Negro, Set Ahorro (4 uds.)	1T02J10EU0
TACKY-TK360	Sustituye a Tóner Kyocera 1T02J20EU0/TK-360 Negro	1T02J20EU0
TACKY-TK410	Sustituye a Tóner Kyocera TK-410 Negro	370AM010/TK410
TACKY-TK410S	Sustituye a Tóner Kyocera TK-410S Negro	1T02NG0NLO
TACKY-TK420	Sustituye a Tóner Kyocera 370AR010/TK-420 Negro	370AR010
TACKY-TK435	Sustituye a Tóner Kyocera 1T02KH0NLO/TK-435 Negro	1T02KH0NLO/TK-435
TACKY-TK440	Sustituye a Tóner Kyocera 1T02F70EU0/TK-440 Negro	1T02F70EU0
TACKY-TK440DP	Sustituye a Tóner Kyocera 1T02F70EU0/TK-440 Negro, Pack Doble	1T02F70EU0
TACKY-TK450	Sustituye a Tóner Kyocera 1T02J50EU0/TK-450 Negro	TK-450
TACKY-TK475	Sustituye a Tóner Kyocera 1T0T2K30NL/TK-475 Negro	1T0T2K30NL
TACKY-TK50H	Sustituye a Tóner Kyocera TK-50H Negro	370QA0KX/TK50H
TACKY-TK50HXL	Sustituye a Tóner Kyocera TK-50H XXL Negro	370QA0KX/TK50H
TACKY-TK50S4	Sustituye a Tóner Kyocera TK-50 Negro, Set Ahorro (4 uds.)	370QA0KX
TACKY-TK510B	Sustituye a Tóner Kyocera TK-510K/1T02F30EU0 Negro	1T02F30EU0/TK510K
TACKY-TK510C	Sustituye a Tóner Kyocera TK-510C/1T02F3CEU0 Cian	1T02F3CEU0/TK510C
TACKY-TK510M	Sustituye a Tóner Kyocera TK-510M/1T02F3BEU0 Magenta	1T02F3BEU0/TK510M
TACKY-TK510S4	Sustituye a Tóner Kyocera TK-510 CMYK, Set Ahorro (4 uds.)	1T02F30EU0-AEU0
TACKY-TK510Y	Sustituye a Tóner Kyocera TK-510Y/1T02F3AEU0 Amarillo	1T02F3AEU0/TK510Y
TACKY-TK5135B	Sustituye a Tóner Kyocera 1T02PA0NLO/TK-5135K Negro	1T02PA0NLO
TACKY-TK5135C	Sustituye a Tóner Kyocera 1T02PACNLO/TK-5135C Cian	1T02PACNLO
TACKY-TK5135M	Sustituye a Tóner Kyocera 1T02PABNLO/TK-5135M Magenta	1T02PABNLO
TACKY-TK5135Y	Sustituye a Tóner Kyocera 1T02PAANLO/TK-5135Y Amarillo	1T02PAANLO
TACKY-TK5140B	Sustituye a Tóner Kyocera TK5140K Negro	TK-5140K
TACKY-TK5140C	Sustituye a Tóner Kyocera TK5140C Cian	TK-5140C
TACKY-TK5140M	Sustituye a Tóner Kyocera TK5140M Magenta	TK-5140M
TACKY-TK5140Y	Sustituye a Tóner Kyocera TK5140Y Amarillo	TK-5140Y
TACKY-TK5150B	Sustituye a Tóner Kyocera TK5150K Negro	1T02NS0NLO
TACKY-TK5150C	Sustituye a Tóner Kyocera TK5150C Cian	1T02NSCNLO
TACKY-TK5150M	Sustituye a Tóner Kyocera TK5150M Magenta	1T02NSBNLO
TACKY-TK5150Y	Sustituye a Tóner Kyocera TK5150Y Amarillo	1T02NSANLO
TACKY-TK520B	Sustituye a Tóner Kyocera TK-520 Negro	1T02HJ0EU0
TACKY-TK520C	Sustituye a Tóner Kyocera TK-520 Cian	1T02HJCEU0
TACKY-TK520M	Sustituye a Tóner Kyocera TK-520 Magenta	1T02HJBEU0
TACKY-TK520S4	Sustituye a Tóner Kyocera TK-520 CMYK, Set Ahorro (4 uds.)	1T02HJ0EU0-AEU0
TACKY-TK520Y	Sustituye a Tóner Kyocera TK-520 Amarillo	1T02HJAEU0
TACKY-TK55XL	Sustituye a Tóner Kyocera TK-55 XXL Negro	370QC0KX/TK55
TACKY-TK570B	Sustituye a Tóner Kyocera 1T02HG0EU0/TK-570K Negro	1T02HG0EU0
TACKY-TK570C	Sustituye a Tóner Kyocera 1T02HGCEU0/TK-570C Cian	1T02HGCEU0
TACKY-TK570M	Sustituye a Tóner Kyocera 1T02HGBEU0/TK-570M Magenta	1T02HGBEU0
TACKY-TK570S4	Sustituye a Tóner Kyocera TK-570 CMYK, Set Ahorro (4 uds.)	1T02HG0EU0-AEU0
TACKY-TK570Y	Sustituye a Tóner Kyocera 1T02HGAEU0/TK-570Y Amarillo	1T02HGAEU0
TACKY-TK60	Sustituye a Tóner Kyocera 37027060/TK-60 Negro	37027060/TK60
TACKY-TK603	Sustituye a Tóner Kyocera 370AE010/TK-603 Negro	370AE010
TACKY-TK60S4	Sustituye a Tóner Kyocera 37027060/TK-60 Negro, Set Ahorro (4 uds.)	37027060
TACKY-TK65XL	Sustituye a Tóner Kyocera TK-65 XXL Negro	370QD0KX/TK65
TACKY-TK685	Sustituye a Tóner Kyocera TK-685 Negro	TK685
TACKY-TK685DP	Sustituye a Tóner Kyocera TK-685 Negro, Pack Doble	TK685
TACKY-TK710	Sustituye a Tóner Kyocera TK-710 Negro	1T02G10EU

TACKY-TK7105	Sustituye a Tóner Kyocera TK-7105 Negro	1T02P8ONLO
TACKY-TK710DP	Sustituye a Tóner Kyocera TK-710 Negro, Pack Doble	1T02G10EU
TACKY-TK715	Sustituye a Tóner Kyocera TK-715 Negro	1T02GR0EUO
TACKY-TK725	Sustituye a Tóner Kyocera 1T02KR0NLO/TK-725 Negro	TK-725
TACKY-TK8505B	Sustituye a Tóner Kyocera 1T02LC0NLO/TK-8505K Negro	1T02LC0NLO
TACKY-TK8505C	Sustituye a Tóner Kyocera 1T02LCCNLO/TK-8505C Cian	1T02LCCNLO
TACKY-TK8505M	Sustituye a Tóner Kyocera 1T02LCBNLO/TK-8505M Magenta	1T02LCBNLO
TACKY-TK8505S4	Sustituye a Tóner Kyocera TK-8505 CMYK, Set Ahorro (4 uds.)	1T02LC0NLO-ANLO
TACKY-TK8505Y	Sustituye a Tóner Kyocera 1T02LCANLO/TK-8505Y Amarillo	1T02LCANLO
TACKY-TK8600B	Sustituye a Tóner Kyocera 1T02MN0NLO/TK-8600K Negro	1T02MN0NLO
TACKY-TK8600C	Sustituye a Tóner Kyocera 1T02MNCNLO/TK-8600C Cian	1T02MNCNLO
TACKY-TK8600M	Sustituye a Tóner Kyocera 1T02MNB0NLO/TK-8600M Magenta	1T02MNB0NLO
TACKY-TK8600Y	Sustituye a Tóner Kyocera 1T02MNA0NLO/TK-8600Y Amarillo	1T02MNA0NLO
TACKY-TK880B	Sustituye a Tóner Kyocera 1T02KA0NLO/TK-880K Negro	1T02KA0NLO
TACKY-TK880C	Sustituye a Tóner Kyocera 1T02KACNLO/TK-880C Cian	1T02KACNLO
TACKY-TK880S4	Sustituye a Tóner Kyocera TK-880 CMYK, Set Ahorro (4 uds.)	1T02KA0NLO-ANLO
TACKY-TK880Y	Sustituye a Tóner Kyocera 1T02KAANLO/TK-880Y Amarillo	1T02KAANLO
TACL-C510S4	Sustituye a Tóner Lexmark C510 CMYK, Set Ahorro (4 uds.)	020K1400-1403
TACL-C722B	Sustituye a Tóner Lexmark 00C7720KX Negro	00C7720KX
TACL-C722C	Sustituye a Tóner Lexmark 00C7720CX Cian	00C7720CX
TACL-C722M	Sustituye a Tóner Lexmark 00C7720MX Magenta	00C7720MX
TACL-C722Y	Sustituye a Tóner Lexmark 00C7720YX Amarillo	00C7720YX
TACL-C750B	Sustituye a Tóner Lexmark 0010B042K Negro	0010B042K
TACL-C750C	Sustituye a Tóner Lexmark 0010B042C Cian	0010B042C
TACL-C750M	Sustituye a Tóner Lexmark 0010B042M Magenta	0010B042M
TACL-C750Y	Sustituye a Tóner Lexmark 0010B042Y Amarillo	0010B042Y
TACL-C752B	Sustituye a Tóner Lexmark 0015G042K Negro	0015G042K
TACL-C752C	Sustituye a Tóner Lexmark 0015G042C Cian	0015G042C
TACL-C752M	Sustituye a Tóner Lexmark 0015G042M Magenta	0015G042M
TACL-C752Y	Sustituye a Tóner Lexmark 0015G042Y Amarillo	0015G042Y
TACL-C930B	Sustituye a Tóner Lexmark 0C930H2KG Negro	0C930H2KG
TACL-C930C	Sustituye a Tóner Lexmark 0C930H2CG Cian	0C930H2CG
TACL-C930M	Sustituye a Tóner Lexmark 0C930H2MG Magenta	0C930H2MG
TACL-C930Y	Sustituye a Tóner Lexmark 0C930H2YG Amarillo	0C930H2YG
TACL-E250	Sustituye a Tóner Lexmark 0E250A31E Negro	0E250A31E
TACL-E250DP	Sustituye a Tóner Lexmark 0E250A31E Negro, Pack Doble	0E250A31E
TACL-E462	Sustituye a Tóner Lexmark E462U11E Negro	0E462U11E
TACL-X203	Sustituye a Tóner Lexmark 0X203A11G/0X203A21G Negro	0X203A11G
TACOK-4515	Sustituye a Tóner OTA 09004245 Negro	9004245
TACOK-5700	Sustituye a Tóner OTA 40815604 Negro	40815604
TACOK-B2200	Sustituye a Tóner OTA 43640302/B2200 Negro	43640302
TACOK-B2200S4	Sustituye a Tóner OTA 43640302/B2200 Negro, Set Ahorro (4 uds.)	43640302
TACOK-B401	Sustituye a Tóner OTA 44992402 Negro	44992402
TACOK-B410	Sustituye a Tóner OTA 43979102 Negro	43979102
TACOK-B410S4	Sustituye a Tóner OTA 43979102 Negro, Set Ahorro (4 uds.)	43979102
TACOK-B411	Sustituye a Tóner OTA 44574702 Negro	44574702
TACOK-B430	Sustituye a Tóner OTA 43979202 XL Negro	43979202
TACOK-B430S4	Sustituye a Tóner OTA 43979202 XL Negro, Set Ahorro (4 uds.)	43979202
TACOK-B431	Sustituye a Tóner OTA 44574902 Negro	44574902
TACOK-B431XL	Sustituye a Tóner OTA 44917602 Negro	44917602
TACOK-B440	Sustituye a Tóner OTA 43979207/B440 Negro	43979207
TACOK-B4400	Sustituye a Tóner OTA 43502302/B4400 Negro	43502302
TACOK-B4400S4	Sustituye a Tóner OTA 43502302/B4400 Negro, Set Ahorro (4 uds.)	43502302
TACOK-B440S4	Sustituye a Tóner OTA 43979207/B440 Negro, Set Ahorro (4 uds.)	43979207
TACOK-B4600	Sustituye a Tóner OTA 43502002/B4600 Negro	43502002
TACOK-B4600S4	Sustituye a Tóner OTA 43502002/B4600 Negro, Set Ahorro (4 uds.)	43502002
TACOK-B930	Sustituye a Tóner OTA 01221601 Negro	1221601
TACOK-B930DP	Sustituye a Tóner OTA 01221601 Negro, Pack Doble	1221601
TACOK-C310B	Sustituye a Tóner OTA 44469803 Negro	44469803
TACOK-C310C	Sustituye a Tóner OTA 44469706 Cian	44469706
TACOK-C310M	Sustituye a Tóner OTA 44469705 Magenta	44469705
TACOK-C310S4	Sustituye a Tóner OTA 44469803-04 CMYK, Set Ahorro (4 uds.)	44469803/44469704-06
TACOK-C310Y	Sustituye a Tóner OTA 44469704 Amarillo	44469704
TACOK-C321B	Sustituye a Tóner OTA 44973536 Negro	44973536
TACOK-C321C	Sustituye a Tóner OTA 44973535 Cian	44973535
TACOK-C321M	Sustituye a Tóner OTA 44973534 Magenta	44973534
TACOK-C321S4	Sustituye a Tóner OTA 44973536-33 CMYK, Set Ahorro (4 uds.)	44973533-44973536
TACOK-C321Y	Sustituye a Tóner OTA 44973533 Amarillo	44973533
TACOK-C510B	Sustituye a Tóner OTA 44469804 Negro	44469804
TACOK-C510Y	Sustituye a Tóner OTA 44469722 Amarillo	44469722
TACOK-C531B	Sustituye a Tóner OTA 44973508 Negro	44973508

TACOK-C710B	Sustituye a Tóner OTA 43866108/C710 Negro	43866108
TACOK-C710C	Sustituye a Tóner OTA 43866107/C710 Cian	43866107
TACOK-C710M	Sustituye a Tóner OTA 43866106/C710 Magenta	43866106
TACOK-C710S4	Sustituye a Tóner OTA C710 CMYK, Set Ahorro (4 uds.)	43866105-43866108
TACOK-C710Y	Sustituye a Tóner OTA 43866105/C710 Amarillo	43866105
TACOK-DR8201	Sustituye a Tambor OTA 01008201	1008201
TACOK-DRB4600	Sustituye a Tambor OTA 43501902	43501902
TACOK-DRTYPE6	Sustituye a Tambor OTA 40709902/TYPE 6	40709902
TACOK-DRTYPE7	Sustituye a Tambor OTA 41019502/TYPE 7	41019502
TACOK-MB460	Sustituye a Tóner OTA 43979216 Negro	43979216
TACOK-MB460S4	Sustituye a Tóner OTA 43979216 Negro, Set Ahorro (4 uds.)	43979216
TACOK-ML5100	Sustituye a Tóner OTA 43821103 Negro	43821103
TACOK-OC510C	Sustituye a Tóner OTA 44469724 Cian	44469724
TACOK-OC510M	Sustituye a Tóner OTA 44469723 Magenta	44469723
TACOK-OC510S4	Sustituye a Tóner OTA 44469804-722 CMYK, Set Ahorro (4 uds.)	44469804/44469722-24
TACOK-OP20	Sustituye a Tóner OTA 41022502 Negro	41022502
TACOK-TYPE6	Sustituye a Tóner OTA Type 6 Negro	00079801/TYPE6
TACOK-TYPE9	Sustituye a Tóner OTA 01103402/TYPE 9 Negro	01103402/TYPE9
TACOK-TYPE9S4	Sustituye a Tóner OTA 01103402/TYPE 9 Negro, Set Ahorro (4 uds.)	01103402/TYPE9
TACOK-TYPE9XXL	Sustituye a Tóner OTA 01101202/TYPE 9 XXL Negro	01101202/TYPE9
TACOL-0360	Sustituye a Tóner Olivetti B0360 Negro	B0360
TACOL-0381	Sustituye a Tóner Olivetti B0381 Negro	B0381
TACOL-0446	Sustituye a Tóner Olivetti B0446 Negro	B0446
TACOL-0488	Sustituye a Tóner Olivetti B0488 Negro	B0488
TACOL-0526	Sustituye a Tóner Olivetti B0526/DCOPIA 18 MF Negro	B0526
TACOL-0592	Sustituye a Tóner Olivetti B0592 Negro	B0592
TACOL-0706	Sustituye a Tóner Olivetti B0706 Negro	B0706
TACOL-0946	Sustituye a Tóner Olivetti B0946 Negro	B0946
TACOL-0947	Sustituye a Tóner Olivetti B0947 Cian	B0947
TACOL-0948	Sustituye a Tóner Olivetti B0948 Magenta	B0948
TACOL-0949	Sustituye a Tóner Olivetti B0949 Amarillo	B0949
TACOL-951	Sustituye a Tóner Olivetti B0951 Amarillo	B0951
TACOL-952	Sustituye a Tóner Olivetti B0952 Magenta	B0952
TACOL-953	Sustituye a Tóner Olivetti B0953 Cian	B0953
TACOL-954	Sustituye a Tóner Olivetti B0954 Negro	B0954
TACOL-B095S4	Sustituye a Tóner Olivetti B095 CMYK, Set Ahorro (4 uds.)	B0951-B0954
TACPA-DQTU10C	Sustituye a Tóner Panasonic DQ-TU10C Negro	DQ-TU10C
TACPA-DQTU10J	Sustituye a Tóner Panasonic DQ-TU10J Negro	DQ-TU10J
TACPA-DQTU15E	Sustituye a Tóner Panasonic DQ-TU15E Negro	DQ-TU15E
TACPA-DQTU15EDP	Sustituye a Tóner Panasonic DQ-TU15E Negro, Pack Doble	DQ-TU15E
TACPA-DRFAD412X	Sustituye a Tambor Panasonic KX-FAD412X	KX-FAD412X
TACPA-FQTB20	Sustituye a Tóner Panasonic FQ-TK20 Negro	FQ-TK20
TACPA-FQTL24S6	Sustituye a Tóner Panasonic FQ-TL24 Negro, Set Ahorro (6 uds.)	FQ-TL24
TACPA-KXFA76X	Sustituye a Tóner Panasonic KX-FA76X Negro	KX-FA76X
TACPA-KXFA76XS4	Sustituye a Tóner Panasonic KX-FA76X Negro, Set Ahorro (4 uds.)	KX-FA76X
TACPA-KXFA83X	Sustituye a Tóner Panasonic KX-FA83X Negro	KX-FA83X
TACPA-KXFA83XS4	Sustituye a Tóner Panasonic KX-FA83X Negro, Set Ahorro (4 uds.)	KX-FA83X
TACPA-KXFA85X	Sustituye a Tóner Panasonic KX-FA85X Negro	KX-FA85X
TACPA-KXFAT411X	Sustituye a Tóner Panasonic KX-FAT411X Negro	KX-FAT411X
TACPA-KXFAT411XDP	Sustituye a Tóner Panasonic KX-FAT411X Negro, Pack Doble	KX-FAT411X
TACPA-KXFAT88X	Sustituye a Tóner Panasonic KX-FAT88X Negro	KX-FAT88X
TACPA-KXFAT88XDP	Sustituye a Tóner Panasonic KX-FAT88X Negro, Pack Doble	KX-FAT88X
TACPA-KXFAT92X	Sustituye a Tóner Panasonic KX-FAT92X Negro	KX-FAT92X
TACPA-KXFATC506	Sustituye a Tóner Panasonic KX-FATC506 Cian	KX-FATC506
TACPA-KXFATC506S4	Sustituye a Tóner Panasonic KX-FATC506-K509 CMYK, Set Ahorro (4 uds.)	KX-FATC506-KX-FATK509
TACPA-KXFATK509	Sustituye a Tóner Panasonic KX-FATK509 Negro	KX-FATK509
TACPA-KXFATM507	Sustituye a Tóner Panasonic KX-FATM507 Magenta	KX-FATM507
TACPA-KXFATY508	Sustituye a Tóner Panasonic KX-FATY508 Amarillo	KX-FATY508
TACRI-2551C	Sustituye a Tóner Ricoh 841505/TYPEMPC2551HE Cian	841505
TACRI-2551M	Sustituye a Tóner Ricoh 841506/TYPEMPC2551HE Magenta	841506
TACRI-2551Y	Sustituye a Tóner Ricoh 841507/TYPEMPC2551HE Amarillo	841507
TACRI-820009	Sustituye a Tóner Ricoh 820009/884202 Amarillo	820009
TACRI-820017	Sustituye a Tóner Ricoh 820017/884203 Magenta	820017
TACRI-820025	Sustituye a Tóner Ricoh 820025 Cian	820025
TACRI-DT3000B	Sustituye a Tóner Ricoh 888640/DT3000BLK Negro	888640
TACRI-DT3000C	Sustituye a Tóner Ricoh 888643/DT3000C Cian	888643
TACRI-DT3000M	Sustituye a Tóner Ricoh 888642/DT3000M Magenta	888642
TACRI-DT3000Y	Sustituye a Tóner Ricoh 888641/DT3000Y Amarillo	888641
TACRI-MP2500	Sustituye a Tóner Ricoh 841040 Negro	841040
TACRI-MP2500DP	Sustituye a Tóner Ricoh 841040 Negro, Pack Doble	841040
TACRI-MPC2550B	Sustituye a Tóner Ricoh 841196 Negro	841196

TACRI-MPC2550C	Sustituye a Tóner Ricoh 841197 Cian	841197
TACRI-MPC2550M	Sustituye a Tóner Ricoh 841198 Magenta	841198
TACRI-MPC2550S4	Sustituye a Tóner Ricoh MPC2550 CMYK, Set Ahorro (4 uds.)	841196-841199
TACRI-MPC2550Y	Sustituye a Tóner Ricoh 841199 Amarillo	841199
TACRI-MPC2551	Sustituye a Tóner Ricoh 841504/TPEMPC2551E Negro	841504
TACRI-MPC3001	Sustituye a Tóner Ricoh 841424 Negro	841424
TACRI-MPC3500B	Sustituye a Tóner Ricoh 888608 Negro	888608
TACRI-MPC3500C	Sustituye a Tóner Ricoh 888611 Cian	888611
TACRI-MPC3500M	Sustituye a Tóner Ricoh 888610 Magenta	888610
TACRI-MPC3500Y	Sustituye a Tóner Ricoh 888609 Amarillo	888609
TACRI-MPC3502B	Sustituye a Tóner Ricoh 841651 Negro	841651
TACRI-MPC3502C	Sustituye a Tóner Ricoh 841654 Cian	841654
TACRI-MPC3502M	Sustituye a Tóner Ricoh 841653 Magenta	841653
TACRI-MPC3502Y	Sustituye a Tóner Ricoh 841652 Amarillo	841652
TACRI-SP1000	Sustituye a Tóner Ricoh 413196/SP1000 Negro	413196
TACRI-SP1000DP	Sustituye a Tóner Ricoh 413196/SP1000 Negro, Pack Doble	413196
TACRI-SP200	Sustituye a Tóner Ricoh 407254 Negro	407254
TACRI-SPC250B	Sustituye a Tóner Ricoh 407543 Negro	407543
TACRI-SPC250C	Sustituye a Tóner Ricoh 407544 Cian	407544
TACRI-SPC250M	Sustituye a Tóner Ricoh 407545 Magenta	407545
TACRI-SPC250Y	Sustituye a Tóner Ricoh 407546 Amarillo	407546
TACRI-SPC430B	Sustituye a Tóner Ricoh 821074 Negro	821074
TACRI-SPC430C	Sustituye a Tóner Ricoh 821077 Cian	821077
TACRI-SPC430M	Sustituye a Tóner Ricoh 821076 Magenta	821076
TACRI-SPC430Y	Sustituye a Tóner Ricoh 821075 Amarillo	821075
TACRI-SPC810	Sustituye a Tóner Ricoh 820001/884201 /884205 Negro	820001
TACRI-TYPE105C	Sustituye a Tóner Ricoh TYPE105C Cian	888037
TACRI-TYPE105M	Sustituye a Tóner Ricoh TYPE105M Magenta	888036
TACRI-TYPE105Y	Sustituye a Tóner Ricoh TYPE105Y Amarillo	888035
TACRI-TYPE1200	Sustituye a Tóner Ricoh 406837/TYPE1200E Negro	406837
TACRI-TYPE1200DP	Sustituye a Tóner Ricoh 406837/TYPE1200E Negro, Pack Doble	406837
TACRI-TYPE1220	Sustituye a Tóner Ricoh Typ-1220D	888087
TACRI-TYPE1230S6	Sustituye a Tóner Ricoh 885094/TYPE1230D Negro, Set Ahorro (6 uds.)	885094
TACRI-TYPE1250	Sustituye a Tóner Ricoh TYPE1250D Negro	885258
TACRI-TYPE1270S6	Sustituye a Tóner Ricoh 888261/TYPE1270D Negro, Set Ahorro (6 uds.)	888261
TACRI-TYPE1610	Sustituye a Tóner Ricoh 923961/TYPE1610 Negro	923961
TACRI-TYPE2210S6	Sustituye a Tóner Ricoh 885229/TYPE2210D Negro, Set Ahorro (6 uds.)	885229
TACRI-TYPE2220S6	Sustituye a Tóner Ricoh TYPE2220D Negro, Set Ahorro (6 uds.)	885266
TACRI-TYPE30	Sustituye a Tóner Ricoh TYPE30 Negro	889604
TACRI-TYPE3200DS4	Sustituye a Tóner Ricoh 885060/TYPE3200D Negro, Set Ahorro (4 uds.)	885060
TACRI-TYPE3210S4	Sustituye a Tóner Ricoh 888182/TYPE3210D Negro, Set Ahorro (4 uds.)	888182
TACRI-TYPE3300B	Sustituye a Tóner Ricoh 841124/TYPE3300K Negro	841124
TACRI-TYPE3300C	Sustituye a Tóner Ricoh 841127/TYPE3300C Cian	841127
TACRI-TYPE3300M	Sustituye a Tóner Ricoh 841126/TYPE3300M Magenta	841126
TACRI-TYPE3300S4	Sustituye a Tóner Ricoh TYPE3300 CMYK, Set Ahorro (4 uds.)	841124-841127
TACRI-TYPE3300Y	Sustituye a Tóner Ricoh 841125/TYPE3300Y Amarillo	841125
TACRI-TYPE5205DS4	Sustituye a Tóner Ricoh 885241/TYPE5205D Negro, Set Ahorro (4 uds.)	885241
TACRI-TYPE5502B	Sustituye a Tóner Ricoh 841683/TYPE5502E Negro	841683
TACRI-TYPE5502C	Sustituye a Tóner Ricoh 841686/TYPE5502E Cian	841686
TACRI-TYPE5502M	Sustituye a Tóner Ricoh 841685/TYPE5502E Magenta	841685
TACRI-TYPE5502Y	Sustituye a Tóner Ricoh 841684/TYPE5502E Amarillo	841684
TACRI-TYPE6210S4	Sustituye a Tóner Ricoh 885394/TYPE6210D Negro, Set Ahorro (4 uds.)	885394
TACRI-TYPE8205	Sustituye a Tóner Ricoh 885344/TYPE8205D Negro	885344
TACRI-TYPEM2C	Sustituye a Tóner Ricoh 885324/TYPEM2C Cian	885324
TACRI-TYPEM2Y	Sustituye a Tóner Ricoh 885322/TYPEM2Y Amarillo	885322
TACRI-TYPEP2C	Sustituye a Tóner Ricoh 888238/TYPEP2C Cian	888238
TACRI-TYPEP2M	Sustituye a Tóner Ricoh 888237/TYPEP2M Magenta	888237
TACRI-TYPEP2Y	Sustituye a Tóner Ricoh 888236/TYPEP2Y Amarillo	888236
TACRI-TYPER2B	Sustituye a Tóner Ricoh 888344/TYPER2 Negro	888344
TACRI-TYPER2C	Sustituye a Tóner Ricoh 888347/TYPER2 Cian	888347
TACRI-TYPER2M	Sustituye a Tóner Ricoh 888346/TYPER2 Magenta	888346
TACRI-TYPER2S4	Sustituye a Tóner Ricoh 888344-888347 CMYK, Set Ahorro (4 uds.)	888344
TACRI-TYPER2Y	Sustituye a Tóner Ricoh 888345/TYPER2 Amarillo	888345
TACRI-TYPET2C	Sustituye a Tóner Ricoh 888486/TYPET2 Cian	888486
TACRI-TYPET2M	Sustituye a Tóner Ricoh 888485/TYPET2 Magenta	888485
TACSA-1610D2S4	Sustituye a Tóner Samsung ML-1610D2 Negro, Set Ahorro (4 uds.)	ML-1610D2
TACSA-1630DP	Sustituye a Tóner Samsung ML-D1630A Negro, Pack Doble	MLD1630A
TACSA-2850DP	Sustituye a Tóner Samsung ML-2850 Negro, Pack Doble	MLD2850B
TACSA-2850S4	Sustituye a Tóner Samsung ML-2850 Negro, Set Ahorro (4 uds.)	MLD2850B
TACSA-810	Sustituye a Tóner Samsung MLC-810 Negro	MLC-810
TACSA-CLPY350A	Sustituye a Tóner Samsung CLP-Y350A Amarillo	CLP-Y350A

TACSA-SF5100DP	Sustituye a Tóner Samsung SF-5100D3 Negro, Pack Doble	SF-5100D3
TACSH-AL100TD	Sustituye a Tóner Sharp AL-100 TD Negro	AL-100TD
TACSH-AL110DC	Sustituye a Tóner Sharp AL-110 DC Negro	AL-110DC
TACSH-AL214TD	Sustituye a Tóner Sharp AL-214TD Negro	AL-214TD
TACSH-AR016T	Sustituye a Tóner Sharp AR-016T Negro	AR-016T
TACSH-AR168LT	Sustituye a Tóner Sharp AR-168LT Negro	AR-168LT
TACSH-AR202T	Sustituye a Tóner Sharp AR-202T Negro	AR-202T
TACSH-AR270LT	Sustituye a Tóner Sharp AR-270LT Negro	AR-270LT
TACSH-AR310MT	Sustituye a Tóner Sharp AR-310LT (MT) Negro	AR-310MT
TACSH-AR455LT	Sustituye a Tóner Sharp AR-455LT Negro	AR-455LT
TACSH-AR455LTD	Sustituye a Tóner Sharp AR-455LT Negro, Pack Doble	AR-455LT
TACSH-DRAL100	Sustituye a Tambor Sharp AL-100DR	AL-100DR
TACSH-MX27GTAA	Sustituye a Tóner Sharp MX-27GTCA Cian	MX-27GTCA
TACSH-MX27GTBA	Sustituye a Tóner Sharp MX-27GTBA Negro	MX-27GTBA
TACSH-MX27GTMA	Sustituye a Tóner Sharp MX-27GTMA Magenta	MX-27GTMA
TACSH-MX27GYA	Sustituye a Tóner Sharp MX-27GYA Amarillo	MX-27GYA
TACSH-MX31GTAA	Sustituye a Tóner Sharp MX-31GTCA Cian	MX-31GTCA
TACSH-MX31GTBA	Sustituye a Tóner Sharp MX-31GTBA Negro	MX-31GTBA
TACSH-MX31GTMA	Sustituye a Tóner Sharp MX-31GTMA Magenta	MX-31GTMA
TACSH-MX31GYA	Sustituye a Tóner Sharp MX-31GYA Amarillo	MX-31GYA
TACSH-MXC38GTA	Sustituye a Tóner Sharp MX-C38GTC Cian	MX-C38GTC
TACSH-MXC38GTB	Sustituye a Tóner Sharp MX-C38GTB Negro	MX-C38GTB
TACSH-MXC38GTM	Sustituye a Tóner Sharp MX-C38GTM Magenta	MX-C38GTM
TACSH-MXC38GTY	Sustituye a Tóner Sharp MX-C38GTY Amarillo	MX-C38GTY
TACSH-SF235LT1	Sustituye a Tóner Sharp SF-235LT1 Negro	SF-235LT1
TACTA-43346	Sustituye a Tóner Tally Genicom T9316/043346 Negro	43346
TACTA-43848	Sustituye a Tóner Tally Genicom 043848 Negro	43848
TACTA-43848DP	Sustituye a Tóner Tally Genicom 043848 Negro, Pack Doble	43848
TACTS-T1200E	Sustituye a Tóner Toshiba 66099501/T1200E Negro	66099501
TACTS-T1600EDP	Sustituye a Tóner Toshiba 66061614/T1600E Negro, Pack Doble	66061614
TACTS-T1640EHC	Sustituye a Tóner Toshiba 6AJ00000024/T1640EHC Negro	6AJ00000024
TACTS-T2320E	Sustituye a Tóner Toshiba 6AK00000009/T2320E Negro	6AK00000009
TACTS-T2340E	Sustituye a Tóner Toshiba 6AJ00000025/T2340E Negro	6AJ00000025
TACTS-T3500ES4	Sustituye a Tóner Toshiba 66089631/T3500E Negro, Set Ahorro (4 uds.)	66089631
TACTS-T3520E	Sustituye a Tóner Toshiba 6AK00000007/T3520E Negro	6AK00000007
TACU-44022	Sustituye a Tóner Utax 4402210010 Negro	4402210010
TACU-44022DP	Sustituye a Tóner Utax 4402210010 Negro, Pack Doble	4402210010
TACU-44030	Sustituye a Tóner Utax 4403010010 Negro	4403010010
TACU-44035	Sustituye a Tóner Utax 4403510010 Negro	4403510010
TACU-44045	Sustituye a Tóner Utax 4404510010 Negro	4404510010
TACU-44118	Sustituye a Tóner Utax 4411810010 Negro	4411810010
TACU-4418DP	Sustituye a Tóner Utax 4411810010 Negro, Pack Doble	4411810010
TACU-44128	Sustituye a Tóner Utax 4412810010 Negro	4412810010
TACU-44128XL	Sustituye a Tóner Utax 4412810010 XL Negro	4412810010
TACU-44130	Sustituye a Tóner Utax 4413010010 Negro	4413010010
TACU-44135	Sustituye a Tóner Utax 4413510010 Negro	4413510010
TACU-44135DP	Sustituye a Tóner Utax 4413510010 Negro, Pack Doble	4413510010
TACU-44228	Sustituye a Tóner Utax 4422810010 Negro	4422810010
TACU-44240	Sustituye a Tóner Utax 4424010010 Negro	4424010010
TACU-44245	Sustituye a Tóner Utax 4424510010 Negro	4424510010
TACU-44340	Sustituye a Tóner Utax 4434010010 Negro	4434010010
TACU-44345	Sustituye a Tóner Utax 4434510010 Negro	4434510010
TACU-44360	Sustituye a Tóner Utax 4436010010 Negro	4436010010
TACU-44726B	Sustituye a Tóner Utax 4472610010 Negro	4472610010
TACU-44726C	Sustituye a Tóner Utax 4472610011 Cian	4472610011
TACU-44726M	Sustituye a Tóner Utax 4472610014 Magenta	4472610014
TACU-44726Y	Sustituye a Tóner Utax 4472610016 Amarillo	4472610016
TACU-6041	Sustituye a Tóner Utax 604110010 Negro	604110010
TACU-6116	Sustituye a Tóner Utax 611610010 Negro	611610010
TACU-6118	Sustituye a Tóner Utax 611810010 Negro	611810015
TACU-6118DP	Sustituye a Tóner Utax 611810010 Negro, Pack Doble	611810015
TACU-6120	Sustituye a Tóner Utax 612010010 Negro	612010010
TACU-6120DP	Sustituye a Tóner Utax 612010010 Negro, Pack Doble	612010010
TACU-6125100	Sustituye a Tóner Utax 612510010 Negro	612510010
TACU-6125101	Sustituye a Tóner Utax 612510115 XXL Negro	612510115
TACU-6125110	Sustituye a Tóner Utax 612511010 Negro	612511010
TACU-613010	Sustituye a Tóner Utax 613010010 Negro	613010010
TACU-613011	Sustituye a Tóner Utax 613011010 Negro	613011010
TACU-6135	Sustituye a Tóner Utax 613511010 Negro	613511010
TACU-6145	Sustituye a Tóner Utax 614510010 Negro	614510010
TACU-6230	Sustituye a Tóner Utax 623010010 Negro	623010010

TACU-6525B	Sustituye a Tóner Utax 652510010 Negro	652510010
TACU-6525C	Sustituye a Tóner Utax 652510011 Cian	652510011
TACU-6525M	Sustituye a Tóner Utax 652510014 Magenta	652510014
TACU-6525Y	Sustituye a Tóner Utax 652510016 Amarillo	652510016
TACXA-ILUB	Sustituye a Tóner Xante Ilumina Negro	200-100225
TACXA-ILUC	Sustituye a Tóner Xante Ilumina Cian	200-100222
TACXA-ILUM	Sustituye a Tóner Xante Ilumina Magenta	200-100223
TACXA-ILUY	Sustituye a Tóner Xante Ilumina Amarillo	200-100224
TACXE-DR552	Sustituye a Tambor Xerox 013R00552	013R00552
TACXE-PE16DP	Sustituye a Tóner Xerox 113R00667/PE16 Negro, Pack Doble	113R00667
TACXE-PH3150	Sustituye a Tóner Xerox 109R00747 Negro	109R00747
TACXE-PH3150DP	Sustituye a Tóner Xerox 109R00747 Negro, Pack Doble	109R00747
TACXE-PH3260	Sustituye a Tóner Xerox 106R02777 Negro	106R02777
TACXE-PH3500	Sustituye a Tóner Xerox 106R01149 Negro	106R01149
TACXE-PH3500DP	Sustituye a Tóner Xerox 106R01149 Negro, Pack Doble	106R01149
TACXE-PH6000B	Sustituye a Tóner Xerox 106R01630 Negro	106R01630
TACXE-PH6000C	Sustituye a Tóner Xerox 106R01627 Cian	106R01627
TACXE-PH6000M	Sustituye a Tóner Xerox 106R01628 Magenta	106R01628
TACXE-PH6000S4	Sustituye a Tóner Xerox Phaser 6000 CMYK, Set Ahorro (4 uds.)	106R01627-106R01630
TACXE-PH6000Y	Sustituye a Tóner Xerox 106R01629 Amarillo	106R01629
TACXE-PH6020B	Sustituye a Tóner Xerox 106R02759 Negro	106R02759
TACXE-PH6020C	Sustituye a Tóner Xerox 106R02756 Cian	106R02756
TACXE-PH6020M	Sustituye a Tóner Xerox 106R02757 Magenta	106R02757
TACXE-PH6020Y	Sustituye a Tóner Xerox 106R02758 Amarillo	106R02758
TACXE-PH6110B	Sustituye a Tóner Xerox 106R01274 Negro	106R01274
TACXE-PH6110C	Sustituye a Tóner Xerox 106R01271 Cian	106R01271
TACXE-PH6110M	Sustituye a Tóner Xerox 106R01272 Magenta	106R01272
TACXE-PH6110Y	Sustituye a Tóner Xerox 106 R 01273 Amarillo	106R01273
TACXE-PH6120B	Sustituye a Tóner Xerox 113R00692/Phaser 6120 Negro	113R00692
TACXE-PH6120M	Sustituye a Tóner Xerox 113R00695/Phaser 6120 Magenta	113R00695
TACXE-PH6120S4	Sustituye a Tóner Xerox Phaser 6120 CMYK, Set Ahorro (4 uds.)	113R00692-113R00695
TACXE-PH6120Y	Sustituye a Tóner Xerox 113R00694/Phaser 6120 Amarillo	113R00694
TACXE-PH6125B	Sustituye a Tóner Xerox 106R01334 Negro	106R01334
TACXE-PH6125C	Sustituye a Tóner Xerox 106R01331 Cian	106R01331
TACXE-PH6125M	Sustituye a Tóner Xerox 106R01332 Magenta	106R01332
TACXE-PH6125S4	Sustituye a Tóner Xerox 6125 CMYK, Set Ahorro (4 uds.)	106R01331-106R01334
TACXE-PH6125Y	Sustituye a Tóner Xerox 106R01333 Amarillo	106R01333
TACXE-PH6130B	Sustituye a Tóner Xerox 106R01281/6130 Negro	106R01281
TACXE-PH6130C	Sustituye a Tóner Xerox 106R01278/6130 Cian	106R01278
TACXE-PH6130M	Sustituye a Tóner Xerox 106R01279/6130 Magenta	106R01279
TACXE-PH6130Y	Sustituye a Tóner Xerox 106R01280/6130 Amarillo	106R01280
TACXE-PH6140B	Sustituye a Tóner Xerox 106R01479/Phaser 6140 Amarillo	106R01479
TACXE-PH6300B	Sustituye a Tóner Xerox 106R01085/Phaser 6300 Negro	106R01085
TACXE-PH6300Y	Sustituye a Tóner Xerox 106R01084/Phaser 6300 Amarillo	106R01084
TACXE-PH6350M	Sustituye a Tóner Xerox 106R01145/Phaser 6350 Magenta	106R01145
TACXE-PH6350Y	Sustituye a Tóner Xerox 106R01146/Phaser 6350 Amarillo	106R01146
TACXE-PH6360B	Sustituye a Tóner Xerox 106R01221/Phaser 6360 Negro	106R01221
TACXE-PH6500B	Sustituye a Tóner Xerox 106R01597 Negro	106R01597
TACXE-PH6500C	Sustituye a Tóner Xerox 106R01594 Cian	106R01594
TACXE-PH6500M	Sustituye a Tóner Xerox 106R01595 Magenta	106R01595
TACXE-PH6500S4	Sustituye a Tóner Xerox Phaser 6500 CMYK, Set Ahorro (4 uds.)	106R01594-106R01597
TACXE-PH6500Y	Sustituye a Tóner Xerox 106R01596 Amarillo	106R01596
TACXE-PH6600B	Sustituye a Tóner Xerox 106R02248 Negro	106R02248
TACXE-PH6600C	Sustituye a Tóner Xerox 106R02245 Cian	106R02245
TACXE-PH6600M	Sustituye a Tóner Xerox 106R02246 Magenta	106R02246
TACXE-PH6600S4	Sustituye a Tóner Xerox 106R02232-29 HC CMYK, Set Ahorro (4 uds.)	106R02229-106R02232
TACXE-PH6600XLB	Sustituye a Tóner Xerox 106R02232 HC-Negro	106R02232
TACXE-PH6600XLC	Sustituye a Tóner Xerox 106R02229 HC-Cian	106R02229
TACXE-PH6600XLM	Sustituye a Tóner Xerox 106R02230 HC-Magenta	106R02230
TACXE-PH6600XLY	Sustituye a Tóner Xerox 106R02231 HC Amarillo	106R02231
TACXE-PH6600Y	Sustituye a Tóner Xerox 106R02247 Amarillo	106R02247
TACXE-PH7400B	Sustituye a Tóner Xerox 106R01080 Negro	106R01080
TACXE-PH7400C	Sustituye a Tóner Xerox 106R01077 Cian	106R01077
TACXE-PH7750B	Sustituye a Tóner Xerox 106R00652 Negro	106R00652
TACXE-PH7750C	Sustituye a Tóner Xerox 106R00653 Cian	106R00653
TACXE-PH7750M	Sustituye a Tóner Xerox 106R00654 Magenta	106R00654
TACXE-PH7750S4	Sustituye a Tóner Xerox 106R00652-55 CMYK, Set Ahorro (4 uds.)	106R00652-106R00655
TACXE-PH7750Y	Sustituye a Tóner Xerox 106R00655 Amarillo	106R00655
TACXE-WC3119B	Sustituye a Tóner Xerox 013R00625/Workcentre 3119 Negro	013R00625
TACXE-WC7235B	Sustituye a Tóner Xerox 006R01175 Negro	006R01175
TACXE-WC7235C	Sustituye a Tóner Xerox 006R01176 Cian	006R01176

TACXE-WC7235M	Sustituye a Tóner Xerox 006R01177 Magenta	006R01177
TACXE-WC7235Y	Sustituye a Tóner Xerox 006R01178 Amarillo	006R01178
TACXE-WCP245	Sustituye a Tóner Xerox 006R01046 Negro	006R01046
TACXE-WCXD100	Sustituye a Tóner Xerox 006R00914 Negro	006R00914
TACXE-WCXD100DP	Sustituye a Tóner Xerox 006R00914 Negro, Pack Doble	006R00914
TAOB-DR1050	Tambor Original Brother DR-1050	DR-1050
TAOB-DR130CL	Tambor Original Brother DR-130CL CMYK	DR-130CL
TAOB-DR200	Tambor Original Brother DR-200/26911	DR-200
TAOB-DR2000	Tambor Original Brother DR-2000	DR-2000
TAOB-DR2005	Tambor Original Brother DR-2005	DR-2005
TAOB-DR2100	Tambor Original Brother DR-2100	DR-2100
TAOB-DR2200	Tambor Original Brother DR-2200	DR-2200
TAOB-DR2300	Tambor Original Brother DR-2300	DR-2300
TAOB-DR230CL	Tambor Original Brother DR-230 CL CMYK	DR-230CL
TAOB-DR241CLS4	Tambor Original Brother DR-241CL CMYK (4 uds.)	DR-241CL
TAOB-DR3000	Tambor Original Brother DR-3000	DR-3000
TAOB-DR3100	Tambor Original Brother DR-3100	DR-3100
TAOB-DR3200	Tambor Original Brother DR-3200	DR-3200
TAOB-DR320CL	Tambor Original Brother DR-320CL CMYK	DR-320CL
TAOB-DR321CL	Tambor Original Brother DR-321CL CMYK	DR-321CL
TAOB-DR3300	Tambor Original Brother DR-3300	DR-3300
TAOB-DR3400	Tambor Original Brother DR3400	DR-3400
TAOB-DR4000	Tambor Original Brother DR-4000	DR-4000
TAOB-DR5500	Tambor Original Brother DR-5500	DR-5500
TAOB-DR6000	Tambor Original Brother DR-6000	DR-6000
TAOB-DR7000	Tambor Original Brother DR-7000	DR-7000
TAOB-DR8000	Tambor Original Brother DR-8000/27797	DR-8000
TAOB-DRPH12CL	Tambor Original Brother PH-12CL	PH-12CL
TAOB-HC05B	Tóner Original Brother HC-05BK Negro	HC-05BK
TAOB-TN02C	Tóner Original Brother TN-02C/26931 Cian	TN-02C
TAOB-TN02M	Tóner Original Brother TN-02M/26932 Magenta	TN-02M
TAOB-TN02Y	Tóner Original Brother TN-02Y/26933 Amarillo	TN-02Y
TAOB-TN03C	Tóner Original Brother TN-03C Cian	TN-03C
TAOB-TN03Y	Tóner Original Brother TN-03Y Amarillo	TN-03Y
TAOB-TN04B	Tóner Original Brother TN-04BK Negro	TN-04BK
TAOB-TN04C	Tóner Original Brother TN-04C Cian	TN-04C
TAOB-TN04M	Tóner Original Brother TN-04M Magenta	TN-04M
TAOB-TN04Y	Tóner Original Brother TN-04Y Amarillo	TN-04Y
TAOB-TN1050	Tóner Original Brother TN-1050 Negro	TN-1050
TAOB-TN11B	Tóner Original Brother TN-11BK Negro	TN-11BK
TAOB-TN11C	Tóner Original Brother TN-11C Cian	TN-11C
TAOB-TN11M	Tóner Original Brother TN-11M Magenta	TN-11M
TAOB-TN11Y	Tóner Original Brother TN-11Y Amarillo	TN-11Y
TAOB-TN130B	Tóner Original Brother TN-130BK Negro	TN-130BK
TAOB-TN130C	Tóner Original Brother TN-130C Cian	TN-130C
TAOB-TN130M	Tóner Original Brother TN-130M Magenta	TN-130M
TAOB-TN130Y	Tóner Original Brother TN-130Y Amarillo	TN-130Y
TAOB-TN135B	Tóner Original Brother TN-135BK Negro	TN-135BK
TAOB-TN135C	Tóner Original Brother TN-135C Cian	TN-135C
TAOB-TN135M	Tóner Original Brother TN-135M Magenta	TN-135M
TAOB-TN135Y	Tóner Original Brother TN-135Y Amarillo	TN-135Y
TAOB-TN1700	Tóner Original Brother TN-1700 Negro	TN-1700
TAOB-TN200	Tóner Original Brother TN-200/26909 Negro	TN-200
TAOB-TN2000	Tóner Original Brother TN-2000 Negro	TN-2000
TAOB-TN2005	Tóner Original Brother TN-2005 Negro	TN-2005
TAOB-TN2010	Tóner Original Brother TN-2010 Negro	TN-2010
TAOB-TN2110	Tóner Original Brother TN-2110 Negro	TN-2110
TAOB-TN2120	Tóner Original Brother TN-2120 Negro	TN-2120
TAOB-TN2210	Tóner Original Brother TN-2210 Negro	TN-2210
TAOB-TN2220	Tóner Original Brother TN-2220 Negro	TN-2220
TAOB-TN230B	Tóner Original Brother TN-230BK Negro	TN-230BK
TAOB-TN230C	Tóner Original Brother TN-230C Cian	TN-230C
TAOB-TN230M	Tóner Original Brother TN-230M Magenta	TN-230M
TAOB-TN230Y	Tóner Original Brother TN-230Y Amarillo	TN-230Y
TAOB-TN2310	Tóner Original Brother TN-2310 Negro	TN-2310
TAOB-TN2320	Tóner Original Brother TN-2320 Negro	TN-2320
TAOB-TN241B	Tóner Original Brother TN-241BK Negro	TN-241BK
TAOB-TN241C	Tóner Original Brother TN-241C Cian	TN-241C
TAOB-TN241M	Tóner Original Brother TN-241M Magenta	TN-241M
TAOB-TN241Y	Tóner Original Brother TN-241Y Amarillo	TN-241Y
TAOB-TN242B	Tóner Original Brother TN-242BK Negro	TN-242BK

TAOB-TN242C	Tóner Original Brother TN-242C Cian	TN-242C
TAOB-TN242M	Tóner Original Brother TN-242M Magenta	TN-242M
TAOB-TN242Y	Tóner Original Brother TN-242Y Amarillo	TN-242Y
TAOB-TN245C	Tóner Original Brother TN-245C Cian	TN-245C
TAOB-TN245M	Tóner Original Brother TN-245M Magenta	TN-245M
TAOB-TN245Y	Tóner Original Brother TN-245Y Amarillo	TN-245Y
TAOB-TN246C	Tóner Original Brother TN-246C Cian	TN-246C
TAOB-TN246M	Tóner Original Brother TN-246M Magenta	TN-246M
TAOB-TN246Y	Tóner Original Brother TN-246Y Amarillo	TN-246Y
TAOB-TN3030	Tóner Original Brother TN-3030 Negro	TN-3030
TAOB-TN3060	Tóner Original Brother TN-3060 Negro	TN-3060
TAOB-TN3130	Tóner Original Brother TN-3130/TN-550 Negro	TN-3130
TAOB-TN3170	Tóner Original Brother TN-3170 Negro	TN-3170
TAOB-TN320B	Tóner Original Brother TN-320BK Negro	TN-320BK
TAOB-TN320C	Tóner Original Brother TN-320C Cian	TN-320C
TAOB-TN320M	Tóner Original Brother TN-320M Magenta	TN-320M
TAOB-TN320Y	Tóner Original Brother TN-320Y Amarillo	TN-320Y
TAOB-TN321B	Tóner Original Brother TN-321BK Negro	TN-321BK
TAOB-TN321C	Tóner Original Brother TN-321C Cian	TN-321C
TAOB-TN321M	Tóner Original Brother TN-321M Magenta	TN-321M
TAOB-TN321Y	Tóner Original Brother TN-321Y Amarillo	TN-321Y
TAOB-TN3230	Tóner Original Brother TN-3230 Negro	TN-3230
TAOB-TN325B	Tóner Original Brother TN-325BK Negro	TN-325BK
TAOB-TN325C	Tóner Original Brother TN-325C Cian	TN-325C
TAOB-TN325M	Tóner Original Brother TN-325M Magenta	TN-325M
TAOB-TN325Y	Tóner Original Brother TN-325Y Amarillo	TN-325Y
TAOB-TN326B	Tóner Original Brother TN-326BK Negro	TN-326BK
TAOB-TN326C	Tóner Original Brother TN-326C Cian	TN-326C
TAOB-TN326M	Tóner Original Brother TN-326M Magenta	TN-326M
TAOB-TN326Y	Tóner Original Brother TN-326Y Amarillo	TN-326Y
TAOB-TN3280	Tóner Original Brother TN-3280 Negro	TN-3280
TAOB-TN3280DP	Tóner Original Brother TN-3280 Negro, Pack Doble	TN-3280TWIN
TAOB-TN328B	Tóner Original Brother TN-328BK Negro	TN-328BK
TAOB-TN328C	Tóner Original Brother TN-328C Cian	TN-328C
TAOB-TN328M	Tóner Original Brother TN-328M Magenta	TN-328M
TAOB-TN328Y	Tóner Original Brother TN-328Y Amarillo	TN-328Y
TAOB-TN329B	Tóner Original Brother TN-329BK Negro	TN-329BK
TAOB-TN329BDP	Tóner Original Brother TN-329BK Negro, Pack Doble	TN-329BTWIN
TAOB-TN329C	Tóner Original Brother TN-329C Cian	TN-329C
TAOB-TN329CDP	Tóner Original Brother TN-329C Cian, Pack Doble	TN-329CTWIN
TAOB-TN329M	Tóner Original Brother TN-329M Magenta	TN-329M
TAOB-TN329MDP	Tóner Original Brother TN-329M Magenta, Pack Doble	TN-329MTWIN
TAOB-TN329Y	Tóner Original Brother TN-329Y Amarillo	TN-329Y
TAOB-TN329YDP	Tóner Original Brother TN-329Y Amarillo, Pack Doble	TN-329YTWIN
TAOB-TN3330	Tóner Original Brother TN-3330 Negro	TN-3330
TAOB-TN3380	Tóner Original Brother TN-3380 Negro	TN-3380
TAOB-TN3380DP	Tóner Original Brother TN-3380 TWIN Negro, Pack Doble	TN3380TWIN/2PK
TAOB-TN3390	Tóner Original Brother TN-3390 Negro	TN-3390
TAOB-TN3390DP	Tóner Original Brother TN-3390 Negro, Pack Doble	TN3390TWIN
TAOB-TN3430	Tóner Original Brother TN3430 Negro	TN-3430
TAOB-TN3480	Tóner Original Brother TN3480 Negro	TN-3480
TAOB-TN3512	Tóner Original Brother TN3512 Negro	TN-3512
TAOB-TN3520	Tóner Original Brother TN3520 Negro	TN-3520
TAOB-TN4100	Tóner Original Brother TN-4100 Negro	TN-4100
TAOB-TN5500	Tóner Original Brother TN-5500 Negro	TN-5500
TAOB-TN6300	Tóner Original Brother TN-6300 Negro	TN-6300
TAOB-TN6600	Tóner Original Brother TN-6600 Negro	TN-6600
TAOB-TN7300	Tóner Original Brother TN-7300 Negro	TN-7300
TAOB-TN7600	Tóner Original Brother TN-7600 Negro	TN-7600
TAOB-TN8000	Tóner Original Brother TN-8000/27798 Negro	TN-8000
TAOB-TN900B	Tóner Original Brother TN-900BK Negro	TN-900BK
TAOB-TN900BDP	Tóner Original Brother TN-900BK Negro, Pack Doble	TN-900BTWIN
TAOB-TN900C	Tóner Original Brother TN-900C Cian	TN-900C
TAOB-TN900CDP	Tóner Original Brother TN-900C Cian, Pack Doble	TN-900CTWIN
TAOB-TN900M	Tóner Original Brother TN-900M Magenta	TN-900M
TAOB-TN900MDP	Tóner Original Brother TN-900M Magenta, Pack Doble	TN-900MTWIN
TAOB-TN900Y	Tóner Original Brother TN-900Y Amarillo	TN-900Y
TAOB-TN900YDP	Tóner Original Brother TN-900Y Amarillo, Pack Doble	TN-900YTWIN
TAOC-034B	Tóner Original Canon 9454B001/034 Negro	9454B001
TAOC-034C	Tóner Original Canon 9453B001/034 Cian	9453B001
TAOC-034M	Tóner Original Canon 9452B001/034 Magenta	9452B001

TAOC-034Y	Tóner Original Canon 9451B001/034 Amarillo	9451B001
TAOC-701B	Tóner Original Canon 9287A003/701BK Negro	9287A003
TAOC-701C	Tóner Original Canon 9286A003/701C Cian	9286A003
TAOC-701M	Tóner Original Canon 9285A003/701M Magenta	9285A003
TAOC-701MS	Tóner Original Canon 9289A003/701LM Magenta	9289A003
TAOC-701Y	Tóner Original Canon 9284A003/701Y Amarillo	9284A003
TAOC-702B	Tóner Original Canon 9645A004/702 Negro	9645A004
TAOC-702C	Tóner Original Canon 9644A004/702 Cian	9644A004
TAOC-702M	Tóner Original Canon 9643A004/702 Magenta	9643A004
TAOC-702Y	Tóner Original Canon 9642A004/702 Amarillo	9642A004
TAOC-703	Tóner Original Canon 7616A005/703 Negro	7616A005
TAOC-706	Tóner Original Canon 0264B002/706 Negro	0264B002
TAOC-707B	Tóner Original Canon 9424A004/707BK Negro	9424A004
TAOC-707C	Tóner Original Canon 9423A004/707C Cian	9423A004
TAOC-707M	Tóner Original Canon 9422A004/707M Magenta	9422A004
TAOC-707Y	Tóner Original Canon 9421A004/707Y Amarillo	9421A004
TAOC-708	Tóner Original Canon 0266B002/708 Negro	0266B002
TAOC-708H	Tóner Original Canon 0917B002/708H Negro	0917B002
TAOC-710	Tóner Original Canon 0985B001/710 Negro	0985B001
TAOC-710H	Tóner Original Canon 0986B001/710H Negro	0986B001
TAOC-711B	Tóner Original Canon 1660B002/711BK Negro	1660B002
TAOC-711C	Tóner Original Canon 1659B002/711C Cian	1659B002
TAOC-711M	Tóner Original Canon 1658B002/711M Magenta	1658B002
TAOC-711Y	Tóner Original Canon 1657B002/711Y Amarillo	1657B002
TAOC-712	Tóner Original Canon 1870B002/712 Negro	1870B002
TAOC-713	Tóner Original Canon 1871B002/713 Negro	1871B002
TAOC-714	Tóner Original Canon 1153B002/714 Negro	1153B002
TAOC-715	Tóner Original Canon 1975B002/715 Negro	1975B002
TAOC-715HXL	Tóner Original Canon 1976B002/715H XXL Negro	1976B002
TAOC-716B	Tóner Original Canon 1980B002/716BK Negro	1980B002
TAOC-716C	Tóner Original Canon 1979B002/716C Cian	1979B002
TAOC-716M	Tóner Original Canon 1978B002/716M Magenta	1978B002
TAOC-716Y	Tóner Original Canon 1977B002/716Y Amarillo	1977B002
TAOC-717C	Tóner Original Canon 2577B002/717C Cian	2577B002
TAOC-717M	Tóner Original Canon 2576B002/717M Magenta	2576B002
TAOC-717Y	Tóner Original Canon 2575B002/717Y Amarillo	2575B002
TAOC-718B	Tóner Original Canon 2662B002/718BK Negro	2662B002
TAOC-718BDP	Tóner Original Canon 2662B005/718BK Negro, Pack Doble	2662B005
TAOC-718C	Tóner Original Canon 2661B002/718C Cian	2661B002
TAOC-718M	Tóner Original Canon 2660B002/718M Magenta	2660B002
TAOC-718Y	Tóner Original Canon 2659B002/718Y Amarillo	2659B002
TAOC-719	Tóner Original Canon 3479B002/719 Negro	3479B002
TAOC-719H	Tóner Original Canon 3480B002/719H Negro	3480B002
TAOC-720	Tóner Original Canon 2617B002/720 Negro	2617B002
TAOC-723B	Tóner Original Canon 2644B002/723BK Negro	2644B002
TAOC-723C	Tóner Original Canon 2643B002/723C Cian	2643B002
TAOC-723HB	Tóner Original Canon 2645B002/723H Negro	2645B002
TAOC-723M	Tóner Original Canon 2642B002/723M Magenta	2642B002
TAOC-723Y	Tóner Original Canon 2641B002/723 Amarillo	2641B002
TAOC-724	Tóner Original Canon 3481B002/724 Negro	3481B002
TAOC-724H	Tóner Original Canon 3482B002/724H Negro	3482B002
TAOC-725	Tóner Original Canon 3484B002/725 Negro	3484B002
TAOC-726	Tóner Original Canon 3483B002/726 Negro	3483B002
TAOC-728	Tóner Original Canon 3500B002/728 Negro	3500B002
TAOC-729B	Tóner Original Canon 4370B002/729BK Negro	4370B002
TAOC-729C	Tóner Original Canon 4369B002/729C Cian	4369B002
TAOC-729M	Tóner Original Canon 4368B002/729M Magenta	4368B002
TAOC-729Y	Tóner Original Canon 4367B002/729Y Amarillo	4367B002
TAOC-731B	Tóner Original Canon 6272B002/731BK Negro	6272B002
TAOC-731C	Tóner Original Canon 6271B002/731C Cian	6271B002
TAOC-731M	Tóner Original Canon 6270B002/731M Magenta	6270B002
TAOC-731XLB	Tóner Original Canon 6273B002/731H Negro	6273B002
TAOC-731Y	Tóner Original Canon 6269B002/731Y Amarillo	6269B002
TAOC-732B	Tóner Original Canon 6263B002/732BK Negro	6263B002
TAOC-732C	Tóner Original Canon 6262B002/732C Cian	6262B002
TAOC-732M	Tóner Original Canon 6261B002/732M Magenta	6261B002
TAOC-732XLB	Tóner Original Canon 6264B002/732H Negro	6264B002
TAOC-732Y	Tóner Original Canon 6260B002/732Y Amarillo	6260B002
TAOC-737	Tóner Original Canon 9435B002/737 Negro	9435B002
TAOC-A30	Tóner Original Canon 1474A003/A30 Negro	1474A003
TAOC-CARTH	Tóner Original Canon 1500A003/CARTRIDGE H Negro	1500A003

TAOC-CARTM	Tóner Original Canon 6812A002/CARTRIDGEM Negro	6812A002
TAOC-CARTT	Tóner Original Canon 7833A002/CARTRIDGE T Negro	7833A002
TAOC-CEXV1	Tóner Original Canon 4234A002/CEXV1 Negro	4234A002
TAOC-CEXV11	Tóner Original Canon 9629A002/CEXV11 Negro	9629A002
TAOC-CEXV12	Tóner Original Canon 9634A002/CEXV12 Negro	9634A002
TAOC-CEXV13	Tóner Original Canon 0279B002/CEXV13 Negro	0279B002
TAOC-CEXV14	Tóner Original Canon 0384B006/C-EXV14 Negro	0384B006
TAOC-CEXV15	Tóner Original Canon 0387B002/CEXV15 Negro	0387B002
TAOC-CEXV16B	Tóner Original Canon 1069B002/CEXV16 Negro	1069B002
TAOC-CEXV16C	Tóner Original Canon 1068B002/CEXV16 Cian	1068B002
TAOC-CEXV16M	Tóner Original Canon 1067B002/CEXV16 Magenta	1067B002
TAOC-CEXV16Y	Tóner Original Canon 1066B002/CEXV16 Amarillo	1066B002
TAOC-CEXV17B	Tóner Original Canon 0262B002/CEXV17 Negro	0262B002
TAOC-CEXV17C	Tóner Original Canon 0261B002/CEXV17 Cian	0261B002
TAOC-CEXV17M	Tóner Original Canon 0260B002/CEXV17 Magenta	0260B002
TAOC-CEXV17Y	Tóner Original Canon 0259B002/CEXV17 Amarillo	0259B002
TAOC-CEXV18	Tóner Original Canon 0386B002/CEXV18 Negro	0386B002
TAOC-CEXV19B	Tóner Original Canon 0397B002/CEXV19 Negro	0397B002
TAOC-CEXV19C	Tóner Original Canon 0398B002/CEXV19 Cian	0398B002
TAOC-CEXV19M	Tóner Original Canon 0399B002/CEXV19 Magenta	0399B002
TAOC-CEXV19Y	Tóner Original Canon 0400B002/CEXV19 Amarillo	0400B002
TAOC-CEXV20B	Tóner Original Canon 0436B002/CEXV20 Negro	0436B002
TAOC-CEXV21B	Tóner Original Canon 0452B002/CEXV21 Negro	0452B002
TAOC-CEXV21C	Tóner Original Canon 0453B002/CEXV21 Cian	0453B002
TAOC-CEXV21M	Tóner Original Canon 0454B002/CEXV21 Magenta	0454B002
TAOC-CEXV21Y	Tóner Original Canon 0455B002/CEXV21 Amarillo	0455B002
TAOC-CEXV22	Tóner Original Canon 1872B002/CEXV22 Negro	1872B002
TAOC-CEXV24B	Tóner Original Canon 2447B002/CEXV24 Negro	2447B002
TAOC-CEXV24C	Tóner Original Canon 2448B002/CEXV24 Cian	2448B002
TAOC-CEXV24M	Tóner Original Canon 2449B002/CEXV24 Magenta	2449B002
TAOC-CEXV24Y	Tóner Original Canon 2450B002/CEXV24 Amarillo	2450B002
TAOC-CEXV25B	Tóner Original Canon 2548B002/C-EXV25 Negro	2548B002
TAOC-CEXV25C	Tóner Original Canon 2549B002/C-EXV25 Cian	2549B002
TAOC-CEXV25M	Tóner Original Canon 2550B002/C-EXV25 Magenta	2550B002
TAOC-CEXV25Y	Tóner Original Canon 2551B002/C-EXV25 Amarillo	2551B002
TAOC-CEXV26B	Tóner Original Canon 1660B006/CEXV26 Negro	1660B006
TAOC-CEXV26C	Tóner Original Canon 1659B006/CEXV26 Cian	1659B006
TAOC-CEXV26M	Tóner Original Canon 1658B006/CEXV26 Magenta	1658B006
TAOC-CEXV26Y	Tóner Original Canon 1657B006/CEXV26 Amarillo	1657B006
TAOC-CEXV27	Tóner Original Canon 2784B002/C-EXV27 Negro	2784B002
TAOC-CEXV28B	Tóner Original Canon 2789B003/C-EXV28 Negro	2789B003
TAOC-CEXV28C	Tóner Original Canon 2793B003/C-EXV28 Cian	2793B003
TAOC-CEXV28M	Tóner Original Canon 2797B003/C-EXV28 Magenta	2797B003
TAOC-CEXV28Y	Tóner Original Canon 2801B003/C-EXV28 Amarillo	2801B003
TAOC-CEXV29B	Tóner Original Canon 2790B003/C-EXV29 Negro	2790B003
TAOC-CEXV29C	Tóner Original Canon 2794B003/C-EXV29 Cian	2794B003
TAOC-CEXV29M	Tóner Original Canon 2798B003/C-EXV29 Magenta	2798B003
TAOC-CEXV29Y	Tóner Original Canon 2802B003/C-EXV29 Amarillo	2802B003
TAOC-CEXV2B	Tóner Original Canon 4235A002/CEXV2 Negro	4235A002
TAOC-CEXV2C	Tóner Original Canon 4236A002/CEXV2 Cian	4236A002
TAOC-CEXV2M	Tóner Original Canon 4237A002/CEXV2 Magenta	4237A002
TAOC-CEXV2Y	Tóner Original Canon 4238A002/CEXV2 Amarillo	4238A002
TAOC-CEXV3	Tóner Original Canon 6647A002/CEXV3 Negro	6647A002
TAOC-CEXV30B	Tóner Original Canon 2791B002/C-EXV30 Negro	2791B002
TAOC-CEXV30C	Tóner Original Canon 2795B002/C-EXV30 Cian	2795B002
TAOC-CEXV30M	Tóner Original Canon 2799B002/C-EXV30 Magenta	2799B002
TAOC-CEXV30Y	Tóner Original Canon 2803B002/C-EXV30 Amarillo	2803B002
TAOC-CEXV31B	Tóner Original Canon 2792B002/C-EXV31 Negro	2792B002
TAOC-CEXV31C	Tóner Original Canon 2796B002/C-EXV31 Cian	2796B002
TAOC-CEXV31M	Tóner Original Canon 2800B002/C-EXV31 Magenta	2800B002
TAOC-CEXV31Y	Tóner Original Canon 2804B002/C-EXV31 Amarillo	2804B002
TAOC-CEXV32	Tóner Original Canon 2786B002/CEXV32 Negro	2786B002
TAOC-CEXV33	Tóner Original Canon 2785B002/CEXV33 Negro	2785B002
TAOC-CEXV34B	Tóner Original Canon 3782B002/C-EXV34 Negro	3782B002
TAOC-CEXV34C	Tóner Original Canon 3783B002/C-EXV34 Cian	3783B002
TAOC-CEXV34M	Tóner Original Canon 3784B002/C-EXV34 Magenta	3784B002
TAOC-CEXV34Y	Tóner Original Canon 3785B002/C-EXV34 Amarillo	3785B002
TAOC-CEXV35B	Tóner Original Canon 3764B002/C-EXV35 Negro	3764B002
TAOC-CEXV36B	Tóner Original Canon 3766B002/C-EXV36 Negro	3766B002
TAOC-CEXV37	Tóner Original Canon 2787B002/C-EXV37 Negro	2787B002
TAOC-CEXV38	Tóner Original Canon 4791B002/C-EXV38 Negro	4791B002

TAOC-CEXV39	Tóner Original Canon 4792B002/C-EXV39 Negro	4792B002
TAOC-CEXV4	Tóner Original Canon 6748A002/CEXV4 Negro	6748A002
TAOC-CEXV40	Tóner Original Canon 3480B006/C-EXV40 Negro	3480B006
TAOC-CEXV42	Tóner Original Canon C-EXV42 Negro	6908B002
TAOC-CEXV43	Tóner Original Canon 2788B002/C-EXV43 Negro	2788B002
TAOC-CEXV44B	Tóner Original Canon 6941B002/C-EXV44 Negro	6941B002
TAOC-CEXV44C	Tóner Original Canon 6943B002/C-EXV44 Cian	6943B002
TAOC-CEXV44M	Tóner Original Canon 6945B002/C-EXV44 Magenta	6945B002
TAOC-CEXV44Y	Tóner Original Canon 6947B002/C-EXV44 Amarillo	6947B002
TAOC-CEXV45B	Tóner Original Canon 6942B002/C-EXV45 Negro	6942B002
TAOC-CEXV45C	Tóner Original Canon 6944B002/C-EXV45 Cian	6944B002
TAOC-CEXV45M	Tóner Original Canon 6946B002/C-EXV45 Magenta	6946B002
TAOC-CEXV45Y	Tóner Original Canon 6948B002/C-EXV45 Amarillo	6948B002
TAOC-CEXV47B	Tóner Original Canon 8516B002/C-EXV47 Negro	8516B002
TAOC-CEXV47C	Tóner Original Canon 8517B002/C-EXV47 Cian	8517B002
TAOC-CEXV47M	Tóner Original Canon 8518B002/C-EXV47 Magenta	8518B002
TAOC-CEXV47Y	Tóner Original Canon 8518B002/C-EXV47 Amarillo	8519B002
TAOC-CEXV48B	Tóner Original Canon 9106B002 /C-EXV 48BK Negro	9106B002
TAOC-CEXV48C	Tóner Original Canon 9107B002/C-EXV 48C Cian	9107B002
TAOC-CEXV48M	Tóner Original Canon 9108B002/C-EXV 48M Magenta	9108B002
TAOC-CEXV48Y	Tóner Original Canon 9109B002/C-EXV 48Y Amarillo	9109B002
TAOC-CEXV49B	Tóner Original Canon 8524B002/C-EXV49BK Negro	8524B002
TAOC-CEXV49C	Tóner Original Canon 8525B002/C-EXV49C Cian	8525B002
TAOC-CEXV49M	Tóner Original Canon 8525B002/C-EXV49M Magenta	8526B002
TAOC-CEXV49Y	Tóner Original Canon 8527B002/C-EXV49Y Amarillo	8527B002
TAOC-CEXV5	Tóner Original Canon 6836A002/CEXV5 Negro	6836A002
TAOC-CEXV50	Tóner Original Canon 9436B002 Negro	9436B002
TAOC-CEXV7	Tóner Original Canon 7814A002/CEXV7 Negro	7814A002
TAOC-CEXV8B	Tóner Original Canon 7629A002/CEXV8 Negro	7629A002
TAOC-CEXV8C	Tóner Original Canon 7628A002/CEXV8 Cian	7628A002
TAOC-CEXV8M	Tóner Original Canon 7627A002/CEXV8 Magenta	7627A002
TAOC-CEXV8Y	Tóner Original Canon 7626A002/CEXV8 Amarillo	7626A002
TAOC-CEXV9B	Tóner Original Canon 8640A002/CEXV9 Negro	8640A002
TAOC-CEXV9C	Tóner Original Canon 8641A002/CEXV9 Cian	8641A002
TAOC-CEXV9M	Tóner Original Canon 8642A002/CEXV9 Magenta	8642A002
TAOC-CEXV9Y	Tóner Original Canon 8643A002/CEXV9 Amarillo	8643A002
TAOC-CLC1000B	Tóner Original Canon 1422A002 Negro	1422A002
TAOC-CLC1000C	Tóner Original Canon 1428A002 Cian	1428A002
TAOC-CLC1000M	Tóner Original Canon 1434A002 Magenta	1434A002
TAOC-CLC1000Y	Tóner Original Canon 1440A002 Amarillo	1440A002
TAOC-CLC1100B	Tóner Original Canon 1423A002 Negro	1423A002
TAOC-CLC1100C	Tóner Original Canon 1429A002 Cian	1429A002
TAOC-CLC1100M	Tóner Original Canon 1435A002 Magenta	1435A002
TAOC-CLC1100Y	Tóner Original Canon 1441A002 Amarillo	1441A002
TAOC-CLC3900B	Tóner Original Canon 6601A002 Negro	6601A002
TAOC-CLC3900C	Tóner Original Canon 6602A002 Cian	6602A002
TAOC-CLC3900M	Tóner Original Canon 6603A002 Magenta	6603A002
TAOC-CLC3900Y	Tóner Original Canon 6604A002 Amarillo	6604A002
TAOC-CLC700B	Tóner Original Canon 1421A002 Negro	1421A002
TAOC-CLC700C	Tóner Original Canon 1427A002 Cian	1427A002
TAOC-CLC700M	Tóner Original Canon 1433A002 Magenta	1433A002
TAOC-CLC700Y	Tóner Original Canon 1439A002 Amarillo	1439A002
TAOC-CRG105	Tóner Original Canon 0265B002/CRG105 Negro	0265B002
TAOC-CTR355	Tóner Original CTR 355 Negro	CTR355
TAOC-DR029	Tambor Original Canon 4371B002/029	4371B002
TAOC-DR4793	Tambor Original Canon 4793B003 Negro	4793B003
TAOC-DR6370	Tambor Original Canon 6370B003	6370B003
TAOC-DR701	Tambor Original Canon 9623A003/701	9623A003
TAOC-DR702B	Tambor Original Canon 9628A004/702 Negro	9628A004
TAOC-DR702C	Tambor Original Canon 9627A004/702 Cian	9627A004
TAOC-DR702M	Tambor Original Canon 9625A004/702 Magenta	9625A004
TAOC-DR702Y	Tambor Original Canon 9624A004/702 Amarillo	9624A004
TAOC-DRCEXV11	Tambor Original Canon 9630A003/CEXV11	9630A003
TAOC-DRCEXV14	Tambor Original Canon 0385B002/CEXV14	0385B002
TAOC-DRCEXV17B	Tambor Original Canon 0258B002/CEXV17 Negro	0258B002
TAOC-DRCEXV17C	Tambor Original Canon 0257B002/CEXV17 Cian	0257B002
TAOC-DRCEXV17M	Tambor Original Canon 0256B002/CEXV17 Magenta	0256B002
TAOC-DRCEXV17Y	Tambor Original Canon 0255B002/CEXV17 Amarillo	0255B002
TAOC-DRCEXV18	Tambor Original Canon 0388B002/CEXV18	0388B002
TAOC-DRCEXV21B	Tambor Original Canon 0456B002/CEXV21 Negro	0456B002
TAOC-DRCEXV21C	Tambor Original Canon 0457B002/CEXV21 Cian	0457B002

TAOC-DRCEXV21M	Tambor Original Canon 0458B002/CEXV21 Magenta	0458B002
TAOC-DRCEXV21Y	Tambor Original Canon 0459B002/CEXV21 Amarillo	0459B002
TAOC-DRCEXV23	Tambor Original Canon 2101B002/CEXV23	2101B002
TAOC-DRCEXV28B	Tambor Original Canon 2776B003/C-EXV28 Negro	2776B003
TAOC-DRCEXV28CL	Tambor Original Canon 2777B003/C-EXV28 CMY	2777B003
TAOC-DRCEXV29B	Tambor Original Canon 2778B003/C-EXV29 Negro	2778B003
TAOC-DRCEXV29CL	Tambor Original Canon 2779B003/C-EXV29 CMY	2779B003
TAOC-DRCEXV3	Tambor Original Canon 6648A003/CEXV3	6648A003
TAOC-DRCEXV30B	Tambor Original Canon 2780B002/C-EXV30 Negro	2780B002
TAOC-DRCEXV30CL	Tambor Original Canon 2781B003/C-EXV30 CMY	2781B003
TAOC-DRCEXV32	Tambor Original Canon 2772B003/CEXV32/33	2772B003
TAOC-DRCEXV34B	Tambor Original Canon 3786B003/C-EXV34 Negro	3786B003
TAOC-DRCEXV34C	Tambor Original Canon 3787B003/C-EXV34 Cian	3787B003
TAOC-DRCEXV34M	Tambor Original Canon 3788B003/C-EXV34 Magenta	3788B003
TAOC-DRCEXV34Y	Tambor Original Canon 3789B003/C-EXV34 Amarillo	3789B003
TAOC-DRCEXV35	Tambor Original Canon 3765B002/C-EXV35	3765B002
TAOC-DRCEXV37	Tambor Original Canon 2773B003/C-EXV37	2773B003
TAOC-DRCEXV47B	Tambor Original Canon 8520B002/C-EXV47 Negro	8520B002
TAOC-DRCEXV47C	Tambor Original Canon 8521B002/C-EXV47 Cian	8521B002
TAOC-DRCEXV47M	Tambor Original Canon 8522B002/C-EXV47 Magenta	8522B002
TAOC-DRCEXV47Y	Tambor Original Canon 8523B002/C-EXV47 Amarillo	8523B002
TAOC-DRCEXV5	Tambor Original Canon 6837A003/CEXV5	6837A003
TAOC-DRCEXV50	Tambor Original Canon 9437B002/C-EXV 50	9437B002
TAOC-DRCEXV7	Tambor Original Canon 7815A003/CEXV7	7815A003
TAOC-DRCEXV8B	Tambor Original Canon 7625A002/CEXV8 Negro	7625A002
TAOC-DRCEXV8C	Tambor Original Canon 7624A002/CEXV8 Cian	7624A002
TAOC-DRCEXV8M	Tambor Original Canon 7623A002/CEXV8 Magenta	7623A002
TAOC-DRCEXV8Y	Tambor Original Canon 7622A002/CEXV8 Amarillo	7622A002
TAOC-DRCEXV9	Tambor Original Canon 8644A003/CEXV9	8644A003
TAOC-DREP87	Tambor Original Canon 7429A003/EP-87	7429A003
TAOC-E16	Tóner Original Canon 1492A003/E16 Negro	1492A003
TAOC-E30	Tóner Original Canon 1491A003/E30 Negro	1491A003
TAOC-EP22	Tóner Original Canon 1550A003/EP-22 Negro	1550A003
TAOC-EP25	Tóner Original Canon 5773A004/EP-25 Negro	5773A004
TAOC-EP27XL	Tóner Original Canon 8489A002/EP-27 Negro	8489A002
TAOC-EP32	Tóner Original Canon 1561A003/EP-32 Negro	1561A003
TAOC-EP52	Tóner Original Canon 3839A003/EP-52 Negro	3839A003
TAOC-EP65	Tóner Original Canon 6751A003/EP-65 Negro	6751A003
TAOC-EP72	Tóner Original Canon 3845A003/EP-72 Negro	3845A003
TAOC-EP82	Tóner Original Canon 1515A003/EP-82BK Negro	1515A003
TAOC-EPA	Tóner Original Canon 1548A003/EP-A Negro	1548A003
TAOC-EPW	Tóner Original Canon 1545A003/EP-W Negro	1545A003
TAOC-FP270	Tóner Original Canon 1303B001 Negro	1303B001
TAOC-FP470	Tóner Original Canon 1515B001 Negro	1515B001
TAOC-FX10XL	Tóner Original Canon 0263B002/FX-10 Negro	0263B002
TAOC-FX2	Tóner Original Canon 1556A003/FX-2 Negro	1556A003
TAOC-FX3XL	Tóner Original Canon 1557A003/FX-3 Negro	1557A003
TAOC-FX4	Tóner Original Canon 1558A003/FX-4 Negro	1558A003
TAOC-FX6	Tóner Original Canon 1559A003/FX-6 Negro	1559A003
TAOC-FX7	Tóner Original Canon 7621A002/FX-7 Negro	7621A002
TAOC-GP215	Tóner Original Canon 1388A002 Negro	1388A002
TAOC-GPR1	Tóner Original Canon 1390A002/GPR-1 Negro	1390A002
TAOC-GPR2DP	Tóner Original Canon 1389A003/GPR-2 Negro, Pack Doble	1389A003
TAOC-LBP351X	Tóner Original Canon 0287C001/LBP351X Negro	0287C001
TAOC-LBP351XL	Tóner Original Canon 0288C001/LBP351X Negro	0288C001
TAOC-LBP710CXB	Tóner Original Canon 0460C001/LBP710CX Negro	0460C001
TAOC-LBP710CXC	Tóner Original Canon 0458C001/LBP710CX Cian	0458C001
TAOC-LBP710CXLB	Tóner Original Canon 0461C001/LBP710CX Negro	0461C001
TAOC-LBP710CXLC	Tóner Original Canon 0459C001/LBP710CX Cian	0459C001
TAOC-LBP710CXLM	Tóner Original Canon 0457C001/LBP710CX Magenta	0455C001
TAOC-LBP710CXLY	Tóner Original Canon 0455C001/LBP710CX Amarillo	0455C001
TAOC-LBP710CXM	Tóner Original Canon 0456C001/LBP710CX Magenta	0456C001
TAOC-LBP710CXY	Tóner Original Canon 0454C001/LBP710CX Amarillo	0454C001
TAOC-MP20N	Tóner Original Canon M95-0411-040/MP-20N Negro	M95-0411-040
TAOC-MP250	Tóner Original Canon 6965A001/MP250 Negro	6965A001
TAOC-NP1010DP	Tóner Original Canon 1369A002 Negro, Pack Doble	1369A002
TAOC-NPG11	Tóner Original Canon 1382A002/NPG-11 Negro	1382A002
TAOC-NPG13	Tóner Original Canon 1384A002/NPG-13 Negro	1384A002
TAOC-NPG1S4	Tóner Original Canon 1372A005/NPG-1 Negro (4 uds.)	1372A005
TAOC-NPG7	Tóner Original Canon 1377A003/NPG-7 Negro	1377A003
TAOC-NPG9DP	Tóner Original Canon 1379A003/NPG-9 Negro, Pack Doble	1379A003

TAODL-1100	Tóner Original Dell 593-10094/J9833 Negro	593-10094
TAODL-1130	Tóner Original Dell 593-10962/P9H7G Negro	593-10962
TAODL-1130XL	Tóner Original Dell 593-10961/7H53W Negro	593-10961
TAODL-1160	Tóner Original Dell 593-11108/HF44N Negro	593-11108
TAODL-1235B	Tóner Original Dell 593-10493/N012K Negro	593-10493
TAODL-1235C	Tóner Original Dell 593-10494/J069K Cian	593-10494
TAODL-1235M	Tóner Original Dell 593-10495/J506K Magenta	593-10495
TAODL-1235Y	Tóner Original Dell 593-10496/M127K Amarillo	593-10496
TAODL-1250B	Tóner Original Dell 593-11140/DC9NW Negro	593-11140
TAODL-1250C	Tóner Original Dell 593-11141/79K5P Cian	593-11141
TAODL-1250M	Tóner Original Dell 593-11142/4DV2W Magenta	593-11142
TAODL-1250Y	Tóner Original Dell 593-11143/W8X8P Amarillo	593-11143
TAODL-1260	Tóner Original Dell 593-11110/PVVWC Negro	593-11110
TAODL-1260XL	Tóner Original Dell 593-11109/RWXNT Negro	593-11109
TAODL-1320B	Tóner Original Dell 593-10262/T102C Negro	593-10262
TAODL-1320C	Tóner Original Dell 593-10263/T103C Cian	593-10263
TAODL-1320M	Tóner Original Dell 593-10265/T105C Magenta	593-10265
TAODL-1320XLB	Tóner Original Dell 593-10258/DT615 Negro	593-10258
TAODL-1320XLC	Tóner Original Dell 593-10259/KU051 Cian	593-10259
TAODL-1320XLM	Tóner Original Dell 593-10261/MM138 Magenta	593-10261
TAODL-1320XLY	Tóner Original Dell 593-10260 Amarillo	593-10260
TAODL-1320Y	Tóner Original Dell 593-10264/T104C Amarillo	593-10264
TAODL-1350B	Tóner Original Dell 593-11144/TRNFF Negro	593-11144
TAODL-1350C	Tóner Original Dell 593-11145/5PR32 Cian	593-11145
TAODL-1350M	Tóner Original Dell 593-11146/HX76J Magenta	593-11146
TAODL-1350Y	Tóner Original Dell 593-11147/4NKC7 Amarillo	593-11147
TAODL-1600XL	Tóner Original Dell 593-10082/P4210 Negro	593-10082
TAODL-1660B	Tóner Original Dell 593-11130/7C6F7 Negro	593-11130
TAODL-1660C	Tóner Original Dell 593-11129/5R6JO Cian	593-11129
TAODL-1660M	Tóner Original Dell 593-11128/4J0X7 Magenta	593-11128
TAODL-1660Y	Tóner Original Dell 593-11131/XY7N4 Amarillo	593-11131
TAODL-1700	Tóner Original Dell 593-10039/N3769 Negro	593-10039
TAODL-1700RP	Tóner Original Dell 593-10040/J3815 Negro, Programa de Retorno	593-10040
TAODL-1700XL	Tóner Original Dell 593-10038/H3730 Negro	593-10038
TAODL-1700XLRP	Tóner Original Dell 593-10042/K3756 Negro, Programa de Retorno	593-10042
TAODL-1720	Tóner Original Dell 593-10240/GR299 Negro	593-10240
TAODL-1720RP	Tóner Original Dell 593-10238/PY408 Negro, Programa de Retorno	593-10238
TAODL-1720XL	Tóner Original Dell 593-10239/RP380 Negro	593-10239
TAODL-1720XLRP	Tóner Original Dell 593-10237/MW558 Negro, Programa de Retorno	593-10237
TAODL-1815	Tóner Original Dell 593-10152/PF656 Negro	593-10152
TAODL-1815XL	Tóner Original Dell 593-10153/RF223 Negro	593-10153
TAODL-2130B	Tóner Original Dell 593-10316/P237C Negro	593-10316
TAODL-2130C	Tóner Original Dell 593-10317/T103C Cian	593-10317
TAODL-2130M	Tóner Original Dell 593-10319/P240C Magenta	593-10319
TAODL-2130XLB	Tóner Original Dell 593-10312 Negro	593-10312
TAODL-2130XLC	Tóner Original Dell 593-10313/593-10321 Cian	593-10313
TAODL-2130XLM	Tóner Original Dell 593-10315 Magenta	593-10315
TAODL-2130XLY	Tóner Original Dell 593-10314 Amarillo	593-10314
TAODL-2130Y	Tóner Original Dell 593-10318/P239C Amarillo	593-10318
TAODL-2135B	Tóner Original Dell 593-10324 Negro	593-10324
TAODL-2135C	Tóner Original Dell 593-10325 Cian	593-10325
TAODL-2135M	Tóner Original Dell 593-10327 Magenta	593-10327
TAODL-2145B	Tóner Original Dell 593-10372/F916N Negro	593-10372
TAODL-2145C	Tóner Original Dell 593-10373/G534N Cian	593-10373
TAODL-2145M	Tóner Original Dell 593-10374/H394N Magenta	593-10374
TAODL-2145XLB	Tóner Original Dell 593-10368 Negro	593-10368
TAODL-2145XLC	Tóner Original Dell 593-10369/J394N Cian	593-10369
TAODL-2145XLM	Tóner Original Dell 593-10370/G537N Magenta	593-10370
TAODL-2145XLY	Tóner Original Dell 593-10371/F935N Amarillo	593-10371
TAODL-2145Y	Tóner Original Dell 593-10375/J390N Amarillo	593-10375
TAODL-2150B	Tóner Original Dell 593-11039/2FV35 Negro	593-11039
TAODL-2150C	Tóner Original Dell 592-11667/3JVHD Cian	592-11667
TAODL-2150M	Tóner Original Dell 592-11671/D6FXJ Magenta	592-11671
TAODL-2150XLB	Tóner Original Dell 593-11040/MY5TJ Negro	593-11040
TAODL-2150XLBDP	Tóner Original Dell 593-11035/84R1W Negro, Pack Doble	593-11035
TAODL-2150XLC	Tóner Original Dell 593-11041/THKJ8 Cian	593-11041
TAODL-2150XLC2	Tóner Original Dell 592-11674 Cian	592-11674
TAODL-2150XLM	Tóner Original Dell 592-11666 Magenta	592-11666
TAODL-2150XLM2	Tóner Original Dell 593-11033/2Y3CM Magenta	593-11033
TAODL-2150XLY	Tóner Original Dell 593-11037/9X54J Amarillo	593-11037
TAODL-2150XLY2	Tóner Original Dell 592-11670 Amarillo	592-11670

TAODL-2150Y	Tóner Original Dell 592-11669/8GK7X Amarillo	592-11669
TAODL-2230B	Tóner Original Dell 593-10501/M797K Negro, Programa de Retorno	593-10501
TAODL-2230RP	Tóner Original Dell 593-10500/P578K Negro	593-10500
TAODL-2330B	Tóner Original Dell 593-10337/PK492 Negro, Programa de Retorno	593-10337
TAODL-2330RP	Tóner Original Dell 593-10336/DM254 Negro	593-10336
TAODL-2330XL	Tóner Original Dell 593-10335/PK941 Negro, Programa de Retorno	593-10335
TAODL-2330XLRP	Tóner Original Dell 593-10334/DM253 Negro	593-10334
TAODL-2335	Tóner Original Dell 593-10330 Negro	593-10330
TAODL-2335XL	Tóner Original Dell 593-10329 Negro	593-10329
TAODL-2355	Tóner Original Dell 593-11043/JDYGN Negro	593-11043
TAODL-2360	Tóner Original Dell 593-11165/7MC5J Negro	593-11165
TAODL-2360XL	Tóner Original Dell 593-11168/1V7V7 Negro	593-11168
TAODL-2360XLRP	Tóner Original Dell 593-11167/C3NTP Negro, Programa de Retorno	593-11167
TAODL-2375	Tóner Original Dell 593-BBBI/N2XPF Negro	593-BBBI
TAODL-2375XL	Tóner Original Dell 593-BBBJ/8PTH4 Negro	593-BBBJ
TAODL-2660B	Tóner Original Dell 593-BBBQ/Y5CW4 Negro	593-BBBQ
TAODL-2660BS	Tóner Original Dell 593-BBBM/KWJ3T Negro	593-BBBM
TAODL-2660C	Tóner Original Dell 593-BBBN/TXM5D Cian	593-BBBN
TAODL-2660M	Tóner Original Dell 593-BBBP/FXKGW Magenta	593-BBBP
TAODL-2660XLB	Tóner Original Dell 593-BBBU/RD80W Negro	593-BBBU
TAODL-2660XLC	Tóner Original Dell 593-BBBT/488NH Cian	593-BBBT
TAODL-2660XLM	Tóner Original Dell 593-BBBS/XCWXK Magenta	593-BBBS
TAODL-2660XLY	Tóner Original Dell 593-BBBR/YR3W3 Amarillo	593-BBBR
TAODL-2660Y	Tóner Original Dell 593-BBBO/RP5V1 Amarillo	593-BBBO
TAODL-3000B	Tóner Original Dell 593-10067/K4971 Negro	593-10067
TAODL-3000C	Tóner Original Dell 593-10064/T6412 Cian	593-10064
TAODL-3000M	Tóner Original Dell 593-10065/M6935 Magenta	593-10065
TAODL-3000Y	Tóner Original Dell 593-10066/P6731 Amarillo	593-10066
TAODL-3010B	Tóner Original Dell 593-10154/JH565 Negro	593-10154
TAODL-3010C	Tóner Original Dell 593-10155/TH204 Cian	593-10155
TAODL-3010M	Tóner Original Dell 593-10157/XH005 Magenta	593-10157
TAODL-3010Y	Tóner Original Dell 593-10156/WH006 Amarillo	593-10156
TAODL-3100C	Tóner Original Dell 310-5731/K4973 Cian	593-10061
TAODL-3100M	Tóner Original Dell 310-5730/K4972 Magenta	593-10062
TAODL-3100Y	Tóner Original Dell 310-5729/K4974 Amarillo	593-10063
TAODL-3110B	Tóner Original Dell 593-10169/PF028 Negro	593-10169
TAODL-3110C	Tóner Original Dell 593-10166/RF012 Cian	593-10166
TAODL-3110M	Tóner Original Dell 593-10167/MF790 Magenta	593-10167
TAODL-3110XLB	Tóner Original Dell 593-10170/PF030 Negro	593-10170
TAODL-3110XLC	Tóner Original Dell 593-10171/PF029 Cian	593-10171
TAODL-3110XLM	Tóner Original Dell 593-10172/RF013 Magenta	593-10172
TAODL-3110XLY	Tóner Original Dell 593-10173/NF556 Amarillo	593-10173
TAODL-3110Y	Tóner Original Dell 593-10168/NF555 Amarillo	593-10168
TAODL-3130B	Tóner Original Dell 593-10293 Negro	593-10293
TAODL-3130C	Tóner Original Dell 593-10294/G907C Cian	593-10294
TAODL-3130M	Tóner Original Dell 593-10296/G908C Magenta	593-10296
TAODL-3130XLB	Tóner Original Dell 593-10289/H516C Negro	593-10289
TAODL-3130XLC	Tóner Original Dell 593-10290/H513C Cian	593-10290
TAODL-3130XLM	Tóner Original Dell 593-10292/H514C Magenta /3130 M	593-10292
TAODL-3130XLY	Tóner Original Dell 593-10291/H515C Amarillo	593-10291
TAODL-3130Y	Tóner Original Dell 593-10295/G909C Amarillo	593-10295
TAODL-3330	Tóner Original Dell 59310840/P981R Negro	593-10840
TAODL-3330B	Tóner Original Dell 593-10841/P976R Negro	593-10841
TAODL-3330XL	Tóner Original Dell 593-10838 Negro	593-10838
TAODL-3330XLRP	Tóner Original Dell 593-10839 Negro, Programa de Retorno	593-10839
TAODL-3335RP	Tóner Original Dell 593-11055/Y0JN/Negro, Programa de Retorno	593-11055
TAODL-3335XL	Tóner Original Dell 593-11054/6PP74 Negro	593-11054
TAODL-3335XLRP	Tóner Original Dell 593-11056/G7D0Y/Negro, Programa de Retorno	593-11056
TAODL-3460	Tóner Original Dell 593-11171/HJ0DH Negro	593-11171
TAODL-3760B11K	Tóner Original Dell 593-11119/4CH7 Negro	593-11119
TAODL-3760B3K	Tóner Original Dell 593-11111/PMN5Y Negro	593-11111
TAODL-3760B7K	Tóner Original Dell 593-11115/86W6H Negro	593-11115
TAODL-3760C3K	Tóner Original Dell 593-11114/NC5W6 Cian	593-11114
TAODL-3760C5K	Tóner Original Dell 593-11118/9FY32 Cian	593-11118
TAODL-3760C9K	Tóner Original Dell 593-11122/FMRYP Cian	593-11122
TAODL-3760M3K	Tóner Original Dell 593-11113/MN6W2 Magenta	593-11113
TAODL-3760M5K	Tóner Original Dell 593-11117/H5XJP Magenta	593-11117
TAODL-3760M9K	Tóner Original Dell 593-11121/40W00 Magenta	593-11121
TAODL-3760Y3K	Tóner Original Dell 593-11112/45TWT Amarillo	593-11112
TAODL-3760Y5K	Tóner Original Dell 593-11116/RGJCW Amarillo	593-11116
TAODL-3760Y9K	Tóner Original Dell 593-11120/F8N91 Amarillo	593-11120

TAODL-5100B	Tóner Original Dell 310-5807/H5702 Negro	310-5807
TAODL-5100B2	Tóner Original Dell 593-10054/H5720 Negro	593-10054
TAODL-5100C	Tóner Original Dell 310-5810/K5272 Cian	310-5810
TAODL-5100C2	Tóner Original Dell 593-10051/K5272 Cian	593-10051
TAODL-5100M	Tóner Original Dell 310-5809/J5308 Magenta	310-5809
TAODL-5100M2	Tóner Original Dell 593-10052/G5578 Magenta	593-10052
TAODL-5100Y	Tóner Original Dell 310-5808/G5774 Amarillo	310-5808
TAODL-5100Y2	Tóner Original Dell 593-10053/G5574 Amarillo	593-10053
TAODL-5110B	Tóner Original Dell 593-10120/JD746 Negro	593-10120
TAODL-5110C	Tóner Original Dell 593-10118/GD907 Cian	593-10118
TAODL-5110M	Tóner Original Dell 593-10124/KD566 Magenta	593-10124
TAODL-5110XLB	Tóner Original Dell 593-10121/GD898 Negro	593-10121
TAODL-5110XLC	Tóner Original Dell 593-10119/GD900 Cian	593-10119
TAODL-5110XLM	Tóner Original Dell 593-10125/KD557 Magenta	593-10125
TAODL-5110XLY	Tóner Original Dell 593-10123/JD750 Amarillo	593-10123
TAODL-5110Y	Tóner Original Dell 593-10122/HG308 Amarillo	593-10122
TAODL-5130B	Tóner Original Dell 593-10929/F901R Negro	593-10929
TAODL-5130C	Tóner Original Dell 593-10926/G439R Cian	593-10926
TAODL-5130M	Tóner Original Dell 593-10927/H353R Magenta	593-10927
TAODL-5130XLB	Tóner Original Dell 593-10925 Negro	593-10925
TAODL-5130XLC	Tóner Original Dell 593-10922 Cian	593-10922
TAODL-5130XLM	Tóner Original Dell 593-10923 Magenta	593-10923
TAODL-5130XLY	Tóner Original Dell 593-10924 Amarillo	593-10924
TAODL-5130Y	Tóner Original Dell 593-10928/D607R Amarillo	593-10928
TAODL-5200	Tóner Original Dell 595-10002/RD136 Negro	595-10002
TAODL-5200RP	Tóner Original Dell 595-10000/D1853/Negro, Programa de Retorno	595-10000
TAODL-5200XL	Tóner Original Dell 595-10006/M2925/Negro	595-10006
TAODL-5230	Tóner Original Dell 593-11048/F361T Negro	593-11048
TAODL-5230RP	Tóner Original Dell 593-11046/D524T Negro, Programa de Retorno	593-11046
TAODL-5230XL	Tóner Original Dell 593-11050/Y902R Negro	593-11050
TAODL-5230XLRP	Tóner Original Dell 593-11049/F362T Negro, Programa de Retorno	593-11049
TAODL-5310K10	Tóner Original Dell 593-10132/GD531 Negro	593-10132
TAODL-5310K20	Tóner Original Dell 593-10133/UG219 Negro	593-10133
TAODL-5310K30	Tóner Original Dell 595-10013/UD314/Negro	595-10013
TAODL-5330	Tóner Original Dell 593-10332/NY312 Negro	593-10332
TAODL-5330XL	Tóner Original Dell 593-10331/NY313 Negro	593-10331
TAODL-5350	Tóner Original Dell 593-11051/YPMDR Negro	593-11051
TAODL-5350RP	Tóner Original Dell 593-11052/2KMVD Negro, Programa de Retorno	593-11052
TAODL-546045B	Tóner Original Dell 593-11186/98VWN Negro	593-11186
TAODL-54606B	Tóner Original Dell 593-11187/GDFKW Negro	593-11187
TAODL-54608B	Tóner Original Dell 593-11185/71MXV Negro	593-11185
TAODL-5765B	Tóner Original Dell 593BBDB/NW88H Negro	593-BBDB
TAODL-5765C	Tóner Original Dell 593BBDB/M3TD7 Cian	593-BBCS
TAODL-5765M1	Tóner Original Dell 593BBCL/JXDHD Magenta	593-BBCL
TAODL-5765M2	Tóner Original Dell 593BBCX/MPJ42 Magenta	593-BBCX
TAODL-5765XLB	Tóner Original Dell 593BBCR/W53Y2 Negro	593-BBCR
TAODL-7130C	Tóner Original Dell 593-10933 Cian	593-10933
TAODL-7130M	Tóner Original Dell 593-10879 Magenta	593-10879
TAODL-7130XLB	Tóner Original Dell 593-10873/593-10882 Negro	593-10873
TAODL-7130XLC	Tóner Original Dell 593-10876 Cian	593-10876
TAODL-7130XLM	Tóner Original Dell 593-10875/593-10884 Magenta	593-10875
TAODL-7130XLY	Tóner Original Dell 593-10878 Amarillo	593-10878
TAODL-7130Y	Tóner Original Dell 593-10877 Amarillo	593-10877
TAODL-7330	Tóner Original Dell 593-10358/X730H Negro	593-10358
TAODL-7765B	Tóner Original Dell 593-BBDD/J6DTH Negro	593BBDD
TAODL-7765C	Tóner Original Dell 593-BBCY/F5Y6V Cian	593BBCY
TAODL-7765M	Tóner Original Dell 593-BBCW/8N8JV Magenta	593BBCW
TAODL-7765Y	Tóner Original Dell 593-BBCO/6YJGD Amarillo	593BBCO
TAODL-7Y608	Tóner Original Dell 310-3544/7Y608 Negro	310-3544
TAODL-7Y610	Tóner Original Dell 310-3545/7Y610 Negro, Programa de Retorno	310-3545
TAODL-DR1235	Tambor Original Dell 59310504/K110K CMYK	593-10504
TAODL-DR1320	Tambor Original Dell 593-10328 CMYK	593-10328
TAODL-DR1700	Tambor Original Dell 593-10078/D4283	593-10078
TAODL-DR1720	Tambor Original Dell 593-10241/TJ987	593-10241
TAODL-DR2330	Tambor Original Dell 593-10338	593-10338
TAODL-DR2360	Tambor Original Dell 724-10492/90DC4, Programa de Retorno	724-10492
TAODL-DR2660	Tambor Original Dell 72410352 CMYK	724-10352
TAODL-DR3000	Tambor Original Dell 593-10076/P4866 CMYK	593-10076
TAODL-DR3760	Tambor Original Dell 593-BBEJ/59J78	593-BBEJS4
TAODL-DR5100	Tambor Original Dell 593-10075/M6599 CMYK	593-10075
TAODL-DR5110	Tambor Original Dell 593-10191 CMYK	593-10191

TAODL-DR5130B	Tambor Original Dell 593-10918/G969R Negro	593-10918
TAODL-DR5130C	Tambor Original Dell 593-10919/H486R Cian	593-10919
TAODL-DR5130M	Tambor Original Dell 593-10920/D718R Magenta	593-10920
TAODL-DR5130Y	Tambor Original Dell 593-10921/Y984P Amarillo	593-10921
TAODL-DR5460	Tambor Original Dell 72410518	724-10518
TAODL-DR7130	Tambor Original Dell 593-10881/TM7KF CMYK	593-10881
TAODL-E310B	Tóner Original Dell 593-BBLR/2RMPM Toner Negro	593-BBLR
TAODL-E525B	Tóner Original Dell 593-BBLN/DPV4T Negro	593-BBLN
TAODL-E525C	Tóner Original Dell 593-BBLL/H5WFX Cian	593-BBLL
TAODL-E525M	Tóner Original Dell 593-BBLZ/G20VW Magenta	593-BBLZ
TAODL-E525Y	Tóner Original Dell 593-BBLV/3581G Amarillo	593-BBLV
TAODL-H625B	Tóner Original Dell 593-BBSB/N7DWF Toner Negro	593-BBSB
TAODL-H625C	Tóner Original Dell 593-BBSC/WG4T0 Cian	593-BBSC
TAODL-H810	Tóner Original Dell 593BBMM/KNRMF Negro	593-BBMM
TAODL-H825C	Tóner Original Dell 593BBSF/4Y75H Cian	593-BBSF
TAODL-M5200	Tóner Original Dell 310-4549/K2885 Negro	310-4549
TAODL-S2825B	Tóner Original Dell 593-BBSG/NCH0D Negro	593-BBSG
TAODL-S2825C	Tóner Original Dell 593BBSD/P3HJK Cian	593-BBSD
TAODL-S2825LM	Tóner Original Dell 593BBRV/5PG7P Magenta	593-BBRV
TAODL-S2825LY	Tóner Original Dell 593BBSE/3P7C4 Amarillo	593-BBSE
TAODL-S2825SM	Tóner Original Dell 593-BBRX/042T1 Magenta	593-BBRX
TAODL-S2825SY	Tóner Original Dell 593-BBRY/2RF0R Amarillo	593-BBRY
TAODL-S2825XLB	Tóner Original Dell 593BBRZ/H5K44 Negro	593-BBRZ
TAODL-S2825XLM	Tóner Original Dell 593BBRT/4NRYP Magenta	593-BBRT
TAODL-S2825XLY	Tóner Original Dell 593BBRW/1MD5G Amarillo	593-BBRW
TAODV-A63W11H	Tóner Original Develop A63W11H Negro	A63W11H
TAODV-DR113	Tambor Original Develop 4519-602	4519-602
TAODV-DR113H	Tambor Original Develop A2A1W3H/A2A113H Negro	A2A1W3H
TAODV-DR114	Tambor Original Develop 4021-0298	4021-0298
TAODV-DR120	Tambor Original Develop 4827000-032/DR110/DR120	4827-000-032
TAODV-DR310	Tambor Original Develop 4068-615/DR310	4068-615
TAODV-DR311B	Tambor Original Develop A0XV1RD/DR311K Negro	A0XV1RD
TAODV-DR311S3	Tambor Original Develop A0XV1TD/DR311 CMY (3 uds.)	A0XV1TD
TAODV-DR4515	Tambor Original Develop 4515-615	4515-615
TAODV-DR512B	Tambor Original Develop A2XN1RH/DR-512K Negro	A2XN1RH
TAODV-DR512S3	Tambor Original Develop A2XN1TH/DR-512 CMY (3 uds.)	A2XN1TH
TAODV-DRIU210B	Tambor Original Develop 4062-205/IU210K Negro	4062-205
TAODV-DRIU210C	Tambor Original Develop 4062-505/IU210C Cian	4062-505
TAODV-DRIU210M	Tambor Original Develop 4062-405/IU210M Magenta	4062-405
TAODV-DRIU210Y	Tambor Original Develop 4062-305/IU210Y Amarillo	4062-305
TAODV-DRIU211B	Tambor Original Develop A0DE12H/IU211K	A0DE12H
TAODV-DRIU211C	Tambor Original Develop A0DE1HH/IU211C Cian	A0DE1HH
TAODV-DRIU211M	Tambor Original Develop A0DE1CH/IU211M Magenta	A0DE1CH
TAODV-DRIU211Y	Tambor Original Develop A0DE16H/IU211Y Amarillo	A0DE16H
TAODV-DRIU212C	Tambor Original Develop A0DE1GH/IU212C Cian	A0DE1GH
TAODV-DRIU212M	Tambor Original Develop A0DE1AH/IU212M Magenta	A0DE1AH
TAODV-DRIU212Y	Tambor Original Develop A0DE15H/IU212Y Amarillo	A0DE15H
TAODV-DRIU310C	Tambor Original Develop 4047-705/IU310C Cian	4047-705
TAODV-DRIU311B	Tambor Original Develop 4062-225/IU311K Negro	4062-225
TAODV-DRIU311C	Tambor Original Develop 4062-525/IU311C Cian	4062-525
TAODV-DRIU311Y	Tambor Original Develop 4062-325/IU311Y Amarillo	4062-325
TAODV-DRIU312B	Tambor Original Develop A03110J/IU312K Negro	A03110J
TAODV-DRIU312C	Tambor Original Develop A0311GJ/IU312C Cian	A0311GJ
TAODV-DRIU312M	Tambor Original Develop A0311AJ/IU312M Magenta	A0311AJ
TAODV-DRIU312Y	Tambor Original Develop A03115J/IU312Y Amarillo	A03115J
TAODV-DRIU313B	Tambor Original Develop A0DE13H/IU313K Negro	A0DE13H
TAODV-DRIU313C	Tambor Original Develop A0DE1JH/IU313C Cian	A0DE1JH
TAODV-DRIU313M	Tambor Original Develop A0DE1HD/IU313M Magenta	A0DE1HD
TAODV-DRIU313Y	Tambor Original Develop A0DE17H/IU313Y Amarillo	A0DE17H
TAODV-DRIU610B	Tambor Original Develop A06013H/IU610K Negro	A06013H
TAODV-DRIU610C	Tambor Original Develop A0601JH/IU610C Cian	A0601JH
TAODV-DRIU610M	Tambor Original Develop A0601DH/IU610M Magenta	A0601DH
TAODV-DRIU610Y	Tambor Original Develop A06017H/IU610Y Amarillo	A06017H
TAODV-DRIU612B	Tambor Original Develop A0TK1RH/IU612K Negro	A0TK1RH
TAODV-DRIU612C	Tambor Original Develop A0TK1KH/IU612C Cian	A0TK1KH
TAODV-DRIU612M	Tambor Original Develop A0TK1EH/IU612M Magenta	A0TK1EH
TAODV-DRIU612Y	Tambor Original Develop A0TK18H/IU612Y Amarillo	A0TK18H
TAODV-DRIU711B	Tambor Original Develop A2X21RH/IU-711K Negro	A2X21RH
TAODV-DRIU711C	Tambor Original Develop A2X21KH/IU-711C Cian	A2X21KH
TAODV-DRIU711M	Tambor Original Develop A2X21EH/IU-711M Magenta	A2X21EH
TAODV-DRIU711Y	Tambor Original Develop A2X218H/IU-711Y Amarillo	A2X218H

TAODV-DRIUP14B	Tambor Original Develop A0WG13J/IUP-14K Negro	A0WG13J
TAODV-DRIUP14C	Tambor Original Develop A0WG1KJ/IUP-14C Cian	A0WG1KJ
TAODV-DRIUP14M	Tambor Original Develop A0WG1EJ/IUP-14M Magenta	A0WG1EJ
TAODV-DRIUP14Y	Tambor Original Develop A0WG18J/IUP-14Y Amarillo	A0WG18J
TAODV-DRIUP23B	Tambor Original Develop A73313J/IUP-23K Negro	A73313J
TAODV-DRIUP23C	Tambor Original Develop A7331KJ/IUP-23C Cian	A7331KJ
TAODV-DRIUP23M	Tambor Original Develop A7331EJ/IUP-23M Magenta	A7331EJ
TAODV-DRIUP23Y	Tambor Original Develop A73318J/IUP-23Y Amarillo	A73318J
TAODV-DTN113	Tóner Original Develop 4518-604/TN113 Negro	4518-604
TAODV-DTN213B	Tóner Original Develop A0D71D2/TN213K Negro	A0D71D2
TAODV-DTN213C	Tóner Original Develop A0D74D2/TN213C Cian	A0D74D2
TAODV-DTN213Y	Tóner Original Develop A0D72D2/TN213Y Amarillo	A0D72D2
TAODV-DTN216B	Tóner Original Develop A11G1D1/TN216K Negro	A11G1D1
TAODV-DTN216C	Tóner Original Develop A11G4D1/TN216C Cian	A11G4D1
TAODV-DTN216M	Tóner Original Develop A11G3D1/TN216M Magenta	A11G3D1
TAODV-DTN216Y	Tóner Original Develop A11G2D1/TN216Y Amarillo	A11G2D1
TAODV-DTN318B	Tóner Original Develop A0DK1D3/TN318K Negro	A0DK1D3
TAODV-DTN318C	Tóner Original Develop A0DK4D3/TN318C Cian	A0DK4D3
TAODV-DTN318M	Tóner Original Develop A0DK3D3/TN318M Magenta	A0DK3D3
TAODV-DTN318Y	Tóner Original Develop A0DK2D3/TN318Y Amarillo	A0DK2D3
TAODV-DTN319B	Tóner Original Develop A11G1D0/TN319K Negro	A11G1D0
TAODV-DTN319C	Tóner Original Develop A11G4D0/TN319C Cian	A11G4D0
TAODV-DTN319M	Tóner Original Develop A11G3D0/TN319M Magenta	A11G3D0
TAODV-DTN319Y	Tóner Original Develop A11G2D0/TN319Y Amarillo	A11G2D0
TAODV-DTN321C	Tóner Original Develop A33K4D0/TN-321C Cian	A33K4D0
TAODV-DTN321M	Tóner Original Develop A33K3D0/TN-321M Magenta	A33K3D0
TAODV-DTN321Y	Tóner Original Develop A33K2D0/TN-321Y Amarillo	A33K2D0
TAODV-DTN411B	Tóner Original Develop A0701D1/TN411K Negro	A0701D1
TAODV-DTN512Y	Tóner Original Develop A33K2D2/TN-512Y Amarillo	A33K2D2
TAODV-DTN611B	Tóner Original Develop A0701D0/TN611K Negro	A0701D0
TAODV-DTN611C	Tóner Original Develop A0704D0/TN611C Cian	A0704D0
TAODV-DTN611M	Tóner Original Develop A0703D0/TN611M Magenta	A0703D0
TAODV-DTN611Y	Tóner Original Develop A0702D0/TN611Y Amarillo	A0702D0
TAODV-DTNP50	Tóner Original Develop A0X54D7/TNP-50 C Cian	A0X54D7
TAODV-TC16	Tóner Original Develop 9967000465/TC16 Negro	9967000465
TAODV-TN108	Tóner Original Develop 4827000003/TN108 Negro	4827000003
TAODV-TN110	Tóner Original Develop 4827-000-031/TN110 Negro	4827-000-031
TAODV-TN116DP	Tóner Original Develop A1UC0D0/TN-116 Negro, Pack Doble	A1UC0D0
TAODV-TN118	Tóner Original Develop A3VW0D0/TN-118 Negro	A3VW0D0
TAODV-TN210B	Tóner Original Develop 8938-517/TN210K Negro	8938-517
TAODV-TN210C	Tóner Original Develop 8938-520/TN210C Cian	8938-520
TAODV-TN210M	Tóner Original Develop 8938-519/TN210M Magenta	8938-519
TAODV-TN210Y	Tóner Original Develop 8938-518/TN210Y Amarillo	8938-518
TAODV-TN211	Tóner Original Develop 8938-417/TN211 Negro	8938-417
TAODV-TN213M	Tóner Original Develop A0D73D2/TN213M Magenta	A0D73D2
TAODV-TN214B	Tóner Original Develop A0D71D3/TN214K Negro	A0D71D3
TAODV-TN214C	Tóner Original Develop A0D74D3/TN214C Cian	A0D74D3
TAODV-TN214M	Tóner Original Develop A0D73D3/TN214M Magenta	A0D73D3
TAODV-TN214Y	Tóner Original Develop A0D72D3/TN214Y Amarillo	A0D72D3
TAODV-TN217B	Tóner Original Develop A2020D1/TN217 Negro	A2020D1
TAODV-TN219	Tóner Original Develop TN-219 Negro	4827000284
TAODV-TN221B	Tóner Original Develop A8K31D0/TN-221K Negro	A8K31D0
TAODV-TN221C	Tóner Original Develop A8K34D0/TN-221C Cian	A8K34D0
TAODV-TN221M2	Tóner Original Develop A8K33D0/TN-221M Magenta	A8K33D0
TAODV-TN221Y	Tóner Original Develop A8K32D0/TN-221Y Amarillo	A8K32D0
TAODV-TN310B	Tóner Original Develop 4053-405/TN310K Negro	4053-405
TAODV-TN310C	Tóner Original Develop 4053-705/TN310C Cian	4053-705
TAODV-TN310M	Tóner Original Develop 4053-605/TN310M Magenta	4053-605
TAODV-TN310Y	Tóner Original Develop 4053-505/TN310Y Amarillo	4053-505
TAODV-TN312B	Tóner Original Develop 8938-713/TN312K Negro	8938-713
TAODV-TN312C	Tóner Original Develop 8938-716/TN312C Cian	8938-716
TAODV-TN312M	Tóner Original Develop 8938-715/TN312M Magenta	8938-715
TAODV-TN312Y	Tóner Original Develop 8938-714/TN312Y Amarillo	8938-714
TAODV-TN314B	Tóner Original Develop A0D7151/TN 314K Negro	A0D7151
TAODV-TN314C	Tóner Original Develop A0D7451/TN 314C Cian	A0D7451
TAODV-TN314M	Tóner Original Develop A0D7351/TN 314M Magenta	A0D7351
TAODV-TN314Y	Tóner Original Develop A0D7251/TN 314Y Amarillo	A0D7251
TAODV-TN-320	Tóner Original Develop A2020D3/TN-320 Negro	A2020D3
TAODV-TN321B	Tóner Original Develop A33K1D0/TN-321K Negro	A33K1D0
TAODV-TN322B	Tóner Original Develop A33K0D0/TN-322K Negro	A33K0D0
TAODV-TN323B	Tóner Original Develop A87M0D0/TN-323 Negro	A87M0D0

TAODV-TN324B	Tóner Original Develop A8DA1D0/TN-324K Negro	A8DA1D0
TAODV-TN324C	Tóner Original Develop A8DA4D0/TN-324C Cian	A8DA4D0
TAODV-TN324M	Tóner Original Develop A8DA3D0/TN-324M Magenta	A8DA3D0
TAODV-TN324Y	Tóner Original Develop A8DA2D0/TN-324Y Amarillo	A8DA2D0
TAODV-TN412B	Tóner Original Develop 4827000064/TN-412K Negro	4827000064
TAODV-TN413B	Tóner Original Develop A0TM1511/A0TM1D1/TN413K Negro	A0TM1511
TAODV-TN414	Tóner Original Develop A2020D0/TN414 Negro	A2020D0
TAODV-TN415	Tóner Original Develop TN-415 Negro	A2020D2
TAODV-TN511	Tóner Original Develop 024F/TN-511 Negro	024F
TAODV-TN512B	Tóner Original Develop A33K1D2/TN-512K Negro	A33K1D2
TAODV-TN512M	Tóner Original Develop A33K3D2/TN-512M Magenta	A33K3D2
TAODV-TN512Y	Tóner Original Develop A33K4D2/TN-512Y Cian	A33K4D2
TAODV-TN51B	Tóner Original Develop A0X51D5/TN51K Negro	A0X51D5
TAODV-TN610B	Tóner Original Develop A04P1D0/TN-610 Negro	A04P1D0
TAODV-TN610C	Tóner Original Develop A04P2D0/TN-610C Cian	A04P2D0
TAODV-TN610M	Tóner Original Develop A04P3D0/TN-610M Magenta	A04P3D0
TAODV-TN610Y	Tóner Original Develop A04P4D0/TN-610Y Amarillo	A04P4D0
TAODV-TN612B	Tóner Original Develop A0VW1D0/TN-612K Negro	A0VW1D0
TAODV-TN612C	Tóner Original Develop A0VW4D0/TN-612C Cian	A0VW4D0
TAODV-TN612M	Tóner Original Develop A0VW3D0/TN-612M Magenta	A0VW3D0
TAODV-TN612Y	Tóner Original Develop A0VW2D0/TN-612Y Amarillo	A0VW2D0
TAODV-TN613B	Tóner Original Develop A0TM1D0/TN613K Negro	A0TM1D0
TAODV-TN613C	Tóner Original Develop A0TM4D0/TN613C Cian	A0TM4D0
TAODV-TN613M	Tóner Original Develop A0TM3D0/TN613M Magenta	A0TM3D0
TAODV-TN613Y	Tóner Original Develop A0TM2D0/TN613Y Amarillo	A0TM2D0
TAODV-TN618B	Tóner Original Develop A0TM1D2/TN-618K Negro	A0TM1D2
TAODV-TN710	Tóner Original Develop 02XU/TN-710 Negro	02XU
TAODV-TN711B	Tóner Original Develop A3VU1D0/TN-711K Negro	A3VU1D0
TAODV-TN711C	Tóner Original Develop A3VU4D0/TN-711C Cian	A3VU4D0
TAODV-TN711M	Tóner Original Develop A3VU3D0/TN-711M Magenta	A3VU3D0
TAODV-TN711Y	Tóner Original Develop A3VU2D0/TN-711Y Amarillo	A3VU2D0
TAODV-TNP22B	Tóner Original Develop A0X51D2/TNP-22K Negro	A0X51D2
TAODV-TNP22C	Tóner Original Develop A0X54D2/TNP-22C Cian	A0X54D2
TAODV-TNP22M	Tóner Original Develop A0X53D2/TNP-22M Magenta	A0X53D2
TAODV-TNP22Y	Tóner Original Develop A0X52D2/TNP-22Y Amarillo	A0X52D2
TAODV-TNP27B	Tóner Original Develop A0X51D4/TNP-27K Negro	A0X51D4
TAODV-TNP27C	Tóner Original Develop A0X54D4/TNP-27C Cian	A0X54D4
TAODV-TNP27M	Tóner Original Develop A0X53D4/TNP-27M Magenta	A0X53D4
TAODV-TNP27Y	Tóner Original Develop A0X52D4/TNP-27Y Amarillo	A0X52D4
TAODV-TNP34	Tóner Original Develop A63T11H Negro	A63T11H
TAODV-TNP36	Tóner Original Develop A63V10H/TNP-36 Negro, Programa de Retorno	A63V10H
TAODV-TNP41	Tóner Original Develop A6WT10H/TNP-41, Programa de Retorno	A6WT10H
TAODV-TNP48B	Tóner Original Develop A5X01D0/TNP-48K Negro	A5X01D0
TAODV-TNP48C	Tóner Original Develop A5X04D0/TNP-48C Cian	A5X04D0
TAODV-TNP48M	Tóner Original Develop A5X03D0/TNP-48M Magenta	A5X03D0
TAODV-TNP48Y	Tóner Original Develop A5X02D0/TNP-48Y Amarillo	A5X02D0
TAODV-TNP50M	Tóner Original Develop A0X53D7/TNP-50M Magenta	A0X53D7
TAODV-TNP50Y	Tóner Original Develop A0X52D7/TNP-50Y Amarillo	A0X52D7
TAODV-TNP51C	Tóner Original Develop A0X54D5/TNP-51C Cian	A0X54D5
TAODV-TNP51M	Tóner Original Develop A0X53D5/TNP-51M Magenta	A0X53D5
TAODV-TNP51Y	Tóner Original Develop A0X52D5/TNP-51Y Amarillo	A0X52D5
TAODV-TYPE101	Tóner Original Develop 8932-4090-01/TYPE101 Negro, Pack Doble	8932-4090-01
TAODV-TYPE102	Tóner Original Develop 8935-2100-00/TYPE102 Negro	8935-2100-00
TAODV-TYPE103	Tóner Original Develop 8935-8070-00/TYPE103 Negro	8935-8070-00
TAODV-TYPE104	Tóner Original Develop 8936-3060-00/TYPE104 Negro	8936-3060-00
TAODV-TYPE106	Tóner Original Develop 8937-7240-00/TYPE106 Negro	8937-786
TAODV-TYPE204	Tóner Original Develop 8936-2060-00/TYPE204 Negro, Pack Doble	8936-2060-00
TAODV-TYPE205	Tóner Original Develop 8937-757/TYPE205 Negro	8937-757
TAODV-TYPE302	Tóner Original Develop 8936-4060-00/TYPE302 Negro, Pack Doble	8936-4060-00
TAODV-TYPE303	Tóner Original Develop 8937-7510-00/TYPE303 Negro	8937-7510-00
TAODV-TYPE311	Tóner Original Develop 8938-406/TYPE311 Negro	8938-406
TAOE-C1100B	Tóner Original Epson C13S050190 Negro	C13S050190
TAOE-C1100C	Tóner Original Epson C13S050193 Cian	C13S050193
TAOE-C1100M	Tóner Original Epson C13S050192 Magenta	C13S050192
TAOE-C1100S4	Tóner Original Epson C13S050268 CMYK (4 uds.)	C13S050268
TAOE-C1100XLC	Tóner Original Epson C13S050189 Cian	C13S050189
TAOE-C1100XLM	Tóner Original Epson C13S050188 Magenta	C13S050188
TAOE-C1100XLY	Tóner Original Epson C13S050187 Amarillo	C13S050187
TAOE-C1100Y	Tóner Original Epson C13S050191 Amarillo	C13S050191
TAOE-C1600B	Tóner Original Epson C13S050557 Negro	C13S050557
TAOE-C1600C	Tóner Original Epson C13S050556 Cian	C13S050556

TAOE-C1600M	Tóner Original Epson C13S050555 Magenta	C13S050555
TAOE-C1600Y	Tóner Original Epson C13S050554 Amarillo	C13S050554
TAOE-C1700B	Tóner Original Epson C13S050672/0672 Negro	C13S050672
TAOE-C1700C	Tóner Original Epson C13S050671/0671 Cian	C13S050671
TAOE-C1700M	Tóner Original Epson C13S050670/0670 Magenta	C13S050670
TAOE-C1700XLB	Tóner Original Epson C13S050614 Negro	C13S050614
TAOE-C1700XLC	Tóner Original Epson C13S050613 Cian	C13S050613
TAOE-C1700XLM	Tóner Original Epson C13S050612 Magenta	C13S050612
TAOE-C1700XLY	Tóner Original Epson C13S050611 Amarillo	C13S050611
TAOE-C1700Y	Tóner Original Epson C13S050669/0669 Amarillo	C13S050669
TAOE-C2600C	Tóner Original Epson C13S050232/0232 Cian	C13S050232
TAOE-C2600M	Tóner Original Epson C13S050231/0231 Magenta	C13S050231
TAOE-C2600XLC	Tóner Original Epson C13S050228/0228 Cian	C13S050228
TAOE-C2600XLM	Tóner Original Epson C13S050227/0227 Magenta	C13S050227
TAOE-C2600XLY	Tóner Original Epson C13S050226/0226 Amarillo	C13S050226
TAOE-C2600Y	Tóner Original Epson C13S050230/0230 Amarillo	C13S050230
TAOE-C2800B	Tóner Original Epson C13S051165 Negro	C13S051165
TAOE-C2800C	Tóner Original Epson C13S051164 Cian	C13S051164
TAOE-C2800M	Tóner Original Epson C13S051163 Magenta	C13S051163
TAOE-C2800XLB	Tóner Original Epson C13S051161 Negro	C13S051161
TAOE-C2800XLC	Tóner Original Epson C13S051160 Cian	C13S051160
TAOE-C2800XLM	Tóner Original Epson C13S051159 Magenta	C13S051159
TAOE-C2800XLY	Tóner Original Epson C13S051158 Amarillo	C13S051158
TAOE-C2800Y	Tóner Original Epson C13S051162 Amarillo	C13S051162
TAOE-C2900B	Tóner Original Epson C13S050630 Negro	C13S050630
TAOE-C2900BDP	Tóner Original Epson C13S050631 Negro, Pack Doble	C13S050631
TAOE-C2900C	Tóner Original Epson C13S050629 Cian	C13S050629
TAOE-C2900M	Tóner Original Epson C13S050628 Magenta	C13S050628
TAOE-C2900Y	Tóner Original Epson C13S050627 Amarillo	C13S050627
TAOE-C3000B	Tóner Original Epson C13S050750/0750 Negro	C13S050750
TAOE-C3000BDP	Tóner Original Epson C13S050751/0751 Negro Pack Doble	C13S050751
TAOE-C3000C	Tóner Original Epson C13S050212 Cian	C13S050212
TAOE-C3000XLC	Tóner Original Epson C13S050749/0749 Cian	C13S050749
TAOE-C3000XLM	Tóner Original Epson C13S050748/0748 Magenta	C13S050748
TAOE-C3000XLY	Tóner Original Epson C13S050747/0747 Amarillo	C13S050747
TAOE-C3000Y	Tóner Original Epson C13S050210 Amarillo	C13S050210
TAOE-C3800C	Tóner Original Epson C13S051130/1130 Cian	C13S051130
TAOE-C3800M	Tóner Original Epson C13S051129/1129 Magenta	C13S051129
TAOE-C3800XLB	Tóner Original Epson C13S051127/1127 Negro	C13S051127
TAOE-C3800XLC	Tóner Original Epson C13S051126/1126 Cian	C13S051126
TAOE-C3800XLM	Tóner Original Epson C13S051125/1125 Magenta	C13S051125
TAOE-C3800XLY	Tóner Original Epson C13S051124/1124 Amarillo	C13S051124
TAOE-C3800Y	Tóner Original Epson C13S051128/1128 Amarillo	C13S051128
TAOE-C3900B	Tóner Original Epson C13S050593 Negro AcuBrite	C13S050593
TAOE-C3900BDP	Tóner Original Epson C13S050594 Negro, Pack Doble	C13S050594
TAOE-C3900C	Tóner Original Epson C13S050592 Cian AcuBrite	C13S050592
TAOE-C3900M	Tóner Original Epson C13S050591 Magenta AcuBrite	C13S050591
TAOE-C3900Y	Tóner Original Epson C13S050590 Amarillo AcuBrite	C13S050590
TAOE-C4000C	Tóner Original Epson C13S050090 Cian	C13S050090
TAOE-C4000M	Tóner Original Epson C13S050089 Magenta	C13S050089
TAOE-C4000Y	Tóner Original Epson C13S050088 Amarillo	C13S050088
TAOE-C4100C	Tóner Original Epson C13S050146 Cian	C13S050146
TAOE-C4100M	Tóner Original Epson C13S050147 Magenta	C13S050147
TAOE-C4100Y	Tóner Original Epson C13S050148 Amarillo	C13S050148
TAOE-C4200B	Tóner Original Epson C13S050245/0245 Negro	C13S050245
TAOE-C4200C	Tóner Original Epson C13S050244/0244 Cian	C13S050244
TAOE-C4200M	Tóner Original Epson C13S050243/0243 Magenta	C13S050243
TAOE-C4200Y	Tóner Original Epson C13S050242/0242 Amarillo	C13S050242
TAOE-C500B	Tóner Original Epson C13S050663/0663 Negro	C13S050663
TAOE-C500C	Tóner Original Epson C13S050662/0662 Cian	C13S050662
TAOE-C500M	Tóner Original Epson C13S050661/0661 Magenta	C13S050661
TAOE-C500XLB	Tóner Original Epson C13S050659/0659 Negro	C13S050659
TAOE-C500XLC	Tóner Original Epson C13S050658/0658 Cian	C13S050658
TAOE-C500XLM	Tóner Original Epson C13S050657/0657 Magenta	C13S050657
TAOE-C500XLY	Tóner Original Epson C13S050656/0656 Amarillo	C13S050656
TAOE-C500Y	Tóner Original Epson C13S050660/0660 Amarillo	C13S050660
TAOE-C8000C	Tóner Original Epson C13S050018 Cian	C13S050018
TAOE-C8000M	Tóner Original Epson C13S050017 Magenta	C13S050017
TAOE-C8500B	Tóner Original Epson C13S050038 Negro	C13S050038
TAOE-C8500C	Tóner Original Epson C13S050041 Cian	C13S050041
TAOE-C8500M	Tóner Original Epson C13S050040 Magenta	C13S050040

TAOE-C8500Y	Tóner Original Epson C13S050039 Amarillo	C13S050039
TAOE-C900C	Tóner Original Epson C13S050100 Negro	C13S050100
TAOE-C900M	Tóner Original Epson C13S050157 Cian	C13S050157
TAOE-C900XLB	Tóner Original Epson C13S050155 Amarillo	C13S050155
TAOE-C900XLC	Tóner Original Epson C13S050099 Cian	C13S050099
TAOE-C900XLM	Tóner Original Epson C13S050098 Magenta	C13S050098
TAOE-C900XLY	Tóner Original Epson C13S050097 Amarillo	C13S050097
TAOE-C900Y	Tóner Original Epson C13S050156 Magenta	C13S050156
TAOE-C9100B	Tóner Original Epson C13S050198 Negro	C13S050198
TAOE-C9100C	Tóner Original Epson C13S050197 Cian	C13S050197
TAOE-C9100M	Tóner Original Epson C13S050196 Magenta	C13S050196
TAOE-C9100Y	Tóner Original Epson C13S050195 Amarillo	C13S050195
TAOE-C9200B	Tóner Original Epson C13S050477 Negro	C13S050477
TAOE-C9200C	Tóner Original Epson C13S050476 Cian	C13S050476
TAOE-C9200M	Tóner Original Epson C13S050475 Magenta	C13S050475
TAOE-C9200Y	Tóner Original Epson C13S050474 Amarillo	C13S050474
TAOE-C9300B	Tóner Original Epson C13S050605/0605 Negro	C13S050605
TAOE-C9300BDP	Tóner Original Epson C13S050609/0605/Negro, Pack Doble	C13S050609
TAOE-C9300C	Tóner Original Epson C13S050604/0604 Cian	C13S050604
TAOE-C9300CDP	Tóner Original Epson C13S050608/0604/Cian, Pack Doble	C13S050608
TAOE-C9300M	Tóner Original Epson C13S050603/0603 Magenta	C13S050603
TAOE-C9300MDP	Tóner Original Epson C13S050607/0603/Magenta, Pack Doble	C13S050607
TAOE-C9300Y	Tóner Original Epson C13S050602/0602 Amarillo	C13S050602
TAOE-C9300YDP	Tóner Original Epson C13S050606/0602/Amarillo, Pack Doble	C13S050606
TAOE-CX17C	Tóner Original Epson C13S050560 Cian	C13S050560
TAOE-CX17M	Tóner Original Epson C13S050559 Magenta	C13S050559
TAOE-CX17Y	Tóner Original Epson C13S050558 Amarillo	C13S050558
TAOE-CX21B	Tóner Original Epson C13S050319 Negro	C13S050319
TAOE-CX21C	Tóner Original Epson C13S050318 Cian	C13S050318
TAOE-CX21M	Tóner Original Epson C13S050317 Magenta	C13S050317
TAOE-CX21Y	Tóner Original Epson C13S050316 Amarillo	C13S050316
TAOE-CX28B	Tóner Original Epson C13S050493 Negro	C13S050493
TAOE-CX28C	Tóner Original Epson C13S050492 Cian	C13S050492
TAOE-CX28M	Tóner Original Epson C13S050491 Magenta	C13S050491
TAOE-CX28Y	Tóner Original Epson C13S050490 Amarillo	C13S050490
TAOE-DRC1100	Tambor Original Epson C13S051104	C13S051104
TAOE-DRC1600	Tambor Original Epson C13S051198	C13S051198
TAOE-DRC2900	Tambor Original Epson C13S051211	C13S051211
TAOE-DRC3900B	Tambor Original Epson C13S051204 Negro	C13S051204
TAOE-DRC3900C	Tambor Original Epson C13S051203 Cian	C13S051203
TAOE-DRC3900M	Tambor Original Epson C13S051202 Magenta	C13S051202
TAOE-DRC3900Y	Tambor Original Epson C13S051201 Amarillo	C13S051201
TAOE-DRC4000	Tambor Original Epson C13S051081	C13S051081
TAOE-DRC4100	Tambor Original Epson C13S051093	C13S051093
TAOE-DRC4200	Tambor Original Epson C13S051109/1109	C13S051109
TAOE-DRC500B	Tambor Original Epson C13S051227/1227 Negro	C13S051227
TAOE-DRC500C	Tambor Original Epson C13S051226/1226 Cian	C13S051226
TAOE-DRC500M	Tambor Original Epson C13S051225/1225 Magenta	C13S051225
TAOE-DRC500Y	Tambor Original Epson C13S051224/1224 Amarillo	C13S051224
TAOE-DRC900	Tambor Original Epson C13S051083	C13S051083
TAOE-DRC9100	Tambor Original Epson C13S051105	C13S051105
TAOE-DRC9200	Tambor Original Epson C13S051073	C13S051073
TAOE-DRC9200B	Tambor Original Epson C13S051178 Negro	C13S051178
TAOE-DRC9200C	Tambor Original Epson C13S051177 Cian	C13S051177
TAOE-DRC9200M	Tambor Original Epson C13S051176 Magenta	C13S051176
TAOE-DRC9200Y	Tambor Original Epson C13S051175 Amarillo	C13S051175
TAOE-DRC9300B	Tambor Original Epson C13S051210/1210 Negro	C13S051210
TAOE-DRC9300CL	Tambor Original Epson C13S051209/1209 CMY	C13S051209
TAOE-DRCX28B	Tambor Original Epson C13S051194 Negro	C13S051194
TAOE-DRCX28C	Tambor Original Epson C13S051193 Cian	C13S051193
TAOE-DRCX28M	Tambor Original Epson C13S051192 Magenta	C13S051192
TAOE-DRCX28Y	Tambor Original Epson C13S051191 Amarillo	C13S051191
TAOE-DREPL5500	Tambor Original Epson C13S051029	C13S051029
TAOE-DREPL5700	Tambor Original Epson C13S051055	C13S051055
TAOE-DREPL6200	Tambor Original Epson C13S051099	C13S051099
TAOE-DRM300	Tambor Original Epson C13S051228/1228	C13S051228
TAOE-DRM400	Tambor Original Epson C13S051230/1230	C13S051230
TAOE-EC1000B	Tóner Original Epson C13S050033 Negro	C13S050033
TAOE-EC1000C	Tóner Original Epson C13S050036 Cian	C13S050036
TAOE-EC1000M	Tóner Original Epson C13S050035 Magenta	C13S050035
TAOE-EC1000Y	Tóner Original Epson C13S050034 Amarillo	C13S050034

TAOE-EPL6100	Tóner Original Epson C13S050095 Negro	C13S050095
TAOE-EPL6200	Tóner Original Epson C13S050167 Negro	C13S050167
TAOE-EPLN2550	Tóner Original Epson C13S050290 Negro	C13S050290
TAOE-EPLN4000	Tóner Original Epson C13S051060 Negro	C13S051060
TAOE-EPLN6200	Tóner Original Epson C13S050166 Negro	C13S050166
TAOE-EPLN7000	Tóner Original Epson C13S051100 Negro	C13S051100
TAOE-M1200	Tóner Original Epson C13S050520/0520 Negro	C13S050520
TAOE-M1200DV	Tóner y Revelador Original Epson C13S050523 Negro	C13S050523
TAOE-M1200RP	Tóner Original Epson C13S050522 Negro	C13S050522
TAOE-M1200XL	Tóner Original Epson C13S050521/0521 Negro	C13S050521
TAOE-M1400	Tóner Original Epson C13S050652/0652 Negro	C13S050652
TAOE-M1400XL	Tóner Original Epson C13S050650/0650 Negro	C13S050650
TAOE-M1400XLRP	Tóner Original Epson C13S050651/0651 Negro, Programa de Retorno	C13S050651
TAOE-M200	Tóner Original Epson C13S050709/0709 Negro	C13S050709
TAOE-M2000	Tóner Original Epson C13S050436 Negro	C13S050436
TAOE-M2000RP	Tóner Original Epson C13S050438 Negro, Programa de Retorno	C13S050438
TAOE-M2000XL	Tóner Original Epson C13S050435 Negro	C13S050435
TAOE-M2000XLRP	Tóner Original Epson C13S050437 Negro, Programa de Retorno	C13S050437
TAOE-M200DP	Tóner Original Epson C13S050710/0710 Negro, Pack Doble	C13S050710
TAOE-M2300	Tóner Original Epson C13S050583 Negro	C13S050583
TAOE-M2300RP	Tóner Original Epson C13S050585 Negro, Programa de Retorno	C13S050585
TAOE-M2300XL	Tóner Original Epson C13S050582 Negro	C13S050582
TAOE-M2300XLRP	Tóner Original Epson C13S050584 Negro, Programa de Retorno	C13S050584
TAOE-M300	Tóner Original Epson C13S050690/0690 Negro	C13S050690
TAOE-M300XL	Tóner Original Epson C13S050689/0689 Negro	C13S050689
TAOE-M300XLRP	Tóner Original Epson C13S050691/0691 Negro, Programa de Retorno	C13S050691
TAOE-M400	Tóner Original Epson C13S050698 Negro	C13S050698
TAOE-M4000	Tóner Original Epson C13S051170 Negro	C13S051170
TAOE-M4000RP	Tóner Original Epson C13S051173 Negro, Programa de Retorno	C13S051173
TAOE-M400XL	Tóner Original Epson C13S050697/0697 Negro	C13S050697
TAOE-M400XLRP	Tóner Original Epson C13S050699/0699 Negro, Programa de Retorno	C13S050699
TAOE-M7000	Tóner Original Epson C13S051221/1221 Negro	C13S051221
TAOE-M7000RP	Tóner Original Epson C13S051222/1222 Negro, Programa de Retorno	C13S051222
TAOE-M8000	Tóner Original Epson C13S051188 Negro	C13S051188
TAOE-M8000RP	Tóner Original Epson C13S051189 Negro, Programa de Retorno	C13S051189
TAOE-MX200DP	Tóner Original Epson C13S050711/0710 Negro, Pack Doble, Programa de Retorno	C13S050711
TAOE-N3000	Tóner Original Epson C13S051111 Negro	C13S051111
TAOG-43618	Tóner Original Tally Genicom 043618 Cian	43618
TAOGT-43767	Tóner Original Tally Genicom 043767 Magenta	43767
TAOH-131AS3	Tambor Original HP U0SL1AM/131A CMY (3 uds.)	U0SL1AM
TAOH-92298A	Tóner Original HP 92298A/98A Negro	92298A
TAOH-976YCB	Tóner Original HP L0S20YC/976YC Negro	L0S20YC
TAOH-976YCM	Tóner Original HP L0S30YC/976YC Magenta	L0S30YC
TAOH-976YCY	Tóner Original HP L0S31YC/976YC Amarillo	L0S31YC
TAOH-C3903A	Tóner Original HP C3903A/03A Negro	C3903A
TAOH-C3906A	Tóner Original HP C3906A/06A Negro	C3906A
TAOH-C3909A	Tóner Original HP C3909A/09A Negro	C3909A
TAOH-C4092A	Tóner Original HP C4092A/92A Negro	C4092A
TAOH-C4096A	Tóner Original HP C4096A/96A Negro	C4096A
TAOH-C4127A	Tóner Original HP C4127A/27A Negro	C4127A
TAOH-C4127X	Tóner Original HP C4127X/27X Negro	C4127X
TAOH-C4129X	Tóner Original HP C4129X/29X Negro	C4129X
TAOH-C4182X	Tóner Original HP C4182X/82X Negro	C4182X
TAOH-C4192A	Tóner Original HP C4192A Cian	C4192A
TAOH-C4193A	Tóner Original HP C4193A Magenta	C4193A
TAOH-C7115A	Tóner Original HP C7115A/15A Negro	C7115A
TAOH-C7115X	Tóner Original HP C7115X/15X Negro	C7115X
TAOH-C8061X	Tóner Original HP C8061X/61X Negro	C8061X
TAOH-C8543X	Tóner Original HP C8543X/43X Negro	C8543X
TAOH-C8550A	Tóner Original HP C8550A Negro	C8550A
TAOH-C8551A	Tóner Original HP C8551A Cian	C8551A
TAOH-C8552A	Tóner Original HP C8552A Amarillo	C8552A
TAOH-C8553A	Tóner Original HP C8553A Magenta	C8553A
TAOH-C9700A	Tóner Original HP C9700A Negro	C9700A
TAOH-C9701A	Tóner Original HP C9701A Cian	C9701A
TAOH-C9702A	Tóner Original HP C9702A Amarillo	C9702A
TAOH-C9703A	Tóner Original HP C9703A Magenta	C9703A
TAOH-C9720A	Tóner Original HP C9720A Negro	C9720A
TAOH-C9721A	Tóner Original HP C9721A Cian	C9721A
TAOH-C9722A	Tóner Original HP C9722A Amarillo	C9722A
TAOH-C9723A	Tóner Original HP C9723A Magenta	C9723A

TAOH-C9730A	Tóner Original HP C9730A Negro	C9730A
TAOH-C9731A	Tóner Original HP C9731A Cian	C9731A
TAOH-C9732A	Tóner Original HP C9732A Amarillo	C9732A
TAOH-C9733A	Tóner Original HP C9733A Magenta	C9733A
TAOH-CB380A	Tóner Original HP CB380A Negro	CB380A
TAOH-CB381A	Tóner Original HP CB381A Cian	CB381A
TAOH-CB382A	Tóner Original HP CB382A Amarillo	CB382A
TAOH-CB383A	Tóner Original HP CB383A Magenta	CB383A
TAOH-CB390A	Tóner Original HP CB390A Negro	CB390A
TAOH-CB400A	Tóner Original HP CB400A Negro	CB400A
TAOH-CB401A	Tóner Original HP CB401A Cian	CB401A
TAOH-CB402A	Tóner Original HP CB402A Amarillo	CB402A
TAOH-CB403A	Tóner Original HP CB403A Magenta	CB403A
TAOH-CB435A	Tóner Original HP CB435A/35A Negro	CB435A
TAOH-CB435ADP	Tóner Original HP CB435AD/35A Negro, Pack Doble	CB435AD
TAOH-CB436A	Tóner Original HP CB436A/36A Negro	CB436A
TAOH-CB436ADP	Tóner Original HP CB436AD/36A Negro, Pack Doble	CB436AD
TAOH-CB540A	Tóner Original HP CB540A Negro	CB540A
TAOH-CB540ADP	Tóner Original HP CB540AD/125A Negro, Pack Doble	CB540AD
TAOH-CB541A	Tóner Original HP CB541A Cian	CB541A
TAOH-CB542A	Tóner Original HP CB542A Amarillo	CB542A
TAOH-CB543A	Tóner Original HP CB543A Magenta	CB543A
TAOH-CC364A	Tóner Original HP CC364A/64A Negro	CC364A
TAOH-CC364X	Tóner Original HP CC364X/64X Negro	CC364X
TAOH-CC364XDP	Tóner Original HP CC364XD/64XD Negro, Pack Doble	CC364XD
TAOH-CC530A	Tóner Original HP CC530A Negro	CC530A
TAOH-CC530ADP	Tóner Original HP CC530AD Negro, Pack Doble	CC530AD
TAOH-CC530L	Tóner Original HP 304L Negro	CC530L
TAOH-CC531A	Tóner Original HP CC531A Cian	CC531A
TAOH-CC531L	Tóner Original HP 304L Cian	CC531L
TAOH-CC532A	Tóner Original HP CC532A Amarillo	CC532A
TAOH-CC532L	Tóner Original HP 340L Amarillo	CC532L
TAOH-CC533A	Tóner Original HP CC533A Magenta	CC533A
TAOH-CC533L	Tóner Original HP 304L Magenta	CC533L
TAOH-CE250A	Tóner Original HP CE250A Negro	CE250A
TAOH-CE250X	Tóner Original HP CE250X Negro	CE250X
TAOH-CE250XDDP	Tóner Original HP CE250XD/504X Negro, Pack Doble	CE250XD
TAOH-CE251A	Tóner Original HP CE251A Cian	CE251A
TAOH-CE252A	Tóner Original HP CE252A Amarillo	CE252A
TAOH-CE253A	Tóner Original HP CE253A Magenta	CE253A
TAOH-CE255A	Tóner Original HP CE255A Negro	CE255A
TAOH-CE255X	Tóner Original HP CE255X Negro	CE255X
TAOH-CE255XDDP	Tóner Original HP CE255XD/55X Negro, Pack Doble	CE255XD
TAOH-CE260A	Tóner Original HP CE260A Negro	CE260A
TAOH-CE260XDP	Tóner Original HP CE260X Negro	CE260X
TAOH-CE261A	Tóner Original HP CE261A Cian	CE261A
TAOH-CE262A	Tóner Original HP CE262A Amarillo	CE262A
TAOH-CE263A	Tóner Original HP CE263A Magenta	CE263A
TAOH-CE264X	Tóner Original HP CE264X/64X Negro	CE264X
TAOH-CE270A	Tóner Original HP CE270A/650A Negro	CE270A
TAOH-CE271A	Tóner Original HP CE271A/650A Cian	CE271A
TAOH-CE272A	Tóner Original HP CE272A/650A Amarillo	CE272A
TAOH-CE273A	Tóner Original HP CE273A/650A Magenta	CE273A
TAOH-CE278A	Tóner Original HP CE278A Negro	CE278A
TAOH-CE278ADDP	Tóner Original HP CE278AD/78A Negro, Pack Doble	CE278AD
TAOH-CE278L	Tóner Original HP CE278A/78L Negro Economy	CE278L
TAOH-CE285A	Tóner Original HP CE285A Negro	CE285A
TAOH-CE285ADP	Tóner Original HP CE285AD/85A Negro, Pack Doble	CE285AD
TAOH-CE285L	Tóner Original HP CE285L/85L Negro Economy	CE285L
TAOH-CE310A	Tóner Original HP CE310A/126A Negro	CE310A
TAOH-CE310ADP	Tóner Original HP CE310AD/126A Negro, Pack Doble	CE310AD
TAOH-CE311A	Tóner Original HP CE311A/126A Cian	CE311A
TAOH-CE312A	Tóner Original HP CE312A/126A Amarillo	CE312A
TAOH-CE313A	Tóner Original HP CE313A/126A Magenta	CE313A
TAOH-CE320A	Tóner Original HP CE320A/128A Negro	CE320A
TAOH-CE320ADP	Tóner Original HP CE320AD/128A Negro, Pack Doble	CE320AD
TAOH-CE321A	Tóner Original HP CE321A/128A Cian	CE321A
TAOH-CE321AS3	Tambor Original HP CF372AM/304A CMY (3 uds.)	CF372AM
TAOH-CE322A	Tóner Original HP CE322A/128A Amarillo	CE322A
TAOH-CE323A	Tóner Original HP CE323A/128A Magenta	CE323A
TAOH-CE340A	Tóner Original HP CE340A/651A Negro	CE340A

TAOH-CE341A	Tóner Original HP CE341A/651A Cian	CE341A
TAOH-CE342A	Tóner Original HP CE342A/651A Amarillo	CE342A
TAOH-CE343A	Tóner Original HP CE343A/651A Magenta	CE343A
TAOH-CE390A	Tóner Original HP CE390A/90A Negro	CE390A
TAOH-CE390X	Tóner Original HP CE390X/90X Negro	CE390X
TAOH-CE390XDP	Tóner Original HP CE390XD/90X Negro, Pack Doble	CE390XD
TAOH-CE400A	Tóner Original HP CE400A Negro	CE400A
TAOH-CE400X	Tóner Original HP CE400X Negro	CE400X
TAOH-CE401A	Tóner Original HP CE401A Cian	CE401A
TAOH-CE402A	Tóner Original HP CE402A Amarillo	CE402A
TAOH-CE403A	Tóner Original HP CE403A Magenta	CE403A
TAOH-CE410A	Tóner Original HP CE410A/305A Negro	CE410A
TAOH-CE410L	Tóner Original HP CE410AL/305L Negro Economy	CE410L
TAOH-CE410X	Tóner Original HP CE410X/305X Negro	CE410X
TAOH-CE410XDP	Tóner Original HP CE410XD/305X, Pack Doble	CE410XD
TAOH-CE411A	Tóner Original HP CE411A/305A Cian	CE411A
TAOH-CE411L	Tóner Original HP CE411L/305L Cian Economy	CE411L
TAOH-CE412A	Tóner Original HP CE412A/305A Amarillo	CE412A
TAOH-CE412L	Tóner Original HP CE412L/305L Amarillo Economy	CE412L
TAOH-CE413A	Tóner Original HP CE413A/305A Magenta	CE413A
TAOH-CE413L	Tóner Original HP CE413L/305L Magenta Economy	CE413L
TAOH-CE505A	Tóner Original HP CE505A/05A Negro	CE505A
TAOH-CE505DP	Tóner Original HP CE505D/05A Negro, Pack Doble	CE505D
TAOH-CE505L	Tóner Original HP CE505L/05L Negro Economy	CE505L
TAOH-CE505X	Tóner Original HP CE505X/05X Negro	CE505X
TAOH-CE505XDP	Tóner Original HP CE505XD/05X Negro, Pack Doble	CE505XD
TAOH-CE740A	Tóner Original HP CE740A Negro	CE740A
TAOH-CE741A	Tóner Original HP CE741A Cian	CE741A
TAOH-CE742A	Tóner Original HP CE742A Amarillo	CE742A
TAOH-CE743A	Tóner Original HP CE743A Magenta	CE743A
TAOH-CF031A	Tóner Original HP CF031A Cian	CF031A
TAOH-CF032A	Tóner Original HP CF032A Amarillo	CF032A
TAOH-CF033A	Tóner Original HP CF033A Magenta	CF033A
TAOH-CF210A	Tóner Original HP CF210A/131A Negro	CF210A
TAOH-CF210X	Tóner Original HP CF210X/131X Negro	CF210X
TAOH-CF210XDP	Tóner Original HP CF210XD/131X Negro, Pack Doble	CF210XD
TAOH-CF211A	Tóner Original HP CF211A/131A Cian	CF211A
TAOH-CF212A	Tóner Original HP CF212A/131A Amarillo	CF212A
TAOH-CF213A	Tóner Original HP CF213A/131A Magenta	CF213A
TAOH-CF214A	Tóner Original HP CF214A/14A Negro	CF214A
TAOH-CF214X	Tóner Original HP CF214X/14X Negro	CF214X
TAOH-CF226A	Tóner Original HP CF226A Negro	CF226A
TAOH-CF226X	Tóner Original HP CF226X/26A Negro	CF226X
TAOH-CF280ADP	Tóner Original HP CF280A/80A Negro	CF280A
TAOH-CF280X	Tóner Original HP CF280X/80X Negro	CF280X
TAOH-CF280XDP	Tóner Original HP CF280XD/80X Negro, Pack Doble	CF280XD
TAOH-CF281A	Tóner Original HP CF281A/81A Negro	CF281A
TAOH-CF281X	Tóner Original HP CF281X/81X Negro	CF281X
TAOH-CF283A	Tóner Original HP CF283A/83A Negro	CF283A
TAOH-CF283ADP	Tóner Original HP CF283AD Negro, Pack Doble	CF283AD
TAOH-CF283X	Tóner Original HP CF283X/83X Negro	CF283X
TAOH-CF287A	Tóner Original HP CF287A/87A Negro	CF287A
TAOH-CF287X	Tóner Original HP CF287X/87X Negro	CF287X
TAOH-CF300A	Tóner Original HP CF300A Negro	CF300A
TAOH-CF301A	Tóner Original HP CF301A/827A Cian	CF301A
TAOH-CF302A	Tóner Original HP CF302A/827A Amarillo	CF302A
TAOH-CF303A	Tóner Original HP CF303A/827A Magenta	CF303A
TAOH-CF310A	Tóner Original HP CF310A/826A Negro	CF310A
TAOH-CF311A	Tóner Original HP CF311A/826A Cian	CF311A
TAOH-CF312A	Tóner Original HP CF312A/826A Amarillo	CF312A
TAOH-CF313A	Tóner Original HP CF313A/826A Magenta	CF313A
TAOH-CF320A	Tóner Original HP CF320A/652A Negro	CF320A
TAOH-CF320X	Tóner Original HP CF320X/653X Negro	CF320X
TAOH-CF321A	Tóner Original HP CF321A/653A Cian	CF321A
TAOH-CF322A	Tóner Original HP CF322A/653A Amarillo	CF322A
TAOH-CF323A	Tóner Original HP CF323A/653A Magenta	CF323A
TAOH-CF325X	Tóner Original HP CF325X/25X Negro	CF325X
TAOH-CF330X	Tóner Original HP CF330X/654X Negro	CF330X
TAOH-CF331A	Tóner Original HP CF331A/654A Cian	CF331A
TAOH-CF332A	Tóner Original HP CF332A/654A Amarillo	CF332A
TAOH-CF333A	Tóner Original HP CF333A/654A Magenta	CF333A

TAOH-CF341AS3	Tambor Original HP CF341A/126A CMY (3 uds.)	CF341A
TAOH-CF350A	Tóner Original HP CF350A/130A Negro	CF350A
TAOH-CF351A	Tóner Original HP CF351A/130A Cian	CF351A
TAOH-CF352A	Tóner Original HP CF352A/130A Amarillo	CF352A
TAOH-CF353A	Tóner Original HP CF353A/130A Magenta	CF353A
TAOH-CF360A	Tóner Original HP 508A Negro	CF360A
TAOH-CF360X	Tóner Original HP 508X Negro	CF360X
TAOH-CF361A	Tóner Original HP 508A Cian	CF361A
TAOH-CF361X	Tóner Original HP 508X Cian	CF361X
TAOH-CF362A	Tóner Original HP 508A Amarillo	CF362A
TAOH-CF362X	Tóner Original HP 508X Amarillo	CF362X
TAOH-CF363A	Tóner Original HP 508A Magenta	CF363A
TAOH-CF363X	Tóner Original HP 508X Magenta	CF363X
TAOH-CF370AMS3	Tambor Original HP CF370AM/305A CMY (3 uds.)	CF370AM
TAOH-CF371AMS3	Tambor Original HP CF371AM/128A CMY (3 uds.)	CF371AM
TAOH-CF373AMS3	Tambor Original HP CF373AM/125A CMY (3 uds.)	CF373AM
TAOH-CF380A	Tóner Original HP CF380A/312A Negro	CF380A
TAOH-CF380X	Tóner Original HP CF380X/312X Negro	CF380X
TAOH-CF380XDP	Tóner Original HP CF380XD/312XD	CF380XD
TAOH-CF381A	Tóner Original HP CF381A/312A Cian	CF381A
TAOH-CF382A	Tóner Original HP CF382A/312A Amarillo	CF382A
TAOH-CF383A	Tóner Original HP CF383A/312A Magenta	CF383A
TAOH-CF400A	Tóner Original HP 201A/CF 400 A Negro	CF400A
TAOH-CF400X	Tóner Original HP 201X/CF 400 X Negro	CF400X
TAOH-CF401A	Tóner Original HP 201A/CF401A Cian	CF401A
TAOH-CF401X	Tóner Original HP 201X/CF401X Cian	CF401X
TAOH-CF402A	Tóner Original HP 201A/CF 402 A Amarillo	CF402A
TAOH-CF402X	Tóner Original HP 201X/CF 402 X Amarillo	CF402X
TAOH-CF403A	Tóner Original HP 201A/CF 403 A Magenta	CF403A
TAOH-CF403X	Tóner Original HP 201X/CF 403 X Magenta	CF403X
TAOH-CF410A	Tóner Original HP CF410A/410A Negro	CF410A
TAOH-CF410X	Tóner Original HP CF410X/410X Negro	CF410X
TAOH-CF411A	Tóner Original HP CF411A/410A Cian	CF411A
TAOH-CF411X	Tóner Original HP CF411X/411X Cian	CF411X
TAOH-CF412A	Tóner Original HP CF412A/410A Amarillo	CF412A
TAOH-CF412X	Tóner Original HP CF412X/410X Amarillo	CF412X
TAOH-CF413A	Tóner Original HP CF413A/410A Magenta	CF413A
TAOH-CF413X	Tóner Original HP CF413X/410X Magenta	CF413X
TAOH-DRC8560A	Tambor Original HP C8560A Negro	C8560A
TAOH-DRC8561A	Tambor Original HP C8561A Cian	C8561A
TAOH-DRC8562A	Tambor Original HP C8562A Amarillo	C8562A
TAOH-DRC8563A	Tambor Original HP C8563A Magenta	C8563A
TAOH-DRC9704A	Tambor Original HP C9704A	C9704A
TAOH-DRCB384A	Tambor Original HP CB384A Negro	CB384A
TAOH-DRCB385A	Tambor Original HP CB385A Cian	CB385A
TAOH-DRCB386A	Tambor Original HP CB386A Amarillo	CB386A
TAOH-DRCB387A	Tambor Original HP CB387A Magenta	CB387A
TAOH-DRCE314A	Tambor Original HP CE314A/126A CMYK	CE314A
TAOH-DRCF358A	Tambor Original HP CF358A/828A Negro	CF358A
TAOH-DRCF359A	Tambor Original HP CF359A/828A Cian	CF359A
TAOH-DRCF364A	Tambor Original HP CF364A/828A Amarillo	CF364A
TAOH-DRCF365A	Tambor Original HP CF365A/828A Magenta	CF365A
TAOH-DRQ3964A	Tambor Original HP Q3964A	Q3964A
TAOH-Q1338A	Tóner Original HP Q1338A/38A Negro	Q1338A
TAOH-Q1338DP	Tóner Original HP Q1338D/38A Negro, Pack Doble	Q1338D
TAOH-Q1339A	Tóner Original HP Q1339A/39A Negro	Q1339A
TAOH-Q2610A	Tóner Original HP Q2610A/10A Negro	Q2610A
TAOH-Q2612A	Tóner Original HP Q2612A/12A Negro	Q2612A
TAOH-Q2612DDP	Tóner Original HP Q2612AD/12AD Negro, Pack Doble	Q2612AD
TAOH-Q2612L	Tóner Original HP Q2612L/12L Negro Economy	Q2612L
TAOH-Q2613A	Tóner Original HP Q2613A/13A Negro	Q2613A
TAOH-Q2613XL	Tóner Original HP Q2613X/13X Negro	Q2613X
TAOH-Q2624A	Tóner Original HP Q2624A/24A Negro	Q2624A
TAOH-Q2670A	Tóner Original HP Q2670A Negro	Q2670A
TAOH-Q2671A	Tóner Original HP Q2671A Cian	Q2671A
TAOH-Q2672A	Tóner Original HP Q2672A Amarillo	Q2672A
TAOH-Q2673A	Tóner Original HP Q2673A Magenta	Q2673A
TAOH-Q2681A	Tóner Original HP Q2681A Cian	Q2681A
TAOH-Q2682A	Tóner Original HP Q2682A Amarillo	Q2682A
TAOH-Q2683A	Tóner Original HP Q2683A Magenta	Q2683A
TAOH-Q3960A	Tóner Original HP Q3960A Negro	Q3960A

TAOH-Q3961A	Tóner Original HP Q3961A Cian	Q3961A
TAOH-Q3962A	Tóner Original HP Q3962A Amarillo	Q3962A
TAOH-Q3963A	Tóner Original HP Q3963A Magenta	Q3963A
TAOH-Q3971A	Tóner Original HP Q3971A Cian	Q3971A
TAOH-Q3973A	Tóner Original HP Q3973A Magenta	Q3973A
TAOH-Q5942A	Tóner Original HP Q5942A/42A Negro	Q5942A
TAOH-Q5942DDP	Tóner Original HP Q5942XD/42X Negro, Pack Doble	Q5942XD
TAOH-Q5942X	Tóner Original HP Q5942X/42X Negro	Q5942X
TAOH-Q5945A	Tóner Original HP Q5945A/45A Negro	Q5945A
TAOH-Q5949A	Tóner Original HP Q5949A/49A Negro	Q5949A
TAOH-Q5949X	Tóner Original HP Q5949X/49X Negro	Q5949X
TAOH-Q5949XDP	Tóner Original HP Q5949XD/49X Negro, Pack Doble	Q5949XD
TAOH-Q5950A	Tóner Original HP Q5950A Negro	Q5950A
TAOH-Q5951A	Tóner Original HP Q5951A Cian	Q5951A
TAOH-Q5952A	Tóner Original HP Q5952A Amarillo	Q5952A
TAOH-Q5953A	Tóner Original HP Q5953A Magenta	Q5953A
TAOH-Q6000A	Tóner Original HP Q6000A Negro	Q6000A
TAOH-Q6001A	Tóner Original HP Q6001A Cian	Q6001A
TAOH-Q6002A	Tóner Original HP Q6002A Amarillo	Q6002A
TAOH-Q6003A	Tóner Original HP Q6003A Magenta	Q6003A
TAOH-Q6460A	Tóner Original HP Q6460A Negro	Q6460A
TAOH-Q6461A	Tóner Original HP Q6461A Cian	Q6461A
TAOH-Q6462A	Tóner Original HP Q6462A Amarillo	Q6462A
TAOH-Q6463A	Tóner Original HP Q6463A Magenta	Q6463A
TAOH-Q6470A	Tóner Original HP Q6470A Negro	Q6470A
TAOH-Q6471A	Tóner Original HP Q6471A Cian	Q6471A
TAOH-Q6472A	Tóner Original HP Q6472A Amarillo	Q6472A
TAOH-Q6473A	Tóner Original HP Q6473A Magenta	Q6473A
TAOH-Q6511A	Tóner Original HP Q6511A/11A Negro	Q6511A
TAOH-Q6511X	Tóner Original HP Q6511X/11X Negro	Q6511X
TAOH-Q7516A	Tóner Original HP Q7516A/16A Negro	Q7516A
TAOH-Q7551A	Tóner Original HP Q7551A/51A Negro	Q7551A
TAOH-Q7551X	Tóner Original HP Q7551X/51X Negro	Q7551X
TAOH-Q7551XDP	Tóner Original HP Q7551XD/51X Negro, Pack Doble	Q7551XD
TAOH-Q7553A	Tóner Original HP Q7553A/53A Negro	Q7553A
TAOH-Q7553X	Tóner Original HP Q7553X/53X Negro	Q7553X
TAOH-Q7553XDP	Tóner Original HP Q7553XD/53X Negro, Pack Doble	Q7553XD
TAOH-Q7560A	Tóner Original HP Q7560A Negro	Q7560A
TAOH-Q7561A	Tóner Original HP Q7561A Cian	Q7561A
TAOH-Q7562A	Tóner Original HP Q7562A Amarillo	Q7562A
TAOH-Q7563A	Tóner Original HP Q7563A Magenta	Q7563A
TAOH-Q7570A	Tóner Original HP Q7570A Negro	Q7570A
TAOH-Q7581A	Tóner Original HP Q7581A Cian	Q7581A
TAOH-Q7582A	Tóner Original HP Q7582A Amarillo	Q7582A
TAOH-Q7583A	Tóner Original HP Q7583A Magenta	Q7583A
TAOIB-1402717	Tóner Original IBM 1402717 Negro	1402717
TAOIB-28P2494	Tóner Original IBM 28P2494 Negro	28P2494
TAOIB-39V0311	Tóner Original IBM 39V0311 Cian	39V0311
TAOIB-39V0312	Tóner Original IBM 39V0312 Magenta	39V0312
TAOIB-39V0313	Tóner Original IBM 39V0313 Amarillo	39V0313
TAOIB-39V0314	Tóner Original IBM 39V0314 Negro	39V0314
TAOIB-39V0529	Tóner Original IBM 39V0529 Negro	39V0529
TAOIB-39V0544	Tóner Original IBM 39V0544 Negro	39V0544
TAOIB-39V1642	Tóner Original IBM 39V1642 Negro	39V1642
TAOIB-39V2212	Tóner Original IBM 39V2212 Cian	39V2212
TAOIB-39V2213	Tóner Original IBM 39V2213 Magenta	39V2213
TAOIB-39V2214	Tóner Original IBM 39V2214 Amarillo	39V2214
TAOIB-39V2215	Tóner Original IBM 39V2215 Negro	39V2215
TAOIB-39V2430	Tóner Original IBM 39V2430 Negro	39V2430
TAOIB-39V2431	Tóner Original IBM 39V2431 Cian	39V2431
TAOIB-39V2432	Tóner Original IBM 39V2432 Magenta	39V2432
TAOIB-39V2433	Tóner Original IBM 39V2433 Amarillo	39V2433
TAOIB-39V2449	Tóner Original IBM 39V2449 Negro	39V2449
TAOIB-39V2513	Tóner Original IBM 39V2513 Negro	39V2513
TAOIB-39V2971	Tóner Original IBM 39V2971 Negro	39V2971
TAOIB-39V3204	Tóner Original IBM 39V3204 Negro, Programa de Retorno	39V3204
TAOIB-39V3628	Tóner Original IBM 39V3628 Negro	39V3628
TAOIB-53P7582	Tóner Original IBM 53P7582 Negro	53P7582
TAOIB-53P9367	Tóner Original IBM 53P9367 Amarillo	53P9367
TAOIB-53P9368	Tóner Original IBM 53P9368 Negro	53P9368
TAOIB-57P1846	Tóner Original IBM 57P1846 Negro	57P1846

TAOIB-57P1887	Tóner Original IBM 57P1887 Negro	57P1887
TAOIB-69G7377	Tóner Original IBM 69G7377 Negro	69G7377
TAOIB-75P4303	Tóner Original IBM 75P4303 Negro, Programa de Retorno	75P4303
TAOIB-75P4686	Tóner Original IBM 75P4686 Negro	75P4686
TAOIB-75P5711	Tóner Original IBM 75P5711 Negro	75P5711
TAOIB-75P6050	Tóner Original IBM 75P6050 Negro	75P6050
TAOIB-75P6052	Tóner Original IBM 75P6052 Negro	75P6052
TAOIB-75P6872	Tóner Original IBM 75P6872 Cian	75P6872
TAOIB-75P6873	Tóner Original IBM 75P6873 Magenta	75P6873
TAOIB-75P6874	Tóner Original IBM 75P6874 Amarillo	75P6874
TAOIB-75P6875	Tóner Original IBM 75P6875 Negro	75P6875
TAOIB-75P6877	Tóner Original IBM 75P6877 Negro	75P6877
TAOIB-75P6961	Tóner Original IBM 75P6961 Negro	75P6961
TAOIB-DR39V1645	Tambor Original IBM 39V1645	39V1645
TAOIB-DR39V2279	Tambor Original IBM 39V2279	39V2279
TAOIB-DR39V2280	Tambor Original IBM 39V2280	39V2280
TAOIB-DR39V3207	Tambor Original IBM 39V3207	39V3207
TAOIB-DR75P6878	Tambor Original IBM 75P6878	75P6878
TAOIN-88595814	Tóner Original Infotec 88595814 Negro	88595814
TAOKM-01ZK	Tóner Original Konica Minolta 01ZK Negro	01ZK
TAOKM-1600B	Tóner Original Konica Minolta A0V301H Negro	A0V301H
TAOKM-1600C	Tóner Original Konica Minolta A0V30GH Cian	A0V30GH
TAOKM-1600M	Tóner Original Konica Minolta A0V30AH Magenta	A0V30AH
TAOKM-1600XLC	Tóner Original Konica Minolta A0V30HH Cian	A0V30HH
TAOKM-1600XLM	Tóner Original Konica Minolta A0V30CH Magenta	A0V30CH
TAOKM-1600XLS3	Tóner Original Konica Minolta A0V30NH CMY (3 uds.)	A0V30NH
TAOKM-1600XLY	Tóner Original Konica Minolta A0V306H Amarillo	A0V306H
TAOKM-1600Y	Tóner Original Konica Minolta A0V305H Amarillo	A0V305H
TAOKM-2200B	Tóner Original Konica Minolta 4145-403/171-0471-001 Negro	4145-403
TAOKM-2200C	Tóner Original Konica Minolta 4145-703/171-0471-004 Cian	4145-703
TAOKM-2200M	Tóner Original Konica Minolta 4145-603/171-0471-003 Magenta	4145-603
TAOKM-2200Y	Tóner Original Konica Minolta 4145-503/171-0471-002 Amarillo	4145-503
TAOKM-2300B	Tóner Original Konica Minolta 4576-211/171-0517-005 Negro	4576-211
TAOKM-2300C	Tóner Original Konica Minolta 4576-515/171-0517-004 Cian	4576-515
TAOKM-2300M	Tóner Original Konica Minolta 4576-415/171-0517-003 Magenta	4576-415
TAOKM-2300S3	Tóner Original Konica Minolta 4576-611/171-0541-100 Rainbow- CMY (3 uds.)	4576-611
TAOKM-2300XLC	Tóner Original Konica Minolta 4576-511/171-0517-008 Cian	4576-511
TAOKM-2300XLM	Tóner Original Konica Minolta 4576-411/171-0517-007 Magenta	4576-411
TAOKM-2300XLY	Tóner Original Konica Minolta 4576-311/171-0517-006 Amarillo	4576-311
TAOKM-2300Y	Tóner Original Konica Minolta 4576-315/171-0517-002 Amarillo	4576-315
TAOKM-2400B	Tóner Original Konica Minolta A00W432/171-0589-004 Negro	A00W432
TAOKM-2400C	Tóner Original Konica Minolta A00W331/171-0589-003 Cian	A00W331
TAOKM-2400M	Tóner Original Konica Minolta A00W231/171-0589-002 Magenta	A00W231
TAOKM-2400S3	Tóner Original Konica Minolta A00W012/171-0595-001 CMY (3 uds.)	A00W012
TAOKM-2400XLC	Tóner Original Konica Minolta A00W332/171-0589-007 Cian	A00W332
TAOKM-2400XLM	Tóner Original Konica Minolta A00W232/171-0589-006 Magenta	A00W232
TAOKM-2400XLY	Tóner Original Konica Minolta A00W132/171-0589-005 Amarillo	A00W132
TAOKM-2400Y	Tóner Original Konica Minolta A00W131/171-0589-001 Amarillo	A00W131
TAOKM-27606	Tóner Original Konica Minolta 0927-606 Negro	0927-606
TAOKM-30380	Tóner Original Konica Minolta 000X/30380 Negro	000X
TAOKM-30385	Tóner Original Konica Minolta 04BB/30385 Negro	04BB
TAOKM-30394	Tóner Original Konica Minolta 01HL/30394 Negro	01HL
TAOKM-30449	Tóner Original Konica Minolta 01QJ/30449 Negro	01QJ
TAOKM-30843	Tóner Original Konica Minolta 30843 Negro	30843
TAOKM-3100B	Tóner Original Konica Minolta 9960A171-0490-001 Negro	9960A171-0490-001
TAOKM-3100C	Tóner Original Konica Minolta 9960A171-0490-004 Cian	9960A171-0490-004
TAOKM-3100M	Tóner Original Konica Minolta 9960A171-0490-003 Magenta	9960A171-0490-003
TAOKM-3100S4	Tóner Original Konica Minolta 9960A171-0504-001 CMY (4 uds.)	9960A171-0504-001
TAOKM-3100Y	Tóner Original Konica Minolta 9960A171-0490-002 Amarillo	9960A171-0490-002
TAOKM-3300B	Tóner Original Konica Minolta 9960A171-0550-001 Negro	9960A171-0550-001
TAOKM-3300C	Tóner Original Konica Minolta 9960A171-0550-004 Cian	9960A171-0550-004
TAOKM-3300M	Tóner Original Konica Minolta 9960A171-0550-003 Magenta	9960A171-0550-003
TAOKM-3300Y	Tóner Original Konica Minolta 9960A171-0550-002 Amarillo	9960A171-0550-002
TAOKM-3300M	Tóner Original Konica Minolta 9960A171-0322-004 Magenta	9960A171-0322-004
TAOKM-330Y	Tóner Original Konica Minolta 9960A171-0322-003 Amarillo	9960A171-0322-003
TAOKM-36605	Tóner Original Konica Minolta 0936-605 Negro	0936-605
TAOKM-3700XLB	Tóner Original Konica Minolta A0WG02H/TNP-20 Negro	A0WG02H
TAOKM-3700XLC	Tóner Original Konica Minolta A0WG0JH/TNP-20 Cian	A0WG0JH
TAOKM-3700XLM	Tóner Original Konica Minolta A0WG0DH/TNP-20 Magenta	A0WG0DH
TAOKM-3700XLY	Tóner Original Konica Minolta A0WG07H/TNP-20 Amarillo	A0WG07H
TAOKM-3730B	Tóner Original Konica Minolta A0WG01H/TNP-21 Negro	A0WG01H

TAOKM-3730C	Tóner Original Konica Minolta A0WGOHH/TNP-21 Cian	A0WGOHH
TAOKM-3730M	Tóner Original Konica Minolta A0WGOCH/TNP-21 Magenta	A0WGOCH
TAOKM-3730Y	Tóner Original Konica Minolta A0WGO6H/TNP-21 Amarillo	A0WGO6H
TAOKM-38401	Tóner Original Konica Minolta 0938-401 Negro	0938-401
TAOKM-40P	Tóner Original Konica Minolta A0FP023/040P Negro	A0FP023
TAOKM-4152303	Tóner Original Konica Minolta 4152-303/171-0399-002 Negro	4152-303
TAOKM-4152603	Tóner Original Konica Minolta 4152-603/171-0405-002 Negro	4152-603
TAOKM-4152613	Tóner Original Konica Minolta 4152-613 Negro	4152-613
TAOKM-4153103	Tóner Original Konica Minolta 4153-103 Negro	4153-103
TAOKM-4161103	Tóner Original Konica Minolta 4161-103/171-0434-001 Negro	4161-103
TAOKM-4518812	Tóner Original Konica Minolta 4518-812/171-0567-002 Negro	4518-812
TAOKM-4563301	Tóner Original Konica Minolta 4563-301/171-0497-001 Negro	4563-301
TAOKM-4600B	Tóner Original Konica Minolta A0DK151 Negro	A0DK151
TAOKM-4600C	Tóner Original Konica Minolta A0DK451 Cian	A0DK451
TAOKM-4600M	Tóner Original Konica Minolta A0DK351 Magenta	A0DK351
TAOKM-4600S3	Tóner Original Konica Minolta A0DKJ51 CMY (3 uds.)	A0DKJ51
TAOKM-4600XLB	Tóner Original Konica Minolta A0DK152 Negro	A0DK152
TAOKM-4600XLC	Tóner Original Konica Minolta A0DK452 Cian	A0DK452
TAOKM-4600XLM	Tóner Original Konica Minolta A0DK352 Magenta	A0DK352
TAOKM-4600XLS3	Tóner Original Konica Minolta A0DKJ52 CMY (3 uds.)	A0DKJ52
TAOKM-4600XLY	Tóner Original Konica Minolta A0DK252 Amarillo	A0DK252
TAOKM-4600Y	Tóner Original Konica Minolta A0DK251 Amarillo	A0DK251
TAOKM-4700B	Tóner Original Konica Minolta A0X5151 Negro	A0X5151
TAOKM-4700C	Tóner Original Konica Minolta A0X5450 Cian	A0X5450
TAOKM-4700M	Tóner Original Konica Minolta A0X5350 Magenta	A0X5350
TAOKM-4700XLB	Tóner Original Konica Minolta A0X5150 Negro	A0X5150
TAOKM-4700Y	Tóner Original Konica Minolta A0X5250 Amarillo	A0X5250
TAOKM-5430B	Tóner Original Konica Minolta 4539-432/171-0582-001 Negro	4539-432
TAOKM-5430C	Tóner Original Konica Minolta 4539-332/171-0582-004 Cian	4539-332
TAOKM-5430M	Tóner Original Konica Minolta 4539-232/171-0582-003 Magenta	4539-232
TAOKM-5430S3	Tóner Original Konica Minolta 9960A171-0594-001 CMY (3 uds.)	9960A171-0594-001
TAOKM-5440B	Tóner Original Konica Minolta 4539-434/171-0604-001 Negro	4539-434
TAOKM-5440C	Tóner Original Konica Minolta 4539-334/171-0604-004 Cian	4539-334
TAOKM-5440M	Tóner Original Konica Minolta 4539-234/171-0604-003 Magenta	4539-234
TAOKM-5440S3	Tóner Original Konica Minolta 9960A/171-0606-002 CMY (3 uds.)	9960A171-0606-002
TAOKM-5440XLB	Tóner Original Konica Minolta 4539-433/171-0604-005 Negro	4539-433
TAOKM-5440XLC	Tóner Original Konica Minolta 4539-333/171-0604-008 Cian	4539-333
TAOKM-5440XLM	Tóner Original Konica Minolta 4539-233/171-0604-007 Magenta	4539-233
TAOKM-5440XLY	Tóner Original Konica Minolta 4539-133/171-0604-006 Amarillo	4539-133
TAOKM-5440Y	Tóner Original Konica Minolta 4539-132/171-0582-002 Amarillo	4539-132
TAOKM-5450Y	Tóner Original Konica Minolta 4539-134/171-0604-002 Amarillo	4539-134
TAOKM-5500B	Tóner Original Konica Minolta A06V152 Negro	A06V152
TAOKM-5500C	Tóner Original Konica Minolta A06V452 Cian	A06V452
TAOKM-5500M	Tóner Original Konica Minolta A06V352 Magenta	A06V352
TAOKM-5500S3	Tóner Original Konica Minolta A06VJ52 CMY (3 uds.)	A06VJ52
TAOKM-5500XLB	Tóner Original Konica Minolta A06V153 Negro	A06V153
TAOKM-5500XLC	Tóner Original Konica Minolta A06V453 Cian	A06V453
TAOKM-5500XLM	Tóner Original Konica Minolta A06V353 Magenta	A06V353
TAOKM-5500XLS3	Tóner Original Konica Minolta A06VJ53 CMY (3 uds.)	A06VJ53
TAOKM-5500XLY	Tóner Original Konica Minolta A06V253 Amarillo	A06V253
TAOKM-5500Y	Tóner Original Konica Minolta A06V252 Amarillo	A06V252
TAOKM-6100M	Tóner Original Konica Minolta 9960A171-0362-003 Magenta	9960A171-0362-003
TAOKM-6100Y	Tóner Original Konica Minolta 9960A171-0362-004 Amarillo	9960A171-0362-004
TAOKM-7300B	Tóner Original Konica Minolta 8938-133/171-0530-001 Negro	8938-133
TAOKM-7300C	Tóner Original Konica Minolta 8938-136/171-0530-004 Cian	8938-136
TAOKM-7300M	Tóner Original Konica Minolta 8938-135/171-0530-003 Magenta	8938-135
TAOKM-7300S4	Tóner Original Konica Minolta 9960A171-0531-100 CMY (4 uds.)	9960A171-0531-100
TAOKM-7300Y	Tóner Original Konica Minolta 8938-134/171-0530-002 Amarillo	8938-134
TAOKM-7400B	Tóner Original Konica Minolta 8938-621 Negro	8938-621
TAOKM-7400C	Tóner Original Konica Minolta 8938-624 Cian	8938-624
TAOKM-7400M	Tóner Original Konica Minolta 8938-623 Magenta	8938-623
TAOKM-7400Y	Tóner Original Konica Minolta 8938-622 Amarillo	8938-622
TAOKM-8600B	Tóner Original Konica Minolta A0D7153 Negro	A0D7153
TAOKM-8600C	Tóner Original Konica Minolta A0D7453 Cian	A0D7453
TAOKM-8600M	Tóner Original Konica Minolta A0D7353 Magenta	A0D7353
TAOKM-8600Y	Tóner Original Konica Minolta A0D7253 Amarillo	A0D7253
TAOKM-9961256	Tóner Original Konica Minolta 996-1000-256 Negro	996-1000-256
TAOKM-9967465	Tóner Original Konica Minolta 996-7000-465 Negro	996-7000-465
TAOKM-9967877	Tóner Original Konica Minolta 996-7000-877 Negro	996-7000-877
TAOKM-9J04202	Tóner Original Konica Minolta 9J04202 Negro	9J04202
TAOKM-C1060B	Tóner Original Konica Minolta A3VX151/TN-620 Negro	A3VX151

TAOKM-C1060C	Tóner Original Konica Minolta A3VX451/TN-620C Cian	A3VX451
TAOKM-C1060M	Tóner Original Konica Minolta A3VX351/TN-620M Magenta	A3VX351
TAOKM-C1060XLB	Tóner Original Konica Minolta TN-619 Negro	A3VX150
TAOKM-C1060XLC	Tóner Original Konica Minolta A3VX450/TN-619C Cian	A3VX450
TAOKM-C1060XLM	Tóner Original Konica Minolta A3VX350/TN-619M Magenta	A3VX350
TAOKM-C1060XLY	Tóner Original Konica Minolta A3VX250/TN-619Y Amarillo	A3VX250
TAOKM-C1060Y	Tóner Original Konica Minolta A3VX251/TN-620Y Amarillo	A3VX251
TAOKM-C10B	Tóner Original Konica Minolta A00W472 Negro	A00W472
TAOKM-C10C	Tóner Original Konica Minolta A00W372 Cian	A00W372
TAOKM-C10M	Tóner Original Konica Minolta A00W272 Magenta	A00W272
TAOKM-C10Y	Tóner Original Konica Minolta A00W172 Amarillo	A00W172
TAOKM-C203B	Tóner Original Konica Minolta A0D7152/TN213K Negro	A0D7152
TAOKM-C203C	Tóner Original Konica Minolta A0D7452/TN213C Cian	A0D7452
TAOKM-C203M	Tóner Original Konica Minolta A0D7352/TN213M Magenta	A0D7352
TAOKM-C203Y	Tóner Original Konica Minolta A0D7252/TN213Y Amarillo	A0D7252
TAOKM-C20B	Tóner Original Konica Minolta A0DK153/TN 318K Negro	A0DK153
TAOKM-C20B2	Tóner Original Konica Minolta A32W021 Negro	A32W021
TAOKM-C20C	Tóner Original Konica Minolta A0DK453/TN 318C Cian	A0DK453
TAOKM-C20M	Tóner Original Konica Minolta A0DK353/TN 318M Magenta	A0DK353
TAOKM-C20Y	Tóner Original Konica Minolta A0DK253/TN 318Y Amarillo	A0DK253
TAOKM-C220B	Tóner Original Konica Minolta A11G130/TN319K Negro	A11G130
TAOKM-C220B2	Tóner Original Konica Minolta A11G131/TN216K Negro	A11G131
TAOKM-C220C	Tóner Original Konica Minolta A11G430/TN319C Cian	A11G430
TAOKM-C220C2	Tóner Original Konica Minolta A11G431/TN216C Cian	A11G431
TAOKM-C220M	Tóner Original Konica Minolta A11G330/TN319M Magenta	A11G330
TAOKM-C220M2	Tóner Original Konica Minolta A11G331/TN216M Magenta	A11G331
TAOKM-C220Y	Tóner Original Konica Minolta A11G230/TN319Y Amarillo	A11G230
TAOKM-C220Y2	Tóner Original Konica Minolta A11G231/TN216Y Amarillo	A11G231
TAOKM-C224B	Tóner Original Konica Minolta A33K150/TN-321K Negro	A33K150
TAOKM-C224BS	Tóner Original Konica Minolta/A33K050/TN-322/Bizhub 224e Negro	A33K050
TAOKM-C224C	Tóner Original Konica Minolta A33K450/TN-321C Cian	A33K450
TAOKM-C224M	Tóner Original Konica Minolta A33K350/TN-321M Magenta	A33K350
TAOKM-C224Y	Tóner Original Konica Minolta A33K250/TN-321Y Amarillo	A33K250
TAOKM-C250B	Tóner Original Konica Minolta 8938-509/TN210K Negro	8938-509
TAOKM-C250C	Tóner Original Konica Minolta 8938-512/TN210C Cian	8938-512
TAOKM-C250M	Tóner Original Konica Minolta 8938-511/TN210M Magenta	8938-511
TAOKM-C250Y	Tóner Original Konica Minolta 8938-510/TN210Y Amarillo	8938-510
TAOKM-C258B	Tóner Original Konica Minolta A8DA150/TN-324K Negro	A8DA150
TAOKM-C258C	Tóner Original Konica Minolta A8DA450/TN-324C Cian	A8DA450
TAOKM-C258M	Tóner Original Konica Minolta A8DA350/TN-324M Magenta	A8DA350
TAOKM-C258Y	Tóner Original Konica Minolta A8DA250/TN-324Y Amarillo	A8DA250
TAOKM-C25B	Tóner Original Konica Minolta A0X5153/TNP-27K Negro	A0X5153
TAOKM-C25C	Tóner Original Konica Minolta A0X5453/TNP-27C Cian	A0X5453
TAOKM-C25M	Tóner Original Konica Minolta A0X5353/TNP-27M Magenta	A0X5353
TAOKM-C25Y	Tóner Original Konica Minolta A0X5253/TNP-27Y Amarillo	A0X5253
TAOKM-C30B	Tóner Original Konica Minolta A06V154/TN313K Negro	A06V154
TAOKM-C30C	Tóner Original Konica Minolta A06V454/TN313C Cian	A06V454
TAOKM-C30M	Tóner Original Konica Minolta A06V354/TN313M Magenta	A06V354
TAOKM-C30Y	Tóner Original Konica Minolta A06V254/TN313Y Amarillo	A06V254
TAOKM-C3100B	Tóner Original Konica Minolta TNP-50K/A0X5154 Negro	A0X5154
TAOKM-C3100C	Tóner Original Konica Minolta TNP-50C/A0X5454 Cian	A0X5454
TAOKM-C3100M	Tóner Original Konica Minolta TNP-50M/A0X5354 Magenta	A0X5354
TAOKM-C3100XLB	Tóner Original Konica Minolta/A0X5155/TNP-51K Negro	A0X5155
TAOKM-C3100XLC	Tóner Original Konica Minolta/A0X5455/TNP-51C Cian	A0X5455
TAOKM-C3100XLM	Tóner Original Konica Minolta/A0X5355/TNP-51M Magenta	A0X5355
TAOKM-C3100XLY	Tóner Original Konica Minolta/A0X5255/TNP-51Y Amarillo	A0X5255
TAOKM-C3100Y	Tóner Original Konica Minolta TNP-50Y/A0X5254 Amarillo	A0X5254
TAOKM-C3350B	Tóner Original Konica Minolta TNP-48K/A5X0150 Negro	A5X0150
TAOKM-C3350C	Tóner Original Konica Minolta TNP-48C/A5X0450 Cian	A5X0450
TAOKM-C3350M	Tóner Original Konica Minolta TNP-48M/A5X0350 Magenta	A5X0350
TAOKM-C3350Y	Tóner Original Konica Minolta TNP-48Y/A5X0250 Amarillo	A5X0250
TAOKM-C350B	Tóner Original Konica Minolta 4053-403/TN310K Negro	4053-403
TAOKM-C350C	Tóner Original Konica Minolta 4053-703/TN310C Cian	4053-703
TAOKM-C350M	Tóner Original Konica Minolta 4053-603/TN310M Magenta	4053-603
TAOKM-C350XLB	Tóner Original Konica Minolta 8938-705/TN312K Negro	8938-705
TAOKM-C350XLC	Tóner Original Konica Minolta 8938-708/TN312C Cian	8938-708
TAOKM-C350XLM	Tóner Original Konica Minolta 8938-707/TN312M Magenta	8938-707
TAOKM-C350XLY	Tóner Original Konica Minolta 8938-706/TN312Y Amarillo	8938-706
TAOKM-C350Y	Tóner Original Konica Minolta 4053-503/TN310Y Amarillo	4053-503
TAOKM-C35B	Tóner Original Konica Minolta A0X5152/TNP22K Negro	A0X5152
TAOKM-C35C	Tóner Original Konica Minolta A0X5452/TNP22C Cian	A0X5452

TAOKM-C35M	Tóner Original Konica Minolta A0X5352/TNP22M Magenta	A0X5352
TAOKM-C35Y	Tóner Original Konica Minolta A0X5252/TNP22Y Amarillo	A0X5252
TAOKM-C454B	Tóner Original Konica Minolta A33K152/TN-512K Negro	A33K152
TAOKM-C454C	Tóner Original Konica Minolta A33K452/TN-512C Cian	A33K452
TAOKM-C454M	Tóner Original Konica Minolta A33K352/TN-512M Magenta	A33K352
TAOKM-C454Y	Tóner Original Konica Minolta A33K252/TN-512Y Amarillo	A33K252
TAOKM-C500B	Tóner Original Konica Minolta 8937-837/TN501K Negro	8937-837
TAOKM-C500C	Tóner Original Konica Minolta 8937-840/TN501C Cian	8937-840
TAOKM-C500M	Tóner Original Konica Minolta 8937-839/TN501M Magenta	8937-839
TAOKM-C500XLB	Tóner Original Konica Minolta 020L/TN510K Negro	020L
TAOKM-C500XLC	Tóner Original Konica Minolta 020P/TN510C Cian	020P
TAOKM-C500XLM	Tóner Original Konica Minolta 020N/TN510M Magenta	020N
TAOKM-C500XLY	Tóner Original Konica Minolta 020M/TN510Y Amarillo	020M
TAOKM-C500Y	Tóner Original Konica Minolta 8937-838/TN501Y Amarillo	8937-838
TAOKM-C5501B	Tóner Original Konica Minolta A0VW150/TN612K Negro	A0VW150
TAOKM-C5501C	Tóner Original Konica Minolta A0VW450/TN612C Cian	A0VW450
TAOKM-C5501M	Tóner Original Konica Minolta A0VW350/TN612M Magenta	A0VW350
TAOKM-C5501Y	Tóner Original Konica Minolta A0VW250/TN612Y Amarillo	A0VW250
TAOKM-C550B	Tóner Original Konica Minolta A070150/TN611K Negro	A070150
TAOKM-C550C	Tóner Original Konica Minolta A070450/TN611C Cian	A070450
TAOKM-C550M	Tóner Original Konica Minolta A070350/TN611M Magenta	A070350
TAOKM-C550Y	Tóner Original Konica Minolta A070250/TN611Y Amarillo	A070250
TAOKM-C552B	Tóner Original Konica Minolta A0TM150/TN613K Negro	A0TM150
TAOKM-C552C	Tóner Original Konica Minolta A0TM450/TN613C Cian	A0TM450
TAOKM-C552M	Tóner Original Konica Minolta A0TM350/TN613M Magenta	A0TM350
TAOKM-C552Y	Tóner Original Konica Minolta A0TM250/TN613Y Amarillo	A0TM250
TAOKM-C6000B	Tóner Original Konica Minolta A1U9150/TN616K Negro	A1U9150
TAOKM-C6000C	Tóner Original Konica Minolta A1U9453/TN616C Cian	A1U9453
TAOKM-C6000M	Tóner Original Konica Minolta A1U9353/TN-616M Magenta	A1U9353
TAOKM-C6000Y	Tóner Original Konica Minolta A1U9253/TN-616Y Amarillo	A1U9253
TAOKM-C654B	Tóner Original Konica Minolta A3VU050/TN-712 Negro	A3VU050
TAOKM-C654C	Tóner Original Konica Minolta A3VU450/TN-711C Cian	A3VU450
TAOKM-C654M	Tóner Original Konica Minolta A3VU350/TN-711M Magenta	A3VU350
TAOKM-C654XLB	Tóner Original Konica Minolta A3VU150/TN-711K Negro	A3VU150
TAOKM-C654Y	Tóner Original Konica Minolta A3VU250/TN-711Y Amarillo	A3VU250
TAOKM-C65B	Tóner Original Konica Minolta A0VW154/TN-614 K Negro	A0VW154
TAOKM-C8000B	Tóner Original Konica Minolta A1DY150/ TN-615K Negro	A1DY150
TAOKM-C8000C	Tóner Original Konica Minolta A1DY450/TN-615C Cian	A1DY450
TAOKM-C8000M	Tóner Original Konica Minolta A1DY350/TN-615M Magenta	A1DY350
TAOKM-C8000Y	Tóner Original Konica Minolta A1DY250/TN-615Y Amarillo	A1DY250
TAOKM-CF3100B	Tóner Original Konica Minolta 8937-909/K4B Negro	8937-909
TAOKM-CF3100C	Tóner Original Konica Minolta 8937-922/C4B Cian	8937-922
TAOKM-CF3100M	Tóner Original Konica Minolta 8937-921/M4B Magenta	8937-921
TAOKM-CF3100Y	Tóner Original Konica Minolta 8937-920/Y4B Amarillo	8937-920
TAOKM-DR104	Tambor Original Konica Minolta A2VG0Y0/DU-104	A2VG0Y0
TAOKM-DR109	Tambor Original Konica Minolta 996-1000-250/DR-109	996-1000-250
TAOKM-DR113	Tambor Original Konica Minolta 4519-601/DR-113	4519-601
TAOKM-DR114	Tambor Original Konica Minolta 4021-0297-01/DK-114	4021-0297-01
TAOKM-DR120	Tambor Original Konica Minolta 996-7092-4/DR120	996-7092-4
TAOKM-DR1312	Tambor Original Konica Minolta 01KB/30396	01KB
TAOKM-DR1600A	Tambor Original Konica Minolta A0VU0Y1 CMYK	A0VU0Y1
TAOKM-DR1600B	Tambor Original Konica Minolta 4174-313 CMYK	4174-313
TAOKM-DR2300	Tambor Original Konica Minolta 4577-211/171-0520-001 CMYK	4577-211
TAOKM-DR2400	Tambor Original Konica Minolta 4059-211/171-0591-001 CMYK	4059-211
TAOKM-DR310	Tambor Original Konica Minolta 4068-613/DR-310	4068-613
TAOKM-DR3100	Tambor Original Konica Minolta 171-0493-001	171-0493-001
TAOKM-DR312	Tambor Original Konica Minolta A7Y00RD/DR-312	A7Y00RD
TAOKM-DR313B	Tambor Original Konica Minolta A7U40RD/DR-313 Negro	A7U40RD
TAOKM-DR313CL	Tambor Original Konica Minolta A7U40TD CMY	A7U40TD
TAOKM-DR3500	Tambor Original Konica Minolta 4171-301	4171-301
TAOKM-DR4060	Tambor Original Konica Minolta 9960A171-0203-001 CMYK	9960A171-0203-001
TAOKM-DR411	Tambor Original Konica Minolta A2A103D/DR411	A2A103D
TAOKM-DR4650B	Tambor Original Konica Minolta A03100H Negro	A03100H
TAOKM-DR4650C	Tambor Original Konica Minolta A0310GH Cian	A0310GH
TAOKM-DR4650M	Tambor Original Konica Minolta A0310AH Magenta	A0310AH
TAOKM-DR4650S3	Tambor Original Konica Minolta A0310NH CMY (3 uds.)	A0310NH
TAOKM-DR4650Y	Tambor Original Konica Minolta A03105H Amarillo	A03105H
TAOKM-DR511	Tambor Original Konica Minolta 024K/DK-511	024K
TAOKM-DR512B	Tambor Original Konica Minolta A2XN0RD/DR-512K Negro	A2XN0RD
TAOKM-DR512CL	Tambor Original Konica Minolta A2XN0TD/DR-512 CMY	A2XN0TD
TAOKM-DR710	Tambor Original Konica Minolta 02XH/DR-710	02XH

TAOKM-DR711B	Tambor Original Konica Minolta A2X20RD/DR-711K	A2X20RD
TAOKM-DR7300B	Tambor Original Konica Minolta 4333-413/171-0532-001 Negro	4333-413
TAOKM-DR7300C	Tambor Original Konica Minolta 4333-713/171-0532-004 Cian	4333-713
TAOKM-DR7300M	Tambor Original Konica Minolta 4333-613/171-0532-003 Magenta	4333-613
TAOKM-DR7300Y	Tambor Original Konica Minolta 4333-513/171-0532-002 Amarillo	4333-513
TAOKM-DR7450B	Tambor Original Konica Minolta 4062-213 Negro	4062-213
TAOKM-DR7450C	Tambor Original Konica Minolta 4062-513 Cian	4062-513
TAOKM-DR7450M	Tambor Original Konica Minolta 4062-413 Magenta	4062-413
TAOKM-DR7450Y	Tambor Original Konica Minolta 4062-313 Amarillo	4062-313
TAOKM-DR8600B	Tambor Original Konica Minolta A0DE03H Negro	A0DE03H
TAOKM-DR8600C	Tambor Original Konica Minolta A0DE0JH Cian	A0DE0JH
TAOKM-DR8600M	Tambor Original Konica Minolta A0DE0DH Magenta	A0DE0DH
TAOKM-DR8600Y	Tambor Original Konica Minolta A0DE07H Amarillo	A0DE07H
TAOKM-DRC10	Tambor Original Konica Minolta 4059-218 CMYK	4059-218
TAOKM-DRC220B	Tambor Original Konica Minolta A0XV0RD/DR-311K Negro	A0XV0RD
TAOKM-DRC220CL	Tambor Original Konica Minolta A0XV0TD/DR-311C CMY	A0XV0TD
TAOKM-DRC250B	Tambor Original Konica Minolta 4062-203/IU210K Negro	4062-203
TAOKM-DRC250C	Tambor Original Konica Minolta 4062-503/IU210C Cian	4062-503
TAOKM-DRC250M	Tambor Original Konica Minolta 4062-403/IU210M Magenta	4062-403
TAOKM-DRC250Y	Tambor Original Konica Minolta 4062-303/IU210Y Amarillo	4062-303
TAOKM-DRC300B	Tambor Original Konica Minolta 4062-223/IU311K Negro	4062-223
TAOKM-DRC300C	Tambor Original Konica Minolta 4062-523/IU311C Cian	4062-523
TAOKM-DRC300M	Tambor Original Konica Minolta 4062-423/IU311M Magenta	4062-423
TAOKM-DRC300Y	Tambor Original Konica Minolta 4062-323/IU311Y Amarillo	4062-323
TAOKM-DRC3100B	Tambor Original Konica Minolta/A73303H/IUP-23K/Negro	A73303H
TAOKM-DRC3100C	Tambor Original Konica Minolta/A7330KH/IUP-23C Cian	A7330KH
TAOKM-DRC3100M	Tambor Original Konica Minolta/A7330EH/IUP-23M Magenta	A7330EH
TAOKM-DRC3100Y	Tambor Original Konica Minolta/A73308H/IUP-23Y/Amarillo	A73308H
TAOKM-DRC3350B	Tambor Original Konica Minolta A3GP01D/IUP-22K Negro	A3GP01D
TAOKM-DRC3350C	Tambor Original Konica Minolta A3GP0HD/IUP-22C Cian	A3GP0HD
TAOKM-DRC3350M	Tambor Original Konica Minolta A3GP0CD/IUP-22M Magenta	A3GP0CD
TAOKM-DRC3350Y	Tambor Original Konica Minolta A3GP06D/IUP-22Y Amarillo	A3GP06D
TAOKM-DRC350B	Tambor Original Konica Minolta 4047-403/IU310K Negro	4047-403
TAOKM-DRC350B2	Tambor Original Konica Minolta 4047-203/IU410K Negro	4047-203
TAOKM-DRC350C	Tambor Original Konica Minolta 4047-703/IU310C Cian	4047-703
TAOKM-DRC350M	Tambor Original Konica Minolta 4047-603/IU310M Magenta	4047-603
TAOKM-DRC350Y	Tambor Original Konica Minolta 4047-503/IU310Y Amarillo	4047-503
TAOKM-DRC35B	Tambor Original Konica Minolta A0WG03J/IUP14K Negro	A0WG03J
TAOKM-DRC35C	Tambor Original Konica Minolta A0WG0KJ/IUP14C Cian	A0WG0KJ
TAOKM-DRC35M	Tambor Original Konica Minolta A0WG0EJ/IUP14M Magenta	A0WG0EJ
TAOKM-DRC35Y	Tambor Original Konica Minolta A0WG08J/IUP14Y Amarillo	A0WG08J
TAOKM-DRC451B	Tambor Original Konica Minolta A06003F/IU610K Negro	IU610K
TAOKM-DRC451M	Tambor Original Konica Minolta A0600DF/IU610M Magenta	IU610M
TAOKM-DRC451Y	Tambor Original Konica Minolta A06007F/IU610Y Amarillo	IU610Y
TAOKM-DRC452B	Tambor Original Konica Minolta A0TK0RD/IU612K Negro	A0TK0RD
TAOKM-DRC452C	Tambor Original Konica Minolta A0TK0KD/IU612C Cian	A0TK0KD
TAOKM-DRC452M	Tambor Original Konica Minolta A0TK0ED/IU612M Magenta	A0TK0ED
TAOKM-DRC452Y	Tambor Original Konica Minolta A0TK08D/IU612Y Amarillo	A0TK08D
TAOKM-DRC4750B	Tambor Original Konica Minolta A0WG03H/IUP-12K Negro	A0WG03H
TAOKM-DRC4750C	Tambor Original Konica Minolta A0WG0KH/IUP-12C Cian	A0WG0KH
TAOKM-DRC4750M	Tambor Original Konica Minolta A0WG0EH/IUP-12M Magenta	A0WG0EH
TAOKM-DRC4750Y	Tambor Original Konica Minolta A0WG08H/IUP-12Y Amarillo	A0WG08H
TAOKM-DRC500	Tambor Original Konica Minolta 020EE/DU101 CMYK	DU101
TAOKM-DRCF900	Tambor Original Konica Minolta 1179-0297	1179-0297
TAOKM-DRDU102	Tambor Original Konica Minolta A0400Y0/DU102	A0400Y0
TAOKM-DRDU103	Tambor Original Konica Minolta A22C0Y1/DU-103	A22C0Y1
TAOKM-DRDU106	Tambor Original Konica Minolta A5WJ0Y0/DU-106	A5WJ0Y0
TAOKM-DRIOF	Tambor Original Konica Minolta IOF2	IOF2
TAOKM-DRIU211B	Tambor Original Konica Minolta A0DE02F/IU211K Negro	A0DE02F
TAOKM-DRIU211C	Tambor Original Konica Minolta A0DE02HF/IU211C Cian	A0DE02HF
TAOKM-DRIU211M	Tambor Original Konica Minolta A0DE02CF/IU211M Magenta	A0DE02CF
TAOKM-DRIU211Y	Tambor Original Konica Minolta A0DE06F/IU211Y Amarillo	A0DE06F
TAOKM-DRIU212B	Tambor Original Konica Minolta A0DE01F/IU212K Negro	A0DE01F
TAOKM-DRIU212C	Tambor Original Konica Minolta A0DE0GF/IU212C Cian	A0DE0GF
TAOKM-DRIU212M	Tambor Original Konica Minolta A0DE0AF/IU212M Magenta	A0DE0AF
TAOKM-DRIU212Y	Tambor Original Konica Minolta A0DE05F/IU212Y Amarillo	A0DE05F
TAOKM-DRIU214B	Tambor Original Konica Minolta A85Y0RD/IU-214K Negro	A85Y0RD
TAOKM-DRIU214C	Tambor Original Konica Minolta A85Y0KD/IU-214C Cian	A85Y0KD
TAOKM-DRIU214M	Tambor Original Konica Minolta A85Y0ED/IU-214M Magenta	A85Y0ED
TAOKM-DRIU214Y	Tambor Original Konica Minolta A85Y08D/IU-214Y Amarillo	A85Y08D
TAOKM-DRIU312B	Tambor Original Konica Minolta A03100J/IU312K Negro	A03100J

TAOKM-DRIU312C	Tambor Original Konica Minolta A0310GJ/IU312C Cian	A0310GJ
TAOKM-DRIU312M	Tambor Original Konica Minolta A0310AJ/IU312M Magenta	A0310AJ
TAOKM-DRIU312Y	Tambor Original Konica Minolta A03105J/IU312Y Amarillo	A03105J
TAOKM-DRIU313B	Tambor Original Konica Minolta A0DE03F/IU313K Negro	A0DE03F
TAOKM-DRIU313C	Tambor Original Konica Minolta A0DE0JF/IU313C Cian	A0DE0JF
TAOKM-DRIU313M	Tambor Original Konica Minolta A0DE0DF/IU313M Magenta	A0DE0DF
TAOKM-DRIU313Y	Tambor Original Konica Minolta A0DE07F/IU313Y Amarillo	A0DE07F
TAOKM-DRIU610C	Tambor Original Konica Minolta A0600JF/IU610C Cian	A0600JF
TAOKM-DRIUP17	Tambor Original Konica Minolta A63X03W/IUP-17	A63X03W
TAOKM-DRIUP20	Tambor Original Konica Minolta A6VM03V/IUP-20	A5VM03V
TAOKM-DRMT305	Tambor Original Konica Minolta 4515-613/MT305	4515-613
TAOKM-DRP01	Tambor Original Konica Minolta A32X011/DRP-01 Negro	A32X011
TAOKM-DRPP1100	Tambor Original Konica Minolta 4174-303/171-0400-002	4174-303
TAOKM-DRPP1300	Tambor Original Konica Minolta 4171-306/171-0436-001	4171-306
TAOKM-DRPP1380	Tambor Original Konica Minolta 4519-313/171-0568-001	4519-313
TAOKM-DRPP1400	Tambor Original Konica Minolta 4519-402	4519-402
TAOKM-EP101B	Tóner Original Konica Minolta 8932-404/EP101B Negro	8932-404
TAOKM-EP102BDP	Tóner Original Konica Minolta 8935-204/EP102B Negro, Pack Doble	8935-204
TAOKM-EP103BS4	Tóner Original Konica Minolta 8935-804/EP103B Negro (4 uds.)	8935-804
TAOKM-EP104B	Tóner Original Konica Minolta 8936-302/EP104B Negro	8936-302
TAOKM-EP202B	Tóner Original Konica Minolta 8935-304/EP202B Negro	8935-304
TAOKM-EP204B	Tóner Original Konica Minolta 8936-2060-01/EP204B Negro	8936-2060-01
TAOKM-EP302B	Tóner Original Konica Minolta 8936-404/EP302B Negro	8936-404
TAOKM-EP502B	Tóner Original Konica Minolta 8936-904/EP502B Negro	8936-904
TAOKM-EP603B	Tóner Original Konica Minolta 8935-904/EP603B Negro	8935-904
TAOKM-IC43	Tóner Original Konica Minolta 9967000909/IC43 Negro	9967000909
TAOKM-IOF	Tóner Original Konica Minolta IOF1 Negro	IOF1
TAOKM-MT204B	Tóner Original Konica Minolta 8936-204 Negro	8936-204
TAOKM-MT205	Tóner Original Konica Minolta 8937-755/MT205B Negro	8937-755
TAOKM-MT303	Tóner Original Konica Minolta 8937-749/MT303B Negro	8937-749
TAOKM-PP1300B	Tóner Original Konica Minolta 4518-512/171-0566-002 Negro	4518-512
TAOKM-PP4650	Tóner Original Konica Minolta A0FN021 Negro	A0FN021
TAOKM-PP4650XL	Tóner Original Konica Minolta A0FN022 XXL Negro	A0FN022
TAOKM-PP5650	Tóner Original Konica Minolta A0FP021 Negro	A0FP021
TAOKM-PP5650XL	Tóner Original Konica Minolta A0FP022 XXL Negro	A0FP022
TAOKM-SP1000	Tóner Original Konica Minolta 171-0465-001 Negro	171-0465-001
TAOKM-TN010	Tóner Original Konica Minolta 02UF/TN010 Negro	02UF
TAOKM-TN011	Tóner Original Konica Minolta A0TH050/TN-011 Negro	A0TH050
TAOKM-TN101	Tóner Original Konica Minolta 012A/TN101K Negro, Pack Doble	012A
TAOKM-TN109	Tóner Original Konica Minolta 996-1000-251/TN109 Negro	996-1000-251
TAOKM-TN110	Tóner Original Konica Minolta 996-7000-420/TN110 Negro	996-7000-420
TAOKM-TN113	Tóner Original Konica Minolta 4518-601/TN 113 Negro	4518-601
TAOKM-TN114	Tóner Original Konica Minolta 8937-784/TN114 Negro	8937-784
TAOKM-TN116	Tóner Original Konica Minolta A1UC050/TN116 Negro	A1UC050
TAOKM-TN118	Tóner Original Konica Minolta A3VW050/TN-118 Negro	A3VW050
TAOKM-TN120	Tóner Original Konica Minolta 996-7000-777/TN120 Negro	996-7000-777
TAOKM-TN211	Tóner Original Konica Minolta 8938-415/TN211 Negro	8938-415
TAOKM-TN214B	Tóner Original Konica Minolta A0D7154/TN214K Negro	A0D7154
TAOKM-TN214C	Tóner Original Konica Minolta A0D7454/TN214C Cian	A0D7454
TAOKM-TN214M	Tóner Original Konica Minolta A0D7354/TN214M Magenta	A0D7354
TAOKM-TN214Y	Tóner Original Konica Minolta A0D7254/TN214Y Amarillo	A0D7254
TAOKM-TN217	Tóner Original Konica Minolta A202031/A202051/TN217 Negro	A202031
TAOKM-TN219	Tóner Original Konica Minolta TN-219 Negro	99672118
TAOKM-TN221B	Tóner Original Konica Minolta A8K3150/TN-221K Negro	A8K3150
TAOKM-TN221C	Tóner Original Konica Minolta A8K3450/TN-221C Cian	A8K3450
TAOKM-TN221M	Tóner Original Konica Minolta A8K3350/TN-221M Magenta	A8K3350
TAOKM-TN221Y	Tóner Original Konica Minolta A8K3250/TN-221Y Amarillo	A8K3250
TAOKM-TN301	Tóner Original Konica Minolta 017J/TN301K Negro	017J
TAOKM-TN302	Tóner Original Konica Minolta 018L/TN302K Negro	018L
TAOKM-TN303	Tóner Original Konica Minolta 02BP/TN303K Negro	02BP
TAOKM-TN311	Tóner Original Konica Minolta 8938-404/TN311 Negro	8938-404
TAOKM-TN314B	Tóner Original Konica Minolta A0D7151/TN314K Negro	A0D7151
TAOKM-TN314C	Tóner Original Konica Minolta A0D7451/TN314C Cian	A0D7451
TAOKM-TN314M	Tóner Original Konica Minolta A0D7351/TN314M Magenta	A0D7351
TAOKM-TN314Y	Tóner Original Konica Minolta A0D7251/TN314Y Amarillo	A0D7251
TAOKM-TN320	Tóner Original Konica Minolta A202053/TN-320 Negro	A202053
TAOKM-TN323	Tóner Original Konica Minolta A87M050/TN-323 Negro	A87M050
TAOKM-TN401	Tóner Original Konica Minolta 02AJ/TN401K Negro	02AJ
TAOKM-TN411B	Tóner Original Konica Minolta A070151/TN411K Negro	A070151
TAOKM-TN413B	Tóner Original Konica Minolta A0TM151/TN413K Negro	A0TM151
TAOKM-TN414	Tóner Original Konica Minolta A202050/TN414 Negro	A202050

TAOKM-TN415	Tóner Original Konica Minolta A202052/TN-415 Negro	A202052
TAOKM-TN511B	Tóner Original Konica Minolta 024B/TN511 Negro	024B
TAOKM-TN513	Tóner Original Konica Minolta A33K051/TN-513 Negro	A33K051
TAOKM-TN610B	Tóner Original Konica Minolta A04P150/TN610K Negro	A04P150
TAOKM-TN610C	Tóner Original Konica Minolta A04P450/TN610C Cian	A04P450
TAOKM-TN610M	Tóner Original Konica Minolta A04P350/TN610M Magenta	A04P350
TAOKM-TN610Y	Tóner Original Konica Minolta A04P250/TN610Y Amarillo	A04P250
TAOKM-TN618	Tóner Original Konica Minolta A0TM152/TN618K Negro	A0TM152
TAOKM-TN710	Tóner Original Konica Minolta 02XF/TN710 Negro	02XF
TAOKM-TN801	Tóner Original Konica Minolta 013J/TN 801K Negro	TN801K
TAOKM-TN910	Tóner Original Konica Minolta 022F/TN910 Negro	022F
TAOKM-TNP34	Tóner Original Konica Minolta A63T01H/TNP-34 Negro, Programa de Retorno	A63T01H
TAOKM-TNP35	Tóner Original Konica Minolta A63W01H/TNP-35 Negro- Programa de Retorno	A63W01H
TAOKM-TNP36	Tóner Original Konica Minolta A63V00H/TNP-36 Negro- Programa de Retorno	A63V00H
TAOKM-TNP37	Tóner Original Konica Minolta A63T01W/TNP-37 Negro	A63T01W
TAOKM-TNP38	Tóner Original Konica Minolta/A63W01W/TNP-38/Bizhub 4000 P Negro	A63W01W
TAOKM-TNP39	Tóner Original Konica Minolta A63V00W/TNP-39 Negro	A63V00W
TAOKM-TNP40	Tóner Original Konica Minolta A6WN01H/TNP-40 Negro	A6WN01H
TAOKM-TNP41	Tóner Original Konica Minolta A6WT00H/TNP-41 Negro, Programa de Retorno	A6WT00H
TAOKM-TNP42	Tóner Original Konica Minolta TNP-42/A6WN01W Negro	A6WN01W
TAOKM-TNP43	Tóner Original Konica Minolta TNP-43/A6WT00W Negro	A6WT00W
TAOKM-TNP44	Tóner Original Konica Minolta A6VK01H/TNP-44 Negro- Programa de Retorno	A6VK01H
TAOKM-TYPE101	Tóner Original Konica Minolta 4153-104/TYPE101B Negro	4153-104
TAOKY-37015	Tóner Original Kyocera 37015010 Negro	37015010
TAOKY-37016	Tóner Original Kyocera 37016010/1T02ASONL0 Negro	37016010
TAOKY-37028	Tóner Original Kyocera 37028010 Negro	37028010
TAOKY-37029	Tóner Original Kyocera 37029010 Negro	37029010
TAOKY-37031	Tóner Original Kyocera 37031010 Negro	37031010
TAOKY-37037DP	Tóner Original Kyocera 37037085 Negro (2 x 200g)	37037085
TAOKY-37057	Tóner Original Kyocera 37057010 Negro	37057010
TAOKY-37058	Tóner Original Kyocera 37058010 Negro, Pack Doble	37058010
TAOKY-37068	Tóner Original Kyocera 37068010 Negro	37068010
TAOKY-37071	Tóner Original Kyocera 37071010 Negro	37071010
TAOKY-37092	Tóner Original Kyocera 37092010 Negro	37092010
TAOKY-370AB	Tóner Original Kyocera 370AB000/5PLPXLMAPKX Negro	370AB000
TAOKY-370AD	Tóner Original Kyocera 370AD000 Negro	370AD000
TAOKY-5195Y	Tóner Original Kyocera 1T02R4ANL0/TK-5195Y Amarillo	1T02R4ANL0
TAOKY-5205B	Tóner Original Kyocera 1T02R5ONL0/TK-5205K Negro	1T02R5ONL0
TAOKY-C830B	Tóner Original Kyocera 370AA000/5PLPXMTAPKX Negro	370AA000
TAOKY-C830C	Tóner Original Kyocera 370AA307/5PLPXMSAPKX Cian	370AA307
TAOKY-C830M	Tóner Original Kyocera 370AA306/5PLPXMUAPKX Magenta	370AA306
TAOKY-C830Y	Tóner Original Kyocera 370AA305/5PLPXMVAPKX Amarillo	370AA305
TAOKY-DR110	Tambor Original Kyocera 302FV93010/DK110	302FV93010
TAOKY-DR130	Tambor Original Kyocera 302HS93011/DK130	302HS93011
TAOKY-DR150	Tambor Original Kyocera 302H493010/DK150	302H493010
TAOKY-DR170	Tambor Original Kyocera 302LZ93060/DK170	302LZ93060
TAOKY-DR310	Tambor Original Kyocera 302F993012/DK310	302F993012
TAOKY-DR3100	Tambor Original Kyocera 302MS93022/DK-3100 Negro	302MS93022
TAOKY-DR3130	Tambor Original Kyocera 302LV93041/DK-3130 Negro	302LV93041
TAOKY-DR320	Tambor Original Kyocera 302J093011/302J393033/DK320	302J093011
TAOKY-DR33	Tambor Original Kyocera 5PLPZ0QAPKX	5PLPZ0QAPKX
TAOKY-DR440	Tambor Original Kyocera 302F793010/DK440	302F793010
TAOKY-DR450	Tambor Original Kyocera 302J593011/DK-450	302J593011
TAOKY-DR510	Tambor Original Kyocera 302F393011/DK510	302F393011
TAOKY-DR511	Tambor Original Kyocera 302HJ93010/DK511	302HJ93010
TAOKY-DR520	Tambor Original Kyocera 302F493062/DK520	302F493062
TAOKY-DR540	Tambor Original Kyocera 302HL93050/DK-540	302HL93050
TAOKY-DR550	Tambor Original Kyocera 302HM93010/DK-550	302HM93010
TAOKY-DR560	Tambor Original Kyocera 302HN93050/DK560 Negro	302HN93050
TAOKY-DR590	Tambor Original Kyocera 302KV93014/DK-590	302KV93014
TAOKY-DR60	Tambor Original Kyocera 5PLPXY2APKX/DK60	5PLPXY2APKX
TAOKY-DR6588	Tambor Original Kyocera 65882020	65882020
TAOKY-DR67	Tambor Original Kyocera 5PLPXZKAPKX/DK67	5PLPXZKAPKX
TAOKY-DR68	Tambor Original Kyocera 5PLPXZVAPKX/DK68	5PLPXZVAPKX
TAOKY-DR710	Tambor Original Kyocera 302G193031/DK710	302G193031
TAOKY-DR8505B	Tambor Original Kyocera 302LC93014/DK-8505 CMYK	302LC93014
TAOKY-DRPU102	Tambor Revelador Original Kyocera 2FM93092/PU102	2FM93092
TAOKY-DRPU120	Tambor Revelador Original Kyocera 2G693010/PU120	2G693010
TAOKY-DRPU240	Tambor Revelador Original Kyocera PU400	PU400
TAOKY-DRPU405	Tambor Original Kyocera 302FN93032/PU405	302FN93032
TAOKY-TD81K	Tóner Original Kyocera 370PF0KL/TD81K Negro	370PF0KL

TAOKY-TK100	Tóner Original Kyocera 370PU5KW/TK-100 Negro	370PU5KW
TAOKY-TK11	Tóner Original Kyocera 37027011/TK-11 Negro	37027011
TAOKY-TK110	Tóner Original Kyocera 1T02FC0DE0/TK-110 Negro	1T02FC0DE0
TAOKY-TK110E	Tóner Original Kyocera 1T02FV0DE1/TK-110E Negro	1T02FV0DE1
TAOKY-TK1115	Tóner Original Kyocera 1T02M50NLO/TK-1115 Negro	1T02M50NLO
TAOKY-TK1125	Tóner Original Kyocera 1T02M70NLO/TK-1125 Negro	1T02M70NLO
TAOKY-TK1130	Tóner Original Kyocera 1T02MJ0NLO/TK-1130 Negro	1T02MJ0NLO
TAOKY-TK1140	Tóner Original Kyocera 1T02ML0NLO/TK-1140 Negro	1T02ML0NLO
TAOKY-TK12	Tóner Original Kyocera 37027012/TK-12 Negro	37027012
TAOKY-TK120	Tóner Original Kyocera 1T02G60DE0/TK-120 Negro	1T02G60DE0
TAOKY-TK130	Tóner Original Kyocera 1T02H20EU0/TK-130 Negro	1T02H20EU0
TAOKY-TK140	Tóner Original Kyocera 1T02H50EU0/TK-140 Negro	1T02H50EU0
TAOKY-TK150B	Tóner Original Kyocera 1T05JK0NLO/TK-150K Negro	1T05JK0NLO
TAOKY-TK150C	Tóner Original Kyocera 1T05JKCNLO/TK-150C Cian	1T05JKCNLO
TAOKY-TK150M	Tóner Original Kyocera 1T05JKANLO/TK-150M Magenta	1T05JKANLO
TAOKY-TK150Y	Tóner Original Kyocera 1T05JKBNLO/TK-150Y Amarillo	1T05JKBNLO
TAOKY-TK160	Tóner Original Kyocera 1T02LY0NLO/TK-160 Negro	1T02LY0NLO
TAOKY-TK16H	Tóner Original Kyocera 37027016/TK-16H Negro	37027016
TAOKY-TK17	Tóner Original Kyocera 370PT5KW/TK-17 Negro	370PT5KW
TAOKY-TK170	Tóner Original Kyocera 1T02LZ0NLO/TK-170 Negro	1T02LZ0NLO
TAOKY-TK18	Tóner Original Kyocera 370QB0KX/TK-18 Negro	370QB0KX
TAOKY-TK20H	Tóner Original Kyocera 37027020/TK-20H Negro	37027020
TAOKY-TK25	Tóner Original Kyocera 37027025/TK-25 Negro	37027025
TAOKY-TK30H	Tóner Original Kyocera 37027030/TK-30H Negro	37027030
TAOKY-TK310	Tóner Original Kyocera 1T02F80EU0/TK-310 Negro	1T02F80EU0
TAOKY-TK3100	Tóner Original Kyocera 1T02MS0NLO/TK-3100 Negro	1T02MS0NLO
TAOKY-TK3110	Tóner Original Kyocera 1T02MT0NLO/TK-3110 Negro	1T02MT0NLO
TAOKY-TK3130	Tóner Original Kyocera 1T02LV0NLO/TK-3130 Negro	1T02LV0NLO
TAOKY-TK3150	Tóner Original Kyocera 1T02NP0NLO/TK-3150 Negro	1T02NP0NLO
TAOKY-TK320	Tóner Original Kyocera 1T02F90EU0/TK-320 Negro	1T02F90EU0
TAOKY-TK330	Tóner Original Kyocera 1T02GA0EU0/TK-330 Negro	1T02GA0EU0
TAOKY-TK340	Tóner Original Kyocera 1T02J00EU0/TK-340 Negro	1T02J00EU0
TAOKY-TK350	Tóner Original Kyocera 1T02J10EU0/TK-350 Negro	1T02J10EU0
TAOKY-TK360	Tóner Original Kyocera 1T02J20EU0/TK-360 Negro	1T02J20EU0
TAOKY-TK400	Tóner Original Kyocera 370PAOKL/TK-400 Negro	370PAOKL
TAOKY-TK410	Tóner Original Kyocera 370AM010/TK-410 Negro	370AM010
TAOKY-TK4105	Tóner Original Kyocera TK-4105 Negro	1T02NG0NLO
TAOKY-TK420	Tóner Original Kyocera 370AR010/TK-420 Negro	370AR010
TAOKY-TK435	Tóner Original Kyocera 1T02KH0NLO/TK-435 Negro	1T02KH0NLO
TAOKY-TK440	Tóner Original Kyocera 1T02F70EU0/TK-440 Negro	1T02F70EU0
TAOKY-TK450	Tóner Original Kyocera 1T02J50EU0/TK-450 Negro	1T02J50EU0
TAOKY-TK475	Tóner Original Kyocera 1T0T2K30NL/TK-475 Negro	1T0T2K30NL
TAOKY-TK500B	Tóner Original Kyocera 370PD0KW/TK-500K Negro	370PD0KW
TAOKY-TK500C	Tóner Original Kyocera 370PD5KW/TK-500C Cian	370PD5KW
TAOKY-TK500M	Tóner Original Kyocera 370PD4KW/TK-500M Magenta	370PD4KW
TAOKY-TK500Y	Tóner Original Kyocera 370PD3KW/TK-500Y Amarillo	370PD3KW
TAOKY-TK50H	Tóner Original Kyocera 370QA0KX/TK-50H Negro	370QA0KX
TAOKY-TK510B	Tóner Original Kyocera 1T02F30EU0/TK-510K Negro	1T02F30EU0
TAOKY-TK510C	Tóner Original Kyocera 1T02F3CEU0/TK-510C Cian	1T02F3CEU0
TAOKY-TK510M	Tóner Original Kyocera 1T02F3BEU0/TK-510M Magenta	1T02F3BEU0
TAOKY-TK510Y	Tóner Original Kyocera 1T02F3AEU0/TK-510Y Amarillo	1T02F3AEU0
TAOKY-TK5135B	Tóner Original Kyocera 1T02PA0NLO/TK-5135K Negro	1T02PA0NLO
TAOKY-TK5135C	Tóner Original Kyocera 1T02PACNLO/TK-5135C Cian	1T02PACNLO
TAOKY-TK5135M	Tóner Original Kyocera 1T02PABNLO/TK-5135M Magenta	1T02PABNLO
TAOKY-TK5135Y	Tóner Original Kyocera 1T02PAANLO/TK-5135Y Amarillo	1T02PAANLO
TAOKY-TK5140B	Tóner Original Kyocera TK-5140K Negro	TK-5140K
TAOKY-TK5140C	Tóner Original Kyocera TK-5140C Cian	TK-5140C
TAOKY-TK5140M	Tóner Original Kyocera TK-5140M Magenta	TK-5140M
TAOKY-TK5140Y	Tóner Original Kyocera TK-5140Y Amarillo	TK-5140Y
TAOKY-TK5150B	Tóner Original Kyocera TK-5150K Negro	1T02NS0NLO
TAOKY-TK5150C	Tóner Original Kyocera TK-5150C Cian	1T02NSCNLO
TAOKY-TK5150M	Tóner Original Kyocera TK-5150M Magenta	1T02NSBNLO
TAOKY-TK5150Y	Tóner Original Kyocera TK-5150Y Amarillo	1T02NSANLO
TAOKY-TK5160B	Tóner Original Kyocera TK-5160K Negro	1T02NT0NLO
TAOKY-TK5160C	Tóner Original Kyocera TK-5160C Cian	1T02NTCNLO
TAOKY-TK5160M	Tóner Original Kyocera TK-5160M Magenta	1T02NTBNLO
TAOKY-TK5160Y	Tóner Original Kyocera TK-5160Y Amarillo	1T02NTANLO
TAOKY-TK5195B	Tóner Original Kyocera 1T02R40NLO/TK-5195K Negro	1T02R40NLO
TAOKY-TK5195C	Tóner Original Kyocera 1T02R4CNLO/TK-5195C Cian	1T02R4CNLO
TAOKY-TK5195M	Tóner Original Kyocera 1T02R4BNLO/TK-5195M Magenta	1T02R4BNLO
TAOKY-TK5205C	Tóner Original Kyocera 1T02R5CNLO/TK-5205C Cian	1T02R5CNLO

TAOKY-TK5205Y	Tóner Original Kyocera 1T02R5ANL0/TK-5205Y Amarillo	1T02R5ANL0
TAOKY-TK520B	Tóner Original Kyocera 1T02HJ0EU0/TK-520K Negro	1T02HJ0EU0
TAOKY-TK520C	Tóner Original Kyocera 1T02HJCEU0/TK-520C Cian	1T02HJCEU0
TAOKY-TK520M	Tóner Original Kyocera 1T02HJBEU0/TK-520M Magenta	1T02HJBEU0
TAOKY-TK520Y	Tóner Original Kyocera 1T02HJAEU0/TK-520Y Amarillo	1T02HJAEU0
TAOKY-TK5215B	Tóner Original Kyocera 1T02R60NL0/TK-5215K Negro	1T02R60NL0
TAOKY-TK5215C	Tóner Original Kyocera 1T02R6CNL0/TK-5215C Cian	1T02R6CNL0
TAOKY-TK5215M	Tóner Original Kyocera 1T02R6BNL0/TK-5215M Magenta	1T02R6BNL0
TAOKY-TK5215Y	Tóner Original Kyocera 1T02R6ANL0/TK-5215Y Amarillo	1T02R6ANL0
TAOKY-TK540B	Tóner Original Kyocera TK-540K Negro	1T02HL0EU0
TAOKY-TK540C	Tóner Original Kyocera TK-540C Cian	1T02HLCEU0
TAOKY-TK540M	Tóner Original Kyocera TK-540M Magenta	1T02HLBEU0
TAOKY-TK540Y	Tóner Original Kyocera TK-540Y Amarillo	1T02HLAEU0
TAOKY-TK55	Tóner Original Kyocera 370QC0KX/TK-55 Negro	370QC0KX
TAOKY-TK550B	Tóner Original Kyocera 1T02HM0EU0/TK-550K Negro	1T02HM0EU0
TAOKY-TK550C	Tóner Original Kyocera 1T02HMCEU0/TK-550C Cian	1T02HMCEU0
TAOKY-TK550M	Tóner Original Kyocera 1T02HMBEU0/TK-550M Magenta	1T02HMBEU0
TAOKY-TK550Y	Tóner Original Kyocera 1T02HMAEU0/TK-550Y Amarillo	1T02HMAEU0
TAOKY-TK560B	Tóner Original Kyocera 1T02HN0EU0/TK-560K Negro	1T02HN0EU0
TAOKY-TK560C	Tóner Original Kyocera 1T02HNCEU0/TK-560C Cian	1T02HNCEU0
TAOKY-TK560M	Tóner Original Kyocera 1T02HNBEU0/TK-560M Magenta	1T02HNBEU0
TAOKY-TK560Y	Tóner Original Kyocera 1T02HNAEU0/TK-560Y Amarillo	1T02HNAEU0
TAOKY-TK570B	Tóner Original Kyocera 1T02HG0EU0/TK-570K Negro	1T02HG0EU0
TAOKY-TK570C	Tóner Original Kyocera 1T02HGCEU0/TK-570C Cian	1T02HGCEU0
TAOKY-TK570M	Tóner Original Kyocera 1T02HGBEU0/TK-570M Magenta	1T02HGBEU0
TAOKY-TK570Y	Tóner Original Kyocera 1T02HGAEU0/TK-570Y Amarillo	1T02HGAEU0
TAOKY-TK580B	Tóner Original Kyocera 1T02TA0NL0/TK-580K Negro	1T02TA0NL0
TAOKY-TK580C	Tóner Original Kyocera 1T02TACNL0/TK-580C Cian	1T02TACNL0
TAOKY-TK580M	Tóner Original Kyocera 1T02TABNL0/TK-580M Magenta	1T02TABNL0
TAOKY-TK580Y	Tóner Original Kyocera 1T02TAA NL0/TK-580Y Amarillo	1T02TAA NL0
TAOKY-TK590B	Tóner Original Kyocera 1T02KV0NL0/TK-590K Negro	1T02KV0NL0
TAOKY-TK590C	Tóner Original Kyocera 1T02KVCNL0/TK-590C Cian	1T02KVCNL0
TAOKY-TK590M	Tóner Original Kyocera 1T02KVB NL0/TK-590M Magenta	1T02KVB NL0
TAOKY-TK590Y	Tóner Original Kyocera 1T02KVANL0/TK-590Y Amarillo	1T02KVANL0
TAOKY-TK60	Tóner Original Kyocera 37027060/TK-60 Negro	37027060
TAOKY-TK603	Tóner Original Kyocera 370AE010/TK-603 Negro	370AE010
TAOKY-TK6305	Tóner Original Kyocera 1T02LH0NL0/TK-6305 Negro	1T02LH0NL0
TAOKY-TK65	Tóner Original Kyocera 370QD0KX/TK-65 Negro	370QD0KX
TAOKY-TK655	Tóner Original Kyocera 1T02FB0EU0/TK-655 Negro	1T02FB0EU0
TAOKY-TK665	Tóner Original Kyocera 1T02KP0NL0/TK-665 Negro	1T02KP0NL0
TAOKY-TK6705	Tóner Original Kyocera 1T02LF0NL0/TK-6705 Negro	1T02LF0NL0
TAOKY-TK675	Tóner Original Kyocera 1T02H00EU0/TK-675 Negro	1T02H00EU0
TAOKY-TK685	Tóner Original Kyocera TK-685 Negro	1T02K50NL0
TAOKY-TK70	Tóner Original Kyocera 370AC010/TK-70 Negro	370AC010
TAOKY-TK710	Tóner Original Kyocera 1T02G10EU0/TK-710 Negro	1T02G10EU0
TAOKY-TK7105	Tóner Original Kyocera TK-7105 Negro	1T02P80NL0
TAOKY-TK715	Tóner Original Kyocera 1T02GR0EU0/TK-715 Negro	1T02GR0EU0
TAOKY-TK7205	Tóner Original Kyocera TK-7205 Negro	1T02NL0NL0
TAOKY-TK725	Tóner Original Kyocera 1T02KR0NL0/TK- 725 Negro	1T02KR0NL0
TAOKY-TK7300	Tóner Original Kyocera 1T02P70NL0/TK-7300/Negro	1T02P70NL0
TAOKY-TK800B	Tóner Original Kyocera 370PB0KL/TK-800K Negro	370PB0KL
TAOKY-TK800C	Tóner Original Kyocera 370PB5KL/TK-800C Cian	370PB5KL
TAOKY-TK800M	Tóner Original Kyocera 370PB4KL/TK-800M Magenta	370PB4KL
TAOKY-TK800Y	Tóner Original Kyocera 370PB3KL/TK-800Y Amarillo	370PB3KL
TAOKY-TK805B	Tóner Original Kyocera 370AL010/TK-805K Negro	370AL010
TAOKY-TK805C	Tóner Original Kyocera 370AL510/TK-805C Cian	370AL510
TAOKY-TK805M	Tóner Original Kyocera 370AL410/TK-805M Magenta	370AL410
TAOKY-TK805Y	Tóner Original Kyocera 370AL310/TK-805Y Amarillo	370AL310
TAOKY-TK810B	Tóner Original Kyocera 370PC0KL/TK-810K Negro	370PC0KL
TAOKY-TK810C	Tóner Original Kyocera 370PC5KL/TK-810C Cian	370PC5KL
TAOKY-TK810M	Tóner Original Kyocera 370PC4KL/TK-810M Magenta	370PC4KL
TAOKY-TK810Y	Tóner Original Kyocera 370PC3KL/TK-810Y Amarillo	370PC3KL
TAOKY-TK815B	Tóner Original Kyocera 370AN010/TK-815K Negro	370AN010
TAOKY-TK815C	Tóner Original Kyocera 370AN510/TK-815C Cian	370AN510
TAOKY-TK815M	Tóner Original Kyocera 370AN410/TK-815M Magenta	370AN410
TAOKY-TK815Y	Tóner Original Kyocera 370AN310/TK-815Y Amarillo	370AN310
TAOKY-TK820B	Tóner Original Kyocera 1T02HP0EU0/TK-820K Negro	1T02HP0EU0
TAOKY-TK820C	Tóner Original Kyocera 1T02HPCEU0/TK-820C Cian	1T02HPCEU0
TAOKY-TK820M	Tóner Original Kyocera 1T02HPBEU0/TK-820M Magenta	1T02HPBEU0
TAOKY-TK820Y	Tóner Original Kyocera 1T02HPAEU0/TK-820Y Amarillo	1T02HPAEU0
TAOKY-TK825B	Tóner Original Kyocera 1T02FZ0EU0/TK-825K Negro	1T02FZ0EU0

TAOKY-TK825C	Tóner Original Kyocera 1T02FZCEU0/TK-825C Cian	1T02FZCEU0
TAOKY-TK825M	Tóner Original Kyocera 1T02FZBEU0/TK-825M Magenta	1T02FZBEU0
TAOKY-TK825Y	Tóner Original Kyocera 1T02FZAEU0/TK-825Y Amarillo	1T02FZAEU0
TAOKY-TK82B	Tóner Original Kyocera 370090KL/TK-82K Negro	370090KL
TAOKY-TK82C	Tóner Original Kyocera 370095KL/TK-82C Cian	370095KL
TAOKY-TK82M	Tóner Original Kyocera 370094KL/TK-82M Magenta	370094KL
TAOKY-TK82Y	Tóner Original Kyocera 370093KL/TK-82Y Amarillo	370093KL
TAOKY-TK8305B	Tóner Original Kyocera 1T02LKONL0/TK-8305K Negro	1T02LKONL0
TAOKY-TK8305C	Tóner Original Kyocera 1T02LKC�L0/TK-8305C Cian	1T02LKC�L0
TAOKY-TK8305M	Tóner Original Kyocera 1T02LKBNL0/TK-8305M Magenta	1T02LKBNL0
TAOKY-TK8305Y	Tóner Original Kyocera 1T02LKANL0/TK-8305Y Amarillo	1T02LKANL0
TAOKY-TK8315B	Tóner Original Kyocera 1T02MVONL0/TK-8315K Negro	1T02MVONL0
TAOKY-TK8315C	Tóner Original Kyocera 1T02MVC�L0/TK-8315C Cian	1T02MVC�L0
TAOKY-TK8315M	Tóner Original Kyocera 1T02MVBNL0/TK-8315M Magenta	1T02MVBNL0
TAOKY-TK8315Y	Tóner Original Kyocera 1T02MVANL0/TK-8315Y Amarillo	1T02MVANL0
TAOKY-TK8325B	Tóner Original Kyocera TK-8325K Negro	1T02NPONL0
TAOKY-TK8325C	Tóner Original Kyocera TK-8325C Cian	1T02NPC�L0
TAOKY-TK8325M	Tóner Original Kyocera TK-8325M Magenta	1T02NPBNL0
TAOKY-TK8325Y	Tóner Original Kyocera TK-8325Y Amarillo	1T02NPNL0
TAOKY-TK8505B	Tóner Original Kyocera 1T02LCONL0/TK-8505K Negro	1T02LCONL0
TAOKY-TK8505C	Tóner Original Kyocera 1T02LCC�L0/TK-8505C Cian	1T02LCC�L0
TAOKY-TK8505M	Tóner Original Kyocera 1T02LCBNL0/TK-8505M Magenta	1T02LCBNL0
TAOKY-TK8505Y	Tóner Original Kyocera 1T02LCANL0/TK-8505Y Amarillo	1T02LCANL0
TAOKY-TK855B	Tóner Original Kyocera 1T02H70EU0/TK-855 K Negro	1T02H70EU0
TAOKY-TK855C	Tóner Original Kyocera 1T02H7CEU0/TK-855C Cian	1T02H7CEU0
TAOKY-TK855M	Tóner Original Kyocera 1T02H7BEU0/TK-855M Magenta	1T02H7BEU0
TAOKY-TK855Y	Tóner Original Kyocera 1T02H7AEU0/TK-855Y Amarillo	1T02H7AEU0
TAOKY-TK8600B	Tóner Original Kyocera 1T02MNONL0/TK-8600K Negro	1T02MNONL0
TAOKY-TK8600C	Tóner Original Kyocera 1T02MNC�L0/TK-8600C Cian	1T02MNC�L0
TAOKY-TK8600M	Tóner Original Kyocera 1T02MNBNL0/TK-8600M Magenta	1T02MNBNL0
TAOKY-TK8600Y	Tóner Original Kyocera 1T02MNaNL0/TK-8600Y Amarillo	1T02MNaNL0
TAOKY-TK865B	Tóner Original Kyocera 1T02JZ0EU0/TK-865K Negro	1T02JZ0EU0
TAOKY-TK865C	Tóner Original Kyocera 1T02JZCEU0/TK-865C Cian	1T02JZCEU0
TAOKY-TK865M	Tóner Original Kyocera 1T02JZBEU0/TK-865M Magenta	1T02JZBEU0
TAOKY-TK865Y	Tóner Original Kyocera 1T02JZAEU0/TK-865Y Amarillo	1T02JZAEU0
TAOKY-TK8705B	Tóner Original Kyocera 1T0T2K90NL0/TK-8705K Negro	1T0T2K90NL0
TAOKY-TK8705C	Tóner Original Kyocera 1T0T2K9CNL0/TK-8705C Cian	1T0T2K9CNL0
TAOKY-TK8705M	Tóner Original Kyocera 1T0T2K9BNL0/TK-8705M Magenta	1T0T2K9BNL0
TAOKY-TK8705Y	Tóner Original Kyocera 1T0T2K9ANL0/TK-8705Y Amarillo	1T0T2K9ANL0
TAOKY-TK875B	Tóner Original Kyocera 1T05JN0NL0/TK- 875 K Negro	1T05JN0NL0
TAOKY-TK875C	Tóner Original Kyocera 1T05JNANL0/TK- 875C Cian	1T05JNANL0
TAOKY-TK875M	Tóner Original Kyocera 1T05JNBNL0/TK- 875M Magenta	1T05JNBNL0
TAOKY-TK875Y	Tóner Original Kyocera 1T05JNC�L0/TK- 875Y Amarillo	1T05JNC�L0
TAOKY-TK880B	Tóner Original Kyocera 1T02KA0NL0/TK-880K Negro	1T02KA0NL0
TAOKY-TK880C	Tóner Original Kyocera 1T02KAC�L0/TK-880C Cian	1T02KAC�L0
TAOKY-TK880M	Tóner Original Kyocera 1T02KABNL0/TK-880M Magenta	1T02KABNL0
TAOKY-TK880Y	Tóner Original Kyocera 1T02KAANL0/TK-880Y Amarillo	1T02KAANL0
TAOKY-TK895B	Tóner Original Kyocera 1T0T2K00NL/TK-895K Negro	1T0T2K00NL
TAOKY-TK895C	Tóner Original Kyocera 1T0T2K0CNL/TK-895C Cian	1T0T2K0CNL
TAOKY-TK895M	Tóner Original Kyocera 1T0T2K0BNL/TK-895M Magenta	1T0T2K0BNL
TAOKY-TK895Y	Tóner Original Kyocera 1T0T2K0ANL/TK-895Y Amarillo	1T0T2K0ANL
TAOKY-TK9	Tóner Original Kyocera 37027009/TK-9 Negro	37027009
TAOL-0150	Tóner Original Lexmark 0012A0150 Negro	0012A0150
TAOL-12016	Tóner Original Lexmark 0012016SE Negro, Programa de Retorno	0012016SE
TAOL-1250	Tóner Original Lexmark 1382920 Negro	1382920
TAOL-1250XL	Tóner Original Lexmark 1382929 Negro	1382929
TAOL-1250XLRP	Tóner Original Lexmark 1382925 Negro, Programa de Retorno	1382925
TAOL-2260	Tóner Original Lexmark 0012A2260 Negro	0012A2260
TAOL-2360	Tóner Original Lexmark 0012A2360 Negro	0012A2360
TAOL-260	Tóner Original Lexmark E260A21E Negro	E260A21E
TAOL-260RP	Tóner Original Lexmark OE260A11E Negro, Programa de Retorno	OE260A11E
TAOL-3160	Tóner Original Lexmark 0012A3160 Negro	0012A3160
TAOL-4039	Tóner Original Lexmark 1382100 Negro	1382100
TAOL-4039XL	Tóner Original Lexmark 1382150 Negro	1382150
TAOL-4710	Tóner Original Lexmark 0012A4710 Negro	0012A4710
TAOL-4715	Tóner Original Lexmark 0012A4715 Negro	0012A4715
TAOL-5140	Tóner Original Lexmark 0012A5140 Negro	0012A5140
TAOL-5840	Tóner Original Lexmark 0012A5840 Negro	0012A5840
TAOL-5845	Tóner Original Lexmark 0012A5845 Negro	0012A5845
TAOL-6015	Tóner Original Lexmark 24B6015 Negro	24B6015
TAOL-6160	Tóner Original Lexmark 0012A6160 Negro	0012A6160

TAOL-6830	Tóner Original Lexmark 0012A6830 Negro	0012A6830
TAOL-6835	Tóner Original Lexmark 0012A6835 Negro	0012A6835
TAOL-6860	Tóner Original Lexmark 0012A6860 Negro	0012A6860
TAOL-6869	Tóner Original Lexmark 0012A6869 Negro	0012A6869
TAOL-7344	Tóner Original Lexmark 0012A7344 Negro	0012A7344
TAOL-7400	Tóner Original Lexmark 0012A7400 Negro	0012A7400
TAOL-7405	Tóner Original Lexmark 0012A7405 Negro	0012A7405
TAOL-7410	Tóner Original Lexmark 0012A7410 Negro	0012A7410
TAOL-7460	Tóner Original Lexmark 0012A7460 Negro	0012A7460
TAOL-7462	Tóner Original Lexmark 0012A7462 Negro, Programa de Retorno	0012A7462
TAOL-7465	Tóner Original Lexmark 0012A7465 Negro, Programa de Retorno	0012A7465
TAOL-7644	Tóner Original Lexmark 0012A7644 Negro	0012A7644
TAOL-8420	Tóner Original Lexmark 0012A8420 Negro	0012A8420
TAOL-B0090	Tóner Original Lexmark 0012B0090 Negro	0012B0090
TAOL-C500B	Tóner Original Lexmark 0C500S2KG Negro	0C500S2KG
TAOL-C500C	Tóner Original Lexmark 0C500S2CG Cian	0C500S2CG
TAOL-C500M	Tóner Original Lexmark 0C500S2MG Magenta	0C500S2MG
TAOL-C500XLB	Tóner Original Lexmark 0C500H2KG Negro	0C500H2KG
TAOL-C500XLC	Tóner Original Lexmark 0C500H2CG Cian	0C500H2CG
TAOL-C500XLM	Tóner Original Lexmark 0C500H2MG Magenta	0C500H2MG
TAOL-C500XLY	Tóner Original Lexmark 0C500H2YG Amarillo	0C500H2YG
TAOL-C500Y	Tóner Original Lexmark 0C500S2YG Amarillo	0C500S2YG
TAOL-C510B	Tóner Original Lexmark 020K0503 Negro	020K0503
TAOL-C510C	Tóner Original Lexmark 020K0500 Cian	020K0500
TAOL-C510M	Tóner Original Lexmark 020K0501 Magenta	020K0501
TAOL-C510XLB	Tóner Original Lexmark 020K1403 Negro	020K1403
TAOL-C510XLC	Tóner Original Lexmark 020K1400 Cian	020K1400
TAOL-C510XLM	Tóner Original Lexmark 020K1401 Magenta	020K1401
TAOL-C510XLY	Tóner Original Lexmark 020K1402 Amarillo	020K1402
TAOL-C510Y	Tóner Original Lexmark 020K0502 Amarillo	020K0502
TAOL-C520B	Tóner Original Lexmark C5202KS Negro	C5202KS
TAOL-C520BRP	Tóner Original Lexmark 00C5220KS Negro, Programa de Retorno	00C5220KS
TAOL-C520C	Tóner Original Lexmark C5202CS Cian	C5202CS
TAOL-C520CRP	Tóner Original Lexmark 00C5220CS Cian, Programa de Retorno	00C5220CS
TAOL-C520M	Tóner Original Lexmark C5202MS Magenta	C5202MS
TAOL-C520MRP	Tóner Original Lexmark 00C5220MS Magenta, Programa de Retorno	00C5220MS
TAOL-C520Y	Tóner Original Lexmark C5202YS Amarillo	C5202YS
TAOL-C520YRP	Tóner Original Lexmark 00C5220YS Amarillo, Programa de Retorno	00C5220YS
TAOL-C5220	Tóner Original Lexmark C5222KS Negro	C5222KS
TAOL-C5240	Tóner Original Lexmark C5242KH Negro	C5242KH
TAOL-C524B	Tóner Original Lexmark 00C5240KH Negro	00C5240KH
TAOL-C524C	Tóner Original Lexmark 00C5240CH Cian	00C5240CH
TAOL-C524M	Tóner Original Lexmark 00C5240MH Magenta	00C5240MH
TAOL-C524Y	Tóner Original Lexmark 00C5240YH Amarillo	00C5240YH
TAOL-C530B	Tóner Original Lexmark 00C5200KS Negro	00C5200KS
TAOL-C530C	Tóner Original Lexmark 00C5200CS Cian	00C5200CS
TAOL-C530M	Tóner Original Lexmark 00C5200MS Magenta	00C5200MS
TAOL-C530Y	Tóner Original Lexmark 00C5200YS Amarillo	00C5200YS
TAOL-C534C	Tóner Original Lexmark 00C5340CX Cian	00C5340CX
TAOL-C534M	Tóner Original Lexmark 00C5340MX Magenta	00C5340MX
TAOL-C534Y	Tóner Original Lexmark 00C5340YX Amarillo	00C5340YX
TAOL-C540B	Tóner Original Lexmark 0C540A1KG Negro	0C540A1KG
TAOL-C540C	Tóner Original Lexmark 0C540A1CG Cian	0C540A1CG
TAOL-C540M	Tóner Original Lexmark 0C540A1MG Magenta	0C540A1MG
TAOL-C540XLB	Tóner Original Lexmark 0C540H1KG Negro	0C540H1KG
TAOL-C540XLC	Tóner Original Lexmark 0C540H1CG Cian	0C540H1CG
TAOL-C540XLM	Tóner Original Lexmark 0C540H1MG Magenta	0C540H1MG
TAOL-C540XLY	Tóner Original Lexmark 0C540H1YG Amarillo	0C540H1YG
TAOL-C540Y	Tóner Original Lexmark 0C540A1YG Amarillo	0C540A1YG
TAOL-C544B	Tóner Original Lexmark C544X2KG Negro	C544X2KG
TAOL-C544BRP	Tóner Original Lexmark 0C544X1KG Negro, Programa de Retorno	0C544X1KG
TAOL-C544C	Tóner Original Lexmark 0C544X1CG Cian	0C544X1CG
TAOL-C544M	Tóner Original Lexmark C544X2MG Magenta	C544X2MG
TAOL-C544MRP	Tóner Original Lexmark 0C544X1MG Magenta, Programa de Retorno	0C544X1MG
TAOL-C544Y	Tóner Original Lexmark C544X2YG Amarillo	C544X2YG
TAOL-C544YRP	Tóner Original Lexmark 0C544X1YG Amarillo, Programa de Retorno	0C544X1YG
TAOL-C546B	Tóner Original Lexmark C546U2KG Negro	C546U2KG
TAOL-C546BRP	Tóner Original Lexmark 0C546U1KG Negro, Programa de Retorno	0C546U1KG
TAOL-C722B	Tóner Original Lexmark 00C7720KX Negro	00C7720KX
TAOL-C722C	Tóner Original Lexmark 00C7720CX Cian	00C7720CX
TAOL-C722M	Tóner Original Lexmark 00C7720MX Magenta	00C7720MX

TAOL-C722Y	Tóner Original Lexmark 00C7720YX Amarillo	00C7720YX
TAOL-C734B	Tóner Original Lexmark 0C734A1KG Negro	0C734A1KG
TAOL-C734C	Tóner Original Lexmark C734S/C734A2CG Cian	C734A2CG
TAOL-C734CRP	Tóner Original Lexmark 0C734A1CG Cian, Programa de Retorno	0C734A1CG
TAOL-C734M	Tóner Original Lexmark C734S/C734A2MG Magenta	C734A2MG
TAOL-C734MRP	Tóner Original Lexmark 0C734A1MG Magenta, Programa de Retorno	0C734A1MG
TAOL-C734Y	Tóner Original Lexmark C734S/C734A2YG Amarillo	C734A2YG
TAOL-C734YRP	Tóner Original Lexmark 0C734A1YG Amarillo, Programa de Retorno	0C734A1YG
TAOL-C736BRP	Tóner Original Lexmark 0C736H1KG Negro, Programa de Retorno	0C736H1KG
TAOL-C736C	Tóner Original Lexmark 0C736H1CG Cian	0C736H1CG
TAOL-C736M	Tóner Original Lexmark 0C736H1MG Magenta	0C736H1MG
TAOL-C736Y	Tóner Original Lexmark 0C736H1YG Amarillo	0C736H1YG
TAOL-C746B	Tóner Original Lexmark C746H3KG Negro	C746H3KG
TAOL-C746C	Tóner Original Lexmark C746A1CG Cian	C746A1CG
TAOL-C746M	Tóner Original Lexmark C746A1MG Magenta	C746A1MG
TAOL-C746Y	Tóner Original Lexmark C746A1YG Amarillo	C746A1YG
TAOL-C748B	Tóner Original Lexmark C746H1KG Negro	C746H1KG
TAOL-C748C	Tóner Original Lexmark C748H1CG Cian	C748H1CG
TAOL-C748M	Tóner Original Lexmark C748H1MG Magenta	C748H1MG
TAOL-C748Y	Tóner Original Lexmark C748H1YG Amarillo	C748H1YG
TAOL-C752B	Tóner Original Lexmark 0015G041K Negro	0015G041K
TAOL-C752C	Tóner Original Lexmark 0015G041C Cian	0015G041C
TAOL-C752M	Tóner Original Lexmark 0015G041M Magenta	0015G041M
TAOL-C752XLB	Tóner Original Lexmark 0015G042K Negro	0015G042K
TAOL-C752XLC	Tóner Original Lexmark 0015G042C Cian	0015G042C
TAOL-C752XLM	Tóner Original Lexmark 0015G042M Magenta	0015G042M
TAOL-C752Y	Tóner Original Lexmark 0015G041Y Amarillo	0015G041Y
TAOL-C770B	Tóner Original Lexmark 00C7700KS Negro	00C7700KS
TAOL-C770C	Tóner Original Lexmark 00C7700CS Cian	00C7700CS
TAOL-C770M	Tóner Original Lexmark 00C7700MS Magenta	00C7700MS
TAOL-C770XLB	Tóner Original Lexmark 00C7700KH Negro	00C7700KH
TAOL-C770XLC	Tóner Original Lexmark 00C7700CH Cian	00C7700CH
TAOL-C770XLMRP	Tóner Original Lexmark 00C7700MH Magenta, Programa de Retorno	00C7700MH
TAOL-C770XLY	Tóner Original Lexmark 00C7700YH Amarillo	00C7700YH
TAOL-C770Y	Tóner Original Lexmark 00C7700YS Amarillo	00C7700YS
TAOL-C780B	Tóner Original Lexmark 0C780A1KG Negro	0C780A1KG
TAOL-C780C	Tóner Original Lexmark 0C780A1CG Cian	0C780A1CG
TAOL-C780M	Tóner Original Lexmark 0C780A1MG Magenta	0C780A1MG
TAOL-C780XLB	Tóner Original Lexmark C780H2KG Negro	C780H2KG
TAOL-C780XLBPR	Tóner Original Lexmark 0C780H1KG Negro, Programa de Retorno	0C780H1KG
TAOL-C780XLC	Tóner Original Lexmark C780H2CG Cian	C780H2CG
TAOL-C780XLCRP	Tóner Original Lexmark 0C780H1CG Cian, Programa de Retorno	0C780H1CG
TAOL-C780XLM	Tóner Original Lexmark C780H2MG Magenta	C780H2MG
TAOL-C780XLMRP	Tóner Original Lexmark 0C780H1MG Magenta, Programa de Retorno	0C780H1MG
TAOL-C780XLY	Tóner Original Lexmark C780H2YG Amarillo	C780H2YG
TAOL-C780XLYRP	Tóner Original Lexmark 0C780H1YG Amarillo, Programa de Retorno	0C780H1YG
TAOL-C780Y	Tóner Original Lexmark 0C780A1YG Amarillo	0C780A1YG
TAOL-C782B	Tóner Original Lexmark 0C782X1KG Negro	0C782X1KG
TAOL-C782C	Tóner Original Lexmark C782X2CG Cian	C782X2CG
TAOL-C782CRP	Tóner Original Lexmark 0C782X1CG Cian, Programa de Retorno	0C782X1CG
TAOL-C782M	Tóner Original Lexmark 0C782X1MG Magenta	0C782X1MG
TAOL-C782Y	Tóner Original Lexmark 0C782X1YG Amarillo	0C782X1YG
TAOL-C792BRP	Tóner Original Lexmark C792A1KG Negro, Programa de Retorno	C792A1KG
TAOL-C792C	Tóner Original Lexmark X792X1CG Cian	X792X1CG
TAOL-C792CRP	Tóner Original Lexmark C792A1CG Cian, Programa de Retorno	C792A1CG
TAOL-C792M	Tóner Original Lexmark X792X1MG Magenta	X792X1MG
TAOL-C792MRP	Tóner Original Lexmark C792A1MG Magenta, Programa de Retorno	C792A1MG
TAOL-C792XLB	Tóner Original Lexmark C792X2KG Negro	C792X2KG
TAOL-C792XLBPR	Tóner Original Lexmark C792X1KG Negro, Programa de Retorno	C792X1KG
TAOL-C792XLC	Tóner Original Lexmark C792X2CG Cian	C792X2CG
TAOL-C792XLCRP	Tóner Original Lexmark C792X1CG Cian, Programa de Retorno	C792X1CG
TAOL-C792XLM	Tóner Original Lexmark C792X2MG Magenta	C792X2MG
TAOL-C792XLMRP	Tóner Original Lexmark C792X1MG Magenta, Programa de Retorno	C792X1MG
TAOL-C792XLY	Tóner Original Lexmark C792X2YG Amarillo	C792X2YG
TAOL-C792XLYRP	Tóner Original Lexmark C792X1YG Amarillo, Programa de Retorno	C792X1YG
TAOL-C792Y	Tóner Original Lexmark X792X1YG Amarillo	X792X1YG
TAOL-C792YRP	Tóner Original Lexmark C792A1YG Amarillo, Programa de Retorno	C792A1YG
TAOL-C910B	Tóner Original Lexmark 12N0771 Negro	12N0771
TAOL-C910C	Tóner Original Lexmark 12N0768 Cian	12N0768
TAOL-C910M	Tóner Original Lexmark 12N0769 Magenta	12N0769
TAOL-C910Y	Tóner Original Lexmark 12N0770 Amarillo	12N0770

TAOL-C920B	Tóner Original Lexmark 00C9202KH Negro	00C9202KH
TAOL-C920C	Tóner Original Lexmark 00C9202CH Cian	00C9202CH
TAOL-C920M	Tóner Original Lexmark 00C9202MH Magenta	00C9202MH
TAOL-C920Y	Tóner Original Lexmark 00C9202YH Amarillo	00C9202YH
TAOL-C925B	Tóner Original Lexmark C925H2KG Negro	C925H2KG
TAOL-C925C	Tóner Original Lexmark C925H2CG Cian	C925H2CG
TAOL-C925M	Tóner Original Lexmark C925H2MG Magenta	C925H2MG
TAOL-C925Y	Tóner Original Lexmark C925H2YG Amarillo	C925H2YG
TAOL-C930B	Tóner Original Lexmark 0C930H2KG Negro	0C930H2KG
TAOL-C930C	Tóner Original Lexmark 0C930H2CG Cian	0C930H2CG
TAOL-C930M	Tóner Original Lexmark 0C930H2MG Magenta	0C930H2MG
TAOL-C930Y	Tóner Original Lexmark 0C930H2YG Amarillo	0C930H2YG
TAOL-C950B	Tóner Original Lexmark C950X2KG Negro	C950X2KG
TAOL-C950C	Tóner Original Lexmark C950X2CG Cian	C950X2CG
TAOL-C950M	Tóner Original Lexmark C950X2MG Magenta	C950X2MG
TAOL-C950Y	Tóner Original Lexmark C950X2YG Amarillo	C950X2YG
TAOL-CS310B	Tóner Original Lexmark 70C20K0/702K Negro	70C20K0
TAOL-CS310C	Tóner Original Lexmark 70C20C0/702C Cian	70C20C0
TAOL-CS310M	Tóner Original Lexmark 70C20M0/702M Magenta	70C20M0
TAOL-CS310XLB	Tóner Original Lexmark 70C0H10/700H1 Negro	70C0H10
TAOL-CS310XLBRP	Tóner Original Lexmark 70C2HKE Negro, Programa de Retorno	70C2HKE
TAOL-CS310XLBRP2	Tóner Original Lexmark 70C2HK0/702HK Negro, Programa de Retorno	70C2HK0
TAOL-CS310XLC	Tóner Original Lexmark 70C2HCE Cian	70C2HCE
TAOL-CS310XLCRP	Tóner Original Lexmark 70C2HC0/702HC Cian, Programa de Retorno	70C2HC0
TAOL-CS310XLM	Tóner Original Lexmark 70C2HME Magenta	70C2HME
TAOL-CS310XLMRP	Tóner Original Lexmark 70C2HM0/702HM Magenta, Programa de Retorno	70C2HM0
TAOL-CS310XLY	Tóner Original Lexmark 70C2HYE Amarillo	70C2HYE
TAOL-CS310XLYRP	Tóner Original Lexmark 70C2HY0/702HY Amarillo, Programa de Retorno	70C2HY0
TAOL-CS310Y	Tóner Original Lexmark 70C20Y0/702Y Amarillo	70C20Y0
TAOL-CS510B	Tóner Original Lexmark 70C0X10 Negro	70C0X10
TAOL-CS510BRP	Tóner Original Lexmark 70C2XK0/702XK Negro, Programa de Retorno	70C2XK0
TAOL-CS510C	Tóner Original Lexmark 70C0X20/700X2 Cian	70C0X20
TAOL-CS510CRP	Tóner Original Lexmark 70C2XC0/702XC Cian, Programa de Retorno	70C2XC0
TAOL-CS510M	Tóner Original Lexmark 70C0X30/700X3 Magenta	70C0X30
TAOL-CS510MRP	Tóner Original Lexmark 70C2XM0/702XM Magenta, Programa de Retorno	70C2XM0
TAOL-CS510Y	Tóner Original Lexmark 70C0X40/700X4 Amarillo	70C0X40
TAOL-CS510YRP	Tóner Original Lexmark 70C2XY0/702XY Amarillo, Programa de Retorno	70C2XY0
TAOL-CS796B	Tóner Original Lexmark 24B5831 Negro	24B5831
TAOL-CS796C	Tóner Original Lexmark 24B5828 Cian	24B5828
TAOL-CS796M	Tóner Original Lexmark 24B5829 Magenta	24B5829
TAOL-CS796Y	Tóner Original Lexmark 24B5830 Amarillo	24B5830
TAOL-CX310B	Tóner Original Lexmark 80C20K0/802K Negro	80C20K0
TAOL-CX310C	Tóner Original Lexmark 80C20C0/802C Cian	80C20C0
TAOL-CX310M	Tóner Original Lexmark 80C20M0/802M Magenta, Programa de Retorno	80C20M0
TAOL-CX310XLB	Tóner Original Lexmark 80C0S10 Negro	80C0S10
TAOL-CX310XLBRP1	Tóner Original Lexmark 80C2SKE Negro	80C2SKE
TAOL-CX310XLBRP2	Tóner Original Lexmark 80C2SK0/802SK Negro, Programa de Retorno	80C2SK0
TAOL-CX310XLC	Tóner Original Lexmark 80C0S20 Cian	80C0S20
TAOL-CX310XLCRP	Tóner Original Lexmark 80C2SC0/802SC Cian, Programa de Retorno	80C2SC0
TAOL-CX310XLM	Tóner Original Lexmark 80C0S30 Magenta	80C0S30
TAOL-CX310XLMRP	Tóner Original Lexmark 80C2SM0/802SM Magenta, Programa de Retorno	80C2SM0
TAOL-CX310XLY	Tóner Original Lexmark 80C0S40 Amarillo	80C0S40
TAOL-CX310XLYRP	Tóner Original Lexmark 80C2SY0/802SY Amarillo, Programa de Retorno	80C2SY0
TAOL-CX310Y	Tóner Original Lexmark 80C20Y0/802Y Amarillo, Programa de Retorno	80C20Y0
TAOL-CX410B	Tóner Original Lexmark 80C0H10 Negro	80C0H10
TAOL-CX410BRP	Tóner Original Lexmark 80C2HK0/802HK Negro, Programa de Retorno	80C2HK0
TAOL-CX410C	Tóner Original Lexmark 80C0H20 Cian	80C0H20
TAOL-CX410CRP	Tóner Original Lexmark 80C2HC0/802HC Cian, Programa de Retorno	80C2HC0
TAOL-CX410M	Tóner Original Lexmark 80C0H30 Magenta	80C0H30
TAOL-CX410MRP	Tóner Original Lexmark 80C2HM0/802HM Magenta, Programa de Retorno	80C2HM0
TAOL-CX410Y	Tóner Original Lexmark 80C0H40 Amarillo	80C0H40
TAOL-CX410YRP	Tóner Original Lexmark 80C2HY0/802HY Amarillo, Programa de Retorno	80C2HY0
TAOL-CX510B	Tóner Original Lexmark 80C0X10 Negro	80C0X10
TAOL-CX510BRP	Tóner Original Lexmark 80C2XK0/802XK Negro, Programa de Retorno	80C2XK0
TAOL-CX510C	Tóner Original Lexmark 80C0X20 Cian	80C0X20
TAOL-CX510CRP	Tóner Original Lexmark 80C2XC0/802XC Cian, Programa de Retorno	80C2XC0
TAOL-CX510M	Tóner Original Lexmark 80C0X30 Magenta	80C0X30
TAOL-CX510MRP	Tóner Original Lexmark 80C2XM0/802XM Magenta, Programa de Retorno	80C2XM0
TAOL-CX510Y	Tóner Original Lexmark 80C0X40 Amarillo	80C0X40
TAOL-CX510YRP	Tóner Original Lexmark 80C2XY0/802XY Amarillo, Programa de Retorno	80C2XY0
TAOL-CX820	Tóner Original Lexmark 82K0X40 Amarillo	82K0X40

TAOL-CX825C	Tóner Original Lexmark 82K0X20 Cian	82K0X20
TAOL-CX825M	Tóner Original Lexmark 82K0X30 Magenta	82K0X30
TAOL-DRC500	Tambor Original Lexmark 0C500X26G	0C500X26G
TAOL-DRC510	Tambor Original Lexmark 020K0504	020K0504
TAOL-DRC530	Tambor Original Lexmark 00C53030X	00C53030X
TAOL-DRC530S4	Tambor Original Lexmark 00C53034X CMYK (4 uds.)	00C53034X
TAOL-DRC540	Tambor Original Lexmark 0C540X35G CMYK	0C540X35G
TAOL-DRC540B	Tambor y Revelador Original Lexmark 0C540X71G	0C540X71G
TAOL-DRC540CL	Tambor y Revelador Original Lexmark 0C540X74G CMYK	0C540X74G
TAOL-DRC734	Tambor Original Lexmark 0C734X20G	0C734X20G
TAOL-DRC734S4	Tambor Original Lexmark 0C734X24G CMYK (4 uds.)	0C734X24G
TAOL-DRC910B	Tambor Original Lexmark 0012N0773	0012N0773
TAOL-DRC910S3	Tambor Original Lexmark 0012N0772 CMY (3 uds.)	0012N0772
TAOL-DRC925B	Tambor Original Lexmark C925X72G Negro	C925X72G
TAOL-DRC925C	Tambor Original Lexmark C925X73G Cian	C925X73G
TAOL-DRC925M	Tambor Original Lexmark C925X74G Magenta	C925X74G
TAOL-DRC925Y	Tambor Original Lexmark C925X75G Amarillo	C925X75G
TAOL-DRC930	Tambor Original Lexmark 0C930X72G	0C930X72G
TAOL-DRC930S3	Tambor Original Lexmark 0C930X73G CMY (3 uds.)	0C930X73G
TAOL-DRC9501	Tambor Original Lexmark C950X71G	C950X71G
TAOL-DRC9502	Tambor Original Lexmark C950X73G	C950X73G
TAOL-DRCS310B	Tambor Original Lexmark 70C0Z10/700Z1 Negro	70C0Z10
TAOL-DRCS310BCL	Tambor Original Lexmark 70C0Z50/700Z5 CMYK	70C0Z50
TAOL-DRCS310CL	Tambor Original Lexmark 70C0P00/700P CMY	70C0P00
TAOL-DRCS720B	Tambor Original Lexmark 74C0Z10 Negro	74C0Z10
TAOL-DRCS720BRP	Tambor Original Lexmark 74C0ZK0 Negro	74C0ZK0
TAOL-DRCS720CL	Tambor Original Lexmark 74C0Z50 CMY	74C0Z50
TAOL-DRCS720CLRP	Tambor Original Lexmark 74C0ZV0 CMY	74C0ZV0
TAOL-DRCS820	Tambor Original Lexmark 72K0P00 Negro	72K0P00
TAOL-DRCX820B	Tambor y Revelador Original Lexmark 72K0F10 Negro	72K0F10
TAOL-DRCX820CL	Tambor y Revelador Original Lexmark 72K0F50 CMY	72K0F50
TAOL-DRE120	Tambor Original Lexmark 0012026XW	0012026XW
TAOL-DRE230	Tambor Original Lexmark 0012A8302	0012A8302
TAOL-DRE250	Tambor Original Lexmark 0E250X22G	0E250X22G
TAOL-DRE260	Tambor Original Lexmark 0E260X22G	0E260X22G
TAOL-DRM5155	Tambor Original Lexmark 24B6025	24B6025
TAOL-DRMS310	Tambor Original Lexmark 50F0Z00/500Z	50F0Z00
TAOL-DRMS810	Tambor Original Lexmark 52D0ZA0	52D0ZA0
TAOL-DRMS811	Tambor Original Lexmark 52D0Z00/520Z	52D0Z00
TAOL-DRMS911	Tambor Original Lexmark 54G0P00	54G0P00
TAOL-DRW840	Tambor Original Lexmark 00W84030H	00W84030H
TAOL-DRW850	Tambor Original Lexmark 00W850H22G	00W850H22G
TAOL-DRX203	Tambor Original Lexmark 0X203H22G	0X203H22G
TAOL-DRX340	Tambor Original Lexmark 0X340H22G	0X340H22G
TAOL-DRX850	Tambor Original Lexmark 0X850H22G	0X850H22G
TAOL-E210	Tóner Original Lexmark 10S0150 Negro	10S0150
TAOL-E220	Tóner Original Lexmark 0012S0400 Negro	0012S0400
TAOL-E230	Tóner Original Lexmark 0024016SE Negro, Programa de Retorno	0024016SE
TAOL-E250	Tóner Original Lexmark 0E250A11E Negro	0E250A11E
TAOL-E320	Tóner Original Lexmark 08A0476 Negro	08A0476
TAOL-E320XL	Tóner Original Lexmark 08A0144 Negro	08A0144
TAOL-E320XLRP	Tóner Original Lexmark 08A0478 Negro, Programa de Retorno	08A0478
TAOL-E340	Tóner Original Lexmark 0034036HE Negro	0034036HE
TAOL-E340RP	Tóner Original Lexmark 0034016HE Negro, Programa de Retorno	0034016HE
TAOL-E350RP	Tóner Original Lexmark 0E352H11E Negro, Programa de Retorno	0E352H11E
TAOL-E360	Tóner Original Lexmark 0E360H11E Negro	0E360H11E
TAOL-E360A	Tóner Original Lexmark E360H21E Negro	E360H21E
TAOL-E360B	Tóner Original Lexmark E360H80G Negro	E360H80G
TAOL-E450	Tóner Original Lexmark 0E450A11E Negro	0E450A11E
TAOL-E460	Tóner Original Lexmark E460X21E Negro	E460X21E
TAOL-E460RP	Tóner Original Lexmark 0E460X11E Negro, Programa de Retorno	0E460X11E
TAOL-E462	Tóner Original Lexmark E462U11E Negro	0E462U11E
TAOL-M1140	Tóner Original Lexmark 24B6213 Negro	24B6213
TAOL-M1145	Tóner Original Lexmark 24B6035 Negro	24B6035
TAOL-M410L	Tóner Original Lexmark 4K00199 Negro	4K00199
TAOL-M410S	Tóner Original Lexmark 017G0152 Negro	017G0152
TAOL-M410XL	Tóner Original Lexmark 017G0154 Negro	017G0154
TAOL-MS310RP	Tóner Original Lexmark 50F2000/502 Negro, Programa de Retorno	50F2000
TAOL-MS310XL	Tóner Original Lexmark 50F0HA0/500HA Negro	50F0HA0
TAOL-MS310XL2	Tóner Original Lexmark 51F2H0E Negro	51F2H0E
TAOL-MS310XLRP	Tóner Original Lexmark 50F2H00/502H Negro, Programa de Retorno	50F2H00

TAOL-MS310XLRP2	Tóner Original Lexmark 51F2H00/512HE Negro, Programa de Retorno	51F2H00
TAOL-MS410	Tóner Original Lexmark 50F0XA0 Negro	50F0XA0
TAOL-MS410RP	Tóner Original Lexmark 50F2X00/502X Negro, Programa de Retorno	50F2X00
TAOL-MS610	Tóner Original Lexmark 50F0UA0/502UA Negro	50F0UA0
TAOL-MS610RP	Tóner Original Lexmark 50F2U00/502U Negro, Programa de Retorno	50F2U00
TAOL-MS710	Tóner Original Lexmark 52D0HAL/520HAL Negro	52D0HAL
TAOL-MS710RP	Tóner Original Lexmark 52D2H0L/522HL Negro	52D2H0L
TAOL-MS711	Tóner Original Lexmark 52D0XAL/520XAL Negro	52D0XAL
TAOL-MS711RP	Tóner Original Lexmark 52D2X0L/522XL Negro	52D2X0L
TAOL-MS810	Tóner Original Lexmark 52D2000/522 Negro	52D2000
TAOL-MS810XL	Tóner Original Lexmark 52D0HA0/520HA Negro	52D0HA0
TAOL-MS810XLRP	Tóner Original Lexmark 52D2H00/522H Negro, Programa de Retorno	52D2H00
TAOL-MS811RP	Tóner Original Lexmark 52D2X00/522X Negro, Programa de Retorno	52D2X00
TAOL-MS811RP2	Tóner Original Lexmark 52D2X0E Negro- Programa de Retorno	062D2X0E
TAOL-MS911	Tóner Original Lexmark 54G0H00 Negro	54G0H00
TAOL-MX310	Tóner Original Lexmark 60F2000/602 Negro	60F2000
TAOL-MX310XL	Tóner Original Lexmark 60F2H00/602H Negro	60F2H00
TAOL-MX410	Tóner Original Lexmark 60F0HA0/602HA Negro	60F0HA0
TAOL-MX510	Tóner Original Lexmark 60F0XA0/600XA Negro	60F0XA0
TAOL-MX510RP	Tóner Original Lexmark 60F2X00/602X Negro, Programa de Retorno	60F2X00
TAOL-MX710	Tóner Original Lexmark 62D2000/622 Negro	62D2000
TAOL-MX710XL	Tóner Original Lexmark 62D0HA0/620HA Negro	62D0HA0
TAOL-MX710XLRP	Tóner Original Lexmark 62D2H00/622H Negro, Programa de Retorno	62D2H00
TAOL-MX711	Tóner Original Lexmark 62D0XA0/620XA Negro	62D0XA0
TAOL-MX711RP	Tóner Original Lexmark 62D2X00/622X Negro, Programa de Retorno	62D2X00
TAOL-MX910	Tóner Original Lexmark 64G0H00 Negro	64G0H00
TAOL-T420	Tóner Original Lexmark 0012A7415 Negro	0012A7415
TAOL-T430	Tóner Original Lexmark 0012A8425 Negro	0012A8425
TAOL-T620	Tóner Original Lexmark 0012A6865 Negro	0012A6865
TAOL-T630	Tóner Original Lexmark 12A7362 Negro	12A7362
TAOL-T630XL	Tóner Original Lexmark 12A7365 Negro	12A7365
TAOL-T640	Tóner Original Lexmark 64036SE Negro	64036SE
TAOL-T640RP	Tóner Original Lexmark 0064016SE Negro, Programa de Retorno	0064016SE
TAOL-T640XL	Tóner Original Lexmark 64036HE Negro	64036HE
TAOL-T640XLLRP	Tóner Original Lexmark 64004HE Negro, Programa de Retorno	64004HE
TAOL-T640XLRP	Tóner Original Lexmark 0064016HE Negro, Programa de Retorno	0064016HE
TAOL-T644	Tóner Original Lexmark 0064416XE Negro, Programa de Retorno	0064416XE
TAOL-T650	Tóner Original Lexmark T650A21E Negro	T650A21E
TAOL-T650RP	Tóner Original Lexmark 0T650A11E Negro, Programa de Retorno	0T650A11E
TAOL-T650XL	Tóner Original Lexmark 0T650H11E Negro	0T650H11E
TAOL-T654	Tóner Original Lexmark 0T654X11E Negro, Programa de Retorno	0T654X11E
TAOL-T654A	Tóner Original Lexmark T654X21E Negro	T654X21E
TAOL-T654B	Tóner Original Lexmark T654X80G Negro	T654X80G
TAOL-T654C	Tóner Original Lexmark T654X04E Negro para etiquetas	T654X04E
TAOL-W812	Tóner Original Lexmark 14K0050 Negro	14K0050
TAOL-W840	Tóner Original Lexmark 00W84020H Negro	00W84020H
TAOL-W850	Tóner Original Lexmark 00W850H21G Negro	00W850H21G
TAOL-X203	Tóner Original Lexmark 0X203A11G Negro	0X203A11G
TAOL-X215	Tóner Original Lexmark 018S0090 Negro	018S0090
TAOL-X264	Tóner Original Lexmark X264H21G Negro	X264H21G
TAOL-X264RP	Tóner Original Lexmark 0X264A11G Negro, Programa de Retorno	0X264A11G
TAOL-X264XLRP	Tóner Original Lexmark 0X264H11G Negro, Programa de Retorno	0X264H11G
TAOL-X340	Tóner Original Lexmark X340A21G Negro	X340A21G
TAOL-X340RP	Tóner Original Lexmark 0X340A11G Negro, Programa de Retorno	0X340A11G
TAOL-X340XL	Tóner Original Lexmark 0X340H11G Negro	0X340H11G
TAOL-X463	Tóner Original Lexmark 0X463A11G Negro	0X463A11G
TAOL-X46315B	Tóner Original Lexmark X463X21G Negro	X463X21G
TAOL-X4639B	Tóner Original Lexmark 0X463H11G Negro	0X463H11G
TAOL-X463RP	Tóner Original Lexmark 0X463X11G Negro, Programa de Retorno	0X463X11G
TAOL-X560C	Tóner Original Lexmark 0X560A2CG Cian	0X560A2CG
TAOL-X560M	Tóner Original Lexmark 0X560A2MG Magenta	0X560A2MG
TAOL-X560XLB	Tóner Original Lexmark 0X560H2KG Negro	0X560H2KG
TAOL-X560XLC	Tóner Original Lexmark 0X560H2CG Cian	0X560H2CG
TAOL-X560XLM	Tóner Original Lexmark 0X560H2MG Magenta	0X560H2MG
TAOL-X560XLY	Tóner Original Lexmark 0X560H2YG Amarillo	0X560H2YG
TAOL-X560Y	Tóner Original Lexmark 0X560A2YG Amarillo	0X560A2YG
TAOL-X644	Tóner Original Lexmark X644A21E Negro	X644A21E
TAOL-X64410K	Tóner Original Lexmark 0X644A11E Negro	0X644A11E
TAOL-X64421K	Tóner Original Lexmark 0X644H11E Negro	0X644H11E
TAOL-X64432K	Tóner Original Lexmark 0X644X11E Negro	0X644X11E
TAOL-X651	Tóner Original Lexmark X651A21E Negro	X651A21E

TAOL-X651L	Tóner Original Lexmark X651H04E Negro para etiquetas	X651H04E
TAOL-X651RP	Tóner Original Lexmark 0X651A11E Negro, Programa de Retorno	0X651A11E
TAOL-X651XLRP	Tóner Original Lexmark 0X651H11E Negro, Programa de Retorno	0X651H11E
TAOL-X654	Tóner Original Lexmark X654X21E Negro	X654X21E
TAOL-X654L	Tóner Original Lexmark X654X04E Negro para etiquetas	X654X04E
TAOL-X654RP	Tóner Original Lexmark 0X654X11E Negro, Programa de Retorno	0X654X11E
TAOL-X746B	Tóner Original Lexmark X746H1KG Negro	X746H1KG
TAOL-X746C	Tóner Original Lexmark X746A1CG Cian	X746A1CG
TAOL-X746M	Tóner Original Lexmark X746A1MG Magenta	X746A1MG
TAOL-X746Y	Tóner Original Lexmark X746A1YG Amarillo	X746A1YG
TAOL-X748C	Tóner Original Lexmark X748H1CG Cian	X748H1CG
TAOL-X748M	Tóner Original Lexmark X748H1MG Magenta	X748H1MG
TAOL-X748Y	Tóner Original Lexmark X748H1YG Amarillo	X748H1YG
TAOL-X792XLB	Tóner Original Lexmark X792X1KG Negro	X792X1KG
TAOL-X792XLC	Tóner Original Lexmark X792X2CG Cian	X792X2CG
TAOL-X792XLM	Tóner Original Lexmark X792X2MG Magenta	X792X2MG
TAOL-X792XLY	Tóner Original Lexmark X792X2YG Amarillo	X792X2YG
TAOL-X830	Tóner Original Lexmark 00X8302KH Negro	00X8302KH
TAOL-X850	Tóner Original Lexmark 0X850H21G Negro	0X850H21G
TAOL-X860	Tóner Original Lexmark 0X860H21G Negro	0X860H21G
TAOL-X860XL	Tóner Original Lexmark 0X860H22G Negro	0X860H22G
TAOL-X925B	Tóner Original Lexmark X925H2KG Negro	X925H2KG
TAOL-X925C	Tóner Original Lexmark X925H2CG Cian	X925H2CG
TAOL-X925M	Tóner Original Lexmark X925H2MG Magenta	X925H2MG
TAOL-X925Y	Tóner Original Lexmark X925H2YG Amarillo	X925H2YG
TAOL-X945B	Tóner Original Lexmark 0X945X2KG Negro	0X945X2KG
TAOL-X945C	Tóner Original Lexmark 0X945X2CG Cian	0X945X2CG
TAOL-X945M	Tóner Original Lexmark 0X945X2MG Magenta	0X945X2MG
TAOL-X945Y	Tóner Original Lexmark 0X945X2YG Amarillo	0X945X2YG
TAOL-X950B	Tóner Original Lexmark X950X2KG Negro	X950X2KG
TAOL-X950C	Tóner Original Lexmark X950X2CG Cian	X950X2CG
TAOL-X950M	Tóner Original Lexmark X950X2MG Magenta	X950X2MG
TAOL-X950Y	Tóner Original Lexmark X950X2YG Amarillo	X950X2YG
TAOL-XC2130B	Tóner Original Lexmark 24B6011 Negro	24B6011
TAOL-XC2130C	Tóner Original Lexmark 24B6008 Cian	24B6008
TAOL-XC2130M	Tóner Original Lexmark 24B6009 Magenta	24B6009
TAOL-XC2130Y	Tóner Original Lexmark 24B6010 Amarillo	24B6010
TAOMU-DRDB42	Tambor Original Muratec DK42000	DK42000
TAON-DRDMU21	Tambor Original Nashuatec B039-9510/DMU21	B039-9510
TAON-DT415	Tóner Original Nashuatec DT415BLK0/DT 415 Negro	DT415BLK00
TAON-DT51	Tóner Original Nashuatec DT51BLK00/DT51 Negro	DT51BLK00
TAONR-DRDMU17	Tambor Original NRG DMU17/400633	DMU17
TAONR-DT338	Tóner Original NRG DT338BLK00/DT338 Negro	DT338BLK00
TAONR-DT40	Tóner Original NRG DT40BLK00/DT40 Negro	DT40BLK00
TAONR-DT4500C	Tóner Original NRG DT4500CYN00/DT4500 Cian	DT4500CYN00
TAOOC-23044DP	Tóner Original OCE 106.002.3044 Negro, Pack Doble	106.002.3044
TAOOC-47449DP	Tóner Original OCE 106.004.7449 Negro, Pack Doble	106.007.449
TAOOC-74426DP	Tóner y Residual Original OCE 106.007.4426 Negro Pack Doble	106.007.4426
TAOO-C801B	Tóner Original OTA 44643004 Negro	44643004
TAOO-C801C	Tóner Original OTA 44643003 Cian	44643003
TAOO-C801M	Tóner Original OTA 44643002 Magenta	44643002
TAOO-C801Y	Tóner Original OTA 44643001 Amarillo	44643001
TAOO-C810B	Tóner Original OTA 44059108 Negro	44059108
TAOO-C810C	Tóner Original OTA 44059107 Cian	44059107
TAOO-C810M	Tóner Original OTA 44059106 Magenta	44059106
TAOO-C810Y	Tóner Original OTA 44059105 Amarillo	44059105
TAOO-C822B	Tóner Original OTA 44844616 Negro	44844616
TAOO-C822C	Tóner Original OTA 44844615 Cian	44844615
TAOO-C822M	Tóner Original OTA 44844614 Magenta	44844614
TAOO-C822Y	Tóner Original OTA 44844613 Amarillo	44844613
TAOO-C831B	Tóner Original OTA 44844508 Negro	44844508
TAOO-C831B2	Tóner Original OTA 44844512 Negro	44844512
TAOO-C831C	Tóner Original OTA 44844507 Cian	44844507
TAOO-C831C2	Tóner Original OTA 44844511 Cian	44844511
TAOO-C831M	Tóner Original OTA 44844506 Magenta	44844506
TAOO-C831M2	Tóner Original OTA 44844510 Magenta	44844510
TAOO-C831Y	Tóner Original OTA 44844505 Amarillo	44844505
TAOO-C831Y2	Tóner Original OTA 44844509 Amarillo	44844509
TAOO-C8600B	Tóner Original OTA 43487712 Negro	43487712
TAOO-C8600C	Tóner Original OTA 43487711 Cian	43487711
TAOO-C8600M	Tóner Original OTA 43487710 Magenta	43487710

TAOO-C8600S4	Tóner Original OTA 43698501 CMYK (4 uds.)	43698501
TAOO-C8600Y	Tóner Original OTA 43487709 Amarillo	43487709
TAOO-C9300B	Tóner Original OTA 41963608 Negro	41963608
TAOO-C9300M	Tóner Original OTA 41963606 Magenta	41963606
TAOO-C931B	Tóner Original OTA 45536416 Negro	45536416
TAOO-C931C	Tóner Original OTA 45536415 Cian	45536415
TAOO-C931M	Tóner Original OTA 45536414 Magenta	45536414
TAOO-C931XLB	Tóner Original OTA 45536508 Negro	45536508
TAOO-C931XLC	Tóner Original OTA 45536507 Cian	45536507
TAOO-C931XLM	Tóner Original OTA 45536506 Magenta	45536506
TAOO-C931XLY	Tóner Original OTA 45536505 Amarillo	45536505
TAOO-C931Y	Tóner Original OTA 45536413 Amarillo	45536413
TAOO-C9600B	Tóner Original OTA 42918916 Negro	42918916
TAOO-C9600C	Tóner Original OTA 42918915 Cian	42918915
TAOO-C9600M	Tóner Original OTA 42918914 Magenta	42918914
TAOO-C9600S4	Tóner Original OTA 43112702 CMYK (4 uds.)	43112702
TAOO-C9600Y	Tóner Original OTA 42918913 Amarillo	42918913
TAOO-C9655B	Tóner Original OTA 43837132 Negro	43837132
TAOO-C9655C	Tóner Original OTA 43837131 Cian	43837131
TAOO-C9655M	Tóner Original OTA 43837130 Magenta	43837130
TAOO-C9655Y	Tóner Original OTA 43837129 Amarillo	43837129
TAOOC-P3B	Tóner Original OCE 107.0010.542 P3 Negro	107.0010.542
TAOOC-P3C	Tóner Original OCE 107.0010.540 P3 Cian	107.0010.540
TAOOC-P3M	Tóner Original OCE 107.0010.541 P3 Magenta	107.0010.541
TAOOC-P3Y	Tóner Original OCE 107.0010.451 P3 Amarillo	107.0010.451
TAOOC-TYPEB1	Tóner Original OCE 250.01.867/25001867/Type B1 Negro	250.01.867
TAOOC-TYPEB5	Tóner Original OCE 250.01.843/25001843/Type B5 Negro	250.01.843
TAOOC-TYPEF3	Tóner Original OCE 250.01.848/TYPEF3 Negro	250.01.848
TAOO-DR1200	Tambor Original OTA 09002990	9002990
TAOO-DR4170	Tambor Original OTA 09004170	9004170
TAOO-DRB2200	Tambor Original OTA 43650302	43650302
TAOO-DRB401	Tambor Original OTA 44574307	44574307
TAOO-DRB410	Tambor Original OTA 43979002	43979002
TAOO-DRB411	Tambor Original OTA 44574302	44574302
TAOO-DRB4600	Tambor Original OTA 43501902	43501902
TAOO-DRB930	Tambor Original OTA 01221701	1221701
TAOO-DRC110	Tambor Original OTA 44250801	44250801
TAOO-DRC310	Tambor Original OTA 44494202	44494202
TAOO-DRC3100B	Tambor Original OTA 42126644 Negro	42126644
TAOO-DRC3100C	Tambor Original OTA 42126643 Cian	42126643
TAOO-DRC3100M	Tambor Original OTA 42126642 Magenta	42126642
TAOO-DRC3200B	Tambor Original OTA 42126665 Negro	42126665
TAOO-DRC3200C	Tambor Original OTA 42126664 Cian	42126664
TAOO-DRC3200M	Tambor Original OTA 42126663 Magenta	42126663
TAOO-DRC3200Y	Tambor Original OTA 42126662 Amarillo	42126662
TAOO-DRC321	Tambor Original OTA 44968301	44968301
TAOO-DRC3300B	Tambor Original OTA 43460208 Negro	43460208
TAOO-DRC3300C	Tambor Original OTA 43460207 Cian	43460207
TAOO-DRC3300M	Tambor Original OTA 43460206 Magenta	43460206
TAOO-DRC3300Y	Tambor Original OTA 43460205 Amarillo	43460205
TAOO-DRC3520B	Tambor Original OTA 43460224 Negro	43460224
TAOO-DRC3520C	Tambor Original OTA 43460223 Cian	43460223
TAOO-DRC3520M	Tambor Original OTA 43460222 Magenta	43460222
TAOO-DRC3520Y	Tambor Original OTA 43460221 Amarillo	43460221
TAOO-DRC5100B	Tambor Original OTA 42126608 Negro	42126608
TAOO-DRC5100C	Tambor Original OTA 42126607 Cian	42126607
TAOO-DRC5100M	Tambor Original OTA 42126606 Magenta	42126606
TAOO-DRC5100Y	Tambor Original OTA 42126605 Amarillo	42126605
TAOO-DRC5250B	Tambor Original OTA 42126673 Negro	42126673
TAOO-DRC5250C	Tambor Original OTA 42126672 Cian	42126672
TAOO-DRC5250M	Tambor Original OTA 42126671 Magenta	42126671
TAOO-DRC5250Y	Tambor Original OTA 42126670 Amarillo	42126670
TAOO-DRC5500B	Tambor Original OTA 43381724 Negro	43381724
TAOO-DRC5500C	Tambor Original OTA 43381723 Cian	43381723
TAOO-DRC5500M	Tambor Original OTA 43381722 Magenta	43381722
TAOO-DRC5500Y	Tambor Original OTA 43381721 Amarillo	43381721
TAOO-DRC5650B	Tambor Original OTA 43870008 Negro	43870008
TAOO-DRC5650C	Tambor Original OTA 43870007 Cian	43870007
TAOO-DRC5650M	Tambor Original OTA 43870006 Magenta	43870006
TAOO-DRC5650Y	Tambor Original OTA 43870005 Amarillo	43870005
TAOO-DRC5700B	Tambor Original OTA 43381708 Negro	43381708

TAOO-DRC5700C	Tambor Original OTA 43381707 Cian	43381707
TAOO-DRC5700M	Tambor Original OTA 43381706 Magenta	43381706
TAOO-DRC5700Y	Tambor Original OTA 43381705 Amarillo	43381705
TAOO-DRC5950B	Tambor Original OTA 43870024 Negro	43870024
TAOO-DRC5950C	Tambor Original OTA 43870023 Cian	43870023
TAOO-DRC5950M	Tambor Original OTA 43870022 Magenta	43870022
TAOO-DRC5950Y	Tambor Original OTA 43870021 Amarillo	43870021
TAOO-DRC610B	Tambor Original OTA 44315108 Negro	44315108
TAOO-DRC610C	Tambor Original OTA 44315107 Cian	44315107
TAOO-DRC610M	Tambor Original OTA 44315106 Magenta	44315106
TAOO-DRC610Y	Tambor Original OTA 44315105 Amarillo	44315105
TAOO-DRC7100B	Tambor Original OTA 41962808 Negro	41962808
TAOO-DRC7100C	Tambor Original OTA 41962807 Cian	41962807
TAOO-DRC7100M	Tambor Original OTA 41962806 Magenta	41962806
TAOO-DRC7100Y	Tambor Original OTA 41962805 Amarillo	41962805
TAOO-DRC710B	Tambor Original OTA 43913808 Negro	43913808
TAOO-DRC710C	Tambor Original OTA 43913807 Cian	43913807
TAOO-DRC710M	Tambor Original OTA 43913806 Magenta	43913806
TAOO-DRC710XLB	Tambor Original OTA 44318508 Negro	44318508
TAOO-DRC710XLC	Tambor Original OTA 44318507 Cian	44318507
TAOO-DRC710XLM	Tambor Original OTA 44318506 Magenta	44318506
TAOO-DRC710XLY	Tambor Original OTA 44318505 Amarillo	44318505
TAOO-DRC710Y	Tambor Original OTA 43913805 Amarillo	43913805
TAOO-DRC810B	Tambor Original OTA 44064012 Negro	44064012
TAOO-DRC810C	Tambor Original OTA 44064011 Cian	44064011
TAOO-DRC810M	Tambor Original OTA 44064010 Magenta	44064010
TAOO-DRC810Y	Tambor Original OTA 44064009 Amarillo	44064009
TAOO-DRC822B	Tambor Original OTA 44844408 Negro	44844408
TAOO-DRC822C	Tambor Original OTA 44844407 Cian	44844407
TAOO-DRC822M	Tambor Original OTA 44844406 Magenta	44844406
TAOO-DRC822Y	Tambor Original OTA 44844405 Amarillo	44844405
TAOO-DRC8600B	Tambor Original OTA 43449016 Negro	43449016
TAOO-DRC8600C	Tambor Original OTA 43449015 Cian	43449015
TAOO-DRC8600M	Tambor Original OTA 43449014 Magenta	43449014
TAOO-DRC8600Y	Tambor Original OTA 43449013 Amarillo	43449013
TAOO-DRC9200C	Tambor Original OTA 41514711 Cian	41514711
TAOO-DRC9200M	Tambor Original OTA 41514710 Magenta	41514710
TAOO-DRC9200Y	Tambor Original OTA 41514709 Amarillo	41514709
TAOO-DRC931B	Tambor Original OTA 45103716 Negro	45103716
TAOO-DRC931C	Tambor Original OTA 45103713 Cian	45103713
TAOO-DRC931M	Tambor Original OTA 45103714 Magenta	45103714
TAOO-DRC931Y	Tambor Original OTA 45103715 Amarillo	45103715
TAOO-DRC9600B	Tambor Original OTA 42918108 Negro	42918108
TAOO-DRC9600C	Tambor Original OTA 42918107 Cian	42918107
TAOO-DRC9600M	Tambor Original OTA 42918106 Magenta	42918106
TAOO-DRC9600Y	Tambor Original OTA 42918105 Amarillo	42918105
TAOO-DRMC760B	Tambor Original OTA 45395704 Negro	45395704
TAOO-DRMC760C	Tambor Original OTA 45395703 Cian	45395703
TAOO-DRMC760M	Tambor Original OTA 45395702 Magenta	45395702
TAOO-DRMC760Y	Tambor Original OTA 45395701 Amarillo	45395701
TAOO-DRMC853B	Tambor Original OTA 44844472 Negro	44844472
TAOO-DRMC853C	Tambor Original OTA 44844471 Cian	44844471
TAOO-DRMC853M	Tambor Original OTA 44844470 Magenta	44844470
TAOO-DRMC853Y	Tambor Original OTA 44844469 Amarillo	44844469
TAOO-DRTYPE2	Tambor Original OTA 09001042/TYPE2	9001042
TAOO-DRTYPE3	Tambor Original OTA 09001038/TYPE3	9001038
TAOO-DRTYPE5	Tambor Original OTA 40433303/TYPE5	40433303
TAOO-DRTYPE6	Tambor Original OTA 40709902/TYPE6	40709902
TAOO-DRTYPE9	Tambor Original OTA 42102802	42102802
TAOOK-160	Tóner Original OTA 01234101 Negro	1234101
TAOOK-170	Tóner Original OTA 01290801 Negro	1290801
TAOOK-4019	Tóner Original OTA 09004019 Negro	9004019
TAOOK-4169	Tóner Original OTA 09004169 Negro	9004169
TAOOK-4245	Tóner Original OTA 09004245 Negro	9004245
TAOOK-4447	Tóner Original OTA 09004447 Negro	9004447
TAOOK-4461	Tóner Original OTA 09004461 Negro	9004461
TAOOK-4462	Tóner Original OTA 09004462 Negro	9004462
TAOOK-5700	Tóner Original OTA 40815604 Negro	40815604
TAOOK-5800	Tóner Original OTA 09002386 Negro	9002386
TAOOK-B2200	Tóner Original OTA 43640302 Negro	43640302
TAOOK-B2500	Tóner Original OTA 09004391 Negro	9004391

TAOOK-B401	Tóner Original OTA 44992401 Negro	44992401
TAOOK-B401XL	Tóner Original OTA 44992402 Negro	44992402
TAOOK-B410	Tóner Original OTA 43979102 Negro	43979102
TAOOK-B411	Tóner Original OTA 44574702 Negro	44574702
TAOOK-B411XL	Tóner Original OTA 44574802 Negro	44574802
TAOOK-B411XL12K	Tóner Original OTA 44917602 Negro	44917602
TAOOK-B412	Tóner Original OTA 45807102 Negro	45807102
TAOOK-B412XL	Tóner Original OTA 45807106 Negro	45807106
TAOOK-B430	Tóner Original OTA 43979202 Negro	43979202
TAOOK-B4400	Tóner Original OTA 43502302 Negro	43502302
TAOOK-B4520	Tóner Original OTA 09004168 Negro	9004168
TAOOK-B4600	Tóner Original OTA 43502002 Negro	43502002
TAOOK-B512	Tóner Original OTA 45807111 Negro	45807111
TAOOK-B6100	Tóner Original OTA 09004058 Negro	9004058
TAOOK-B6200	Tóner Original OTA 09004078 Negro	9004078
TAOOK-B6300	Tóner Original OTA 09004079 Negro	9004079
TAOOK-B710	Tóner Original OTA 01279001 Negro	1279001
TAOOK-B720	Tóner Original OTA 01279101 Negro	1279101
TAOOK-B721	Tóner Original OTA 45488802 Negro	45488802
TAOOK-B730	Tóner Original OTA 01279201 Negro	1279201
TAOOK-B840	Tóner Original OTA 44661802 Negro	44661802
TAOOK-B930	Tóner Original OTA 01221601 Negro	1221601
TAOOK-C110B	Tóner Original OTA 44250724 Negro	44250724
TAOOK-C110C	Tóner Original OTA 44250719 Cian	44250719
TAOOK-C110M	Tóner Original OTA 44250718 Magenta	44250718
TAOOK-C110XLC	Tóner Original OTA 44250723 Cian	44250723
TAOOK-C110XLM	Tóner Original OTA 44250722 Magenta	44250722
TAOOK-C110XLY	Tóner Original OTA 44250721 Amarillo	44250721
TAOOK-C110Y	Tóner Original OTA 44250717 Amarillo	44250717
TAOOK-C310B	Tóner Original OTA 44469803 Negro	44469803
TAOOK-C310C	Tóner Original OTA 44469706 Cian	44469706
TAOOK-C310M	Tóner Original OTA 44469705 Magenta	44469705
TAOOK-C310Y	Tóner Original OTA 44469704 Amarillo	44469704
TAOOK-C3200B	Tóner Original OTA 43034808 Negro	43034808
TAOOK-C3200C	Tóner Original OTA 43034807 Cian	43034807
TAOOK-C3200M	Tóner Original OTA 43034806 Magenta	43034806
TAOOK-C3200XLB	Tóner Original OTA 42804540 Negro	42804540
TAOOK-C3200XLC	Tóner Original OTA 42804539 Cian	42804539
TAOOK-C3200XLM	Tóner Original OTA 42804538 Magenta	42804538
TAOOK-C3200XLY	Tóner Original OTA 42804537 Amarillo	42804537
TAOOK-C3200Y	Tóner Original OTA 43034805 Amarillo	43034805
TAOOK-C321B	Tóner Original OTA 44973536 Negro	44973536
TAOOK-C321C	Tóner Original OTA 44973535 Cian	44973535
TAOOK-C321M	Tóner Original OTA 44973534 Magenta	44973534
TAOOK-C321Y	Tóner Original OTA 44973533 Amarillo	44973533
TAOOK-C3300B	Tóner Original OTA 43459436 Negro	43459436
TAOOK-C3300C	Tóner Original OTA 43459435 Cian	43459435
TAOOK-C3300M	Tóner Original OTA 43459434 Magenta	43459434
TAOOK-C3300XLB	Tóner Original OTA 43459332 Negro	43459332
TAOOK-C3300XLC	Tóner Original OTA 43459331 Cian	43459331
TAOOK-C3300XLM	Tóner Original OTA 43459330 Magenta	43459330
TAOOK-C3300XLY	Tóner Original OTA 43459329 Amarillo	43459329
TAOOK-C3300Y	Tóner Original OTA 43459433 Amarillo	43459433
TAOOK-C3520B	Tóner Original OTA 43459324 Negro	43459324
TAOOK-C3520C	Tóner Original OTA 43459371 Cian	43459371
TAOOK-C3520M	Tóner Original OTA 43459370 Magenta	43459370
TAOOK-C3520Y	Tóner Original OTA 43459369 Amarillo	43459369
TAOOK-C5100B	Tóner Original OTA 42127408 Negro	42127408
TAOOK-C5100C	Tóner Original OTA 42127407 Cian	42127407
TAOOK-C5100M	Tóner Original OTA 42127406 Magenta	42127406
TAOOK-C5100S4	Tóner Original OTA 42403002/C6 CMYK (4 uds.)	42403002
TAOOK-C5100XLS4	Tóner Original OTA 42403006 CMYK (4 uds.)	42403006
TAOOK-C5100Y	Tóner Original OTA 42127405 Amarillo	42127405
TAOOK-C510B	Tóner Original OTA 44469804 Negro	44469804
TAOOK-C510C	Tóner Original OTA 44469724 Cian	44469724
TAOOK-C510M	Tóner Original OTA 44469723 Magenta	44469723
TAOOK-C510Y	Tóner Original OTA 44469722 Amarillo	44469722
TAOOK-C511B	Tóner Original OTA 44973508 Negro	44973508
TAOOK-C5200B	Tóner Original OTA 42804508 Negro	42804508
TAOOK-C5200C	Tóner Original OTA 42804507 Cian	42804507
TAOOK-C5200M	Tóner Original OTA 42804506 Magenta	42804506

TAOOK-C5200Y	Tóner Original OTA 42804505 Amarillo	42804505
TAOOK-C5250B	Tóner Original OTA 42804548 Negro	42804548
TAOOK-C5250C	Tóner Original OTA 42804547 Cian	42804547
TAOOK-C5250M	Tóner Original OTA 42804546 Magenta	42804546
TAOOK-C5250XLB	Tóner Original OTA 42127457 Negro	42127457
TAOOK-C5250XLC	Tóner Original OTA 42127456 Cian	42127456
TAOOK-C5250XLM	Tóner Original OTA 42127455 Magenta	42127455
TAOOK-C5250XLY	Tóner Original OTA 42127454 Amarillo	42127454
TAOOK-C5250Y	Tóner Original OTA 42804545 Amarillo	42804545
TAOOK-C5600B	Tóner Original OTA 43324408 Negro	43324408
TAOOK-C5600C	Tóner Original OTA 43381907 Cian	43381907
TAOOK-C5600M	Tóner Original OTA 43381906 Magenta	43381906
TAOOK-C5600Y	Tóner Original OTA 43381905 Amarillo	43381905
TAOOK-C5650B	Tóner Original OTA 43865708 Negro	43865708
TAOOK-C5650C	Tóner Original OTA 43872307 Cian	43872307
TAOOK-C5650M	Tóner Original OTA 43872306 Magenta	43872306
TAOOK-C5650Y	Tóner Original OTA 43872305 Amarillo	43872305
TAOOK-C5800B	Tóner Original OTA 43324424 Negro	43324424
TAOOK-C5800C	Tóner Original OTA 43324423 Cian	43324423
TAOOK-C5800M	Tóner Original OTA 43324422 Magenta	43324422
TAOOK-C5800Y	Tóner Original OTA 43324421 Amarillo	43324421
TAOOK-C5850B	Tóner Original OTA 43865724 Negro	43865724
TAOOK-C5850C	Tóner Original OTA 43865723 Cian	43865723
TAOOK-C5850M	Tóner Original OTA 43865722 Magenta	43865722
TAOOK-C5850Y	Tóner Original OTA 43865721 Amarillo	43865721
TAOOK-C610B	Tóner Original OTA 44315308 Negro	44315308
TAOOK-C610C	Tóner Original OTA 44315307 Cian	44315307
TAOOK-C610M	Tóner Original OTA 44315306 Magenta	44315306
TAOOK-C610Y	Tóner Original OTA 44315305 Amarillo	44315305
TAOOK-C7100B	Tóner Original OTA 41963008 Negro	41963008
TAOOK-C7100C	Tóner Original OTA 41963007 Cian	41963007
TAOOK-C7100M	Tóner Original OTA 41963006 Magenta	41963006
TAOOK-C7100Y	Tóner Original OTA 41963005 Amarillo	41963005
TAOOK-C710B	Tóner Original OTA 44318608/43866108 Negro	44318608/43866108
TAOOK-C710C	Tóner Original OTA 44318607 Cian	44318607
TAOOK-C710M	Tóner Original OTA 44318606 Magenta	44318606
TAOOK-C710Y	Tóner Original OTA 44318605 Amarillo	44318605
TAOOK-C7200C	Tóner Original OTA 41304211 Cian	41304211
TAOOK-C7200M	Tóner Original OTA 41304210 Magenta	41304210
TAOOK-C7200Y	Tóner Original OTA 41304209 Amarillo	41304209
TAOOK-MB260	Tóner Original OTA 01239901 Negro	1239901
TAOOK-MB260XL	Tóner Original OTA 01240001 XXL Negro	1240001
TAOOK-MB460	Tóner Original OTA 43979216 Negro	43979216
TAOOK-MB770	Tóner Original OTA 45439002 Negro	45439002
TAOOK-MC760B	Tóner Original OTA 45396304/MC760/770/780 Negro	45396304
TAOOK-MC760C	Tóner Original OTA 45396303/MC760/770/780 Cian	45396303
TAOOK-MC760M	Tóner Original OTA 45396302/MC760/770/780 Magenta	45396302
TAOOK-MC760XLB	Tóner Original OTA 45396204 Negro	45396204
TAOOK-MC760XLC	Tóner Original OTA 45396203 Cian	45396203
TAOOK-MC760XLM	Tóner Original OTA 45396202 Magenta	45396202
TAOOK-MC760XLY	Tóner Original OTA 45396201 Amarillo	45396201
TAOOK-MC760Y	Tóner Original OTA 45396301/MC760/770/780 Amarillo	45396301
TAOOK-MC851B	Tóner Original OTA 44059168/MC851 Negro	44059168
TAOOK-MC851C	Tóner Original OTA 44059167 Cian	44059167
TAOOK-MC851M	Tóner Original OTA 44059166 Magenta	44059166
TAOOK-MC851Y	Tóner Original OTA 44059165/MC851 Amarillo	44059165
TAOOK-MC853C	Tóner Original OTA 45862839 Cian	45862839
TAOOK-MC853M	Tóner Original OTA 45862838 Magenta	45862838
TAOOK-MC853Y	Tóner Original OTA 45862837 Amarillo	45862837
TAOOK-MC860B	Tóner Original OTA 44059212 Negro	44059212
TAOOK-MC860C	Tóner Original OTA 44059211 Cian	44059211
TAOOK-MC860M	Tóner Original OTA 44059210 Magenta	44059210
TAOOK-MC860Y	Tóner Original OTA 44059209 Amarillo	44059209
TAOOK-MC861B	Tóner Original OTA 44059256 Negro	44059256
TAOOK-MC861C	Tóner Original OTA 44059255 Cian	44059255
TAOOK-MC861M	Tóner Original OTA 44059254 Magenta	44059254
TAOOK-MC861Y	Tóner Original OTA 44059253 Amarillo	44059253
TAOOK-MC873	Tóner Original OTA 45862840 Negro	45862840
TAOOK-ML5100	Tóner Original OTA 43821103 Negro	43821103
TAOOK-TYPE5	Tóner Original OTA 40433203 Negro	40433203
TAOOK-TYPE6	Tóner Original OTA 00079801/TYPE6 Negro	79801

TAOOK-TYPE9	Tóner Original OTA 01103402/TYPE9 Negro	1103402
TAOOK-TYPE9XL	Tóner Original OTA 01101202/TYPE9 Negro	1101202
TAOOL-0343	Tóner Original Olivetti B0343 Negro	B0343
TAOOL-0360	Tóner Original Olivetti B0360 Negro	B0360
TAOOL-0381	Tóner Original Olivetti B0381 Negro	B0381
TAOOL-0412	Tóner Original Olivetti B0412 Negro	B0412
TAOOL-0413	Tóner Original Olivetti B0413 Negro	B0413
TAOOL-0415	Tóner Original Olivetti B0415 Negro	B0415
TAOOL-0439	Tóner Original Olivetti B0439 Negro	B0439
TAOOL-0446	Tóner Original Olivetti B0446 Negro	B0446
TAOOL-0455	Tóner Original Olivetti B0455 Negro	B0455
TAOOL-0456	Tóner Original Olivetti B0456 Cian	B0456
TAOOL-0457	Tóner Original Olivetti B0457 Magenta	B0457
TAOOL-0458	Tóner Original Olivetti B0458 Amarillo	B0458
TAOOL-0467	Tóner Original Olivetti B0467 Cian	B0467
TAOOL-0480	Tóner Original Olivetti B0480 Negro	B0480
TAOOL-0481	Tóner Original Olivetti B0481 Amarillo	B0481
TAOOL-0482	Tóner Original Olivetti B0482 Magenta	B0482
TAOOL-0483	Tóner Original Olivetti B0483 Cian	B0483
TAOOL-0488	Tóner Original Olivetti B0488 Negro	B0488
TAOOL-0526	Tóner Original Olivetti B0526/TK-18 Negro	B0526
TAOOL-0528	Tóner Original Olivetti B0528 Negro	B0528
TAOOL-0530	Tóner Original Olivetti B0530 Negro	B0530
TAOOL-0533	Tóner Original Olivetti B0533 Negro	B0533
TAOOL-0534	Tóner Original Olivetti B0534 Amarillo	B0534
TAOOL-0535	Tóner Original Olivetti B0535 Magenta	B0535
TAOOL-0536	Tóner Original Olivetti B0536 Cian	B0536
TAOOL-0545	Tóner Original Olivetti B0545 Negro	B0545
TAOOL-0567	Tóner Original Olivetti B0567 Negro	B0567
TAOOL-0577	Tóner Original Olivetti B0577 Negro	B0577
TAOOL-0578	Tóner Original Olivetti B0578 Amarillo	B0578
TAOOL-0579	Tóner Original Olivetti B0579 Magenta	B0579
TAOOL-0580	Tóner Original Olivetti B0580 Cian	B0580
TAOOL-0592	Tóner Original Olivetti B0592 Negro	B0592
TAOOL-0593	Tóner Original Olivetti B0593 Negro	B0593
TAOOL-0609	Tóner Original Olivetti B0609 Negro	B0609
TAOOL-0610	Tóner Original Olivetti B0610 Cian	B0610
TAOOL-0611	Tóner Original Olivetti B0611 Magenta	B0611
TAOOL-0612	Tóner Original Olivetti B0612 Amarillo	B0612
TAOOL-0613	Tóner Original Olivetti B0613 Negro	B0613
TAOOL-0614	Tóner Original Olivetti B0614 Cian	B0614
TAOOL-0615	Tóner Original Olivetti B0615 Magenta	B0615
TAOOL-0616	Tóner Original Olivetti B0616 Amarillo	B0616
TAOOL-0647	Tóner Original Olivetti B0647 Negro	B0647
TAOOL-0651	Tóner Original Olivetti B0651 Negro	B0651
TAOOL-0652	Tóner Original Olivetti B0652 Amarillo	B0652
TAOOL-0653	Tóner Original Olivetti B0653 Magenta	B0653
TAOOL-0654	Tóner Original Olivetti B0654 Cian	B0654
TAOOL-0669	Tóner Original Olivetti B0669 Negro	B0669
TAOOL-0672	Tóner Original Olivetti B0672 Cian	B0672
TAOOL-0706	Tóner Original Olivetti B0706 Negro	B0706
TAOOL-0708	Tóner Original Olivetti B0708 Negro	B0708
TAOOL-0713	Tóner Original Olivetti B0713 Negro	B0713
TAOOL-0717	Tóner Original Olivetti B0717 Negro	B0717
TAOOL-0718	Tóner Original Olivetti B0718 Amarillo	B0718
TAOOL-0719	Tóner Original Olivetti B0719 Magenta	B0719
TAOOL-0720	Tóner Original Olivetti B0720 Cian	B0720
TAOOL-0727	Tóner Original Olivetti B0727 Negro	B0727
TAOOL-0728	Tóner Original Olivetti B0728 Amarillo	B0728
TAOOL-0729	Tóner Original Olivetti B0729 Magenta	B0729
TAOOL-0730	Tóner Original Olivetti B0730 Cian	B0730
TAOOL-0739	Tóner Original Olivetti B0739 Negro	B0739
TAOOL-0740	Tóner Original Olivetti B0740 Negro	B0740
TAOOL-0750	Tóner Original Olivetti B0750 Negro	B0750
TAOOL-0762	Tóner Original Olivetti B0762 Negro	B0762
TAOOL-0763	Tóner Original Olivetti B0763 Negro	B0763
TAOOL-0764	Tóner Original Olivetti B0764 Amarillo	B0764
TAOOL-0765	Tóner Original Olivetti B0765 Magenta	B0765
TAOOL-0766	Tóner Original Olivetti B0766 Cian	B0766
TAOOL-0767	Tóner Original Olivetti B0767 Negro	B0767
TAOOL-0769	Tóner Original Olivetti B0769 Magenta	B0769

TAOOL-0770	Tóner Original Olivetti B0770 Cian	B0770
TAOOL-0771	Tóner Original Olivetti B0771 Negro	B0771
TAOOL-0772	Tóner Original Olivetti B0772 Amarillo	B0772
TAOOL-0773	Tóner Original Olivetti B0773 Magenta	B0773
TAOOL-0774	Tóner Original Olivetti B0774 Cian	B0774
TAOOL-0778	Tóner Original Olivetti B0778 Negro	B0778
TAOOL-0779	Tóner Original Olivetti B0779 Amarillo	B0779
TAOOL-0780	Tóner Original Olivetti B0780 Magenta	B0780
TAOOL-0781	Tóner Original Olivetti B0781 Magenta	B0781
TAOOL-0808	Tóner Original Olivetti B0808 Negro	B0808
TAOOL-0810	Tóner Original Olivetti B0810 Negro	B0810
TAOOL-0812	Tóner Original Olivetti B0812 Negro	B0812
TAOOL-0818	Tóner Original Olivetti B0818 Negro	B0818
TAOOL-0819	Tóner Original Olivetti B0819 Amarillo	B0819
TAOOL-0820	Tóner Original Olivetti B0820 Magenta	B0820
TAOOL-0821	Tóner Original Olivetti B0821 Cian	B0821
TAOOL-0839	Tóner Original Olivetti B0839 Negro	B0839
TAOOL-0841	Tóner Original Olivetti B0841 Negro	B0841
TAOOL-0842	Tóner Original Olivetti B0842 Cian	B0842
TAOOL-0843	Tóner Original Olivetti B0843 Magenta	B0843
TAOOL-0844	Tóner Original Olivetti B0844 Amarillo	B0844
TAOOL-0854	Tóner Original Olivetti B0854 Negro	B0854
TAOOL-0855	Tóner Original Olivetti B0855 Amarillo	B0855
TAOOL-0856	Tóner Original Olivetti B0856 Magenta	B0856
TAOOL-0857	Tóner Original Olivetti B0857 Cian	B0857
TAOOL-0872	Tóner Original Olivetti B0872 Negro	B0872
TAOOL-0876	Tóner Original Olivetti B0876 Negro	B0876
TAOOL-0878	Tóner Original Olivetti B0878 Negro	B0878
TAOOL-0883	Tóner Original Olivetti B0883 Negro	B0883
TAOOL-0885	Tóner Original Olivetti B0885 Negro	B0885
TAOOL-0888	Tóner Original Olivetti B0888 Cian	B0888
TAOOL-0889	Tóner Original Olivetti B0889 Magenta	B0889
TAOOL-0890	Tóner Original Olivetti B0890 Amarillo	B0890
TAOOL-0891	Tóner Original Olivetti B0891 Negro	B0891
TAOOL-0892	Tóner Original Olivetti B0892 Cian	B0892
TAOOL-0893	Tóner Original Olivetti B0893 Magenta	B0893
TAOOL-0894	Tóner Original Olivetti B0894 Amarillo	B0894
TAOOL-0910	Tóner Original Olivetti B0910 Negro	B0910
TAOOL-0911	Tóner Original Olivetti B0911 Negro	B0911
TAOOL-0920	Tóner Original Olivetti B0920 Negro	B0920
TAOOL-0921	Tóner Original Olivetti B0921 Cian	B0921
TAOOL-0922	Tóner Original Olivetti B0922 Magenta	B0922
TAOOL-0923	Tóner Original Olivetti B0923 Amarillo	B0923
TAOOL-0924	Tóner Original Olivetti B0924 Negro	B0924
TAOOL-0926	Tóner Original Olivetti B0926 Magenta	B0926
TAOOL-0946	Tóner Original Olivetti B0946 Negro	B0946
TAOOL-0947	Tóner Original Olivetti B0947 Cian	B0947
TAOOL-0948	Tóner Original Olivetti B0948 Magenta	B0948
TAOOL-0949	Tóner Original Olivetti B0949 Amarillo	B0949
TAOOL-0955	Tóner Original Olivetti B0955 Negro	B0955
TAOOL-0956	Tóner Original Olivetti B0956 Negro	B0956
TAOOL-0961	Tóner Original Olivetti B0961 Negro	B0961
TAOOL-0979	Tóner Original Olivetti B0979 Negro	B0979
TAOOL-0987	Tóner Original Olivetti B0987 Negro	B0987
TAOOL-0990	Tóner Original Olivetti B0990 Negro	B0990
TAOOL-0991	Tóner Original Olivetti B0991 Cian	B0991
TAOOL-0992	Tóner Original Olivetti B0992 Magenta	B0992
TAOOL-0993	Tóner Original Olivetti B0993 Amarillo	B0993
TAOOL-1005	Tóner Original Olivetti B1005 Negro	B1005
TAOOL-1006	Tóner Original Olivetti B1006 Cian	B1006
TAOOL-1007	Tóner Original Olivetti B1007 Magenta	B1007
TAOOL-1008	Tóner Original Olivetti B1008 Amarillo	B1008
TAOOL-1009	Tóner Original Olivetti B1009 Negro	B1009
TAOOL-1011	Tóner Original Olivetti B1011 Negro	B1011
TAOOL-1013	Tóner Original Olivetti B1013 Negro	B1013
TAOOL-1014	Tóner Original Olivetti B1014 Cian	B1014
TAOOL-1015	Tóner Original Olivetti B1015 Magenta	B1015
TAOOL-1016	Tóner Original Olivetti B1016 Amarillo	B1016
TAOOL-1036	Tóner Original Olivetti B1036 Negro	B1036
TAOOL-1037	Tóner Original Olivetti B1037 Cian	B1037
TAOOL-1038	Tóner Original Olivetti B1038 Magenta	B1038

TAOOL-1039	Tóner Original Olivetti B1039 Amarillo	B1039
TAOOL-1064	Tóner Original Olivetti B1064/B0265 Negro	B1064/B0265
TAOOL-1065	Tóner Original Olivetti B1065 Cian	B1065
TAOOL-1066	Tóner Original Olivetti B1066 Magenta	B1066
TAOOL-1067	Tóner Original Olivetti B1067 Amarillo	B1067
TAOOL-1068	Tóner Original Olivetti B1068 Negro	B1068
TAOOL-1073	Tóner Original Olivetti B1073 Negro	B1073
TAOOL-951	Tóner Original Olivetti B0951 Amarillo	B0951
TAOOL-952	Tóner Original Olivetti B0952 Magenta	B0952
TAOOL-953	Tóner Original Olivetti B0953 Cian	B0953
TAOOL-954	Tóner Original Olivetti B0954 Negro	B0954
TAOOL-B1082	Tóner Original Olivetti B1082 Negro	B1082
TAOOL-DR0266	Tambor Original Olivetti B0266	B0266
TAOOL-DR0414	Tambor Original Olivetti B0414	B0414
TAOOL-DR0459	Tambor Original Olivetti B0459	B0459
TAOOL-DR0537	Tambor Original Olivetti B0537 CMYK	B0537
TAOOL-DR0624	Tambor Original Olivetti B0624 Amarillo	B0624
TAOOL-DR0723	Tambor Original Olivetti B0723 Negro	B0723
TAOOL-DR0724	Tambor Original Olivetti B0724 Amarillo	B0724
TAOOL-DR0725	Tambor Original Olivetti B0725 Magenta	B0725
TAOOL-DR0726	Tambor Original Olivetti B0726 Cian	B0726
TAOOL-DR0782	Tambor Original Olivetti B0782 Negro	B0782
TAOOL-DR0783	Tambor Original Olivetti B0783 Amarillo	B0783
TAOOL-DR0784	Tambor Original Olivetti B0784 Magenta	B0784
TAOOL-DR0785	Tambor Original Olivetti B0785 Cian	B0785
TAOOL-DR0852	Tambor Original Olivetti B0852 Negro	B0852
TAOOL-DR0853S3	Tambor Original Olivetti B0853 CMY (3 uds.)	B0853
TAOOL-DR0895	Tambor Original Olivetti B0895 Negro	B0895
TAOOL-DR0896	Tambor Original Olivetti B0896 Amarillo	B0896
TAOOL-DR0897	Tambor Original Olivetti B0897 Magenta	B0897
TAOOL-DR0898	Tambor Original Olivetti B0898 Cian	B0898
TAOOL-DR82215	Tambor Original Olivetti 82215	82215
TAOPA-DRDCB20	Tambor Original Panasonic DQ-DCB020	DQ-DCB020
TAOPA-DRDCC18X	Tambor Original Panasonic DQ-DCC018X	DQ-DCC018X
TAOPA-DRFA78X	Tambor Original Panasonic KX-FA78X	KX-FA78X
TAOPA-DRFA84X	Tambor Original Panasonic KX-FA84X	KX-FA84X
TAOPA-DRFAD412X	Tambor Original Panasonic KX-FAD412X	KX-FAD412X
TAOPA-DRFAD422X	Tambor Original Panasonic KX-FAD422X	KX-FAD422X
TAOPA-DRFAD473X	Tambor Original Panasonic KX-FAD473X	KX-FAD473X
TAOPA-DRFAD89X	Tambor Original Panasonic KX-FAD89X	KX-FAD89X
TAOPA-DRFAD93X	Tambor Original Panasonic KX-FAD93X	KX-FAD93X
TAOPA-DRFADC510	Tambor Original Panasonic KX-FADC510 CMY	KX-FADC510
TAOPA-DRFADC511	Tambor Original Panasonic KX-FADC511 Negro	KX-FADC511
TAOPA-DRH60J	Tambor Original Panasonic DQ-H60J	DQ-H60J
TAOPA-DRUG3220	Tambor Original Panasonic UG-3220	UG-3220
TAOPA-DRUG3390	Tambor Original Panasonic UG-3390	UG-3390
TAOPA-DRUH34H	Tambor Original Panasonic DQ-UH34H	DQ-UH34H
TAOPA-DRUHN30	Tambor Original Panasonic DQ-UHN30 CMY	DQ-UHN30
TAOPA-DRUHN36B	Tambor Original Panasonic DQ-UHN36K Negro	DQ-UHN36K
TAOPA-DRUHS30	Tambor Original Panasonic DQ-UHS30 CMY	DQ-UHS30
TAOPA-DRUHS36B	Tambor Original Panasonic DQ-UHS36K Negro	DQ-UHS36K
TAOPA-DRUHU54	Tambor Original Panasonic DQ-UHU54	DQ-UHU54
TAOPA-FA76X	Tóner Original Panasonic KX-FA76X Negro	KX-FA76X
TAOPA-FA83X	Tóner Original Panasonic KX-FA83X Negro	KX-FA83X
TAOPA-FA85X	Tóner Original Panasonic KX-FA85X Negro	KX-FA85X
TAOPA-FA86X	Tóner Original Panasonic KX-FA86X Negro	KX-FA86X
TAOPA-FAT390X	Tóner Original Panasonic KX-FAT390X Negro	KX-FAT390X
TAOPA-FAT410X	Tóner Original Panasonic KX-FAT410X Negro	KX-FAT410X
TAOPA-FAT411X	Tóner Original Panasonic KX-FAT411X Negro	KX-FAT411X
TAOPA-FAT420X	Tóner Original Panasonic KX-FAT420X Negro	KX-FAT420X
TAOPA-FAT430X	Tóner Original Panasonic KX-FAT430X Negro	KX-FAT430X
TAOPA-FAT431X	Tóner Original Panasonic KX-FAT 431X Negro	KX-FAT431X
TAOPA-FAT472X	Tóner Original Panasonic KX-FAT472X Negro	KX-FAT472X
TAOPA-FAT88X	Tóner Original Panasonic KX-FAT88X Negro	KX-FAT88X
TAOPA-FAT92X	Tóner Original Panasonic KX-FAT92X Negro	KX-FAT92X
TAOPA-FATC506	Tóner Original Panasonic KX-FATC506 Cian	KX-FATC506
TAOPA-FATK509	Tóner Original Panasonic KX-FATK509 Negro	KX-FATK509
TAOPA-FATM507	Tóner Original Panasonic KX-FATM507 Magenta	KX-FATM507
TAOPA-FATY508	Tóner Original Panasonic KX-FATY508 Amarillo	KX-FATY508
TAOPA-FQTK10	Tóner Original Panasonic FQ-TK10 Negro	FQ-TK10
TAOPA-TCB8	Tóner Original Panasonic DQ-TCB008 Negro	DQ-TCB008

TAOPA-TCB8XDP	Tóner Original Panasonic DQ-TCB008XD Negro, Pack Doble	DQ-TCB008XD
TAOPA-TCC8X	Tóner Original Panasonic DQ-TCC008X/Negro	DQ-TCC008X
TAOPA-TCC8XDP	Tóner Original Panasonic DQ-TCC008XD Negro, Pack Doble	DQ-TCC008XD
TAOPA-TU10J	Tóner Original Panasonic DQ-TU10J Negro	DQ-TU10J
TAOPA-TU10JS6	Tóner Original Panasonic DQ-TU10J Negro (6 uds.)	DQ-TU10J
TAOPA-TU15E	Tóner Original Panasonic DQ-TU15E Negro	DQ-TU15E
TAOPA-TU18B	Tóner Original Panasonic DQ-TU18B Negro	DQ-TU18B
TAOPA-TU24D	Tóner Original Panasonic DQ-TU24D Negro	DQ-TU24D
TAOPA-TU33R	Tóner Original Panasonic DQ-TU33R Negro	DQ-TU33R
TAOPA-TUN20C	Tóner Original Panasonic DQ-TUN20C Cian	DQ-TUN20C
TAOPA-TUN20M	Tóner Original Panasonic DQ-TUN20M Magenta	DQ-TUN20M
TAOPA-TUN20Y	Tóner Original Panasonic DQ-TUN20Y Amarillo	DQ-TUN20Y
TAOPA-TUN28B	Tóner Original Panasonic DQ-TUN28K Negro	DQ-TUN28K
TAOPA-TUS20C	Tóner Original Panasonic DQ-TUS20C Cian	DQ-TUS20C
TAOPA-TUS20M	Tóner Original Panasonic DQ-TUS20M Magenta	DQ-TUS20M
TAOPA-TUS20Y	Tóner Original Panasonic DQ-TUS20Y Amarillo	DQ-TUS20Y
TAOPA-TUS28B	Tóner Original Panasonic DQ-TUS28K Negro	DQ-TUS28K
TAOPA-TUT14C	Tóner Original Panasonic DQ-TUT14C Cian	DQ-TUT14C
TAOPA-TUT14M	Tóner Original Panasonic DQ-TUT14M Magenta	DQ-TUT14M
TAOPA-TUT14Y	Tóner Original Panasonic DQ-TUT14Y Amarillo	DQ-TUT14Y
TAOPA-TUT20B	Tóner Original Panasonic DQ-TUT20K Negro	DQ-TUT20K
TAOPA-TUV20C	Tóner Original Panasonic DQ-TUV20C Cian	DQ-TUV20C
TAOPA-TUV20M	Tóner Original Panasonic DQ-TUV20M Magenta	DQ-TUV20M
TAOPA-TUV20Y	Tóner Original Panasonic DQ-TUV20Y Amarillo	DQ-TUV20Y
TAOPA-TUW28B	Tóner Original Panasonic DQ-TUW28K Negro	DQ-TUW28K
TAOPA-TUY20C	Tóner Original Panasonic DQ-TUY20C Cian	DQ-TUY20C
TAOPA-TUY20M	Tóner Original Panasonic DQ-TUY20M Magenta	DQ-TUY20M
TAOPA-TUY20Y	Tóner Original Panasonic DQ-TUY20Y Amarillo	DQ-TUY20Y
TAOPA-TUY28B	Tóner Original Panasonic DQ-TUY28K Negro	DQ-TUY28K
TAOPA-UG26H	Tóner Original Panasonic DQ-UG26H Negro	DQ-UG26H
TAOPA-UG3221	Tóner Original Panasonic UG-3221 Negro	UG-3221
TAOPA-UG3313	Tóner Original Panasonic UG-3313 Negro	UG-3313
TAOPA-UG3350	Tóner Original Panasonic UG-3350 Negro	UG-3350
TAOPA-UG3380	Tóner Original Panasonic UG-3380 Negro	UG-3380
TAOPA-UG3391	Tóner Original Panasonic UG-3391 Negro	UG-3391
TAOPA-UG5545	Tóner Original Panasonic UG-5545 Negro	UG-5545
TAOPA-UG5575	Tóner Original Panasonic UG-5575 Negro	UG-5575
TAOPH-PFA721	Tóner Original Philips PFA721/906115311509 Negro	PFA721
TAOPH-PFA731	Tóner Original Philips PFA731/906115313001 Negro	PFA731
TAOPH-PFA741	Tóner Original Philips PFA741/252920195 Negro	PFA741
TAOPH-PFA751	Tóner Original Philips PFA751/253156799 Negro	PFA751
TAOPH-PFA821	Tóner Original Philips PFA 821/253109258 Negro	PFA821
TAOPH-PFA822	Tóner Original Philips PFA 822/253109266 XXL Negro	PFA822
TAOPH-PFA831	Tóner Original Philips 253335642/PFA831 Negro	253335642
TAOPH-PFA832	Tóner Original Philips 253335655/PFA832 Negro	253335655
TAOPS-DRPC51	Tambor Original PSI 870900245101/S/PC51	870900245101
TAORI-402810	Tóner Original Ricoh 402810 Negro	402810
TAORI-402857	Tóner Original Ricoh 402857 Negro	402857
TAORI-402858	Tóner Original Ricoh 402858 Negro	402858
TAORI-402887	Tóner Original Ricoh 402887 Negro	402887
TAORI-406218	Tóner Original Ricoh 406218 Negro	406218
TAORI-406464	Tóner Original Ricoh 406523 Negro	406464
TAORI-406571	Tóner Original Ricoh 406571 Negro	406571
TAORI-406572	Tóner Original Ricoh 406572 Negro	406572
TAORI-406649	Tóner Original Ricoh 406649 Negro	406649
TAORI-406685	Tóner Original Ricoh 406685 Negro	406685
TAORI-406956	Tóner Original Ricoh 406956 Negro	406956
TAORI-406975	Tóner Original Ricoh 406975 Negro	406975
TAORI-407166	Tóner Original Ricoh 407166 Negro	407166
TAORI-407246	Tóner Original Ricoh 407246 Negro	407246
TAORI-407249	Tóner Original Ricoh 407249 Negro	407249
TAORI-407254	Tóner Original Ricoh 407254 Negro	407254
TAORI-407255	Tóner Original Ricoh 407255 Negro	407255
TAORI-820076	Tóner Original Ricoh 820076 Negro	820076
TAORI-821021	Tóner Original Ricoh 821021 Negro	821021
TAORI-828082	Tóner Original Ricoh 828082 Negro	828082
TAORI-841618	Tóner Original Ricoh 841618 Negro	841618
TAORI-841711	Tóner Original Ricoh 841711 Negro	841711
TAORI-842000	Tóner Original Ricoh 842000 Negro	842000
TAORI-842125	Tóner Original Ricoh 842125 Negro	842125
TAORI-C651B	Tóner Original Ricoh 828209 Negro	828209

TAORI-C651C	Tóner Original Ricoh 828212 Cian	828212
TAORI-C651M	Tóner Original Ricoh 828211 Magenta	828211
TAORI-C651Y	Tóner Original Ricoh 828210 Amarillo	828210
TAORI-C720B	Tóner Original Ricoh 828040 Negro	828040
TAORI-C720C	Tóner Original Ricoh 828043 Cian	828043
TAORI-C720M	Tóner Original Ricoh 828042 Magenta	828042
TAORI-C720Y	Tóner Original Ricoh 828041 Amarillo	828041
TAORI-C901B	Tóner Original Ricoh 828128/828197 Negro	828128
TAORI-C901C	Tóner Original Ricoh 828131/828200 Cian	828131
TAORI-C901M	Tóner Original Ricoh 828130/828199 Magenta	828130
TAORI-C901Y	Tóner Original Ricoh 828129/828198 Amarillo	828129
TAORI-DR1015	Tambor Original Ricoh B0392214	B0392214
TAORI-DR1035	Tambor Original Ricoh 406841	406841
TAORI-DR1045	Tambor Original Ricoh A230-9510	A230-9510
TAORI-DR1350	Tambor Original Ricoh B234-9510	B234-9510
TAORI-DR1515	Tambor Original Ricoh 411844	411844
TAORI-DR2000	Tambor Original Ricoh B1212200	B1212200
TAORI-DR2232	Tambor Original Ricoh B190-9510 CMYK	B190-9510
TAORI-DR2501	Tambor Original Ricoh B0399510	B0399510
TAORI-DR550	Tambor Original Ricoh A294-9510	A294-9510
TAORI-DRCL4000	Tambor Original Ricoh Type 145/402319 Negro	402319
TAORI-DRCL7200CL	Tambor Original Ricoh 402305/PMK7300A0 CMY	402305
TAORI-DRD0149510	Tambor Original Ricoh D0149510	D0149510
TAORI-DRD1272110	Tambor Original Ricoh D1272110	D1272110
TAORI-DRMP5500	Tambor Original Ricoh B2469510	B2469510
TAORI-DRMPC2500B	Tambor Original Ricoh B223-2042 Negro	B223-2042
TAORI-DRMPC2500B2	Tambor Original Ricoh B223-2244 Negro	B223-2244
TAORI-DRMPC2500CL	Tambor Original Ricoh B223-2027 CMY	B223-2027
TAORI-DRMPC3001B	Tambor Original Ricoh D0892250 Negro	D0892250
TAORI-DRMPC3001CL	Tambor Original Ricoh D0892251 CMY	D0892251
TAORI-DRMPC305B	Tambor Original Ricoh D1170121 Negro	D1170121
TAORI-DRMPC305C	Tambor Original Ricoh D1170122 Cian	D1170122
TAORI-DRMPC305M	Tambor Original Ricoh D1170123 Magenta	D1170123
TAORI-DRMPC305Y	Tambor Original Ricoh D1170124 Amarillo	D1170124
TAORI-DRMPC3300B	Tambor Original Ricoh D0292038 Negro	D0292038
TAORI-DRMPC3300CL	Tambor Original Ricoh D0292039 CMY	D0292039
TAORI-DRSP4500	Tambor Original Ricoh 407324/TYPE SP 4500	407324
TAORI-DRSPC430B	Tambor Original Ricoh 406662 Negro	406662
TAORI-DRSPC430CL	Tambor Original Ricoh 406663 CMY	406663
TAORI-DRSPC730B	Tambor Original Ricoh 407151 Negro	407151
TAORI-DRSPC730S3	Tambor Original Ricoh 407152 CMY (3 uds.)	407152
TAORI-DRSPC811B	Tambor Original Ricoh 402714 Negro	402714
TAORI-DRSPC811CL	Tambor Original Ricoh 402715 CMY	402715
TAORI-DRSPC820B	Tambor Original Ricoh 403115 Negro	403115
TAORI-DRSPC820CL	Tambor Original Ricoh 403116 CMY	403116
TAORI-DRSPC830B	Tambor Original Ricoh 407095 Negro	407095
TAORI-DRSPC830S3	Tambor Original Ricoh 407096 CMY (3 uds.)	407096
TAORI-DRTYPE1013	Tambor Original Ricoh 411113/TYPE1013	411113
TAORI-DRTYPE1027	Tambor Original Ricoh 411018/TYPE1027	411018
TAORI-DRTYPE1190	Tambor Original Ricoh 431008/TYPE1190	431008
TAORI-DRTYPE1195	Tambor Original Ricoh 431148/Type1195	431148
TAORI-DRTYPE125B	Tambor Original Ricoh 400842/TYPE125 Negro	400842
TAORI-DRTYPE125CL	Tambor Original Ricoh 400843/TYPE125 CMY	400843
TAORI-DRTYPE145B	Tambor Original Ricoh Type 145 /420242 Negro	420242
TAORI-DRTYPE145CL	Tambor Original Ricoh 420243/TYPE145 CMY	420243
TAORI-DRTYPE165CL	Tambor Original Ricoh 402449/TYPE165 CMY	402449
TAORI-DRTYPE270	Tambor Original Ricoh 410423/TYPE270	410423
TAORI-DRTYPE4500	Tambor Original Ricoh D0099510/TYPE4500	D0099510
TAORI-DRTYPE80	Tambor Original Ricoh 889606/TYPE80	889606
TAORI-DRTYPE850	Tambor Original Ricoh A295-9510/TYPE850	A295-9510
TAORI-DRTYPEFB	Tambor Original Ricoh 400880/TYPEF Negro	400880
TAORI-DRTYPEFCL	Tambor Original Ricoh 400879/TYPEF CMY	400879
TAORI-DRTYPEMP	Tambor Original Ricoh D039-2020/TYPEMP	D039-2020
TAORI-DRTYPER2	Tambor Original Ricoh B1809511/TYPER2 CMYK	B1809511
TAORI-DRTYPER2B	Tambor Original Ricoh B180-3001/TYPER2 Negro	B180-3001
TAORI-DRTYPER2C	Tambor Original Ricoh B180-3002/TYPER2 Cian	B180-3002
TAORI-DRTYPER2M	Tambor Original Ricoh B180-3003/TYPER2 Magenta	B180-3003
TAORI-DRTYPER2Y	Tambor Original Ricoh B180-3004/TYPER2 Amarillo	B180-3004
TAORI-MP2500	Tóner Original Ricoh 841040 Negro	841040
TAORI-MPC2003B	Tóner Original Ricoh 841925 Negro	841925
TAORI-MPC2003C	Tóner Original Ricoh 841931 Cian	841931

TAORI-MPC2003M	Tóner Original Ricoh 841930 Magenta	841930
TAORI-MPC2003XLC	Tóner Original Ricoh 841928 Cian	841928
TAORI-MPC2003XLM	Tóner Original Ricoh 841927 Magenta	841927
TAORI-MPC2003XLY	Tóner Original Ricoh 841926 Amarillo	841926
TAORI-MPC2003Y	Tóner Original Ricoh 841929/Amarillo	841929
TAORI-MPC2500B	Tóner Original Ricoh 888640/DT3000BLK Negro	888640
TAORI-MPC2500C	Tóner Original Ricoh 888643/DT3000C Cian	888643
TAORI-MPC2500M	Tóner Original Ricoh 888642/DT3000M Magenta	888642
TAORI-MPC2500Y	Tóner Original Ricoh 888641/DT3000Y Amarillo	888641
TAORI-MPC2550B	Tóner Original Ricoh 841196 Negro	841196
TAORI-MPC2550C	Tóner Original Ricoh 841197 Cian	841197
TAORI-MPC2550M	Tóner Original Ricoh 841198 Magenta	841198
TAORI-MPC2550Y	Tóner Original Ricoh 841199 Amarillo	841199
TAORI-MPC2551C	Tóner Original Ricoh 842064 Cian	842064
TAORI-MPC2551M	Tóner Original Ricoh 842063 Magenta	842063
TAORI-MPC2551Y	Tóner Original Ricoh 842062 Amarillo	842062
TAORI-MPC2800B	Tóner Original Ricoh 841424 Negro	841424
TAORI-MPC2800C	Tóner Original Ricoh 841427 Cian	841427
TAORI-MPC2800M	Tóner Original Ricoh 841426 Magenta	841426
TAORI-MPC2800Y	Tóner Original Ricoh 841425 Amarillo	841425
TAORI-MPC3003B	Tóner Original Ricoh 841817 Negro	841817
TAORI-MPC3003C	Tóner Original Ricoh 841820 Cian	841820
TAORI-MPC3003M	Tóner Original Ricoh 841819 Magenta	841819
TAORI-MPC3003Y	Tóner Original Ricoh 841818 Amarillo	841818
TAORI-MPC300B	Tóner Original Ricoh 841299 Negro	841299
TAORI-MPC300C	Tóner Original Ricoh 841300/841551/Cian	841300
TAORI-MPC300M	Tóner Original Ricoh 841301/841552/Magenta	841301
TAORI-MPC300Y	Tóner Original Ricoh 841302/841553/Amarillo	841302
TAORI-MPC305C	Tóner Original Ricoh 841595 Cian	841595
TAORI-MPC305M	Tóner Original Ricoh 841596 Magenta	841596
TAORI-MPC305Y	Tóner Original Ricoh 841597 Amarillo	841597
TAORI-MPC306B	Tóner Original Ricoh 842095 Negro	842095
TAORI-MPC306C	Tóner Original Ricoh 842096 Cian	842096
TAORI-MPC306M	Tóner Original Ricoh 842097 Magenta	842097
TAORI-MPC306Y	Tóner Original Ricoh 842098 Amarillo	842098
TAORI-MPC3500B	Tóner Original Ricoh 888608 Negro	888608
TAORI-MPC3500C	Tóner Original Ricoh 888611 Cian	888611
TAORI-MPC3500M	Tóner Original Ricoh 888610 Magenta	888610
TAORI-MPC3500Y	Tóner Original Ricoh 888609 Amarillo	888609
TAORI-MPC3502B	Tóner Original Ricoh 841651 Negro	841651
TAORI-MPC3502C	Tóner Original Ricoh 841654 Cian	841654
TAORI-MPC3502M	Tóner Original Ricoh 841653 Magenta	841653
TAORI-MPC3502Y	Tóner Original Ricoh 841652 Amarillo	841652
TAORI-MPC4000B	Tóner Original Ricoh 841160 Negro	841160
TAORI-MPC4000C	Tóner Original Ricoh 841163 Cian	841163
TAORI-MPC4000M	Tóner Original Ricoh 841162 Magenta	841162
TAORI-MPC4000Y	Tóner Original Ricoh 841161 Amarillo	841161
TAORI-MPC4501B	Tóner Original Ricoh 841456 Negro	841456
TAORI-MPC4503B	Tóner Original Ricoh 841853 Negro	841853
TAORI-MPC4503C	Tóner Original Ricoh 841856 Cian	841856
TAORI-MPC4503M	Tóner Original Ricoh 841855 Magenta	841855
TAORI-MPC4503Y	Tóner Original Ricoh 841854 Amarillo	841854
TAORI-MPC6000B	Tóner Original Ricoh 841100 Negro	841100
TAORI-MPC6000C	Tóner Original Ricoh 841101 Cian	841101
TAORI-MPC6000M	Tóner Original Ricoh 841102 Magenta	841102
TAORI-MPC6000Y	Tóner Original Ricoh 841103 Amarillo	841103
TAORI-MPC6502B	Tóner Original Ricoh 841784 Negro	841784
TAORI-MPC6502C	Tóner Original Ricoh 841787 Cian	841787
TAORI-MPC6502M	Tóner Original Ricoh 841786 Magenta	841786
TAORI-MPC6502Y	Tóner Original Ricoh 841785 Amarillo	841785
TAORI-MPC7501B	Tóner Original Ricoh 841365 Negro	841365
TAORI-MPC7501C	Tóner Original Ricoh 841366 Cian	841366
TAORI-MPC7501M	Tóner Original Ricoh 841367 Magenta	841367
TAORI-MPC7501Y	Tóner Original Ricoh 841368 Amarillo	841368
TAORI-PROC5100B	Tóner Original Ricoh 828225/ProC5100 Negro	828225
TAORI-PROC5100C	Tóner Original Ricoh 828228/ProC5100 Cian	828228
TAORI-PROC5100M	Tóner Original Ricoh 828227/ProC5100 Magenta	828227
TAORI-PROC5100Y	Tóner Original Ricoh 828226/ProC5100 Amarillo	828226
TAORI-SP1000	Tóner Original Ricoh 413196 Negro	413196
TAORI-SP311	Tóner Original Ricoh 821242/TYPESP311UHY Negro	821242
TAORI-SP3400HA	Tóner Original Ricoh 406522/SP3400HA Negro	406522

TAORI-SP4500E	Tóner Original Ricoh 407340/TYPE SP 4500E Negro	407340
TAORI-SP4500HE	Tóner Original Ricoh 407318/SP4500HE Negro	407318
TAORI-SPC231B	Tóner Original Ricoh 406348 Negro	406348
TAORI-SPC231C	Tóner Original Ricoh 406349 Cian	406349
TAORI-SPC231M	Tóner Original Ricoh 406350 Magenta	406350
TAORI-SPC231Y	Tóner Original Ricoh 406351 Amarillo	406351
TAORI-SPC240B	Tóner Original Ricoh 406094 Negro	406094
TAORI-SPC240C	Tóner Original Ricoh 406097 Cian	406097
TAORI-SPC240M	Tóner Original Ricoh 406099/406054/406142 Magenta	406099
TAORI-SPC240Y	Tóner Original Ricoh 406106 Amarillo	406106
TAORI-SPC250B	Tóner Original Ricoh 407543 Negro	407543
TAORI-SPC250C	Tóner Original Ricoh 407544 Cian	407544
TAORI-SPC250M	Tóner Original Ricoh 407545 Magenta	407545
TAORI-SPC250XLB	Tóner Original Ricoh 407531 Negro	407531
TAORI-SPC250XLC	Tóner Original Ricoh 407532 Cian	407532
TAORI-SPC250XLM	Tóner Original Ricoh 407533 Magenta	407533
TAORI-SPC250XLY	Tóner Original Ricoh 407534 Amarillo	407534
TAORI-SPC250Y	Tóner Original Ricoh 407546 Amarillo	407546
TAORI-SPC252B	Tóner Original Ricoh 407716/SPC 252 DN Negro	407716
TAORI-SPC252C	Tóner Original Ricoh 407717/SPC 252 DN Cian	407717
TAORI-SPC252M	Tóner Original Ricoh 407718/SPC 252 DN Magenta	407718
TAORI-SPC252Y	Tóner Original Ricoh 407719/SPC 252 DN Amarillo	407719
TAORI-SPC310B	Tóner Original Ricoh 406479 Negro	406479
TAORI-SPC310C	Tóner Original Ricoh 406480 Cian	406480
TAORI-SPC310M	Tóner Original Ricoh 406481 Magenta	406481
TAORI-SPC310Y	Tóner Original Ricoh 406482 Amarillo	406482
TAORI-SPC3500	Tóner Original Ricoh 406990/SPC3500XE Negro	406990
TAORI-SPC430B	Tóner Original Ricoh 821074 Negro	821074
TAORI-SPC430C	Tóner Original Ricoh 821077 Cian	821077
TAORI-SPC430M	Tóner Original Ricoh 821076 Magenta	821076
TAORI-SPC430XLB	Tóner Original Ricoh 821204 Negro	821204
TAORI-SPC430XLC	Tóner Original Ricoh 821207 Cian	821207
TAORI-SPC430XLM	Tóner Original Ricoh 821206 Magenta	821206
TAORI-SPC430XLY	Tóner Original Ricoh 821205 Amarillo	821205
TAORI-SPC430Y	Tóner Original Ricoh 821075 Amarillo	821075
TAORI-SPC730B	Tóner Original Ricoh 407135 Negro	407135
TAORI-SPC730C	Tóner Original Ricoh 407136 Cian	407136
TAORI-SPC730M	Tóner Original Ricoh 407137 Magenta	407137
TAORI-SPC730Y	Tóner Original Ricoh 407138 Amarillo	407138
TAORI-SPC811B	Tóner Original Ricoh 820001/884201/884205 Negro	820001
TAORI-SPC811C	Tóner Original Ricoh 820053/820054 Cian	820053
TAORI-SPC811M	Tóner Original Ricoh 820046 Magenta	820046
TAORI-SPC811XLC	Tóner Original Ricoh 820025 Cian	820025
TAORI-SPC811XLM	Tóner Original Ricoh 820017/884203 Magenta	820017
TAORI-SPC811XLY	Tóner Original Ricoh 820009/884202 Amarillo	820009
TAORI-SPC811Y	Tóner Original Ricoh 820039 Amarillo	820039
TAORI-SPC820B	Tóner Original Ricoh 821058 Negro	821058
TAORI-SPC820C	Tóner Original Ricoh 821061 Cian	821061
TAORI-SPC820M	Tóner Original Ricoh 821060 Magenta	821060
TAORI-SPC820Y	Tóner Original Ricoh 821059 Amarillo	821059
TAORI-SPC831B	Tóner Original Ricoh 821121 Negro	821121
TAORI-SPC831C	Tóner Original Ricoh 821124 Cian	821124
TAORI-SPC831M	Tóner Original Ricoh 821123 Magenta	821123
TAORI-SPC831Y	Tóner Original Ricoh 821122 Amarillo	821122
TAORI-TYPE105C	Tóner Original Ricoh 888037/TYPE105C Cian	888037
TAORI-TYPE105M	Tóner Original Ricoh 888036/TYPE105M Magenta	888036
TAORI-TYPE105Y	Tóner Original Ricoh 888035/TYPE105Y Amarillo	888035
TAORI-TYPE1160	Tóner Original Ricoh 888029/TYPE1160W Negro	888029
TAORI-TYPE1190	Tóner Original Ricoh 431013/TYPE1190 Negro	431013
TAORI-TYPE1195	Tóner Original Ricoh 431147/TYPE 1195E Negro	431147
TAORI-TYPE1200E	Tóner Original Ricoh 406837/TYPE1200E Negro	406837
TAORI-TYPE1205	Tóner Original Ricoh 885067/TYPE1205 Negro	885067
TAORI-TYPE1220	Tóner Original Ricoh 888087/TYPE1220D Negro	888087
TAORI-TYPE1230	Tóner Original Ricoh 885094/TYPE1230D Negro	885094
TAORI-TYPE1240	Tóner Original Ricoh 430278/TYPE1240 Negro	430278
TAORI-TYPE1250	Tóner Original Ricoh 885258/TYPE1250 Negro	885258
TAORI-TYPE1255D	Tóner Original Ricoh 411073/TYPE1255D Negro	411073
TAORI-TYPE125B	Tóner Original Ricoh 400838/TYPE125 Negro	400838
TAORI-TYPE125C	Tóner Original Ricoh 400839/TYPE125 Cian	400839
TAORI-TYPE125M	Tóner Original Ricoh 400840/TYPE125 Magenta	400840
TAORI-TYPE125Y	Tóner Original Ricoh 400841/TYPE125 Amarillo	400841

TAORI-TYPE1260D	Tóner Original Ricoh 430351/TYPE1260D Negro	430351
TAORI-TYPE1265D	Tóner Original Ricoh 430400/TYPE1265D Negro	430400
TAORI-TYPE1270	Tóner Original Ricoh 888261/TYPE1270D Negro	888261
TAORI-TYPE1350E	Tóner Original Ricoh 840005/TYPE1350E Negro	840005
TAORI-TYPE140B	Tóner Original Ricoh 402097/TYPE140 Negro	402097
TAORI-TYPE140C	Tóner Original Ricoh 402098/TYPE140 Cian	402098
TAORI-TYPE140M	Tóner Original Ricoh 402099/TYPE140 Magenta	402099
TAORI-TYPE140Y	Tóner Original Ricoh 402100/TYPE140 Amarillo	402100
TAORI-TYPE1435	Tóner Original Ricoh 430244/TYPE1435D Negro	430244
TAORI-TYPE145C	Tóner Original Ricoh 888311/TYPE145 Cian	888311
TAORI-TYPE145M	Tóner Original Ricoh 888310/TYPE145 Magenta	888310
TAORI-TYPE145Y	Tóner Original Ricoh 888309/TYPE145 Amarillo	888309
TAORI-TYPE150	Tóner Original Ricoh 339481/TYPE150 Negro	339481
TAORI-TYPE150HC	Tóner Original Ricoh 408010/TYPE150HC Negro	408010
TAORI-TYPE150LE	Tóner Original Ricoh 407971/TYPE150LE Negro	407971
TAORI-TYPE165B	Tóner Original Ricoh 402444/TYPE165 Negro	402444
TAORI-TYPE165C	Tóner Original Ricoh 402459/TYPE165 Cian	402459
TAORI-TYPE165M	Tóner Original Ricoh 402460/TYPE165 Magenta	402460
TAORI-TYPE165XLC	Tóner Original Ricoh 402445/TYPE165 Cian	402445
TAORI-TYPE165XLM	Tóner Original Ricoh 402446/TYPE165 Magenta	402446
TAORI-TYPE165XLY	Tóner Original Ricoh 402447/TYPE165 Amarillo	402447
TAORI-TYPE165Y	Tóner Original Ricoh 402461/TYPE165 Amarillo	402461
TAORI-TYPE185	Tóner Original Ricoh 410302/TYPE185 Negro	410302
TAORI-TYPE205	Tóner Original Ricoh 888032/TYPE205 Negro	888032
TAORI-TYPE215	Tóner Original Ricoh 400760/TYPE215 Negro	400760
TAORI-TYPE220	Tóner Original Ricoh 403074/TYPE220 Negro	403074
TAORI-TYPE220XL	Tóner Original Ricoh 400943/TYPE220 Negro	400943
TAORI-TYPE2210	Tóner Original Ricoh 885229/TYPE2210D Negro	885229
TAORI-TYPE2220	Tóner Original Ricoh 885266/TYPE2220D Negro	885266
TAORI-TYPE245B	Tóner Original Ricoh 888280/TYPE 245 Negro	888280
TAORI-TYPE245C	Tóner Original Ricoh 888283/TYPE 245 Cian	888283
TAORI-TYPE245M	Tóner Original Ricoh 888282/TYPE 245 Magenta	888282
TAORI-TYPE245XLB	Tóner Original Ricoh 888312/TYPE 245 Negro	888312
TAORI-TYPE245XLC	Tóner Original Ricoh 888315/TYPE 245 Cian	888315
TAORI-TYPE245XLM	Tóner Original Ricoh 888314/TYPE 245 Magenta	888314
TAORI-TYPE245XLY	Tóner Original Ricoh 888313/TYPE 245 Amarillo	888313
TAORI-TYPE245Y	Tóner Original Ricoh 888281/TYPE 245 Amarillo	888281
TAORI-TYPE2501E	Tóner Original Ricoh 841769/TYPE2501E Negro	841769
TAORI-TYPE260B	Tóner Original Ricoh 888446/TYPE260 Negro	888446
TAORI-TYPE260C	Tóner Original Ricoh 888449/TYPE260 Cian	888449
TAORI-TYPE260M	Tóner Original Ricoh 888448/TYPE260 Magenta	888448
TAORI-TYPE260Y	Tóner Original Ricoh 888447/TYPE260 Amarillo	888447
TAORI-TYPE3205	Tóner Original Ricoh 888063/TYPE3205D Negro	888063
TAORI-TYPE3210	Tóner Original Ricoh 888182/TYPE3210D Negro	888182
TAORI-TYPE3300B	Tóner Original Ricoh 841124/TYPE3300K Negro	841124
TAORI-TYPE3300C	Tóner Original Ricoh 841127/TYPE3300C Cian	841127
TAORI-TYPE3300M	Tóner Original Ricoh 841126/TYPE3300M Magenta	841126
TAORI-TYPE3300Y	Tóner Original Ricoh 841125/TYPE3300Y Amarillo	841125
TAORI-TYPE4500	Tóner Original Ricoh 840041/TYPE4500 Negro	840041
TAORI-TYPE5210	Tóner Original Ricoh 430245/TYPE5210 Negro	430245
TAORI-TYPE5502B	Tóner Original Ricoh 841683/TYPE5502E Negro	841683
TAORI-TYPE5502C	Tóner Original Ricoh 841686/TYPE5502E Cian	841686
TAORI-TYPE5502M	Tóner Original Ricoh 841685/TYPE5502E Magenta	841685
TAORI-TYPE5502Y	Tóner Original Ricoh 841684/TYPE5502E Amarillo	841684
TAORI-TYPE6210D	Tóner Original Ricoh 885394/TYPE6210D Negro	885394
TAORI-TYPE810	Tóner Original Ricoh 887447/TYPE810 Negro	887447
TAORI-TYPE8200D	Tóner Original Ricoh 888009/TYPE8200D Negro	888009
TAORI-TYPE8205D	Tóner Original Ricoh 885344/TYPE8205D Negro	885344
TAORI-TYPEBP20	Tóner Original Ricoh 402455/TYPEBP20 Negro	402455
TAORI-TYPEC2551B	Tóner Original Ricoh 841504/TYPEMPC2551E Negro	841504
TAORI-TYPEC2551C	Tóner Original Ricoh 841505/TYPEMPC2551HE Cian	841505
TAORI-TYPEC2551M	Tóner Original Ricoh 841506/TYPEMPC2551HE Magenta	841506
TAORI-TYPEC2551Y	Tóner Original Ricoh 841507/TYPEMPC2551HE Amarillo	841507
TAORI-TYPEP2BB	Tóner Original Ricoh 888235/TYPEP2BK Negro	888235
TAORI-TYPEP2C	Tóner Original Ricoh 888238/TYPEP2C Cian	888238
TAORI-TYPEP2M	Tóner Original Ricoh 888237/TYPEP2M Magenta	888237
TAORI-TYPEP2Y	Tóner Original Ricoh 888236/TYPEP2Y Amarillo	888236
TAORI-TYPER2B	Tóner Original Ricoh 888344/TYPER2 Negro	888344
TAORI-TYPER2C	Tóner Original Ricoh 888347/TYPER2 Cian	888347
TAORI-TYPER2M	Tóner Original Ricoh 888346/TYPER2 Magenta	888346
TAORI-TYPER2Y	Tóner Original Ricoh 888345/TYPER2 Amarillo	888345

TAORI-TYPES2B	Tóner Original Ricoh 888372/TYPES2 Negro	888372
TAORI-TYPES2C	Tóner Original Ricoh 888375/TYPES2 Cian	888375
TAORI-TYPES2M	Tóner Original Ricoh 888374/TYPES2 Magenta	888374
TAORI-TYPES2Y	Tóner Original Ricoh 888373/TYPES2 Amarillo	888373
TAORI-TYPET2B	Tóner Original Ricoh 888483/TYPET2 Negro	888483
TAORI-TYPET2C	Tóner Original Ricoh 888486/TYPET2 Cian	888486
TAORI-TYPET2M	Tóner Original Ricoh 888485/TYPET2 Magenta	888485
TAORI-TYPET2Y	Tóner Original Ricoh 888484/TYPET2 Amarillo	888484
TAOSA-101SDP	Tóner Original Samsung MLT-D101S/ELS Negro	MLT-D101S/ELS
TAOSA-101X	Tóner Original Samsung MLT-D101X Negro	MLT-D101X/ELS
TAOSA-103LS4	Tóner Original Samsung MLT-D103L/ELS/103 Negro	MLT-D103L/ELS
TAOSA-103SS4	Tóner Original Samsung MLT-D103S/ELS/103 Negro	MLT-D103S/ELS
TAOSA-1042S	Tóner Original Samsung MLT-D1042S Negro	MLT-D1042S
TAOSA-1042X	Tóner Original Samsung MLT-D1042X/ELS/1042X Negro	MLT-D1042X/ELS
TAOSA-1052DP	Tóner Original Samsung MLT-P1052A/ELS/1052 Negro, Pack Doble	MLT-P1052A/ELS
TAOSA-1052L	Tóner Original Samsung MLT-D1052 L/1052 Negro	MLT-D1052L
TAOSA-1052S	Tóner Original Samsung MLT-D1052 S/1052 Negro	MLT-D1052S
TAOSA-1082DP	Tóner Original Samsung MLT-P1082A/1082 Negro, Pack Doble	MLT-P1082A
TAOSA-1082S	Tóner Original Samsung MLT-D1082S/1082 Negro	MLT-D1082S
TAOSA-111S	Tóner Original Samsung MLT-D111S Negro	MLT-D111S/ELS
TAOSA-116L	Tóner Original Samsung MLT-D116L/116L Negro	MLT-D116L
TAOSA-116S	Tóner Original Samsung MLT-D116S/116 Negro	MLT-D116S
TAOSA-117S	Tóner Original Samsung MLT-D117S/ELS Negro	MLT-D117S/ELS
TAOSA-119S	Tóner Original Samsung MLT-D119S/ELS/119 Negro	MLT-D119S/ELS
TAOSA-1210	Tóner Original Samsung ML-1210D3 Negro	ML-1210D3
TAOSA-1630	Tóner Original Samsung MLD1630A Negro	MLD1630A
TAOSA-201L	Tóner Original Samsung MLTD201L/D201L Negro	MLT-D201L
TAOSA-201S	Tóner Original Samsung MLTD201S/D201S Negro	MLT-D201S
TAOSA-203E	Tóner Original Samsung MLT-D203E Negro	MLT-D203E/ELS
TAOSA-203L	Tóner Original Samsung MLT-D203L Negro	MLT-D203L/ELS
TAOSA-203S	Tóner Original Samsung MLT-D203S Negro	MLT-D203S
TAOSA-203U	Tóner Original Samsung MLT-D203U Negro	MLT-D203U
TAOSA-204E	Tóner Original Samsung MLT-D204E/ELS/204E Negro	MLT-D204E/ELS
TAOSA-204L	Tóner Original Samsung MLT-D204L/ELS/204L Negro	MLT-D204L/ELS
TAOSA-204S	Tóner Original Samsung MLT-D204S/ELS/204 Negro	MLT-D204S/ELS
TAOSA-204U	Tóner Original Samsung MLT-D204U/ELS/ Negro	MLT-D204U/ELS
TAOSA-205E	Tóner Original Samsung MLT-D205E/ELS Negro	MLT-D205E
TAOSA-205L	Tóner Original Samsung MLT-D205L/ELS Negro	MLT-D205L
TAOSA-205S	Tóner Original Samsung MLT-D205S/ELS Negro	MLT-D205S
TAOSA-2082DP	Tóner Original Samsung MLT-P2082A Negro, Pack Doble	MLT-P2082A
TAOSA-2082L	Tóner Original Samsung MLT-D2082L Negro	MLT-D2082L
TAOSA-2082S	Tóner Original Samsung MLT-D2082S Negro	MLT-D2082S
TAOSA-2092L	Tóner Original Samsung MLT-D2092L Negro	MLT-D2092L
TAOSA-2092S	Tóner Original Samsung MLT-D2092S Negro	MLT-D2092S
TAOSA-2850	Tóner Original Samsung MLD2850A Negro	MLD2850A
TAOSA-2850XL	Tóner Original Samsung MLD2850B Negro	MLD2850B
TAOSA-303E	Tóner Original Samsung MLT-D303E Negro	MLT-D303E
TAOSA-304E	Tóner Original Samsung MLT-D304E/ELS/Negro	MLT-D304E/ELS
TAOSA-304L	Tóner Original Samsung MLT-D304L/ELS/Negro	MLT-D304L/ELS
TAOSA-304S	Tóner Original Samsung MLT-D304S/ELS/Negro	MLT-D304S/ELS
TAOSA-3050	Tóner Original Samsung MLD3050A Negro	MLD3050A
TAOSA-3050XL	Tóner Original Samsung MLD3050B Negro	MLD3050B
TAOSA-305LDP	Tóner Original Samsung MLT-D305L/ELS Negro	MLT-D305L/ELS
TAOSA-307E	Tóner Original Samsung MLT-D307E/ELS Negro	MLT-D307E/ELS
TAOSA-307L	Tóner Original Samsung MLT-D307L/ELS Negro	MLT-D307L/ELS
TAOSA-307S	Tóner Original Samsung MLT-D307S/ELS Negro	MLT-D307S/ELS
TAOSA-307U	Tóner Original Samsung MLT-D307U Negro	MLT-D307U/ELS
TAOSA-309E	Tóner Original Samsung MLT-D309E Negro	MLT-D309E/ELS
TAOSA-309L	Tóner Original Samsung MLT-D309L/ELS Negro	MLT-D309L/ELS
TAOSA-309S	Tóner Original Samsung MLT-D309S/ELS Negro	MLT-D309S/ELS
TAOSA-3470	Tóner Original Samsung MLD-3470A Negro	MLD-3470A
TAOSA-3470XL	Tóner Original Samsung MLD-3470B Negro	MLD-3470B
TAOSA-3560	Tóner Original Samsung ML-3560D6 Negro	ML-3560D6
TAOSA-3560XL	Tóner Original Samsung ML-3560DB Negro	ML-3560DB
TAOSA-358S	Tóner Original Samsung MLT-D358S Negro	MLT-D358S
TAOSA-4550	Tóner Original Samsung MLD-4550A Negro	MLD-4550A
TAOSA-4550XL	Tóner Original Samsung MLD-4550B Negro	MLD-4550B
TAOSA-704S	Tóner Original Samsung MLT-D704S/ELS/D704S Negro	MLT-D 704S/ELS
TAOSA-708L	Tóner Original Samsung MLT-D708 L Negro	MLT-D708L
TAOSA-708S	Tóner Original Samsung MLT-D708 S Negro	MLT-D708S
TAOSA-709S	Tóner Original Samsung MLT-D709S/ELS Negro	MLT-D709S/ELS

TAOSA-804M	Tóner Original Samsung CLTM804S/M804 Magenta	CLT-M 804 S
TAOSA-804Y	Tóner Original Samsung CLTY804S/Y804 Amarillo	CLT-Y 804 S
TAOSA-C2620B	Tóner Original Samsung CLT-K505L Negro	CLT-K505L
TAOSA-C2620C	Tóner Original Samsung CLT-C505L Cian	CLT-C505L
TAOSA-C2620Y	Tóner Original Samsung CLT-Y505L Amarillo	CLT-Y505L
TAOSA-CLP300C	Tóner Original Samsung CLP-C300A Cian	CLP-C300A
TAOSA-CLP300M	Tóner Original Samsung CLP-M300A Magenta	CLP-M300A
TAOSA-CLP300S4	Tóner Original Samsung CLP-P300A CMYK (4 uds.)	CLP-P300A
TAOSA-CLP300Y	Tóner Original Samsung CLP-Y300A Amarillo	CLP-Y300A
TAOSA-CLP310B	Tóner Original Samsung CLT-K4092S/K4092 Negro	CLT-K4092S
TAOSA-CLP310BDP	Tóner Original Samsung CLT-P4092B Negro, Pack Doble	CLT-P4092B
TAOSA-CLP310C	Tóner Original Samsung CLT-C4092S/C4092 Cian	CLT-C4092S
TAOSA-CLP310M	Tóner Original Samsung CLT-M4092S/M4092 Magenta	CLT-M4092S
TAOSA-CLP310S4	Tóner Original Samsung CLT-P4092C CMYK (4 uds.)	CLT-P4092C
TAOSA-CLP310Y	Tóner Original Samsung CLT-Y4092S/Y4092 Amarillo	CLT-Y4092S
TAOSA-CLP320B	Tóner Original Samsung CLT-K4072S Negro	CLT-K4072S
TAOSA-CLP320BDP	Tóner Original Samsung CLT-P4072B/ELS Negro, Pack Doble	CLT-P4072B/ELS
TAOSA-CLP320C	Tóner Original Samsung CLT-C4072S Cian	CLT-C4072S
TAOSA-CLP320M	Tóner Original Samsung CLT-M4072S Magenta	CLT-M4072S
TAOSA-CLP320S4	Tóner Original Samsung CLT-P4072C/ELS CMYK (4 uds.)	CLT-P4072C
TAOSA-CLP320Y	Tóner Original Samsung CLT-Y4072S Amarillo	CLT-Y4072S
TAOSA-CLP350B	Tóner Original Samsung CLP-K350A Negro	CLP-K350A
TAOSA-CLP350M	Tóner Original Samsung CLP-M350A Magenta	CLP-M350A
TAOSA-CLP350Y	Tóner Original Samsung CLP-Y350A Amarillo	CLP-Y350A
TAOSA-CLP360B	Tóner Original Samsung CLT-K406S/ELS Negro	CLT-K406S/ELS
TAOSA-CLP360C	Tóner Original Samsung CLT-C406S/ELS Cian	CLT-C406S/ELS
TAOSA-CLP360M	Tóner Original Samsung CLT-M406S/SEE Magenta	CLT-M406S/ELS
TAOSA-CLP360S4	Tóner Original Samsung CLT-P406C/ELS CMYK (4 uds.)	CLT-P406C
TAOSA-CLP360Y	Tóner Original Samsung CLT-Y406S/SEE Amarillo	CLT-Y406S/ELS
TAOSA-CLP415B	Tóner Original Samsung CLT-K504S/ELS Negro	CLT-K504S/ELS
TAOSA-CLP415C	Tóner Original Samsung CLT-C504S/ELS Cian	CLT-C504S/ELS
TAOSA-CLP415M	Tóner Original Samsung CLT-M504S/ELS Magenta	CLT-M504S/ELS
TAOSA-CLP415Y	Tóner Original Samsung CLT-Y504S/ELS Amarillo	CLT-Y504S/ELS
TAOSA-CLP500B	Tóner Original Samsung CLP-500D7K Negro	CLP-500D7K
TAOSA-CLP500C	Tóner Original Samsung CLP-500D5C Cian	CLP-500D5C
TAOSA-CLP500M	Tóner Original Samsung CLP-500D5M Magenta	CLP-500D5M
TAOSA-CLP500Y	Tóner Original Samsung CLP-500D5Y Amarillo	CLP-500D5Y
TAOSA-CLP510C	Tóner Original Samsung CLP-510D2C Cian	CLP-510D2C
TAOSA-CLP510M	Tóner Original Samsung CLP-510D2M Magenta	CLP-510D2M
TAOSA-CLP510XLC	Tóner Original Samsung CLP-510D5C Cian	CLP-510D5C
TAOSA-CLP510XLM	Tóner Original Samsung CLP-510D5M Magenta	CLP-510D5M
TAOSA-CLP510XLY	Tóner Original Samsung CLP-510D5Y Amarillo	CLP-510D5Y
TAOSA-CLP510Y	Tóner Original Samsung CLP-510D2Y Amarillo	CLP-510D2Y
TAOSA-CLP600C	Tóner Original Samsung CLP-C600A Cian	CLP-C600A
TAOSA-CLP600M	Tóner Original Samsung CLP-M600A Magenta	CLP-M600A
TAOSA-CLP600Y	Tóner Original Samsung CLP-Y600A Amarillo	CLP-Y600A
TAOSA-CLP620B	Tóner Original Samsung CLT-K5082S Negro	CLT-K5082S
TAOSA-CLP620C	Tóner Original Samsung CLT-C5082S Cian	CLT-C5082S
TAOSA-CLP620M	Tóner Original Samsung CLT-M5082S Magenta	CLT-M5082S
TAOSA-CLP620XLB	Tóner Original Samsung CLT-K5082L Negro	CLT-K5082L
TAOSA-CLP620XLC	Tóner Original Samsung CLT-C5082L Cian	CLT-C5082L
TAOSA-CLP620XLM	Tóner Original Samsung CLT-M5082L Magenta	CLT-M5082L
TAOSA-CLP620XLY	Tóner Original Samsung CLT-Y5082L Amarillo	CLT-Y5082L
TAOSA-CLP620Y	Tóner Original Samsung CLT-Y5082S Amarillo	CLT-Y5082S
TAOSA-CLP660B	Tóner Original Samsung CLP-K660A Negro	CLP-K660A
TAOSA-CLP660C	Tóner Original Samsung CLP-C660A Cian	CLP-C660A
TAOSA-CLP660M	Tóner Original Samsung CLP-M660A Magenta	CLP-M660A
TAOSA-CLP660XLB	Tóner Original Samsung CLP-K660B Negro	CLP-K660B
TAOSA-CLP660XLC	Tóner Original Samsung CLP-C660B Cian	CLP-C660B
TAOSA-CLP660XLM	Tóner Original Samsung CLP-M660B Magenta	CLP-M660B
TAOSA-CLP660XLY	Tóner Original Samsung CLP-Y660B Amarillo	CLP-Y660B
TAOSA-CLP660Y	Tóner Original Samsung CLP-Y660A Amarillo	CLP-Y660A
TAOSA-CLP680B	Tóner Original Samsung CLT-K506S/ELS Negro	CLT-K506S/ELS
TAOSA-CLP680C	Tóner Original Samsung CLT-C506S/ELS Cian	CLT-C506S/ELS
TAOSA-CLP680M	Tóner Original Samsung CLT-M506S/ELS Magenta	CLT-M506S/ELS
TAOSA-CLP680XLB	Tóner Original Samsung CLT-K506L/ELS Negro	CLT-K506L/ELS
TAOSA-CLP680XLC	Tóner Original Samsung CLT-C506L/ELS Cian	CLT-C506L/ELS
TAOSA-CLP680XLM	Tóner Original Samsung CLT-M506L Magenta	CLT-M506L
TAOSA-CLP680XLM2	Tóner Original Samsung CLT-M506L/ELS Magenta	CLT-M506L/ELS
TAOSA-CLP680XLY	Tóner Original Samsung CLT-Y506L/ELS Amarillo	CLT-Y506L/ELS
TAOSA-CLP680Y	Tóner Original Samsung CLT-Y506S/ELS Amarillo	CLT-Y506S/ELS

TAOSA-CLP770B	Tóner Original Samsung CLT-K6092S Negro	CLT-K6092S
TAOSA-CLP770C	Tóner Original Samsung CLT-C6092S Cian	CLT-C6092S
TAOSA-CLP770M	Tóner Original Samsung CLT-M6092S Magenta	CLT-M6092S
TAOSA-CLP770Y	Tóner Original Samsung CLT-Y6092S Amarillo	CLT-Y6092S
TAOSA-CLPC350C	Tóner Original Samsung CLP-C350A Cian	CLP-C350A
TAOSA-CLX8380B	Tóner Original Samsung CLX-K8380A Negro	CLX-K8380A
TAOSA-CLX8380C	Tóner Original Samsung CLX-C8380A Cian	CLX-C8380A
TAOSA-CLX8380M	Tóner Original Samsung CLX-M8380A Magenta	CLX-M8380A
TAOSA-CLX8380Y	Tóner Original Samsung CLX-Y8380A Amarillo	CLX-Y8380A
TAOSA-CLX8385B	Tóner Original Samsung CLXK8385A Negro	CLXK8385A
TAOSA-CLX8385C	Tóner Original Samsung CLXC8385A Cian	CLXC8385A
TAOSA-CLX8385M	Tóner Original Samsung CLXM8385A Magenta	CLXM8385A
TAOSA-CLX8385Y	Tóner Original Samsung CLXY8385A Amarillo	CLX-Y8385A
TAOSA-CLX8640B	Tóner Original Samsung CLT-K659S/ELS/K659 Negro	CLT-K659S/ELS
TAOSA-CLX8640C	Tóner Original Samsung CLT-C659S/ELS/C659 Cian	CLT-C659S/ELS
TAOSA-CLX8640M	Tóner Original Samsung CLT-M659S/ELS/M659 Magenta	CLT-M659S/ELS
TAOSA-CLX8640Y	Tóner Original Samsung CLT-Y659S/ELS/Y659 Amarillo	CLT-Y659S/ELS
TAOSA-CLX9201B	Tóner Original Samsung CLT-K809S/ELS/K809 Negro	CLT-K809S/ELS
TAOSA-CLX9201C	Tóner Original Samsung CLT-C809S/ELS/C809 Cian	CLT-C809S/ELS
TAOSA-CLX9201M	Tóner Original Samsung CLT-M809S/ELS/M809 Magenta	CLT-M809S/ELS
TAOSA-CLX9201Y	Tóner Original Samsung CLT-Y809S/ELS/Y809 Amarillo	CLT-Y809S/ELS
TAOSA-CLX9250B	Tóner Original Samsung CLT-K6062S Negro	CLT-K6062S
TAOSA-CLX9250BS	Tóner Original Samsung MLT-K607S/ELS Negro	MLT-K607S/ELS
TAOSA-CLX9250C	Tóner Original Samsung CLT-C6072S Cian	CLT-C6072S
TAOSA-CLX9250M	Tóner Original Samsung CLT-M6072S Magenta	CLT-M6072S
TAOSA-CLX9250XLB	Tóner Original Samsung MLT-K606S/ELS Negro	MLT-K606S/ELS
TAOSA-CLX9250XLC	Tóner Original Samsung CLT-C6062S Cian	CLT-C6062S
TAOSA-CLX9250XLM	Tóner Original Samsung CLT-M6062S Magenta	CLT-M6062S
TAOSA-CLX9250XLY	Tóner Original Samsung CLT-Y6062S Amarillo	CLT-Y6062S
TAOSA-CLX9250Y	Tóner Original Samsung CLT-Y6072S Amarillo	CLT-Y6072S
TAOSA-DR116	Tambor Original Samsung MLT-R116/R116	MLT-R116
TAOSA-DR204	Tambor Original Samsung MLT-R204/SEE/204	MLT-R204/SEE
TAOSA-DR303	Tambor Original Samsung MLT-R303	MLT-R303
TAOSA-DR304	Tambor Original Samsung MLT-R304/SEE	MLT-R304/SEE
TAOSA-DR307	Tambor Original Samsung MLT-R307/ELS	MLT-R307/ELS
TAOSA-DR309	Tambor Original Samsung MLT-R309/ELS	MLT-R309/ELS
TAOSA-DR358	Tambor Original Samsung MLT-R358/SEE	MLT-R358/SEE
TAOSA-DR607K	Tambor Original Samsung MLT-R607K/SEE	MLT-R607K/SEE
TAOSA-DR704	Tambor Original Samsung MLT-R704/SEE/R704	MLT-R704/SEE
TAOSA-DR706	Tambor Original Samsung MLT-R706/SEE	MLT-R706/SEE
TAOSA-DR708	Tambor Original Samsung MLT-R708/SEE	MLT-R708/SEE
TAOSA-DR709	Tambor Original Samsung MLT-R709/ELS	MLT-R709/ELS
TAOSA-DR804	Tambor Original Samsung CLT-R 804/SEE/R804 CMYK	CLT-R804/SEE
TAOSA-DRCLP300A	Tambor Original Samsung CLP-R300A CMYK	CLP-R300A
TAOSA-DRCLP310	Tambor Original Samsung CLT-R409 CMYK	CLT-R409
TAOSA-DRCLP320	Tambor Original Samsung CLT-R407 CMYK	CLT-R407
TAOSA-DRCLP350A	Tambor Original Samsung CLP-R350A CMYK	CLP-R350A
TAOSA-DRCLP360S4	Tambor Original Samsung CLT-R406/SEE (4 uds.)	CLT-R406/SEE
TAOSA-DRCLP500	Tambor Original Samsung CLP-500RB CMYK	CLP-500RB
TAOSA-DRCLX8380B	Tambor Original Samsung CLX-R838XK Negro	CLX-R838XK
TAOSA-DRCLX8380C	Tambor Original Samsung CLX-R838XC Cian	CLX-R838XC
TAOSA-DRCLX8380M	Tambor Original Samsung CLX-R838XM Magenta	CLX-R838XM
TAOSA-DRCLX8380Y	Tambor Original Samsung CLX-R838XY Amarillo	CLX-R838XY
TAOSA-DRCLX8385B	Tambor Original Samsung CLXR8385K Negro	CLXR8385K
TAOSA-DRCLX8385C	Tambor Original Samsung CLXR8385C Cian	CLXR8385C
TAOSA-DRCLX8385M	Tambor Original Samsung CLXR8385M Magenta	CLXR8385M
TAOSA-DRCLX8385Y	Tambor Original Samsung CLXR8385Y Amarillo	CLXR8385Y
TAOSA-DRCLX8640	Tambor Original Samsung CLT-R659/SEE/R659 CMYK	CLT-R659/SEE
TAOSA-DRCLX9201	Tambor Original Samsung CLT-R809/SEE CMYK	CLT-R809/SEE
TAOSA-DRCLX9250B	Tambor Original Samsung CLT-R607K Negro	CLT-R607K
TAOSA-DRCLX9250C	Tambor Original Samsung CLT-R607C Cian	CLT-R607C
TAOSA-DRCLX9250M	Tambor Original Samsung CLT-R607M Magenta	CLT-R607M
TAOSA-DRCLX9250Y	Tambor Original Samsung CLT-R607Y Amarillo	CLT-R607Y
TAOSA-DRSCX5315	Tambor Original Samsung SCX-5315R2	SCX-5315R2
TAOSA-DRSCX6320	Tambor Original Samsung SCX-6320R2	SCX-6320R2
TAOSA-DRSCX6345	Tambor Original Samsung SCX-R6345A	SCX-R6345A
TAOSA-DRSCX6555	Tambor Original Samsung SCX-R6555A	SCX-R6555A
TAOSA-DRSL4220	Tambor Original Samsung CLT-R808/SEE CMYK	CLT-R808
TAOSA-DRSLX7400B	Tambor Original Samsung CLT-R806K/SEE Negro	CLT-R806K/SEE
TAOSA-DRSLX7400S3	Tambor Original Samsung CLT-R806X/SEE CMY (3 uds.)	CLT-R806X/SEE
TAOSAG-CTR340	Tóner Original Sagem CTR340/906115313101 Negro	CTR340

TAOSAG-CTR355L	Tóner Original Sagem CTR355L/252920322 Negro	CTR355L
TAOSAG-CTR356	Tóner Original Sagem 253156819/CTR356 Negro	253156819
TAOSAG-CTR356L	Tóner Original Sagem 253156822/CTR356L Negro	253156822
TAOSAG-CTR360	Tóner Original Sagem CTR360/252690838 Negro	CTR360
TAOSAG-CTR363	Tóner Original Sagem CTR363/253122199 Negro	CTR363
TAOSAG-CTR363L	Tóner Original Sagem CTR363L/253122186 Negro	CTR363L
TAOSAG-CTR364	Tóner Original Sagem CTR364/253335663 Negro	CTR364
TAOSAG-CTR364L	Tóner Original Sagem CTR364L/253335676 Negro	CTR364L
TAOSAG-CTR365	Tóner Original Sagem CTR365/288094565 Negro	CTR365
TAOSAG-DRM370	Tambor Original Sagem DRM370/251471057	DRM370
TAOSAG-TNR370	Tóner Original Sagem TNR370/251471044 Negro	TNR370
TAOSAG-TNR370DOP	Tóner Original Sagem TNR370DUO/251533076 Negro, Pack Doble	TNR370DUO
TAOSAG-TNR756	Tóner Original Sagem TNR756/251435803 Negro	TNR756
TAOSA-K706	Tóner Original Samsung MLT-K S/ELS/K706 Negro	MLT-KS/ELS
TAOSA-MX3220B	Tóner Original Samsung CLT-K804S/K804 Negro	CLT-K804S
TAOSA-MX3220C	Tóner Original Samsung CLT-C804S/C804 Cian	CLT-C804S
TAOSA-P404BDP	Tóner Original Samsung CLT-P404B/ELS Negro, Pack Doble	CLT-P404B/ELS
TAOSA-P406BDP	Tóner Original Samsung CLT-P406B/ELS Negro, Pack Doble	CLT-P406B/ELS
TAOSA-PXC3060B	Tóner Original Samsung CLT-K503L/ELS Negro	CLT-K503L/ELS
TAOSA-PXC3060C	Tóner Original Samsung CLT-C503L/ELS Cian	CLT-C503L/ELS
TAOSA-PXC3060M	Tóner Original Samsung CLT-M503L/ELS Magenta	CLT-M503L/ELS
TAOSA-PXC3060Y	Tóner Original Samsung CLT-Y503L/ELS Amarillo	CLT-Y503L/ELS
TAOSA-SCX4200	Tóner Original Samsung SCX-D4200A Negro	SCX-D4200A
TAOSA-SCX4216DP	Tóner Original Samsung SCX-P4216A, Pack Doble	SCX-P4216A
TAOSA-SCX4216S4	Tóner Original Samsung SCX-4216D3 Negro	SCX-4216D3
TAOSA-SCX4300	Tóner Original Samsung MLT-D1092S/1092 Negro	MLT-D1092S
TAOSA-SCX4720	Tóner Original Samsung SCX-4720D3 Negro	SCX-4720D3
TAOSA-SCX4720XL	Tóner Original Samsung SCX-4720D5 Negro	SCX-4720D5
TAOSA-SCX4725	Tóner Original Samsung SCX-D4725A Negro	SCX-D4725A
TAOSA-SCX5312	Tóner Original Samsung SCX-5312D6 Negro	SCX-5312D6
TAOSA-SCX5530	Tóner Original Samsung SCX-D5530A Negro	SCX-D5530A
TAOSA-SCX5530XL	Tóner Original Samsung SCX-D5530B Negro	SCX-D5530B
TAOSA-SCX6320	Tóner Original Samsung SCX-6320D8 Negro	SCX-6320D8
TAOSA-SCX6320DP	Tóner Original Samsung SCX-6320, Pack Doble	SCX-P6320A
TAOSA-SCX6345	Tóner Original Samsung SCX-D6345A Negro	SCX-D6345A
TAOSA-SCX6555	Tóner Original Samsung SCX-D6555A Negro	SCX-D6555A
TAOSA-SF5800	Tóner Original Samsung SF-5800 D5 Negro	SF-5800D5
TAOSA-SFD560	Tóner Original Samsung SFD-560RA Negro	SFD-560RA
TAOSA-SLC430B	Tóner Original Samsung CLT-K404S Negro	CLT-K404S
TAOSA-SLC430C	Tóner Original Samsung CLT-C404S Cian	CLT-C404S
TAOSA-SLC430M	Tóner Original Samsung CLT-M404S Magenta	CLT-M404S
TAOSA-SLC430S4	Tóner Original Samsung CLT-P404C/ELS CMYK (4 uds.)	CLT-P404C/ELS
TAOSA-SLC430Y	Tóner Original Samsung CLT-Y404S Amarillo	CLT-Y404S
TAOSA-SLX4220B	Tóner Original Samsung CLT-K808S Negro	CLT-K808S
TAOSA-SLX4220C	Tóner Original Samsung CLT-C808S Cian	CLT-C808S
TAOSA-SLX4220M	Tóner Original Samsung CLT-M808 S Magenta	CLT-M808S
TAOSA-SLX4220Y	Tóner Original Samsung CLT-Y808 S Amarillo	CLT-Y808S
TAOSA-SLX7400B	Tóner Original Samsung CLT-K806S/ELS Negro	CLT-K806S/ELS
TAOSA-SLX7400C	Tóner Original Samsung CLT-C806S/ELS Cian	CLT-C806S/ELS
TAOSA-SLX7400M	Tóner Original Samsung CLT-M806S/ELS Magenta	CLT-M806S/ELS
TAOSA-SLX7400Y	Tóner Original Samsung CLT-Y806S/ELS Amarillo	CLT-Y806S/ELS
TAOSH-AL10	Tóner Original Sharp AL-103T Negro	AL-103T
TAOSH-AL100	Tóner Original Sharp AL-100TD Negro	AL-100TD
TAOSH-AL110	Tóner Original Sharp AL-110DC Negro	AL-110DC
TAOSH-AL161	Tóner Original Sharp AL-161TD Negro	AL-161TD
TAOSH-AL214	Tóner Original Sharp AL-214TD Negro	AL-214TD
TAOSH-AM30	Tóner Original Sharp AM-30DC Negro	AM-30DC
TAOSH-AR016	Tóner Original Sharp AR-016T Negro	AR-016T
TAOSH-AR020	Tóner Original Sharp AR-020 LT Negro	AR-020LT
TAOSH-AR156	Tóner Original Sharp AR-156LT Negro	AR-156LT
TAOSH-AR168	Tóner Original Sharp AR-168LT Negro	AR-168LT
TAOSH-AR202	Tóner Original Sharp AR-202T Negro	AR-202T
TAOSH-AR208	Tóner Original Sharp AR-208T Negro	AR-208T
TAOSH-AR270	Tóner Original Sharp AR-270LT Negro	AR-270LT
TAOSH-AR310	Tóner Original Sharp AR-310LT (MT) Negro	AR-310MT
TAOSH-AR450	Tóner Original Sharp AR-450LT Negro	AR-450LT
TAOSH-AR455	Tóner Original Sharp AR-455LT Negro	AR-455LT
TAOSH-AR620	Tóner Original Sharp AR-620LT Negro	AR-620LT
TAOSH-ARC26B	Tóner Original Sharp AR-C26TBE Negro	AR-C26TBE
TAOSH-ARC26C	Tóner Original Sharp AR-C26TCE Cian	AR-C26TCE
TAOSH-ARC26M	Tóner Original Sharp AR-C26TME Magenta	AR-C26TME

TAOSH-ARC26Y	Tóner Original Sharp AR-C26TYE Amarillo	AR-C26TYE
TAOSH-DRAL100	Tambor Original Sharp AL-100DR	AL-100DR
TAOSH-DRAL103	Tambor Original Sharp AL-103DR	AL-103DR
TAOSH-DRAL160	Tambor Original Sharp AL-160DR	AL-160DR
TAOSH-DRAM90	Tambor Original Sharp AM-90DR	AM-90DR
TAOSH-DRAR152	Tambor Original Sharp AR-152DM	AR-152DM
TAOSH-DRAR202	Tambor Original Sharp AR-202DM	AR-202DM
TAOSH-DRAR205	Tambor Original Sharp AR-205DM	AR-205DM
TAOSH-DRAR270	Tambor Original Sharp AR-270DM	AR-270DM
TAOSH-DRAR310	Tambor Original Sharp AR-310DR	AR-310DR
TAOSH-DRAR455	Tambor Original Sharp AR-455DM	AR-455DM
TAOSH-DRAR620	Tambor Original Sharp AR-620DM	AR-620DM
TAOSH-DRFO25	Tambor Original Sharp FO-25DR	FO-25DR
TAOSH-DRFO47	Tambor Original Sharp FO-47DR	FO-47DR
TAOSH-DRMX27GRSA	Tambor Original Sharp MX-27GRSA Negro	MX-27GRSA
TAOSH-DRMX27GUSA	Tambor Original Sharp MX-27GUSA CMY	MX-27GUSA
TAOSH-DRMX312DM	Tambor Original Sharp MX-312DM	MX-312DM
TAOSH-DRMX31GRSA	Tambor Original Sharp MX-31GRSA	MX-31GRSA
TAOSH-DRMX31GUSA	Tambor Original Sharp MX-31GUSA	MX-31GUSA
TAOSH-DRMX36GRSA	Tambor Original Sharp MX-36GRSA	MX-36GRSA
TAOSH-DRMX36GUSA	Tambor Original Sharp MX-36GUSA	MX-36GUSA
TAOSH-DRMX500GR	Tambor Original Sharp MX500GR	MX-500GR
TAOSH-DRMX51GUSA	Tambor Original Sharp MX-51GUSA	MX-51GUSA
TAOSH-DRMX754	Tambor Original Sharp MX-754DR	MX-754DR
TAOSH-DRMX850GR	Tambor Original Sharp MX-850GR	MX-850GR
TAOSH-DRMXC30	Tambor Original Sharp MXC-30DR	MXC-30DR
TAOSH-DRMXC38GRB	Tambor Original Sharp MX-C38GRB Negro	MX-C38GRB
TAOSH-DRMXC38GRS	Tambor Original Sharp MX-C38GRS CMY	MX-C38GRS
TAOSH-DXB35DTH	Tóner Original Sharp DX-B35DTH Negro	DX-B35DTH
TAOSH-DXB45DTH	Tóner Original Sharp DX-B45DTH Negro	DX-B45DTH
TAOSH-DXC20TB	Tóner Original Sharp DX-C20TB Negro	DX-C20TB
TAOSH-DXC20TC	Tóner Original Sharp DX-C20TC Cian	DX-C20TC
TAOSH-DXC20TM	Tóner Original Sharp DX-C20TM Magenta	DX-C20TM
TAOSH-DXC20TY	Tóner Original Sharp DX-C20TY Amarillo	DX-C20TY
TAOSH-DXC38C	Tóner Original Sharp DX-C38GTC Cian	DX-C38GTC
TAOSH-DXC38Y	Tóner Original Sharp DX-C38GTY Amarillo	DX-C38GTY
TAOSH-FO25	Tóner Original Sharp FO-25ND Negro	FO-25ND
TAOSH-FO47	Tóner Original Sharp FO-47DC Negro	FO-47DC
TAOSH-FO59	Tóner Original Sharp FO-59DC Negro	FO-59DC
TAOSH-MX18B	Tóner Original Sharp MX-18GTBA Negro	MX-18GTBA
TAOSH-MX18C	Tóner Original Sharp MX-18GTCA Cian	MX-18GTCA
TAOSH-MX18M	Tóner Original Sharp MX-18GTMA Magenta	MX-18GTMA
TAOSH-MX18Y	Tóner Original Sharp MX-18GTYA Amarillo	MX-18GTYA
TAOSH-MX206	Tóner Original Sharp MX-206NT Negro	MX-206NT
TAOSH-MX235	Tóner Original Sharp MX-235GT Negro	MX-235GT
TAOSH-MX237	Tóner Original Sharp MX237GT Negro	MX-237GT
TAOSH-MX23B	Tóner Original Sharp MX-23GTBA Negro	MX-23GTBA
TAOSH-MX23C	Tóner Original Sharp MX-23GTCA Cian	MX-23GTCA
TAOSH-MX23M	Tóner Original Sharp MX-23GTMA Magenta	MX-23GTMA
TAOSH-MX23Y	Tóner Original Sharp MX-23GTYA Amarillo	MX-23GTYA
TAOSH-MX27B	Tóner Original Sharp MX-27GTBA Negro	MX-27GTBA
TAOSH-MX27C	Tóner Original Sharp MX-27GTCA Cian	MX-27GTCA
TAOSH-MX27M	Tóner Original Sharp MX-27GTMA Magenta	MX-27GTMA
TAOSH-MX27Y	Tóner Original Sharp MX-27GTYA Amarillo	MX-27GTYA
TAOSH-MX312	Tóner Original Sharp MX-312NT Negro	MX-312NT
TAOSH-MX31B	Tóner Original Sharp MX-31GTBA Negro	MX-31GTBA
TAOSH-MX31C	Tóner Original Sharp MX-31GTCA Cian	MX-31GTCA
TAOSH-MX31M	Tóner Original Sharp MX-31GTMA Magenta	MX-31GTMA
TAOSH-MX31Y	Tóner Original Sharp MX-31GTYA Amarillo	MX-31GTYA
TAOSH-MX36B	Tóner Original Sharp MX-36GTBA Negro	MX-36GTBA
TAOSH-MX36C	Tóner Original Sharp MX-36GTCA Cian	MX-36GTCA
TAOSH-MX36M	Tóner Original Sharp MX-36GTMA Magenta	MX-36GTMA
TAOSH-MX36Y	Tóner Original Sharp MX-36GTYA Amarillo	MX-36GTYA
TAOSH-MX45B	Tóner Original Sharp MX-45GTBA Negro	MX-45GTBA
TAOSH-MX500	Tóner Original Sharp MX-500NT Negro	MX-500NT
TAOSH-MX50B	Tóner Original Sharp MX-50GTBA Negro	MX-50GTBA
TAOSH-MX51B	Tóner Original Sharp MX-51GTBA Negro	MX-51GTBA
TAOSH-MX51C	Tóner Original Sharp MX-51GTCA Cian	MX-51GTCA
TAOSH-MX51M	Tóner Original Sharp MX-51GTMA Magenta	MX-51GTMA
TAOSH-MX51Y	Tóner Original Sharp MX-51GTYA Amarillo	MX-51GTYA
TAOSH-MX560	Tóner Original Sharp MX-560GT Negro	MX-560GT

TAOSH-MX60GTB	Tóner Original Sharp MX-60 GTBA Negro	MX-60 GTBA
TAOSH-MX60GTC	Tóner Original Sharp MX-60 GTCA Cian	MX-60 GTCA
TAOSH-MX60GTY	Tóner Original Sharp MX-60 GTYA Amarillo	MX-60 GTYA
TAOSH-MX60M	Tóner Original Sharp MX-60 GTMA Magenta	MX-60 GTMA
TAOSH-MX62B	Tóner Original Sharp MX-62GTBA Negro	MX-62GTBA
TAOSH-MX62C	Tóner Original Sharp MX-62GTCA Cian	MX-62GTCA
TAOSH-MX62M	Tóner Original Sharp MX-62GTMA Magenta	MX-62GTMA
TAOSH-MX62Y	Tóner Original Sharp MX-62GYA Amarillo	MX-62GYA
TAOSH-MX70B	Tóner Original Sharp MX-70GTBA Negro	MX-70GTBA
TAOSH-MX70C	Tóner Original Sharp MX-70GTCA Cian	MX-70GTCA
TAOSH-MX70M	Tóner Original Sharp MX-70GTMA Magenta	MX-70GTMA
TAOSH-MX70Y	Tóner Original Sharp MX-70GYA Amarillo	MX-70GYA
TAOSH-MX71B	Tóner Original Sharp MX-71GTBA Negro	MX-71GTBA
TAOSH-MX753	Tóner Original Sharp MX-753GT Negro	MX-753GT
TAOSH-MX850	Tóner Original Sharp MX-850GT Negro	MX-850GT
TAOSH-MXB20	Tóner Original Sharp MX-B20GT1 Negro	MX-B20GT1
TAOSH-MXB42	Tóner Original Sharp MX-B42GT1 Negro	MX-B42GT1
TAOSH-MXC30B	Tóner Original Sharp MXC-30 GTB Negro	MXC-30GTB
TAOSH-MXC30C	Tóner Original Sharp MXC-30 GTC Cian	MXC-30GTC
TAOSH-MXC30M	Tóner Original Sharp MXC-30 GTM Magenta	MXC-30GTM
TAOSH-MXC30Y	Tóner Original Sharp MXC-30 GTY Amarillo	MXC-30GTY
TAOSH-MXC38B	Tóner Original Sharp MX-C38GTB Negro	MX-C38GTB
TAOSH-MXC38C	Tóner Original Sharp MXC-38GTC Cian	MXC-38GTC
TAOSH-MXC38M	Tóner Original Sharp MX-C38GTM Magenta	MX-C38GTM
TAOSH-MXC38Y	Tóner Original Sharp MX-C38GTY Amarillo	MX-C38GTY
TAOTG-43037	Tóner Original Tally Genicom 043037 Negro	43037
TAOTG-43118	Tóner Original Tally Genicom 043118 Negro	43118
TAOTG-43320	Tóner Original Tally Genicom 043320 Negro	43320
TAOTG-43337	Tóner Original Tally Genicom 043337 Magenta	43337
TAOTG-43619	Tóner Original Tally Genicom 043619 Magenta	43619
TAOTG-43620	Tóner Original Tally Genicom 043620 Amarillo	43620
TAOTG-43621	Tóner Original Tally Genicom 043621 Negro	43621
TAOTG-43630S3	Tóner Original Tally Genicom 043630 CMY (3 uds.)	43630
TAOTG-43690S4	Tóner Original Tally Genicom 043690 CMYK (4 uds.)	43690
TAOTG-43766	Tóner Original Tally Genicom 043766 Cian	43766
TAOTG-43768	Tóner Original Tally Genicom 043768 Amarillo	43768
TAOTG-43769	Tóner Original Tally Genicom 043769 Negro	43769
TAOTG-43848	Tóner Original Tally Genicom 043848 Negro	43848
TAOTG-43861	Tóner Original Tally Genicom 043861 Negro	43861
TAOTG-44995	Tóner Original Tally Genicom 044995 Magenta	44995
TAOTG-44996	Tóner Original Tally Genicom 044996 Amarillo	44996
TAOTG-62415	Tóner Original Tally Genicom 062415 Negro	62415
TAOTG-83233	Tóner Original Tally Genicom 083233 Magenta	83233
TAOTG-DR43622	Tambor Original Tally Genicom 043622	43622
TAOTG-DR43770	Tambor Original Tally Genicom 043770	43770
TAOTG-DR43862	Tambor Original Tally Genicom 043862	43862
TAOTS-1200	Tóner Original Toshiba 66099501/T1200E Negro	66099501
TAOTS-1350	Tóner Original Toshiba 66084567/T1350E Negro	66084567
TAOTS-1550	Tóner Original Toshiba 66062039/T1550E Negro	66062039
TAOTS-1600DP	Tóner Original Toshiba 66061614/T1600E Negro, Pack Doble	66061614
TAOTS-1640	Tóner Original Toshiba 6AJ00000023/T1640E Negro	6AJ00000023
TAOTS-1640HC	Tóner Original Toshiba 6AJ00000024/T1640EHC Negro	6AJ00000024
TAOTS-1800	Tóner Original Toshiba 6AJ00000085/T1800E5K Negro	6AJ00000085
TAOTS-1800XL	Tóner Original Toshiba 6AJ00000091/T1800E Negro	6AJ00000091
TAOTS-1810	Tóner Original Toshiba 6AJ00000061/T1810E Negro	6AJ00000061
TAOTS-1810XL	Tóner Original Toshiba 6AJ00000058/T1810E Negro	6AJ00000058
TAOTS-1820	Tóner Original Toshiba 6A000000931/T1820 Negro	6A000000931
TAOTS-2021	Tóner Original Toshiba 6B000000192/T2021 Negro	6B000000192
TAOTS-2025	Tóner Original Toshiba 6A000000932/T2025 Negro	6A000000932
TAOTS-2060	Tóner Original Toshiba 66062042/T2060E Negro	66062042
TAOTS-2320	Tóner Original Toshiba 6AK00000009/T2320E Negro	6AK00000009
TAOTS-2340	Tóner Original Toshiba 6AJ00000025/T2340E Negro	6AJ00000025
TAOTS-2450	Tóner Original Toshiba 6AJ00000089/T-2450LC Negro	6AJ00000089
TAOTS-2450XL	Tóner Original Toshiba 6AJ00000088/T-2450E Negro	6AJ00000088
TAOTS-2460	Tóner Original Toshiba 66089137/T2460E Negro	66089137
TAOTS-2500	Tóner Original Toshiba 66062054/T2500E Negro	66062054
TAOTS-2500DP	Tóner Original Toshiba 66061618/T2500E Negro, Pack Doble	66061618
TAOTS-2505	Tóner Original Toshiba 6AG00005084/T2505 Negro	6AG00005084
TAOTS-2507	Tóner Original Toshiba T2507E Negro	6AG00005086
TAOTS-281B	Tóner Original Toshiba 6AK00000034/T281CEK Negro	6AK00000034
TAOTS-281C	Tóner Original Toshiba 6AK00000845/T281CEC Cian	6AK00000845

TAOTS-281M	Tóner Original Toshiba 6AK00000844/T281CEM Magenta	6AK00000844
TAOTS-281Y	Tóner Original Toshiba 6AK00000843/T281CEY Amarillo	6AK00000843
TAOTS-2840E	Tóner Original Toshiba 6AJ00000035/T2840E Negro	6AJ00000035
TAOTS-305B	Tóner Original Toshiba 6B000000749/T-305PK-R Negro	6B000000749
TAOTS-305C	Tóner Original Toshiba 6B000000747/T-305PC-R Cian	6B000000747
TAOTS-305M	Tóner Original Toshiba 6B000000751/T-305PM-R Magenta	6B000000751
TAOTS-305Y	Tóner Original Toshiba 6B000000753/T-305PY-R Amarillo	6B000000753
TAOTS-3500	Tóner Original Toshiba 66089631/T3500E Negro	66089631
TAOTS-3511B	Tóner Original Toshiba 66G000066/T3511E-K Negro	66G000066
TAOTS-3511C	Tóner Original Toshiba 66G000052/T3511E-C Cian	66G000052
TAOTS-3511M	Tóner Original Toshiba 66G000051/T3511E-M Magenta	66G000051
TAOTS-3511Y	Tóner Original Toshiba 66G000050/T3511E-Y Amarillo	66G000050
TAOTS-3520	Tóner Original Toshiba 6AK00000007/T3520E Negro	6AK00000007
TAOTS-3560	Tóner Original Toshiba 66062048/T3560E Negro	66062048
TAOTS-3850	Tóner Original Toshiba 6B000000745/ T-3850P-R Negro	6B000000745
TAOTS-4030	Tóner Original Toshiba 6B000000452/T4030 Negro	6B000000452
TAOTS-4520	Tóner Original Toshiba 6AJ00000036/T4520E Negro	6AJ00000036
TAOTS-4530	Tóner Original Toshiba 6AK00000134/T4530E Negro	6AK00000134
TAOTS-4590	Tóner Original Toshiba 6AJ00000086/T4590E Negro	6AJ00000086
TAOTS-4710	Tóner Original Toshiba/6A000001612/T-4710 E Negro	6A000001612
TAOTS-5070	Tóner Original Toshiba 6AJ00000115 Negro	6AJ00000115
TAOTS-520	Tóner Original Toshiba 6B000000617/T-520P Negro	6B000000617
TAOTS-520R7	Tóner Original Toshiba 6B000000619/T-520P-R 7 Negro	6B000000619
TAOTS-6000	Tóner Original Toshiba 6AK00000016/T6000E Negro	6AK00000016
TAOTS-7200	Tóner Original Toshiba 6AK00000078/T7200E Negro	6AK00000078
TAOTS-8550	Tóner Original Toshiba 6AK00000128/T8550E Negro	6AK00000128
TAOTS-8560	Tóner Original Toshiba 6AK00000213/T8560E Negro	6AK00000213
TAOTS-8570	Tóner Original Toshiba 6AK00000289/T8570E Negro	6AK00000289
TAOTS-B10	Tóner Original Toshiba 22569346/TK-10 Negro	22569346
TAOTS-B18	Tóner Original Toshiba 21204099/TK-18 Negro	21204099
TAOTS-DR1200	Tambor Original Toshiba 41330500100/OD1200	41330500100
TAOTS-DR1600	Tambor Original Toshiba 41303611000/OD1600	41303611000
TAOTS-DR170F	Tambor Original Toshiba 6A000000311/OD170F	6A000000311
TAOTS-DR2505	Tambor Original Toshiba 6LJ83358000/OD-2505	6LJ83358000
TAOTS-DR281	Tambor Original Toshiba OD281 CMYK	6LE19495000
TAOTS-DR3500	Tambor Original Toshiba 44299006000/OD3500	44299006000
TAOTS-DR4530	Tambor Original Toshiba 6LH58311000/OD4530	6LH58311000
TAOTS-DR4710	Tambor Original Toshiba OD-4710	6A000001611
TAOTS-DR6510	Tambor Original Toshiba 6LA23006000/OD 6510	6LA23006000
TAOTS-DRDK15	Tambor Original Toshiba 21204095/DK-15	21204095
TAOTS-DRDK18	Tambor Original Toshiba 21204100/DK-18	21204100
TAOTS-DRFC26S	Tambor Original Toshiba 44494208/OD-FC26S	44494208
TAOTS-DRFC30	Tambor Original Toshiba VLJ70402000/OD-FC30	VLJ70402000
TAOTS-DRFC35	Tambor Original Toshiba OD-FC35	OD-FC35
TAOTS-DRFC50	Tambor Original Toshiba 6LJ70598000/OD-FC 50	6LJ70598000
TAOTS-FC20B	Tóner Original Toshiba 6AJ00000066/T-FC20EK Negro	6AJ00000066
TAOTS-FC20C	Tóner Original Toshiba 6AJ00000064/T-FC20EC Cian	6AJ00000064
TAOTS-FC20M	Tóner Original Toshiba 6AJ00000068/T-FC20EM Magenta	6AJ00000068
TAOTS-FC20Y	Tóner Original Toshiba 6AJ00000070/T-FC20EY Amarillo	6AJ00000070
TAOTS-FC25B	Tóner Original Toshiba 6AJ00000075/T-FC25EK Negro	6AJ00000075
TAOTS-FC25C	Tóner Original Toshiba 6AJ00000072/T-FC25EC Cian	6AJ00000072
TAOTS-FC25M	Tóner Original Toshiba 6AJ00000078/T-FC25EM Magenta	6AJ00000078
TAOTS-FC25Y	Tóner Original Toshiba 6AJ00000081/T-FC25EY Amarillo	6AJ00000081
TAOTS-FC26B	Tóner Original Toshiba 6B000000374/T-FC26SK Negro	6B000000374
TAOTS-FC26B2K	Tóner Original Toshiba 6B000000347/T-FC26SK2K Negro	6B000000347
TAOTS-FC26B3K	Tóner Original Toshiba TFC26SK3K Negro	6B000000347
TAOTS-FC26B7K	Tóner Original Toshiba 6B000000559/T-FC26SK Negro	6B000000559
TAOTS-FC26C6K	Tóner Original Toshiba TFC26SC6K Cian	6B000000557
TAOTS-FC26M6K	Tóner Original Toshiba TFC26SM6K Magenta	6B000000555
TAOTS-FC26SC	Tóner Original Toshiba 6B000000354/T-FC26SC Cian	6B000000354
TAOTS-FC26SM	Tóner Original Toshiba 6B000000361/T-FC26SM Magenta	6B000000361
TAOTS-FC26Y	Tóner Original Toshiba 6B000000367/T-FC26SY Amarillo	6B000000367
TAOTS-FC26Y6K	Tóner Original Toshiba TFC26SY6K Amarillo	6B000000569
TAOTS-FC28B	Tóner Original Toshiba 6AK00000081/T-FC 28 EK Negro	6AK00000081
TAOTS-FC28C	Tóner Original Toshiba 6AK00000079/T-FC 28 EC Cian	6AK00000079
TAOTS-FC28M	Tóner Original Toshiba 6AK00000084/T-FC 28 EM Magenta	6AK00000084
TAOTS-FC28Y	Tóner Original Toshiba 6AK00002112/T-FC 28 EY Amarillo	6AK00002112
TAOTS-FC30B	Tóner Original Toshiba 6AG00004450/T-FC30EK Negro	6AG00004450
TAOTS-FC30C	Tóner Original Toshiba 6AG00004447/T-FC30EC Cian	6AG00004447
TAOTS-FC30M	Tóner Original Toshiba 6AG00004452/T-FC30EM Magenta	6AG00004452
TAOTS-FC30Y	Tóner Original Toshiba 6AG00004454/T-FC30EY Amarillo	6AG00004454

TAOTS-FC31B	Tóner Original Toshiba 66067076/T-FC 31 EKN Negro	66067076
TAOTS-FC31M	Tóner Original Toshiba 66067078/T-FC 31 EMN Magenta	66067078
TAOTS-FC34B	Tóner Original Toshiba TFC34EK Negro	6A000001530
TAOTS-FC34C	Tóner Original Toshiba TFC34EC Cian	6A000001524
TAOTS-FC34M	Tóner Original Toshiba TFC34EM Magenta	6A000001533
TAOTS-FC34Y	Tóner Original Toshiba TFC34EY Amarillo	6A000001525
TAOTS-FC35B	Tóner Original Toshiba 6AG00001526/T-FC35EK Negro	6AG00001526
TAOTS-FC35C	Tóner Original Toshiba 6AG00001524/T-FC35EC Cian	6AG00001524
TAOTS-FC35M	Tóner Original Toshiba 6AG00001529/T-FC35EM Magenta	6AG00001529
TAOTS-FC35Y	Tóner Original Toshiba 6AG00001531/T-FC35EY Amarillo	6AG00001531
TAOTS-FC50B	Tóner Original Toshiba 6AJ00000114/T-FC50EK Negro	6AJ00000114
TAOTS-FC50C	Tóner Original Toshiba 6AJ00000113/T-FC50EC Cian	6AJ00000113
TAOTS-FC50M	Tóner Original Toshiba 6AJ00000112/T-FC50EM Magenta	6AJ00000112
TAOTS-FC50Y	Tóner Original Toshiba 6AJ00000111/T-FC50EY Amarillo	6AJ00000111
TAOTS-FC55B	Tóner Original Toshiba 6AG00002319/T-FC55EK Negro	6AG00002319
TAOTS-FC55C	Tóner Original Toshiba 6AG00002318/T-FC55EC Cian	6AG00002318
TAOTS-FC55M	Tóner Original Toshiba 6AG00002320/T-FC55EM Magenta	6AG00002320
TAOTS-FC55Y	Tóner Original Toshiba 6AG00002321/T-FC55EY Amarillo	6AG00002321
TAOTS-FC65B	Tóner Original Toshiba 6AK00000181/T-FC65EK Negro	6AK00000181
TAOTS-FC65C	Tóner Original Toshiba 6AK00000179/T-FC65C Cian	6AK00000179
TAOTS-FC65M	Tóner Original Toshiba 6AK00000183/T-FC65M Magenta	6AK00000183
TAOTS-FC65Y	Tóner Original Toshiba 6AK00000185/T-FC65Y Amarillo	6AK00000185
TAOTS-FC75B	Tóner Original Toshiba 6AK00000252/T-FC75EK/Negro	6AK00000252
TAOTS-FC75C	Tóner Original Toshiba 6AK00000251/T-FC 75 EC Cian	6AK00000251
TAOTS-FC75M	Tóner Original Toshiba 6AK00000253/T-FC75EM Magenta	6AK00000253
TAOTS-FC75Y	Tóner Original Toshiba 6AK00000254/T-FC75EY Amarillo	6AK00000254
TAOTS-K15	Tóner Original Toshiba 21204094/TK-15 Negro	21204094
TAOT-ZT170	Tóner Original Toshiba 6A000000312/ZT170 Negro	6A000000312
TAOU-0060	Tóner Original Utax 006010010 Negro	6010010
TAOU-0076DP	Tóner Original Utax 007610010 Negro, Pack Doble	7610010
TAOU-105803	Tóner Original Utax 000105803 Negro	105803
TAOU-440145	Tóner Original Utax 4401410015 Negro	4401410015
TAOU-44022	Tóner Original Utax 4402210010 Negro	4402210010
TAOU-44030	Tóner Original Utax 4403010010 Negro	4403010010
TAOU-44035	Tóner Original Utax 4403510010 Negro	4403510010
TAOU-44036	Tóner Original Utax 4403610010 Negro	4403610010
TAOU-44118	Tóner Original Utax 4411810010 Negro	4411810010
TAOU-44128	Tóner Original Utax 4412810010 Negro	4412810010
TAOU-44130	Tóner Original Utax 4413010010 Negro	4413010010
TAOU-44135	Tóner Original Utax 4413510010 Negro	4413510010
TAOU-44140	Tóner Original Utax 4414010010 Negro	4414010010
TAOU-44228	Tóner Original Utax 4422810010 Negro	4422810010
TAOU-44235	Tóner Original Utax 4423510010 Negro	4423510010
TAOU-44240	Tóner Original Utax 4424010010 Negro	4424010010
TAOU-44245	Tóner Original Utax 4424510010 Negro	4424510010
TAOU-44316B	Tóner Original Utax 4431610010 Negro	4431610010
TAOU-44316C	Tóner Original Utax 4431610011 Cian	4431610011
TAOU-44316M	Tóner Original Utax 4431610014 Magenta	4431610014
TAOU-44316Y	Tóner Original Utax 4431610016 Amarillo	4431610016
TAOU-44340	Tóner Original Utax 4434010010 Negro	4434010010
TAOU-44345	Tóner Original Utax 4434510010 Negro	4434510010
TAOU-44360	Tóner Original Utax 4436010010 Negro	4436010010
TAOU-44416B	Tóner Original Utax 4441610010 Negro	4441610010
TAOU-44416C	Tóner Original Utax 4441610011 Cian	4441610011
TAOU-44416M	Tóner Original Utax 4441610014 Magenta	4441610014
TAOU-44450B	Tóner Original Utax 4445010010 Negro	4445010010
TAOU-44450C	Tóner Original Utax 4445010011 Cian	4445010011
TAOU-44450M	Tóner Original Utax 4445010014 Magenta	4445010014
TAOU-44450Y	Tóner Original Utax 4445010016 Amarillo	4445010016
TAOU-44521B	Tóner Original Utax 4452110010 Negro	4452110010
TAOU-44521C	Tóner Original Utax 4452110011 Cian	4452110011
TAOU-44521M	Tóner Original Utax 4452110014 Magenta	4452110014
TAOU-44521Y	Tóner Original Utax 4452110016 Amarillo	4452110016
TAOU-44532B	Tóner Original Utax 4453210010 Negro	4453210010
TAOU-44532C	Tóner Original Utax 4453210011 Cian	4453210011
TAOU-44532M	Tóner Original Utax 4453210014 Magenta	4453210014
TAOU-44532Y	Tóner Original Utax 4453210016 Amarillo	4453210016
TAOU-44550B	Tóner Original Utax 445500010 Negro	4455010010
TAOU-44621B	Tóner Original Utax 4462110010 Negro	4462110010
TAOU-44621C	Tóner Original Utax 4462110011 Cian	4462110011
TAOU-44621M	Tóner Original Utax 4462110014 Magenta	4462110014

TAOU-44621Y	Tóner Original Utax 4462110016 Amarillo	4462110016
TAOU-44626B	Tóner Original Utax 4462610010 Negro	4462610010
TAOU-44626C	Tóner Original Utax 4462610011 Cian	4462610011
TAOU-44626M	Tóner Original Utax 4462610014 Magenta	4462610014
TAOU-44626Y	Tóner Original Utax 4462610016 Amarillo	4462610016
TAOU-44635B	Tóner Original Utax 4463510010 Negro	4463510010
TAOU-44635C	Tóner Original Utax 4463510011 Cian	4463510011
TAOU-44635M	Tóner Original Utax 4463510014 Magenta	4463510014
TAOU-44635Y	Tóner Original Utax 4463510016 Amarillo	4463510016
TAOU-44721B	Tóner Original Utax 4472110010 Negro	4472110010
TAOU-44721C	Tóner Original Utax 4472110011 Cian	4472110011
TAOU-44721M	Tóner Original Utax 4472110014 Magenta	4472110014
TAOU-44721Y	Tóner Original Utax 4472110016 Amarillo	4472110016
TAOU-44726B	Tóner Original Utax 4472610010 Negro	4472610010
TAOU-44726C	Tóner Original Utax 4472610011 Cian	4472610011
TAOU-44726M	Tóner Original Utax 4472610014 Magenta	4472610014
TAOU-44726Y	Tóner Original Utax 4472610016 Amarillo	4472610016
TAOU-6023B	Tóner Original Utax 602310010 Negro	602310010
TAOU-6113B	Tóner Original Utax 611310010 Negro	611310010
TAOU-6114B	Tóner Original Utax 611410010/611410015 Negro	611410010
TAOU-6116	Tóner Original Utax 611610010 Negro	611610010
TAOU-6118	Tóner Original Utax 611810010 Negro	611810010
TAOU-6118XL	Tóner Original Utax 611811010 Negro	611811010
TAOU-6120	Tóner Original Utax 612010010 Negro	612010010
TAOU-6122	Tóner Original Utax 612210010 Negro	612210010
TAOU-61251	Tóner Original Utax 612510115 Negro	612510115
TAOU-61252	Tóner Original Utax 612511010 Negro	612511010
TAOU-61253	Tóner Original Utax 612510010 Negro	612510010
TAOU-61301	Tóner Original Utax 613011110 Negro	613011110
TAOU-61302	Tóner Original Utax 613011010 Negro	613011010
TAOU-61303	Tóner Original Utax 613010110 Negro	613010110
TAOU-61304	Tóner Original Utax 613010010 Negro	613010010
TAOU-6135	Tóner Original Utax 613511010 Negro	613511010
TAOU-6135B	Tóner Original Utax 613510010 Negro	613510010
TAOU-6140B	Tóner Original Utax 614010010 Negro	614010010
TAOU-6142B	Tóner Original Utax 614210010 Negro	614210010
TAOU-6160B	Tóner Original Utax 616010010 Negro	616010010
TAOU-6165B	Tóner Original Utax 616510010 Negro	616510010
TAOU-6182B	Tóner Original Utax 618210010 Negro	618210010
TAOU-6230B	Tóner Original Utax 623010010 Negro	623010010
TAOU-6235B	Tóner Original Utax 623510010 Negro	623510010
TAOU-6520B	Tóner Original Utax 652010010 Negro	652010010
TAOU-6520C	Tóner Original Utax 652010011 Cian	652010011
TAOU-6520M	Tóner Original Utax 652010014 Magenta	652010014
TAOU-6520Y	Tóner Original Utax 652010016 Amarillo	652010016
TAOU-6525B	Tóner Original Utax 652511010 Negro	652511010
TAOU-6525C	Tóner Original Utax 652511011 Cian	652511011
TAOU-6525M	Tóner Original Utax 652511014 Magenta	652511014
TAOU-6525XLB	Tóner Original Utax 652510010 Negro	652510010
TAOU-6525XLC	Tóner Original Utax 652510011 Cian	652510011
TAOU-6525XLM	Tóner Original Utax 652510014 Magenta	652510014
TAOU-6525XLY	Tóner Original Utax 652510016 Amarillo	652510016
TAOU-6525Y	Tóner Original Utax 652511016 Amarillo	652511016
TAOU-6526B	Tóner Original Utax 652611010 Negro	652611010
TAOU-6526C	Tóner Original Utax 652611011 Cian	652611011
TAOU-6526M	Tóner Original Utax 652611014 Magenta	652611014
TAOU-6526Y	Tóner Original Utax 652611016 Amarillo	652611016
TAOU-6530B	Tóner Original Utax 653010010 Negro	653010010
TAOU-6530C	Tóner Original Utax 653010011 Cian	653010011
TAOU-6530M	Tóner Original Utax 653010014 Magenta	653010014
TAOU-6530Y	Tóner Original Utax 653010016 Amarillo	653010016
TAOU-6540B	Tóner Original Utax 654010010/Negro	654010010
TAOU-6540C	Tóner Original Utax 654010011 Cian	654010011
TAOU-6540M	Tóner Original Utax 654010014 Magenta	654010014
TAOU-6540Y	Tóner Original Utax 654010016 Amarillo	654010016
TAOU-6545B	Tóner Original Utax 654510010 Negro	654510010
TAOU-6545C	Tóner Original Utax 654510011 Cian	654510011
TAOU-6545M	Tóner Original Utax 654510014 Magenta	654510014
TAOU-6545Y	Tóner Original Utax 654510016 Amarillo	654510016
TAOU-66251B	Tóner Original Utax 662511010 Negro	662511010
TAOU-66251C	Tóner Original Utax 662511011 Cian	662511011

TAOU-66251M	Tóner Original Utax 662511014 Magenta	662511014
TAOU-66251Y	Tóner Original Utax 662511016 Amarillo	662511016
TAOU-6625B	Tóner Original Utax 662510010 Negro	662510010
TAOU-6625C	Tóner Original Utax 662510011 Cian	662510011
TAOU-6625M	Tóner Original Utax 662510014 Magenta	662510014
TAOU-6625Y	Tóner Original Utax 662510016 Amarillo	662510016
TAOU-DR1058	Tambor Original Utax 000105801	105801
TAOU-DR6120	Tambor Original Utax 612010001	612010001
TAOU-PK5011B	Tóner Original Utax 1T02NR0UT0/PK-5011K Negro	1T02NR0UT0
TAOU-PK5011C	Tóner Original Utax 1T02NRCUT0/PK-5011C Cian	1T02NRCUT0
TAOU-PK5011M	Tóner Original Utax 1T02NRBUT0/PK-5011M Magenta	1T02NRBUT0
TAOU-PK5011Y	Tóner Original Utax 1T02NRAUT0/PK-5011Y Amarillo	1T02NRAUT0
TAOU-PK5012B	Tóner Original Utax 1T02NSOUT0/PK-5012K Negro	1T02NSOUT0
TAOU-PK5012C	Tóner Original Utax 1T02NSCUT0/PK-5012C Cian	1T02NSCUT0
TAOU-PK5012M	Tóner Original Utax 1T02NSBUT0/PK-5012M Magenta	1T02NSBUT0
TAOU-PK5012Y	Tóner Original Utax 1T02NSAUT0/PK-5012Y Amarillo	1T02NSAUT0
TAOXE-106R01370	Tóner Original Xerox 106R01370 Negro	106R01370
TAOXE-106R01373	Tóner Original Xerox 106R01373 Negro	106R01373
TAOXE-106R02305	Tóner Original Xerox 106R02305 Negro	106R02305
TAOXE-106R088	Tóner Original Xerox 106R00088 Negro	106R00088
TAOXE-106R1048	Tóner Original Xerox 106R01048 Negro	106R01048
TAOXE-106R1246	Tóner Original Xerox 106R01246 Negro	106R01246
TAOXE-106R1277	Tóner Original Xerox 106R01277 Negro	106R01277
TAOXE-106R1306	Tóner Original Xerox 106R01306 Negro	106R01306
TAOXE-106R1374	Tóner Original Xerox 106R01374 Negro	106R01374
TAOXE-106R1378	Tóner Original Xerox 106R01378 Negro	106R01378
TAOXE-106R1379	Tóner Original Xerox 106R01379 Negro	106R01379
TAOXE-106R1409	Tóner Original Xerox 106R01409 Negro	106R01409
TAOXE-106R1411	Tóner Original Xerox 106R01411 Negro	106R01411
TAOXE-106R1412	Tóner Original Xerox 106R01412 Negro	106R01412
TAOXE-106R1414	Tóner Original Xerox 106R01414 Negro	106R01414
TAOXE-106R1415	Tóner Original Xerox 106R01415 Negro	106R01415
TAOXE-106R1485	Tóner Original Xerox 106R01485 Negro	106R01485
TAOXE-106R1486	Tóner Original Xerox 106R01486 Negro	106R01486
TAOXE-106R1533	Tóner Original Xerox 106R01533 Negro	106R01533
TAOXE-106R1535	Tóner Original Xerox 106R01535 Negro	106R01535
TAOXE-106R1561	Tóner Original Xerox 106R01561 Negro	106R01561
TAOXE-106R2307	Tóner Original Xerox 106R02307 Negro	106R02307
TAOXE-106R2309	Tóner Original Xerox 106R02309 Negro	106R02309
TAOXE-106R2311	Tóner Original Xerox 106R02311 Negro	106R02311
TAOXE-106R2313	Tóner Original Xerox 106R02313 Negro	106R02313
TAOXE-106R2720	Tóner Original Xerox 106R02720 Negro	106R02720
TAOXE-106R2722	Tóner Original Xerox 106R02722 Negro	106R02722
TAOXE-106R2731	Tóner Original Xerox 106R02731 Negro	106R02731
TAOXE-106R2736	Tóner Original Xerox 106R02736 Negro	106R02736
TAOXE-106R2738	Tóner Original Xerox 106R02738 Negro	106R02738
TAOXE-106R2740	Tóner Original Xerox 106R02740 Negro	106R02740
TAOXE-106R2775	Tóner Original Xerox 106R02775 Negro	106R02775
TAOXE-106R2777	Tóner Original Xerox 106R02777 Negro	106R02777
TAOXE-106R365	Tóner Original Xerox 106R00365 Negro	106R00365
TAOXE-106R442	Tóner Original Xerox 106R00442 Negro	106R00442
TAOXE-106R586	Tóner Original Xerox 106R00586 Negro	106R00586
TAOXE-106R685	Tóner Original Xerox 106R00685 Negro	106R00685
TAOXE-106R687	Tóner Original Xerox 106R00687 Negro	106R00687
TAOXE-106R688	Tóner Original Xerox 106R00688 Negro	106R00688
TAOXE-108R793	Tóner Original Xerox 108R00793 Negro	108R00793
TAOXE-108R795	Tóner Original Xerox 108R00795 Negro	108R00795
TAOXE-108R908	Tóner Original Xerox 108R00908 Negro	108R00908
TAOXE-109R746	Tóner Original Xerox 109R00746 Negro	109R00746
TAOXE-113R095	Tóner Original Xerox 113R00095 Negro	113R00095
TAOXE-113R184	Tóner Original Xerox 113R00184 Negro	113R00184
TAOXE-113R195	Tóner Original Xerox 113R00195 Negro	113R00195
TAOXE-113R307	Tóner Original Xerox 113R00307 Negro	113R00307
TAOXE-113R318	Tóner Original Xerox 113R00318 Negro	113R00318
TAOXE-113R446	Tóner Original Xerox 113R00446 Negro	113R00446
TAOXE-113R495	Tóner Original Xerox 113R00495 Negro	113R00495
TAOXE-113R627	Tóner Original Xerox 113R00627 Negro	113R00627
TAOXE-113R628	Tóner Original Xerox 113R00628 Negro	113R00628
TAOXE-113R654	Tóner Original Xerox 113R00654 Negro	113R00654
TAOXE-113R656	Tóner Original Xerox 113R00656 Negro	113R00656
TAOXE-113R657	Tóner Original Xerox 113R00657 Negro	113R00657

TAOXE-113R711	Tóner Original Xerox 113R00711 Negro	113R00711
TAOXE-113R712	Tóner Original Xerox 113R00712 Negro	113R00712
TAOXE-113R730	Tóner Original Xerox 113R00730 Negro	113R00730
TAOXE-113R735	Tóner Original Xerox 113R00735 Negro	113R00735
TAOXE-113R737	Tóner Original Xerox 113R00737 Negro	113R00737
TAOXE-13R606	Tóner Original Xerox 013R00606 Negro	013R00606
TAOXE-13R621	Tóner Original Xerox 013R00621 Negro	013R00621
TAOXE-4110	Tóner Original Xerox 006R01237 Negro	006R01237
TAOXE-5325	Tóner Original Xerox 006R01159 Negro	006R01159
TAOXE-600589	Tóner Original Xerox 006R00589 Negro	006R00589
TAOXE-601044	Tóner Original Xerox 006R01044 Negro	006R01044
TAOXE-601046DP	Tóner Original Xerox 006R01046 Negro, Pack Doble	006R01046
TAOXE-6R01275	Tóner Original Xerox 006R01275 Negro	006R01275
TAOXE-6R01278	Tóner Original Xerox 006R01278 Negro	006R01278
TAOXE-6R01297	Tóner Original Xerox 006R01297 Negro	006R01297
TAOXE-6R90170	Tóner Original Xerox 006R90170 Negro	006R90170
TAOXE-6R90268	Tóner Original Xerox 006R90268 Negro	006R90268
TAOXE-6R90269	Tóner Original Xerox 006R90269 Negro	006R90269
TAOXE-6R90302	Tóner Original Xerox 006R90302 Negro	006R90302
TAOXE-6R90321S6	Tóner Original Xerox 006R90321 Negro (6 uds.)	006R90321
TAOXE-700B	Tóner Original Xerox 006R01383 Negro	006R01383
TAOXE-700C	Tóner Original Xerox 006R01384 Cian	006R01384
TAOXE-700M	Tóner Original Xerox 006R01385 Magenta	006R01385
TAOXE-700Y	Tóner Original Xerox 006R01386 Amarillo	006R01386
TAOXE-CS50M	Tóner Original Xerox 006R90282 Magenta	006R90282
TAOXE-CXP3535Y	Tóner Original Xerox 006R01125 Amarillo	006 R 01125
TAOXE-DC12B	Tóner Original Xerox 006R90280 Negro	006R90280
TAOXE-DC12C	Tóner Original Xerox 006R90281 Cian	006R90281
TAOXE-DC12Y	Tóner Original Xerox 006R90283 Amarillo	006R90283
TAOXE-DC1632B	Tóner Original Xerox 006R01122 Negro	006R01122
TAOXE-DC1632C	Tóner Original Xerox 006R01123 Cian	006R01123
TAOXE-DC1632M	Tóner Original Xerox 006R01124 Magenta	006R01124
TAOXE-DC2045B	Tóner Original Xerox 006R90289 Negro	006R90289
TAOXE-DC2045C	Tóner Original Xerox 006R90290 Cian	006R90290
TAOXE-DC2045M	Tóner Original Xerox 006R90291 Magenta	006R90291
TAOXE-DC2045Y	Tóner Original Xerox 006R90292 Amarillo	006R90292
TAOXE-DC240BDP	Tóner Original Xerox 006R01449 Negro, Pack Doble	006R01449
TAOXE-DC240CDP	Tóner Original Xerox 006R01452 Cian, Pack Doble	006R01452
TAOXE-DC240MDP	Tóner Original Xerox 006R01451 Magenta, Pack Doble	006R01451
TAOXE-DC240YDP	Tóner Original Xerox 006R01450 Amarillo, Pack Doble	006R01450
TAOXE-DC5000BDP	Tóner Original Xerox 006R01251 Negro, Pack Doble	006R01251
TAOXE-DC5000YDP	Tóner Original Xerox 006R01254 Amarillo, Pack Doble	006R01254
TAOXE-DC7000C	Tóner Original Xerox 006R90347 Cian	006R90347
TAOXE-DC7000M	Tóner Original Xerox 006R90348 Magenta	006R90348
TAOXE-DC7000Y	Tóner Original Xerox 006R90349 Amarillo	006R90349
TAOXE-DR101R432	Tambor Original Xerox 101R00432	101R00432
TAOXE-DR101R434	Tambor Original Xerox 101R00434	101R00434
TAOXE-DR101R435	Tambor Original Xerox 101R00435	101R00435
TAOXE-DR106R1582	Tambor Original Xerox 106R01582	106R01582
TAOXE-DR108R1148S3	Tambor Original Xerox 108R01148 CMY (3 uds.)	108R01148
TAOXE-DR108R1151	Tambor Original Xerox 108R01151 Negro	108R01151
TAOXE-DR108R581	Tambor Original Xerox 108R00581	108R00581
TAOXE-DR108R591	Tambor Original Xerox 108R00591	108R00591
TAOXE-DR108R593	Tambor Original Xerox 108R00593	108R00593
TAOXE-DR108R645	Tambor Original Xerox 108R00645	108R00645
TAOXE-DR108R697S3	Tambor Original Xerox 108R00697 CMY (3 uds.)	108R00697
TAOXE-DR108R713	Tambor Original Xerox 108R00713	108R00713
TAOXE-DR108R744	Tambor Original Xerox 108R00744	108R00744
TAOXE-DR108R861	Tambor Original Xerox 108R00861 CMYK	108R00861
TAOXE-DR108R868	Tambor Original Xerox 108R00868	108R00868
TAOXE-DR113R607	Tambor Original Xerox 113R00607	113R00607
TAOXE-DR113R655	Tambor Original Xerox 113R00655	113R00655
TAOXE-DR113R663	Tambor Original Xerox 113R00663	113R00663
TAOXE-DR113R670	Tambor Original Xerox 113R00670	113R00670
TAOXE-DR113R755	Tambor Original Xerox 113R00755	113R00755
TAOXE-DR113R762	Tambor Original Xerox 113R00762	113R00762
TAOXE-DR113R773	Tambor Original Xerox 113R00773	113R00773
TAOXE-DR13R559	Tambor Original Xerox 013R00559	013R00559
TAOXE-DR13R579	Tambor Original Xerox 013R00579	013R00579
TAOXE-DR13R588	Tambor Original Xerox 013R00588	013R00588
TAOXE-DR13R589	Tambor Original Xerox 013R00589	013R00589

TAOXE-DR13R591	Tambor Original Xerox 013R00591	013R00591
TAOXE-DR13R602	Tambor Original Xerox 013R00602 Negro	013R00602
TAOXE-DR13R603	Tambor Original Xerox 013R00603 CMY	013R00603
TAOXE-DR13R617	Tambor Original Xerox 013R00617/013R00648 Negro	013R00617
TAOXE-DR13R620	Tambor Original Xerox 013R00620 CMY	013R00620
TAOXE-DR13R623	Tambor Original Xerox 013R00623	013R00623
TAOXE-DR13R624	Tambor Original Xerox 013R00624	013R00624
TAOXE-DR13R636	Tambor Original Xerox 013R00636 CMYK	013R00636
TAOXE-DR13R647	Tambor Original Xerox 013R00647 CMYK	013R00647
TAOXE-DR13R662	Tambor Original Xerox 013R00662	013R00662
TAOXE-DR13R90134	Tambor Original Xerox 013R90134 Magenta	013R90134
TAOXE-DRDC700B	Tambor Original Xerox 013R00655 Negro	013R00655
TAOXE-DRDC700CL	Tambor Original Xerox 013R00656 CMY	013R00656
TAOXE-DRM20	Tambor Original Xerox 113R00671	113R00671
TAOXE-DRPH3052	Tambor Original Xerox 101R00474	101R00474
TAOXE-DRPH6120	Tambor Original Xerox 108R00691	108R00691
TAOXE-DRPH6700B	Tambor Original Xerox 108R00974 Negro	108R00974
TAOXE-DRPH6700C	Tambor Original Xerox 108R00971 Cian	108R00971
TAOXE-DRPH6700M	Tambor Original Xerox 108R00972 Magenta	108R00972
TAOXE-DRPH6700Y	Tambor Original Xerox 108R00973 Amarillo	108R00973
TAOXE-DRPH7300C	Tambor Original Xerox 016-1993-00 Cian	016-1993-00
TAOXE-DRPH7300M	Tambor Original Xerox 016-1994-00 Magenta	016-1994-00
TAOXE-DRPH7300S3	Tambor Original Xerox 016-1997-00 CMY (3 uds.)	016-1997-00
TAOXE-DRPH7300Y	Tambor Original Xerox 016-1995-00 Amarillo	016-1995-00
TAOXE-DRPH7400B	Tambor Original Xerox 108R00650 Negro	108R00650
TAOXE-DRPH7400C	Tambor Original Xerox 108R00647 Cian	108R00647
TAOXE-DRPH7400M	Tambor Original Xerox 108R00648 Magenta	108R00648
TAOXE-DRPH7400Y	Tambor Original Xerox 108R00649 Amarillo	108R00649
TAOXE-DRWC6400B	Tambor Original Xerox 108R00774 Negro	108R00774
TAOXE-DRWC6400C	Tambor Original Xerox 108R00775 Cian	108R00775
TAOXE-DRWC6400M	Tambor Original Xerox 108R00776 Magenta	108R00776
TAOXE-DRWC6400Y	Tambor Original Xerox 108R00777 Amarillo	108R00777
TAOXE-DRWC7120B	Tambor Original Xerox 013R00657 Negro	013R00657
TAOXE-DRWC7120C	Tambor Original Xerox 013R00660 Cian	013R00660
TAOXE-DRWC7120M	Tambor Original Xerox 013R00659 Magenta	013R00659
TAOXE-DRWC7120Y	Tambor Original Xerox 013R00658 Amarillo	013R00658
TAOXE-LC811	Tóner Original Xerox 253223462/LC811 Negro	253223462
TAOXE-P8E	Tóner Original Xerox 113R00296 Negro	113R00296
TAOXE-PE16	Tóner Original Xerox 113R00667 Negro	113R00667
TAOXE-PH3110	Tóner Original Xerox 109R00639 Negro	109R00639
TAOXE-PH3124	Tóner Original Xerox 106R01159 Negro	106R01159
TAOXE-PH3130	Tóner Original Xerox 109R00725 Negro	109R00725
TAOXE-PH3140	Tóner Original Xerox 108R00909 Negro	108R00909
TAOXE-PH3150	Tóner Original Xerox 109R00747 Negro	109R00747
TAOXE-PH3500	Tóner Original Xerox 106R01148 Negro	106R01148
TAOXE-PH3500XL	Tóner Original Xerox 106R01149 Negro	106R01149
TAOXE-PH3600	Tóner Original Xerox 106R01371 Negro	106R01371
TAOXE-PH540C	Tóner Original Xerox 016-1320-00 Cian	016-1320-00
TAOXE-PH5500	Tóner Original Xerox 113R00668 Negro	113R00668
TAOXE-PH550B	Tóner Original Xerox 006R01525 Negro	006R01525
TAOXE-PH550C	Tóner Original Xerox 006R01528 Cian	006R01528
TAOXE-PH550M	Tóner Original Xerox 006R01527 Magenta	006R01527
TAOXE-PH550Y	Tóner Original Xerox 006R01526 Amarillo	006R01526
TAOXE-PH5550	Tóner Original Xerox 106R01294 Negro	106R01294
TAOXE-PH6000B	Tóner Original Xerox 106R01630 Negro	106R01630
TAOXE-PH6000C	Tóner Original Xerox 106R01627 Cian	106R01627
TAOXE-PH6000M	Tóner Original Xerox 106R01628 Magenta	106R01628
TAOXE-PH6000Y	Tóner Original Xerox 106R01629 Amarillo	106R01629
TAOXE-PH6020B	Tóner Original Xerox 106R02759 Negro	106R02759
TAOXE-PH6020C	Tóner Original Xerox 106R02756 Cian	106R02756
TAOXE-PH6020M	Tóner Original Xerox 106R02757 Magenta	106R02757
TAOXE-PH6020Y	Tóner Original Xerox 106R02758 Amarillo	106R02758
TAOXE-PH6100B	Tóner Original Xerox 106R00679 Negro	106R00679
TAOXE-PH6100C	Tóner Original Xerox 106R00676 Cian	106R00676
TAOXE-PH6100M	Tóner Original Xerox 106R00677 Magenta	106R00677
TAOXE-PH6100XLB	Tóner Original Xerox 106R00684 Negro	106R00684
TAOXE-PH6100XLC	Tóner Original Xerox 106R00680 Cian	106R00680
TAOXE-PH6100XLM	Tóner Original Xerox 106R00681 Magenta	106R00681
TAOXE-PH6100XLY	Tóner Original Xerox 106R00682 Amarillo	106R00682
TAOXE-PH6100Y	Tóner Original Xerox 106R00678 Amarillo	106R00678
TAOXE-PH6110B	Tóner Original Xerox 106R01274 Negro	106R01274

TAOXE-PH6110C	Tóner Original Xerox 106R01271 Cian	106R01271
TAOXE-PH6110M	Tóner Original Xerox 106R01272 Magenta	106R01272
TAOXE-PH6110Y	Tóner Original Xerox 106R01273 Amarillo	106R01273
TAOXE-PH6120C	Tóner Original Xerox 113R00689 Cian	113R00689
TAOXE-PH6120M	Tóner Original Xerox 113R00691 Magenta	113R00691
TAOXE-PH6120XLB	Tóner Original Xerox 113R00692 Negro	113R00692
TAOXE-PH6120XLC	Tóner Original Xerox 113R00693 Cian	113R00693
TAOXE-PH6120XLM	Tóner Original Xerox 113R00695 Magenta	113R00695
TAOXE-PH6120XLY	Tóner Original Xerox 113R00694 Amarillo	113R00694
TAOXE-PH6120Y	Tóner Original Xerox 113R00690 Amarillo	113R00690
TAOXE-PH6121B	Tóner Original Xerox 106R01469 Negro	106R01469
TAOXE-PH6121C	Tóner Original Xerox 106R01463 Cian	106R01463
TAOXE-PH6121M	Tóner Original Xerox 106R01464 Magenta	106R01464
TAOXE-PH6121XLC	Tóner Original Xerox 106R01466 Cian	106R01466
TAOXE-PH6121XLM	Tóner Original Xerox 106R01467 Magenta	106R01467
TAOXE-PH6121XLY	Tóner Original Xerox 106R01468 Amarillo	106R01468
TAOXE-PH6121Y	Tóner Original Xerox 106R01465 Amarillo	106R01465
TAOXE-PH6125B	Tóner Original Xerox 106R01334 Negro	106R01334
TAOXE-PH6125C	Tóner Original Xerox 106R01331 Cian	106R01331
TAOXE-PH6125M	Tóner Original Xerox 106R01332 Magenta	106R01332
TAOXE-PH6125Y	Tóner Original Xerox 106R01333 Amarillo	106R01333
TAOXE-PH6128B	Tóner Original Xerox 106R01455 Negro	106R01455
TAOXE-PH6128C	Tóner Original Xerox 106R01452 Cian	106R01452
TAOXE-PH6128M	Tóner Original Xerox 106R01453 Magenta	106R01453
TAOXE-PH6128Y	Tóner Original Xerox 106R01454 Amarillo	106R01454
TAOXE-PH6130B	Tóner Original Xerox 106R01281 Negro	106R01281
TAOXE-PH6130C	Tóner Original Xerox 106R01278 Cian	106R01278
TAOXE-PH6130M	Tóner Original Xerox 106R01279 Magenta	106R01279
TAOXE-PH6130Y	Tóner Original Xerox 106R01280 Amarillo	106R01280
TAOXE-PH6140B	Tóner Original Xerox 106R01480 Negro	106R01480
TAOXE-PH6140C	Tóner Original Xerox 106R01477 Cian	106R01477
TAOXE-PH6140M	Tóner Original Xerox 106R01478 Magenta	106R01478
TAOXE-PH6140Y	Tóner Original Xerox 106R01479 Amarillo	106R01479
TAOXE-PH6180B	Tóner Original Xerox 113R00722 Negro	113R00722
TAOXE-PH6180C	Tóner Original Xerox 113R00719 Cian	113R00719
TAOXE-PH6180M	Tóner Original Xerox 113R00720 Magenta	113R00720
TAOXE-PH6180XLB	Tóner Original Xerox 113R00726 Negro	113R00726
TAOXE-PH6180XLC	Tóner Original Xerox 113R00723 Cian	113R00723
TAOXE-PH6180XLM	Tóner Original Xerox 113R00724 Magenta	113R00724
TAOXE-PH6180XLY	Tóner Original Xerox 113R00725 Amarillo	113R00725
TAOXE-PH6180Y	Tóner Original Xerox 113R00721 Amarillo	113R00721
TAOXE-PH6200C	Tóner Original Xerox 016-2005-00 Cian	016-2005-00
TAOXE-PH6200M	Tóner Original Xerox 016-2006-00 Magenta	016-2006-00
TAOXE-PH6200Y	Tóner Original Xerox 016-2007-00 Amarillo	016-2007-00
TAOXE-PH6250B	Tóner Original Xerox 106R00671 Negro	106R00671
TAOXE-PH6250C	Tóner Original Xerox 106R00668 Cian	106R00668
TAOXE-PH6250M	Tóner Original Xerox 106R00669 Magenta	106R00669
TAOXE-PH6250XLB	Tóner Original Xerox 106R00675 Negro	106R00675
TAOXE-PH6250XLC	Tóner Original Xerox 106R00672 Cian	106R00672
TAOXE-PH6250XLM	Tóner Original Xerox 106R00673 Magenta	106R00673
TAOXE-PH6250XLY	Tóner Original Xerox 106R00674 Amarillo	106R00674
TAOXE-PH6250Y	Tóner Original Xerox 106R00670 Amarillo	106R00670
TAOXE-PH6280B	Tóner Original Xerox 106R01391 Negro	106R01391
TAOXE-PH6280C	Tóner Original Xerox 106R01388 Cian	106R01388
TAOXE-PH6280M	Tóner Original Xerox 106R01389 Magenta	106R01389
TAOXE-PH6280XLB	Tóner Original Xerox 106R01395 Negro	106R01395
TAOXE-PH6280XLC	Tóner Original Xerox 106R01392 Cian	106R01392
TAOXE-PH6280XLM	Tóner Original Xerox 106R01393 Magenta	106R01393
TAOXE-PH6280XLY	Tóner Original Xerox 106R01394 Amarillo	106R01394
TAOXE-PH6280Y	Tóner Original Xerox 106R01390 Amarillo	106R01390
TAOXE-PH6300B	Tóner Original Xerox 106R01076 Negro	106R01076
TAOXE-PH6300C	Tóner Original Xerox 106R01073 Cian	106R01073
TAOXE-PH6300M	Tóner Original Xerox 106R01074 Magenta	106R01074
TAOXE-PH6300XLB	Tóner Original Xerox 106R01085 Negro	106R01085
TAOXE-PH6300XLC	Tóner Original Xerox 106R01082 Cian	106R01082
TAOXE-PH6300XLM	Tóner Original Xerox 106R01083 Magenta	106R01083
TAOXE-PH6300XLY	Tóner Original Xerox 106R01084 Amarillo	106R01084
TAOXE-PH6300Y	Tóner Original Xerox 106R01075 Amarillo	106R01075
TAOXE-PH6350B	Tóner Original Xerox 106R01147 Negro	106R01147
TAOXE-PH6350C	Tóner Original Xerox 106R01144 Cian	106R01144
TAOXE-PH6350M	Tóner Original Xerox 106R01145 Magenta	106R01145

TAOXE-PH6350Y	Tóner Original Xerox 106R01146 Amarillo	106R01146
TAOXE-PH6360B	Tóner Original Xerox 106R01217 Negro	106R01217
TAOXE-PH6360C	Tóner Original Xerox 106R01214 Cian	106R01214
TAOXE-PH6360M	Tóner Original Xerox 106R01215 Magenta	106R01215
TAOXE-PH6360XLB	Tóner Original Xerox 106R01221 Negro	106R01221
TAOXE-PH6360XLC	Tóner Original Xerox 106R01218 Cian	106R01218
TAOXE-PH6360XLM	Tóner Original Xerox 106R01219 Magenta	106R01219
TAOXE-PH6360XLY	Tóner Original Xerox 106R01220 Amarillo	106R01220
TAOXE-PH6360Y	Tóner Original Xerox 106R01216 Amarillo	106R01216
TAOXE-PH6500C	Tóner Original Xerox 106R01591 Cian	106R01591
TAOXE-PH6500M	Tóner Original Xerox 106R01592 Magenta	106R01592
TAOXE-PH6500XLB	Tóner Original Xerox 106R01597 Negro	106R01597
TAOXE-PH6500XLC	Tóner Original Xerox 106R01594 Cian	106R01594
TAOXE-PH6500XLM	Tóner Original Xerox 106R01595 Magenta	106R01595
TAOXE-PH6500XLY	Tóner Original Xerox 106R01596 Amarillo	106R01596
TAOXE-PH6500Y	Tóner Original Xerox 106R01593 Amarillo	106R01593
TAOXE-PH6600B	Tóner Original Xerox 106R02248 Negro	106R02248
TAOXE-PH6600C	Tóner Original Xerox 106R02245 Cian	106R02245
TAOXE-PH6600M	Tóner Original Xerox 106R02246 Magenta	106R02246
TAOXE-PH6600XLB	Tóner Original Xerox 106R02232 HC Negro	106R02232
TAOXE-PH6600XLC	Tóner Original Xerox 106R02229 HC Cian	106R02229
TAOXE-PH6600XLM	Tóner Original Xerox 106R02230 HC Magenta	106R02230
TAOXE-PH6600XLY	Tóner Original Xerox 106R02231 HC Amarillo	106R02231
TAOXE-PH6600Y	Tóner Original Xerox 106R02247 Amarillo	106R02247
TAOXE-PH6700B	Tóner Original Xerox 106R01506 Negro	106R01506
TAOXE-PH6700C	Tóner Original Xerox 106R01503 Cian	106R01503
TAOXE-PH6700M	Tóner Original Xerox 106R01504 Magenta	106R01504
TAOXE-PH6700XLB	Tóner Original Xerox 106R01510 Negro	106R01510
TAOXE-PH6700XLC	Tóner Original Xerox 106R01507 Cian	106R01507
TAOXE-PH6700XLM	Tóner Original Xerox 106R01508 Magenta	106R01508
TAOXE-PH6700XLY	Tóner Original Xerox 106R01509 Amarillo	106R01509
TAOXE-PH6700Y	Tóner Original Xerox 106R01505 Amarillo	106R01505
TAOXE-PH7100BDP	Tóner Original Xerox 106R02605 Negro, Pack Doble	106R02605
TAOXE-PH7100C	Tóner Original Xerox 106R02599 Cian	106R02599
TAOXE-PH7100CDP	Tóner Original Xerox 106R02602 Cian, Pack Doble	106R02602
TAOXE-PH7100M	Tóner Original Xerox 106R02600 Magenta	106R02600
TAOXE-PH7100MDP	Tóner Original Xerox 106R02603 Magenta, Pack Doble	106R02603
TAOXE-PH7100Y	Tóner Original Xerox 106R02601 Amarillo	106R02601
TAOXE-PH7100YDP	Tóner Original Xerox 106R02604 Amarillo, Pack Doble	106R02604
TAOXE-PH7300B	Tóner Original Xerox 016-1976-00 Negro	016-1976-00
TAOXE-PH7300C	Tóner Original Xerox 016-1973-00 Cian	016-1973-00
TAOXE-PH7300XLB	Tóner Original Xerox 016-1980-00 Negro	016-1980-00
TAOXE-PH7300Y	Tóner Original Xerox 016-1975-00 Amarillo	016-1975-00
TAOXE-PH7400B	Tóner Original Xerox 106R01080 Negro	106R01080
TAOXE-PH7400C	Tóner Original Xerox 106R01150 Cian	106R01150
TAOXE-PH7400M	Tóner Original Xerox 106R01151 Magenta	106R01151
TAOXE-PH7400XLC	Tóner Original Xerox 106R01077 Cian	106R01077
TAOXE-PH7400XLM	Tóner Original Xerox 106R01078 Magenta	106R01078
TAOXE-PH7400XLY	Tóner Original Xerox 106R01079 Amarillo	106R01079
TAOXE-PH7400Y	Tóner Original Xerox 106R01152 Amarillo	106R01152
TAOXE-PH7500C	Tóner Original Xerox 106R01433 Cian	106R01433
TAOXE-PH7500M	Tóner Original Xerox 106R01434 Magenta	106R01434
TAOXE-PH7500XLB	Tóner Original Xerox 106R01436 Cian	106R01436
TAOXE-PH7500XLC	Tóner Original Xerox 106R01437 Magenta	106R01437
TAOXE-PH7500XLM	Tóner Original Xerox 106R01438 Amarillo	106R01438
TAOXE-PH7500XLY	Tóner Original Xerox 106R01435 Amarillo	106R01435
TAOXE-PH7500Y	Tóner Original Xerox 106R01439 Negro	106R01439
TAOXE-PH7700B	Tóner Original Xerox 016-1882-00 Negro	016-1882-00
TAOXE-PH7700C	Tóner Original Xerox 016-1879-00 Cian	016-1879-00
TAOXE-PH7700M	Tóner Original Xerox 016-1880-00 Magenta	016-1880-00
TAOXE-PH7700XLC	Tóner Original Xerox 016-1944-00 Cian	016-1944-00
TAOXE-PH7700XLY	Tóner Original Xerox 016-1946-00 Amarillo	016-1946-00
TAOXE-PH7700Y	Tóner Original Xerox 016-1881-00 Amarillo	016-1881-00
TAOXE-PH7750B	Tóner Original Xerox 106R00652 Negro	106R00652
TAOXE-PH7750C	Tóner Original Xerox 106R00653 Cian	106R00653
TAOXE-PH7750M	Tóner Original Xerox 106R00654 Magenta	106R00654
TAOXE-PH7750Y	Tóner Original Xerox 106R00655 Amarillo	106R00655
TAOXE-PH7760B	Tóner Original Xerox 106R01163 Negro	106R01163
TAOXE-PH7760C	Tóner Original Xerox 106R01160 Cian	106R01160
TAOXE-PH7760M	Tóner Original Xerox 106R01161 Magenta	106R01161
TAOXE-PH7760Y	Tóner Original Xerox 106R01162 Amarillo	106R01162

TAOXE-PH7800C	Tóner Original Xerox 106R01563 Cian	106R01563
TAOXE-PH7800M	Tóner Original Xerox 106R01564 Magenta	106R01564
TAOXE-PH7800XLB	Tóner Original Xerox 106R01569 Negro	106R01569
TAOXE-PH7800XLC	Tóner Original Xerox 106R01566 Cian	106R01566
TAOXE-PH7800XLM	Tóner Original Xerox 106R01567 Magenta	106R01567
TAOXE-PH7800XLY	Tóner Original Xerox 106R01568 Amarillo	106R01568
TAOXE-PH7800Y	Tóner Original Xerox 106R01565 Amarillo	106R01565
TAOXE-WC165	Tóner Original Xerox 006R01146 Negro	006R01146
TAOXE-WC3119B	Tóner Original Xerox 013R00625 Negro	013R00625
TAOXE-WC3550	Tóner Original Xerox 106R01528 Negro	106R01528
TAOXE-WC3550XL	Tóner Original Xerox 106R01530 Negro	106R01530
TAOXE-WC6400B	Tóner Original Xerox 106R01316 Negro	106R01316
TAOXE-WC6400C	Tóner Original Xerox 106R01320 Cian	106R01320
TAOXE-WC6400M	Tóner Original Xerox 106R01321 Magenta	106R01321
TAOXE-WC6400XLC	Tóner Original Xerox 106R01317 Cian	106R01317
TAOXE-WC6400XLM	Tóner Original Xerox 106R01318 Magenta	106R01318
TAOXE-WC6400XLY	Tóner Original Xerox 106R01319 Amarillo	106R01319
TAOXE-WC6400Y	Tóner Original Xerox 106R01322 Amarillo	106R01322
TAOXE-WC6655B	Tóner Original Xerox 106R02747 Negro	106R02747
TAOXE-WC6655C	Tóner Original Xerox 106R02744 Cian	106R02744
TAOXE-WC6655M	Tóner Original Xerox 106R02745 Magenta	106R02745
TAOXE-WC6655Y	Tóner Original Xerox 106R02746 Amarillo	106R02746
TAOXE-WC7120B	Tóner Original Xerox 006R01457 Negro	006R01457
TAOXE-WC7120C	Tóner Original Xerox 006R01460 Cian	006R01460
TAOXE-WC7120M	Tóner Original Xerox 006R01459 Magenta	006R01459
TAOXE-WC7120Y	Tóner Original Xerox 006R01458 Amarillo	006R01458
TAOXE-WC7132B	Tóner Original Xerox 006R01262 Negro	006R01262
TAOXE-WC7132C	Tóner Original Xerox 006R01265 Cian	006R01265
TAOXE-WC7132M	Tóner Original Xerox 006R01264 Magenta	006R01264
TAOXE-WC7132Y	Tóner Original Xerox 006R01263 Amarillo	006R01263
TAOXE-WC7235B	Tóner Original Xerox 006R01175/006R01280 Negro	006R01175
TAOXE-WC7235C	Tóner Original Xerox 006R01176 Cian	006R01176
TAOXE-WC7235M	Tóner Original Xerox 006R01177 Magenta	006R01177
TAOXE-WC7235Y	Tóner Original Xerox 006R01178 Amarillo	006R01178
TAOXE-WC7425B	Tóner Original Xerox 006R01395 Negro	006R01395
TAOXE-WC7425C	Tóner Original Xerox 006R01398 Cian	006R01398
TAOXE-WC7425M	Tóner Original Xerox 006R01397 Magenta	006R01397
TAOXE-WC7425Y	Tóner Original Xerox 006R01396 Amarillo	006R01396
TAOXE-WC7525C	Tóner Original Xerox 006R01516 Cian	006R01516
TAOXE-WC7525M	Tóner Original Xerox 006R01515 Magenta	006R01515
TAOXE-WC7525Y	Tóner Original Xerox 006R01514 Amarillo	006R01514
TAOXE-WC7725B	Tóner Original Xerox 006R01513 Negro	006R01513
TAOXE-WCM118	Tóner Original Xerox 006R01179 Negro	006R01179
TAOXE-WCM123	Tóner Original Xerox 006R01182 Negro	006R01182
TAOXE-WCM24B	Tóner Original Xerox 006R01153 Negro	006R01153
TAOXE-WCM24C	Tóner Original Xerox 006R01154 Cian	006R01154
TAOXE-WCM24M	Tóner Original Xerox 006R01155 Magenta	006R01155
TAOXE-WCM24Y	Tóner Original Xerox 006R01156 Amarillo	006R01156
TARB-DR1050	Sustituye a Tambor Brother DR-1050	DR1050
TARB-DR130CL	Sustituye a Tambor Brother DR-130CL CMYK	DR-130CL
TARB-DR200	Sustituye a Tambor Brother DR-200	DR-200
TARB-DR2000	Sustituye a Tambor Brother DR-2000	DR-2000
TARB-DR2005	Sustituye a Tambor Brother DR-2005	DR-2005
TARB-DR2100	Sustituye a Tambor Brother DR-2100	DR-2100
TARB-DR2200	Sustituye a Tambor Brother DR-2200	DR-2200
TARB-DR2300	Sustituye a Tambor Brother DR-2300 Negro	DR-2300
TARB-DR230CL	Sustituye a Tambor Brother DR-230CL CMYK	DR-230CL
TARB-DR241S4	Sustituye a Tóner Brother DR-241CL CMYK, Set Ahorro (4 uds.)	DR-241CL
TARB-DR300	Sustituye a Tambor Brother DR-300	DR-300
TARB-DR3000	Sustituye a Tambor Brother DR-3000	DR-3000
TARB-DR3100	Sustituye a Tambor Brother DR-3100	DR-3100
TARB-DR320	Sustituye a Tambor Brother DR-320CL CMYK	DR-320CL
TARB-DR3200	Sustituye a Tambor Brother DR-3200	DR-3200
TARB-DR321	Sustituye a Tambor Brother DR-321CL CMYK	DR-321CL
TARB-DR3300	Sustituye a Tambor Brother DR-3300	DR-3300
TARB-DR4000	Sustituye a Tambor Brother DR-4000	DR-4000
TARB-DR5500	Sustituye a Tambor Brother DR-5500	DR-5500
TARB-DR6000	Sustituye a Tambor Brother DR-6000	DR-6000
TARB-DR7000	Sustituye a Tambor Brother DR-7000	DR-7000
TARB-DR8000	Sustituye a Tambor Brother DR-8000	DR-8000
TARB-TN04B	Sustituye a Tóner Brother TN-04BK Negro	TN-04BK

TARB-TN04C	Sustituye a Tóner Brother TN-04C Cian	TN-04C
TARB-TN04M	Sustituye a Tóner Brother TN-04M Magenta	TN-04M
TARB-TN04S4	Sustituye a Tóner Brother TN-04 CMYK, Set Ahorro (4 uds.)	TN-04
TARB-TN04Y	Sustituye a Tóner Brother TN-04Y Amarillo	TN-04Y
TARB-TN1050	Sustituye a Tóner Brother TN-1050	TN-1050
TARB-TN1050DP	Sustituye a Tóner Brother TN-1050, Pack Doble	TN-1050
TARB-TN130B	Sustituye a Tóner Brother TN-130BK XXL Negro	TN-130BK XXL
TARB-TN130C	Sustituye a Tóner Brother TN-130C XXL Cian	TN-130C XXL
TARB-TN130M	Sustituye a Tóner Brother TN-130M XXL Magenta	TN-130M XXL
TARB-TN130S4	Sustituye a Tóner Brother TN-130 XXL CMYK, Set Ahorro (4 uds.)	TN-130 XXL
TARB-TN130Y	Sustituye a Tóner Brother TN-130Y XXL Amarillo	TN-130Y XXL
TARB-TN135B	Sustituye a Tóner Brother TN-135BK Negro	TN-135BK
TARB-TN135C	Sustituye a Tóner Brother TN-135C Cian	TN-135C
TARB-TN135M	Sustituye a Tóner Brother TN-135M Magenta	TN-135M
TARB-TN135S4	Sustituye a Tóner Brother TN-135 CMYK, Set Ahorro (4 uds.)	TN-135
TARB-TN135Y	Sustituye a Tóner Brother TN-135Y Amarillo	TN-135Y
TARB-TN1700	Sustituye a Tóner Brother TN-1700 Negro	TN-1700
TARB-TN1700DP	Sustituye a Tóner Brother TN-1700 Negro, Pack Doble	TN-1700
TARB-TN2000	Sustituye a Tóner Brother TN-2000 Negro	TN-2000
TARB-TN2000S4	Sustituye a Tóner Brother TN-2000 Negro, Set Ahorro (4 uds.)	TN-2000
TARB-TN2000XL	Sustituye a Tóner Brother TN-2000 Negro	TN-2000
TARB-TN2000XLS4	Sustituye a Tóner Brother TN-2000 Negro, Set Ahorro (4 uds.)	TN-2000
TARB-TN2005	Sustituye a Tóner Brother TN-2005 XL Negro	TN-2005
TARB-TN2005S4	Sustituye a Tóner Brother TN-2005 XL Negro, Set Ahorro (4 uds.)	TN-2005
TARB-TN2005XL	Sustituye a Tóner Brother TN-2005 XXL Negro	TN-2005
TARB-TN2005XLS4	Sustituye a Tóner Brother TN-2005 XXL Negro, Set Ahorro (4 uds.)	TN-2005
TARB-TN2010	Sustituye a Tóner Brother TN-2010 XXL Negro	TN-2010
TARB-TN2010S3	Sustituye a Tóner y Tambor Brother TN-2010 XXL/DR-2200, Set Ahorro (3 uds.)	TN2010/DR2200
TARB-TN2110	Sustituye a Tóner Brother TN-2110 XXL Negro	TN-2110
TARB-TN2120	Sustituye a Tóner Brother TN-2120 Negro	TN-2120
TARB-TN2120S3	Sustituye a Tóner y Tambor Brother TN-2120 XXL/DR-2100, Set Ahorro (3 uds.)	TN2120/DR2100
TARB-TN2120XL	Sustituye a Tóner Brother TN-2120 XXL Negro	TN-2120
TARB-TN2210	Sustituye a Tóner Brother TN-2210 Negro	TN-2210
TARB-TN2220	Sustituye a Tóner Brother TN-2220 Negro	TN-2220
TARB-TN2220S3	Sustituye a Tóner y Tambor Brother TN-2220 XXL/DR-2200, Set Ahorro (3 uds.)	TN2220/DR2200
TARB-TN2220XL	Sustituye a Tóner Brother TN-2220 XXL Negro	TN-2220
TARB-TN230B	Sustituye a Tóner Brother TN-230BK Negro	TN-230BK
TARB-TN230C	Sustituye a Tóner Brother TN-230C Cian	TN-230C
TARB-TN230M	Sustituye a Tóner Brother TN-230M Magenta	TN-230M
TARB-TN230S4	Sustituye a Tóner Brother TN-230 CMYK, Set Ahorro (4 uds.)	TN-230
TARB-TN230Y	Sustituye a Tóner Brother TN-230Y Amarillo	TN-230Y
TARB-TN2320	Sustituye a Tóner Brother TN-2320 Negro	TN-2320
TARB-TN241B	Sustituye a Tóner Brother TN-241BK Negro	TN-241BK
TARB-TN241C	Sustituye a Tóner Brother TN-241C XXL Cian	TN-241C
TARB-TN241M	Sustituye a Tóner Brother TN-241M XXL Magenta	TN-241M
TARB-TN241S3	Sustituye a Tóner Brother TN-241 XXL CMY, Set Ahorro (3 uds.)	TN-241
TARB-TN241S4	Sustituye a Tóner Brother TN-241 XXL CMYK, Set Ahorro (4 uds.)	TN-241
TARB-TN241Y	Sustituye a Tóner Brother TN-241Y XXL Amarillo	TN-241Y
TARB-TN242B	Sustituye a Tóner Brother TN-242BK Negro	TN-242BK
TARB-TN242C	Sustituye a Tóner Brother TN-242C XXL Cian	TN-242C
TARB-TN242M	Sustituye a Tóner Brother TN-242M XXL Magenta	TN-242M
TARB-TN242S4	Sustituye a Tóner Brother TN-242 CMYK, Set Ahorro (4 uds.)	TN-242BK-Y
TARB-TN242Y	Sustituye a Tóner Brother TN-242Y XXL Amarillo	TN-242Y
TARB-TN245C	Sustituye a Tóner Brother TN-245C Cian	TN-245C
TARB-TN245M	Sustituye a Tóner Brother TN-245M Magenta	TN-245M
TARB-TN245S3	Sustituye a Tóner Brother TN-245 CMY, Set Ahorro (3 uds.)	TN-245
TARB-TN245S4	Sustituye a Tóner Brother TN-241BK/245CMY CMYK, Set Ahorro (4 uds.)	TN-241-TN245
TARB-TN245Y	Sustituye a Tóner Brother TN-245Y Amarillo	TN-245Y
TARB-TN246C	Sustituye a Tóner Brother TN-246C Cian	TN-246C
TARB-TN246M	Sustituye a Tóner Brother TN-246M Magenta	TN-246M
TARB-TN246S3	Sustituye a Tóner Brother TN-246 CMY, Set Ahorro (3 uds.)	TN-246C-Y
TARB-TN246Y	Sustituye a Tóner Brother TN-246Y Amarillo	TN-246Y
TARB-TN3030	Sustituye a Tóner Brother TN-3030 XXL Negro	TN-3030
TARB-TN3060	Sustituye a Tóner Brother TN-3060 Negro	TN-3060
TARB-TN3060S4	Sustituye a Tóner Brother TN-3060 Negro, Set Ahorro (4 uds.)	TN-3060
TARB-TN3060XL	Sustituye a Tóner Brother TN-3060 XXL Negro	TN-3060
TARB-TN3060XLS4	Sustituye a Tóner Brother TN-3060 XXL Negro, Set Ahorro (4 uds.)	TN-3060
TARB-TN3130	Sustituye a Tóner Brother TN-3130 XXL Negro	TN-3130
TARB-TN3170	Sustituye a Tóner Brother TN-3130/70 Negro	TN-3170
TARB-TN3170S4	Sustituye a Tóner Brother TN-3130/TN-3170 Negro, Set Ahorro (4 uds.)	TN-3170
TARB-TN3170XL	Sustituye a Tóner Brother TN-3130 XXL/TN-3170 Negro	TN-3170

TARB-TN3170XLS4	Sustituye a Tóner Brother TN-3130/TN-3170 XXL Negro, Set Ahorro (4 uds.)	TN-3170
TARB-TN320B	Sustituye a Tóner Brother TN-320BK XXL Negro	TN-320BK
TARB-TN320C	Sustituye a Tóner Brother TN-320C XXL Cian	TN-320C
TARB-TN320M	Sustituye a Tóner Brother TN-320M XXL Magenta	TN-320M
TARB-TN320Y	Sustituye a Tóner Brother TN-320Y XXL Amarillo	TN-320Y
TARB-TN321B	Sustituye a Tóner Brother TN-321BK XXL Negro	TN-321BK
TARB-TN321C	Sustituye a Tóner Brother TN-321C XXL Cian	TN-321C
TARB-TN321M	Sustituye a Tóner Brother TN-321M XXL Magenta	TN-321M
TARB-TN321Y	Sustituye a Tóner Brother TN-321Y XXL Amarillo	TN-321Y
TARB-TN3230	Sustituye a Tóner Brother TN-3230 XXL Negro	TN-3230
TARB-TN325B	Sustituye a Tóner Brother TN-325BK Negro	TN-325BK
TARB-TN325C	Sustituye a Tóner Brother TN-325C Cian	TN-325C
TARB-TN325M	Sustituye a Tóner Brother TN-325M Magenta	TN-325M
TARB-TN325S4	Sustituye a Tóner Brother TN-325 CMYK, Set Ahorro (4 uds.)	TN-325
TARB-TN325Y	Sustituye a Tóner Brother TN-325Y Amarillo	TN-325Y
TARB-TN326B	Sustituye a Tóner Brother TN-326BK Negro	TN-326BK
TARB-TN326C	Sustituye a Tóner Brother TN-326C Cian	TN-326C
TARB-TN326M	Sustituye a Tóner Brother TN-326M Magenta	TN-326M
TARB-TN326S4	Sustituye a Tóner Brother TN-326 CMYK, Set Ahorro (4 uds.)	TN-326
TARB-TN326Y	Sustituye a Tóner Brother TN-326Y Amarillo	TN-326Y
TARB-TN3280	Sustituye a Tóner Brother TN-3230/TN-3280 Negro	TN-3280
TARB-TN3280DP	Sustituye a Tóner Brother TN-3280 Negro, Pack Doble	TN-3280
TARB-TN3280S4	Sustituye a Tóner Brother TN-3280 Negro, Set Ahorro (4 uds.)	TN-3280
TARB-TN3280XL	Sustituye a Tóner Brother TN-3230 XXL/TN-3280 Negro	TN-3280
TARB-TN328B	Sustituye a Tóner Brother TN-328BK Negro	TN-328BK
TARB-TN328C	Sustituye a Tóner Brother TN-328C Cian	TN-328C
TARB-TN328M	Sustituye a Tóner Brother TN-328M Magenta	TN-328M
TARB-TN328S4	Sustituye a Tóner Brother TN-328 CMYK, Set Ahorro (4 uds.)	TN-328
TARB-TN328Y	Sustituye a Tóner Brother TN-328Y Amarillo	TN-328Y
TARB-TN329B	Sustituye a Tóner Brother TN-329BK Negro	TN-329BK
TARB-TN329C	Sustituye a Tóner Brother TN-329C Cian	TN-329C
TARB-TN329CDP	Sustituye a Tóner Brother TN-329C Cian, Pack Doble	TN-329CTWIN
TARB-TN329M	Sustituye a Tóner Brother TN-329M Magenta	TN-329M
TARB-TN329MDP	Sustituye a Tóner Brother TN-329M Magenta, Pack Doble	TN-329MTWIN
TARB-TN329Y	Sustituye a Tóner Brother TN-329Y Amarillo	TN-329Y
TARB-TN329YDP	Sustituye a Tóner Brother TN-329Y Amarillo, Pack Doble	TN-329YTWIN
TARB-TN3330	Sustituye a Tóner Brother TN-3330 Negro	TN-3330
TARB-TN3380	Sustituye a Tóner Brother TN-3380 Negro	TN-3380
TARB-TN3390	Sustituye a Tóner Brother TN-3390 Negro	TN-3390
TARB-TN4100	Sustituye a Tóner Brother TN-4100 Negro	TN-4100
TARB-TN4100S4	Sustituye a Tóner Brother TN-4100 Negro, Set Ahorro (4 uds.)	TN-4100
TARB-TN5500	Sustituye a Tóner Brother TN-5500 Negro	TN-5500
TARB-TN5500S4	Sustituye a Tóner Brother TN-5500 Negro, Set Ahorro (4 uds.)	TN-5500
TARB-TN6300	Sustituye a Tóner Brother TN-6300 XXL Negro	TN-6300
TARB-TN6600	Sustituye a Tóner Brother TN-6600 Negro	TN-6600
TARB-TN6600S4	Sustituye a Tóner Brother TN-6600 Negro, Set Ahorro (4 uds.)	TN-6600
TARB-TN7300	Sustituye a Tóner Brother TN-7300 Negro XXL	TN-7300
TARB-TN7600	Sustituye a Tóner Brother TN-7600 Negro	TN-7600
TARB-TN7600S4	Sustituye a Tóner Brother TN-7600 Negro, Set Ahorro (4 uds.)	TN-7600
TARB-TN7600XL	Sustituye a Tóner Brother TN-7600 XXL Negro	TN-7600
TARB-TN900B	Sustituye a Tóner Brother TN-900BK Negro	TN-900BK
TARB-TN900C	Sustituye a Tóner Brother TN-900C Cian	TN-900C
TARB-TN900M	Sustituye a Tóner Brother TN-900M Magenta	TN-900M
TARB-TN900Y	Sustituye a Tóner Brother TN-900Y Amarillo	TN-900Y
TARC-701B	Sustituye a Tóner Canon 9287A003/701BK Negro	9287A003
TARC-701C	Sustituye a Tóner Canon 9286A003/701C Cian	9286A003
TARC-701M	Sustituye a Tóner Canon 9285A003/701M Magenta	9285A003
TARC-701S4	Sustituye a Tóner Canon 701 CMYK, Set Ahorro (4 uds.)	9284-9288A003
TARC-701Y	Sustituye a Tóner Canon 9284A003/701Y Amarillo	9284A003
TARC-707B	Sustituye a Tóner Canon 707 Negro	9424A004
TARC-707C	Sustituye a Tóner Canon 707 Cian	9423A004
TARC-707M	Sustituye a Tóner Canon 707 Magenta	9422A004
TARC-707S4	Sustituye a Tóner Canon 707 CMYK, Set Ahorro (4 uds.)	9421-9424A004
TARC-707Y	Sustituye a Tóner Canon 707 Amarillo	9421A004
TARC-711B	Sustituye a Tóner Canon 1660B002/711BK Negro	1660B002
TARC-711C	Sustituye a Tóner Canon 1659B002/711C Cian	1659B002
TARC-711M	Sustituye a Tóner Canon 1658B002/711M Magenta	1658B002
TARC-711S4	Sustituye a Tóner Canon 711 CMYK, Set Ahorro (4 uds.)	1657-1660B002
TARC-711Y	Sustituye a Tóner Canon 1657B002/711Y Amarillo	1657B002
TARC-712	Sustituye a Tóner Canon 1870B002/712 Negro	1870B002
TARC-713	Sustituye a Tóner Canon 1871B002/713 Negro	1871B002

TARC-714	Sustituye a Tóner Canon 1153B002/714 Negro	1153B002
TARC-715	Sustituye a Tóner Canon 1975B002/715	1975B002
TARC-715H	Sustituye a Tóner Canon 1976B002/715H XL Negro	1976B002
TARC-715HXL	Sustituye a Tóner Canon 1976B002/715H XXL Negro	1976B002
TARC-716B	Sustituye a Tóner Canon 1980B002/716 Negro	1980B002
TARC-716C	Sustituye a Tóner Canon 1979B002/716 Cian	1979B002
TARC-716M	Sustituye a Tóner Canon 1978B002/716 Magenta	1978B002
TARC-716S4	Sustituye a Tóner Canon 716 CMYK, Set Ahorro (4 uds.)	1977-1980B002
TARC-716Y	Sustituye a Tóner Canon 1977B002/716 Amarillo	1977B002
TARC-717C	Sustituye a Tóner Canon 2577B002/717C Cian	2577B002
TARC-717M	Sustituye a Tóner Canon 2576B002/717M Magenta	2576B002
TARC-717Y	Sustituye a Tóner Canon 2575B002/717Y Amarillo	2575B002
TARC-718B	Sustituye a Tóner Canon 2662B002/718BK Negro	2662B002
TARC-718C	Sustituye a Tóner Canon 2661B002/718C Cian	2661B002
TARC-718M	Sustituye a Tóner Canon 2660B002/718M Magenta	2660B002
TARC-718S4	Sustituye a Tóner Canon 718 CMYK, Set Ahorro (4 uds.)	2659-2662B002
TARC-718Y	Sustituye a Tóner Canon 2659B002/718Y Amarillo	2659B002
TARC-720B	Sustituye a Tóner Canon 2617B002/720 Negro	2617B002
TARC-723B	Sustituye a Tóner Canon 2644B002/723BK Negro	2644B002
TARC-723BXL	Sustituye a Tóner Canon 2645B002/723H Negro	2645B002
TARC-723C	Sustituye a Tóner Canon 2643B002/723C Cian	2643B002
TARC-723M	Sustituye a Tóner Canon 2642B002/723M Magenta	2642B002
TARC-723S4	Sustituye a Tóner Canon 723 CMYK, Set Ahorro (4 uds.)	2641-2645B002
TARC-723Y	Sustituye a Tóner Canon 2641B002/723Y Amarillo	2641B002
TARC-725	Sustituye a Tóner Canon 3484B002/725 Negro	3484B002
TARC-725XL	Sustituye a Tóner Canon 3484B002/725 XXL Negro	3484B002XXL
TARC-726	Sustituye a Tóner Canon 3483B002/726 Negro	3483B002
TARC-728	Sustituye a Tóner Canon 3500B002/728 Negro	3500B002
TARC-729B	Sustituye a Tóner Canon 4370B002/729 Negro	4370B002
TARC-729C	Sustituye a Tóner Canon 4369B002/729 Cian	4369B002
TARC-729M	Sustituye a Tóner Canon 4368B002/729 Magenta	4368B002
TARC-729Y	Sustituye a Tóner Canon 4367B002/729 Amarillo	4367B002
TARC-731B	Sustituye a Tóner Canon 6272B002/731BK Negro	6272B002
TARC-731BXL	Sustituye a Tóner Canon 6273B002/731H Negro	6273B002
TARC-731C	Sustituye a Tóner Canon 6271B002/731C Cian	6271B002
TARC-731M	Sustituye a Tóner Canon 6270B002 /731M Magenta	6270B002
TARC-731Y	Sustituye a Tóner Canon 6269B002 /731Y Amarillo	6269B002
TARC-737	Sustituye a Tóner Canon 9435B002/737 Negro	9435B002
TARC-A30	Sustituye a Tóner Canon 1474A003/A30 Negro	1474A003/A30
TARC-CARTM	Sustituye a Tóner Canon M/6812A002 Negro	6812A002
TARC-CARTT	Sustituye a Tóner Canon 7833A002/T XL Negro	7833A002
TARC-CEXV26B	Sustituye a Tóner Canon 1660B006/CEXV26 Negro	1660B002
TARC-CEXV26C	Sustituye a Tóner Canon 1659B006/CEXV26 Cian	1659B006
TARC-CEXV26M	Sustituye a Tóner Canon 1658B006/CEXV26 Magenta	1658B006
TARC-CEXV26S4	Sustituye a Tóner Canon CEXV26 CMYK, Set Ahorro (4 uds.)	1657-1660B006
TARC-CEXV26Y	Sustituye a Tóner Canon 1657B006/CEXV26 Amarillo	1657B006
TARC-CEXV33	Sustituye a Tóner Canon 2785B002/CEXV33 Negro	2785B002
TARC-CEXV40	Sustituye a Tóner Canon 3480B006/C-EXV40 Negro	3480B006
TARC-CRG709	Sustituye a Tóner Canon CRG-709 Negro	CRG-709
TARC-CRG710	Sustituye a Tóner Canon CRG710/0985B001 Negro	0985B001
TARC-DR701	Sustituye a Tambor Canon 9623A003/701 CMYK	9623A003
TARC-E30	Sustituye a Tóner Canon E16/E30 Negro	1491A003
TARC-EP22	Sustituye a Tóner Canon 1550A003/EP-22 Negro	1550A003
TARC-EP25	Sustituye a Tóner Canon 5773A004/EP-25 Negro	5773A004
TARC-EP27	Sustituye a Tóner Canon EP-27/8489 A 2 Negro	8489A002
TARC-EP27XL	Sustituye a Tóner Canon EP-27 XXL/8489 A 2 Negro	8489A002
TARC-EP52	Sustituye a Tóner Canon 3839A003/EP-52 Negro	3839A003
TARC-EP65	Sustituye a Tóner Canon 6751A003/EP-65 Negro	6751A003
TARC-EP85B	Sustituye a Tóner Canon 6825A004/EP-85 Negro	6825A004
TARC-EP85C	Sustituye a Tóner Canon 6824A004/EP-85 Cian	6824A004
TARC-EP85M	Sustituye a Tóner Canon 6823A004/EP-85 Magenta	6823A004
TARC-EP85S4	Sustituye a Tóner Canon EP-85 CMYK, Set Ahorro (4 uds.)	6822A004
TARC-EP85Y	Sustituye a Tóner Canon 6822A004/EP-85 Amarillo	6822A004
TARC-EP87B	Sustituye a Tóner Canon 7433A003/EP-87BK Negro	7433A003
TARC-EP87C	Sustituye a Tóner Canon 7432A003/EP-87C Cian	7432A003
TARC-EP87M	Sustituye a Tóner Canon 7431A003/EP-87M Magenta	7431A003
TARC-EP87S4	Sustituye a Tóner Canon EP-87 CMYK, Set Ahorro (4 uds.)	EP-87
TARC-EP87Y	Sustituye a Tóner Canon 7430A003/EP-87Y Amarillo	7430A003
TARC-EPA	Sustituye a Tóner Canon 1548A003/EP-A Negro	1548A003
TARC-EPE	Sustituye a Tóner Canon 1538A003/EP-E Negro	1538A003
TARC-EPEX	Sustituye a Tóner Canon EP-EX Negro	1538A003

TARC-FX10	Sustituye a Tóner Canon FX-10 Negro	0263B002
TARC-FX10XL	Sustituye a Tóner Canon 0263B002/FX-10 XXL Negro	0263B002
TARC-FX2	Sustituye a Tóner Canon FX-2 Negro	1556A003
TARC-FX3	Sustituye a Tóner Canon FX-3 Negro	1557A003
TARC-FX3XL	Sustituye a Tóner Canon 1557A003/FX-3 XXL Negro	1557A003
TARC-FX4	Sustituye a Tóner Canon FX-4 Negro	1558A003/FX-4
TARC-FX7	Sustituye a Tóner Canon FX-7 Negro	7621A002
TARC-FX7DP	Sustituye a Tóner Canon FX-7 Negro, Pack Doble	7621A002
TARC-FX8	Sustituye a Tóner Canon FX-8 Negro	8955A001
TARC-FX8S4	Sustituye a Tóner Canon FX-8 Negro, Set Ahorro (4 uds.)	8955A001
TARDL-1100	Sustituye a Tóner Dell 593-10109 Negro	593-10109
TARDL-1100S4	Sustituye a Tóner Dell 593-10109 Negro, Set Ahorro (4 uds.)	593-10109
TARDL-1130	Sustituye a Tóner Dell 593-10961/7H53W Negro	593-10961
TARDL-1250B	Sustituye a Tóner Dell 593-11140/DC9NW Negro	593-11140
TARDL-1250C	Sustituye a Tóner Dell 593-11141/79K5P Cian	593-11141
TARDL-1250M	Sustituye a Tóner Dell 593-11142/4DV2W Magenta	593-11142
TARDL-1250S4	Sustituye a Tóner Dell 593-11140-43 CMYK, Set Ahorro (4 uds.)	593-11140-43
TARDL-1250Y	Sustituye a Tóner Dell 593-11143/W8X8P Amarillo	593-11143
TARDL-1710	Sustituye a Tóner Dell 593-10042/K3756/1710 Negro	593-10102
TARDL-17102	Sustituye a Tóner Dell 593-10042/K3756 Negro	593-10042
TARDL-2145B	Sustituye a Tóner Dell 593-10368 Negro	593-10368
TARDL-2145C	Sustituye a Tóner Dell 593-10369 Cian	593-10369
TARDL-2145S4	Sustituye a Tóner Dell 2145 CMYK, Set Ahorro (4 uds.)	593-10368-71
TARDL-2150B	Sustituye a Tóner Dell 593-11040/MY5TJ Negro	593-11040
TARDL-2150BDP	Sustituye a Tóner Dell 593-11035/84R1W Negro, Pack Doble	593-11035
TARDL-2150C	Sustituye a Tóner Dell 592-11674 Cian	592-11674
TARDL-2150M	Sustituye a Tóner Dell 592-11666 Magenta	592-11666
TARDL-2150S4	Sustituye a Tóner Dell 2150/2155 CMYK, Set Ahorro (4 uds.)	593-11040
TARDL-2150Y	Sustituye a Tóner Dell 592-11670 Amarillo	592-11670
TARDL-2230	Sustituye a Tóner Dell 59310501/59310500/M797K/P578K Negro	593-10501
TARDL-2230DP	Sustituye a Tóner Dell M797K/P578K Negro, Pack Doble	593-10501
TARDL-2330	Sustituye a Tóner Dell 593-10337/PK492 Negro	593-10337
TARDL-2330DP	Sustituye a Tóner Dell 593-10337/PK492 Negro, Pack Doble	593-10337
TARDL-2330XL	Sustituye a Tóner Dell 593-10335/PK941 Negro	593-10335
TARDL-2330XLDP	Sustituye a Tóner Dell 593-10335/PK941 Negro, Pack Doble	593-10335
TARDL-2360	Sustituye a Tóner Dell 593-11165/7MC5J Negro	593-11165
TARDL-2360XL	Sustituye a Tóner Dell 593-11167/C3NTP Negro	593-11167
TARDL-2375	Sustituye a Tóner Dell 593-BBBI/N2XPF Negro	593-BBBI
TARDL-2375XL	Sustituye a Tóner Dell 593-BBBJ/8PTH4 Negro	593-BBBJ
TARDL-2500	Sustituye a Tóner Dell 310-3547/2Y667 Negro	593-10025
TARDL-2660B	Sustituye a Tóner Dell 593-BBBO/Y5CW4 Negro	593-BBBO
TARDL-2660BXL	Sustituye a Tóner Dell 593-BBBU/RD80W Negro	593-BBBU
TARDL-2660C	Sustituye a Tóner Dell 593-BBBT/488NH Cian	593-BBBT
TARDL-2660M	Sustituye a Tóner Dell 593-BBBS/VXCWK Magenta	593-BBBS
TARDL-2660Y	Sustituye a Tóner Dell 593-BBBR/YR3W3 Amarillo	593-BBBR
TARDL-3010B	Sustituye a Tóner Dell 3010 Negro	593-10154
TARDL-3010C	Sustituye a Tóner Dell 3010 Cian	593-10155
TARDL-3010M	Sustituye a Tóner Dell 3010 Magenta	593-10157
TARDL-3010Y	Sustituye a Tóner Dell 3010 Amarillo	593-10156
TARDL-3100B	Sustituye a Tóner Dell 593-10067/K4971 Negro	593-10067
TARDL-3100C	Sustituye a Tóner Dell 310-5731/K4973 Cian	593-10064
TARDL-3100M	Sustituye a Tóner Dell 310-5730/K4972 Magenta	593-10065
TARDL-3100S4	Sustituye a Tóner Dell 3000/3100 CMYK, Set Ahorro (4 uds.)	593-10064-67
TARDL-3100Y	Sustituye a Tóner Dell 310-5729/K4974 Amarillo	593-10066
TARDL-3110B	Sustituye a Tóner Dell 593-10170/PF030/3110 Negro	593-10170
TARDL-3110C	Sustituye a Tóner Dell 593-10171/PF029/3110 Cian	593-10171
TARDL-3110M	Sustituye a Tóner Dell 593-10172/RF013/3110 Magenta	593-10172
TARDL-3110S4	Sustituye a Tóner Dell 3110 CMYK, Set Ahorro (4 uds.)	593-10170-73
TARDL-3110Y	Sustituye a Tóner Dell 593-10173/NF556/3110 Amarillo	593-10173
TARDL-3130B	Sustituye a Tóner Dell 593-10289/H516C Negro	593-10289
TARDL-3130C	Sustituye a Tóner Dell 593-10290/H513C Cian	593-10290
TARDL-3130M	Sustituye a Tóner Dell 593-10292/H514C Magenta	593-10292
TARDL-3130S4	Sustituye a Tóner Dell 3130 CMYK, Set Ahorro (4 uds.)	593-10289-92
TARDL-3130Y	Sustituye a Tóner Dell 593-10291/H515C Amarillo	593-10291
TARDL-3330	Sustituye a Tóner Dell 593-10839/593-10838 Negro	593-10839
TARDL-3333	Sustituye a Tóner Dell 593-11055/YY0JN Negro	593-11055
TARDL-3333XL	Sustituye a Tóner Dell 593-11056/G7D0Y Negro	593-11056
TARDL-5100B	Sustituye a Tóner Dell 310-5807/5100 Negro	310-5807
TARDL-5100C	Sustituye a Tóner Dell 310-5810/5100 Cian	310-5810
TARDL-5100M	Sustituye a Tóner Dell 310-5809/5100 Magenta	310-5809
TARDL-5100S4	Sustituye a Tóner Dell 5100 CMYK, Set Ahorro (4 uds.)	310-5807-10

TARDL-5100Y	Sustituye a Tóner Dell 310-5808/5100 Amarillo	310-5808
TARDL-5110B	Sustituye a Tóner Dell 593-10120/5110 Negro	593-10120
TARDL-5110C	Sustituye a Tóner Dell 593-10118/GD907/5110 Cian	593-10118
TARDL-5110M	Sustituye a Tóner Dell 593-10124/KD566/5110 Magenta	593-10124
TARDL-5110S4	Sustituye a Tóner Dell 593-10118-24/5110 CMYK, Set Ahorro (4 uds.)	593-10118-24
TARDL-5110XLB	Sustituye a Tóner Dell 593-10121/GD898/5110 Negro	593-10121
TARDL-5110XLY	Sustituye a Tóner Dell 593-10123/JD750/5110 Amarillo	593-10123
TARDL-5110Y	Sustituye a Tóner Dell 593-10122/HG308/5110 Amarillo	593-10122
TARDL-5130B	Sustituye a Tóner Dell 593-10925/5130/Negro	593-10925
TARDL-5130C	Sustituye a Tóner Dell 593-10922/5130 Cian	593-10922
TARDL-5130M	Sustituye a Tóner Dell 593-10923/5130 Magenta	593-10923
TARDL-5130Y	Sustituye a Tóner Dell 593-10924/5130 Amarillo	593-10924
TARDL-5200	Sustituye a Tóner Dell 310-4133/X2046 Negro	595-10003
TARDL-5210	Sustituye a Tóner Dell 593-10131/HD767 Negro	593-10131
TARDL-5230	Sustituye a Tóner Dell 593-11050/Y902R Negro	593-11050
TARDL-525B	Sustituye a Tóner Dell 593-BBLN/DPV4T Negro	593-BBLN
TARDL-525C	Sustituye a Tóner Dell 593-BLL/H5WFX Cian	593-BLL
TARDL-525M	Sustituye a Tóner Dell 593-BBLZ/G20VW Magenta	593-BBLZ
TARDL-525S4	Sustituye a Tóner Dell 593-BBL CMYK, Set Ahorro	593-BBLN
TARDL-525Y	Sustituye a Tóner Dell 593-BBLV/3581G Amarillo	593-BBLV
TARDL-5300	Sustituye a Tóner Dell 310-4587/N2157 Negro	595-10006
TARDL-5330	Sustituye a Tóner Dell 593-10332/NY313 Negro	593-10332
TARDL-5460	Sustituye a Tóner Dell 593-11190/PG6NR Negro	593-11190
TARDL-5460XL	Sustituye a Tóner Dell 593-11186/98VWN Negro	593-11186
TARDL-7130B	Sustituye a Tóner Dell 593-10873/7130 Negro	593-10873
TARDL-7130C	Sustituye a Tóner Dell 593-10876/7130 Cian	593-10876
TARDL-7130M	Sustituye a Tóner Dell 593-10875/7130 Magenta	593-10875
TARDL-7130Y	Sustituye a Tóner Dell 593-10878/7130 Amarillo	593-10878
TARDL-DR1235	Sustituye a Tambor Dell 593-10504/Dell 1235/K110K CMYK	593-10504
TARDL-DR1720	Sustituye a Tambor Dell 593-10241/TJ987	593-10241
TARDL-DR2230	Sustituye a Tambor Dell 593-10338	593-10338
TARDL-DR3100	Sustituye a Tambor Dell 593-10076 CMYK	593-10076
TARDV-TN318B	Sustituye a Tóner Develop A0DK1D3/TN318K Negro	A0DK1D3
TARDV-TN318C	Sustituye a Tóner Develop A0DK4D3/TN318C Cian	A0DK4D3
TARDV-TN318M	Sustituye a Tóner Develop A0DK3D3/TN318M Magenta	A0DK3D3
TARDV-TN318S4	Sustituye a Tóner Develop TN-318 CMYK, Set Ahorro (4 uds.)	A0DK1D3-4D3
TARDV-TN318Y	Sustituye a Tóner Develop A0DK2D3/TN318Y Amarillo	A0DK2D3
TARE-C1100B	Sustituye a Tóner Epson S050190 Negro	C13S050190
TARE-C1100BDP	Sustituye a Tóner Epson S050190 Negro, Pack Doble	C13S050190
TARE-C1100C	Sustituye a Tóner Epson S050189 Cian	C13S050189
TARE-C1100M	Sustituye a Tóner Epson S050188 Magenta	C13S050188
TARE-C1100S4	Sustituye a Tóner Epson C1100 CMYK, Set Ahorro (4 uds.)	C13S050187-190
TARE-C1100Y	Sustituye a Tóner Epson S050187 Amarillo	C13S050187
TARE-C1600B	Sustituye a Tóner Epson C13S050557 Negro	C13S050557
TARE-C1600C	Sustituye a Tóner Epson C13S050556 Cian	C13S050556
TARE-C1600M	Sustituye a Tóner Epson C13S050555 Magenta	C13S050555
TARE-C1600S4	Sustituye a Tóner Epson C1600 CMYK, Set Ahorro (4 uds.)	C13S050554-57
TARE-C1600Y	Sustituye a Tóner Epson C13S050554 Amarillo	C13S050554
TARE-C1700B	Sustituye a Tóner Epson C13S050614 Negro	C13S050614
TARE-C1700C	Sustituye a Tóner Epson C13S050613 Cian	C13S050613
TARE-C1700M	Sustituye a Tóner Epson C13S050612 Magenta	C13S050612
TARE-C1700S4	Sustituye a Tóner Epson C1700/C1750 CMYK, Set Ahorro (4 uds.)	C13S050611-14
TARE-C1700Y	Sustituye a Tóner Epson C13S050611 Amarillo	C13S050611
TARE-C2600B	Sustituye a Tóner Epson C13S050229/C2600 Negro	C13S050229
TARE-C2600M	Sustituye a Tóner Epson C13S050227/C2600 Magenta	C13S050227
TARE-C2600Y	Sustituye a Tóner Epson C13S050226/C2600 Amarillo	C13S050226
TARE-C2800B	Sustituye a Tóner Epson C13S051161/C2800 Negro	C13S051161
TARE-C2800C	Sustituye a Tóner Epson C13S051160/C2800 Cian	C13S051160
TARE-C2800M	Sustituye a Tóner Epson C13S051159/C2800 Magenta	C13S051159
TARE-C2800S4	Sustituye a Tóner Epson C2800 CMYK, Set Ahorro (4 uds.)	C13S051158-61
TARE-C2800Y	Sustituye a Tóner Epson C13S051158/C2800 Amarillo	C13S051158
TARE-C2900B	Sustituye a Tóner Epson C13S050630 Negro	C13S050630
TARE-C2900C	Sustituye a Tóner Epson C13S050629 Cian	C13S050629
TARE-C2900M	Sustituye a Tóner Epson C13S050628 Magenta	C13S050628
TARE-C2900S4	Sustituye a Tóner Epson C2900 CMYK, Set Ahorro (4 uds.)	C13S050627-30
TARE-C2900Y	Sustituye a Tóner Epson C13S050627 Amarillo	C13S050627
TARE-C3000B	Sustituye a Tóner Epson C13S050213/C3000 Negro	C13S050213
TARE-C3000C	Sustituye a Tóner Epson C13S050212/C3000 Cian	C13S050212
TARE-C3000M	Sustituye a Tóner Epson C13S050211/C3000 Magenta	C13S050211
TARE-C3000S4	Sustituye a Tóner Epson C13S050210-C13S050213 CMYK, Set Ahorro (4 uds.)	C13S050210 - C13S050213
TARE-C3000Y	Sustituye a Tóner Epson C13S050210/C3000 Amarillo	C13S050210

TARE-C3800B	Sustituye a Tóner Epson C13S051127/C3800 Negro	C13S051127
TARE-C3800C	Sustituye a Tóner Epson C13S051126/C3800 Cian	C13S051126
TARE-C3800M	Sustituye a Tóner Epson C13S051125/C3800 Magenta	C13S051125
TARE-C3800S4	Sustituye a Tóner Epson C3800 CMYK, Set Ahorro (4 uds.)	C13S051124-27
TARE-C3800Y	Sustituye a Tóner Epson C13S051124/C3800 Amarillo	C13S051124
TARE-C3900B	Sustituye a Tóner Epson C13S050593 Negro	C13S050593
TARE-C3900BDP	Sustituye a Tóner Epson C13S050594 Negro, Pack Doble	C13S050594
TARE-C3900C	Sustituye a Tóner Epson C13S050592 Cian	C13S050592
TARE-C3900M	Sustituye a Tóner Epson C13S050591 Magenta	C13S050591
TARE-C3900S4	Sustituye a Tóner Epson C3900/CX37 CMYK, Set Ahorro (4 uds.)	C13S050590-93
TARE-C3900Y	Sustituye a Tóner Epson C13S050590 Amarillo	C13S050590
TARE-C4000C	Sustituye a Tóner Epson C13S050090/C4000 Cian	C13S050090
TARE-C4000M	Sustituye a Tóner Epson C13S050089/C4000 Magenta	C13S050089
TARE-C4000S3	Sustituye a Tóner Epson C13S050088-C13S050090 CMY, Set Ahorro (3 uds.)	C13S050090
TARE-C4000Y	Sustituye a Tóner Epson C13S050088/C4000 Amarillo	C13S050088
TARE-C4200B	Sustituye a Tóner Epson C13S050245/0245/C4200 Negro	C13S050245
TARE-C4200C	Sustituye a Tóner Epson C13S050244/0244/C4200 Cian	C13S050244
TARE-C4200M	Sustituye a Tóner Epson C13S050243/0243/C4200 Magenta	C13S050243
TARE-C4200S4	Sustituye a Tóner Epson C4200, Set Ahorro CMYK (4 uds.)	C13S050242-45
TARE-C4200Y	Sustituye a Tóner Epson C13S050242/0242/C4200 Amarillo	C13S050242
TARE-C900B	Sustituye a Tóner Epson C13S050100 Negro	C13S050100
TARE-C900C	Sustituye a Tóner Epson C13S050099 Cian	C13S050099
TARE-C900M	Sustituye a Tóner Epson C13S050098 Magenta	C13S050098
TARE-C900S4	Sustituye a Tóner Epson C900 CMYK, Set Ahorro (4 uds.)	C13S050100-97-99
TARE-C900Y	Sustituye a Tóner Epson C13S050097 Amarillo	C13S050097
TARE-CX21B	Sustituye a Tóner Epson C13S050319 Negro	C13S050319
TARE-CX21C	Sustituye a Tóner Epson C13S050318 Cian	C13S050318
TARE-CX21M	Sustituye a Tóner Epson C13S050317 Magenta	C13S050317
TARE-CX21S4	Sustituye a Tóner Epson CX21 CMYK, Set Ahorro (4 uds.)	C13S050316-19
TARE-CX21Y	Sustituye a Tóner Epson C13S050316 Amarillo	C13S050316
TARE-DR1083	Sustituye a Tambor Epson C13S051083	C13S051083
TARE-DR1099	Sustituye a Tambor Epson C13S051099	C13S051099
TARE-DR1104	Sustituye a Tambor Epson C13S051104	C13S051104
TARE-DRC3900B	Sustituye a Tambor Epson C13S051204 Negro	C13S051204
TARE-DRC3900C	Sustituye a Tambor Epson C13S051203 Cian	C13S051203
TARE-DRC3900M	Sustituye a Tambor Epson C13S051202 Magenta	C13S051202
TARE-DRC3900S4	Sustituye a Tambor Epson C13S051204-01 CMYK, Set Ahorro (4 uds.)	C13S051201-04
TARE-DRC3900Y	Sustituye a Tambor Epson C13S051201 Amarillo	C13S051201
TARE-EC1000B	Sustituye a Tóner Epson C13S050033 Negro	C13S050033
TARE-EC1000C	Sustituye a Tóner Epson C13S050036 Cian	C13S050036
TARE-EC1000M	Sustituye a Tóner Epson C13S050035 Magenta	C13S050035
TARE-EC1000S4	Sustituye a Tóner Epson C1000, Set Ahorro CMYK (4 uds.)	C13S050033-36
TARE-EC1000Y	Sustituye a Tóner Epson C13S050034 Amarillo	C13S050034
TARE-EPL5000	Sustituye a Tóner Epson C13S051011 Negro	C13S051011
TARE-EPL5500	Sustituye a Tóner Epson C13S050005 Negro	C13S050005
TARE-EPL5600	Sustituye a Tóner Epson C13S051016 Negro	C13S051016
TARE-EPL5700	Sustituye a Tóner Epson C13S050010 Negro	C13S050010
TARE-EPL5900	Sustituye a Tóner Epson C13S050087 Negro	C13S050087
TARE-EPL6200	Sustituye a Tóner Epson C13S050167 Negro	C13S050167
TARE-EPLN1600	Sustituye a Tóner Epson C13S051056 Negro	C13S051056
TARE-EPLN2050	Sustituye a Tóner Epson C13S051070 Negro	C13S051070
TARE-EPLN2550	Sustituye a Tóner Epson C13S050290 Negro	C13S050290
TARE-EPLN2700	Sustituye a Tóner Epson C13S051068 Negro	C13S051068
TARE-EPLN3000	Sustituye a Tóner Epson EPL-N3000/C13S051111 Negro	C13S051111
TARE-EPLN4000	Sustituye a Tóner Epson C13S051060 Negro	C13S051060
TARE-EPLN6200	Sustituye a Tóner Epson C13S050166/EPL-N6200 Negro	C13S050166
TARE-M400	Sustituye a Tóner Epson C13S050697/0697 Negro	C13S050697
TARE-M4000	Sustituye a Tóner Epson C13S051173/C13S051170/M4000 Negro	C13S051173
TARGT-8108M	Sustituye a Tóner Tally Genicom T8108 Magenta	43797
TARH-92274A	Sustituye a Tóner HP 92274A Negro	92274A
TARH-92274AS4	Sustituye a Tóner HP 92274A Negro, Set Ahorro (4 uds.)	92274A
TARH-92275A/EPL	Sustituye a Tóner HP 92275A Negro	92275A/EP-L
TARH-92295A	Sustituye a Tóner HP 92295A Negro	1524A015
TARH-92298A	Sustituye a Tóner HP 92298A Negro	92298A/98A
TARH-92298AS4	Sustituye a Tóner HP 92298A Negro, Set Ahorro (4 uds.)	92298A
TARH-92298X	Sustituye a Tóner HP 92298X Negro	92298X
TARH-92298XLS4	Sustituye a Tóner HP 92298X XXL Negro, Set Ahorro (4 uds.)	92298X
TARH-92298XS4	Sustituye a Tóner HP 92298X Negro, Set Ahorro (4 uds.)	92298X
TARH-C3900A	Sustituye a Tóner HP C3900A Negro	C3900A/00A
TARH-C3903A	Sustituye a Tóner HP C3903A Negro	C3903A/03A
TARH-C3903AS4	Sustituye a Tóner HP C3903A Negro, Set Ahorro (4 uds.)	C3903A/03A

TARH-C3906A	Sustituye a Tóner HP C3906A Negro	C3906A/06A
TARH-C3906AS4	Sustituye a Tóner HP C3906A Negro, Set Ahorro (4 uds.)	30021
TARH-C3906AXL	Sustituye a Tóner HP C3906A XL Negro	C3906A/06A
TARH-C3906AXLS4	Sustituye a Tóner HP C3906A XL Negro, Set Ahorro (4 uds.)	HC3906AXL
TARH-C3909A	Sustituye a Tóner HP C3909A Negro	C3909A/09A
TARH-C3909ADP	Sustituye a Tóner HP C3909A Negro, Pack Doble	C3909A/09A
TARH-C4092A	Sustituye a Tóner HP C4092A Negro	C4092A/92A
TARH-C4092AS4	Sustituye a Tóner HP C4092A/EP-22 Negro, Set Ahorro (4 uds.)	C4092A/92A
TARH-C4092AXL	Sustituye a Tóner HP C4092X/EP-22 XXL Negro	C4092A/92A
TARH-C4092AXLS4	Sustituye a Tóner HP C4092X/EP-22 XXL Negro, Set Ahorro (4 uds.)	C4092A/92A
TARH-C4096A	Sustituye a Tóner HP C4096A Negro	C4096A/96A
TARH-C4096AS4	Sustituye a Tóner HP C4096A Negro, Set Ahorro (4 uds.)	C4096A/96A
TARH-C4096X	Sustituye a Tóner HP C4096X Negro	C4096X/96X
TARH-C4096XS4	Sustituye a Tóner HP C4096X Negro, Set Ahorro (4 uds.)	C4096X/96X
TARH-C4127X	Sustituye a Tóner HP C4127X/27X Negro	C4127X
TARH-C4127XL	Sustituye a Tóner HP C4127X/27X XXL Negro	C4127X/27X
TARH-C4127XLS4	Sustituye a Tóner HP C4127X/27X XXL Negro, Set Ahorro (4 uds.)	C4127X/27X
TARH-C4127XS4	Sustituye a Tóner HP C4127X/27X Negro, Set Ahorro (4 uds.)	C4127X/27X
TACH-C4127X	Sustituye a Tóner HP C4127X/27X Negro	002-01-S4127X
TARH-C4129X	Sustituye a Tóner HP C4129X/29X Negro	C4129X/29X
TARH-C4149A	Sustituye a Tóner HP C4149A Negro	C4149A
TARH-C4150A	Sustituye a Tóner HP C4150A Cian	C4150A
TARH-C4151A	Sustituye a Tóner HP C4151A Magenta	C4151A
TARH-C4152A	Sustituye a Tóner HP C4152A Amarillo	C4152A
TARH-C4182X	Sustituye a Tóner HP C4182X Negro	C4182X/82X
TARH-C4191A	Sustituye a Tóner HP C4191A Negro	C4191A
TARH-C4192A	Sustituye a Tóner HP C4192A Cian	C4192A
TARH-C4193A	Sustituye a Tóner HP C4193A Magenta	C4193A
TARH-C4194A	Sustituye a Tóner HP C4194A Amarillo	C4194A
TARH-C7115X	Sustituye a Tóner HP C7115X/15X Negro	C7115X
TARH-C7115XL	Sustituye a Tóner HP C7115X XXL Negro	C7115X/15X
TARH-C7115XXL	Sustituye a Tóner HP C7115XX XXL Negro	C7115X/15X
TARH-C8061X	Sustituye a Tóner HP C8061X/61X Negro	C8061X/61X
TARH-C8061XDP	Sustituye a Tóner HP C8061XD/61X Negro, Pack Doble	C8061X/61X
TARH-C8061XL	Sustituye a Tóner HP C8061X/61X XXL Negro	C8061X/61X
TACH-C8061X	Sustituye a Tóner HP C8061X/61X Negro	002-01-S8061X
TARH-C8543X	Sustituye a Tóner HP C8543X Negro	C8543X/43X
TARH-S8543X	Sustituye a Tóner HP C8543X Negro	RCC8543X
TARH-C9700A	Sustituye a Tóner HP C9700A Negro	C9700A
TARH-C9700AS4	Sustituye a Tóner HP C9700A-C9703A CMYK, Set Ahorro (4 uds.)	C9700A-C9703A
TARH-C9701A	Sustituye a Tóner HP C9701A Cian	C9701A
TARH-C9702A	Sustituye a Tóner HP C9702A Amarillo	C9702A
TARH-C9703A	Sustituye a Tóner HP C9703A Magenta	C9703A
TARH-C9720A	Sustituye a Tóner HP C9720A Negro	C9720A
TARH-C9720AS4	Sustituye a Tóner HP C9720A-C9723A CMYK, Set Ahorro (4 uds.)	C9720A-C9723A
TARH-C9721A	Sustituye a Tóner HP C9721A Cian	C9721A
TARH-C9722A	Sustituye a Tóner HP C9722A Amarillo	C9722A
TARH-C9723A	Sustituye a Tóner HP C9723A Magenta	C9723A
TARH-C9730A	Sustituye a Tóner HP C9730A Negro	C9730A
TARH-C9730AS4	Sustituye a Tóner HP C9730A-C9733A CMYK, Set Ahorro (4 uds.)	C9730A
TARH-C9731A	Sustituye a Tóner HP C9731A Cian	C9731A
TARH-C9732A	Sustituye a Tóner HP C9732A Amarillo	C9732A
TARH-C9733A	Sustituye a Tóner HP C9733A Magenta	C9733A
TACH-C9730A	Sustituye a Tóner HP C9730A Negro	002-01-S9730A
TACH-C9731A	Sustituye a Tóner HP C9731A Cian	002-01-S9731A
TACH-C9732A	Sustituye a Tóner HP C9732A Amarillo	002-01-S9732A
TACH-C9733A	Sustituye a Tóner HP C9733A Magenta	002-01-S9733A
TARH-CB380A	Sustituye a Tóner HP CB380A Negro	CB380A
TARH-CB380AS4	Sustituye a Tóner HP CB380A-CB383A CMYK, Set Ahorro (4 uds.)	CB380A-CB383A
TARH-CB381A	Sustituye a Tóner HP CB381A Cian	CB381A
TARH-CB382A	Sustituye a Tóner HP CB382A Amarillo	CB382A
TARH-CB383A	Sustituye a Tóner HP CB383A Magenta	CB383A
TARH-CB390A	Sustituye a Tóner HP CB390A Negro	CB390A
TARH-CB390AS4	Sustituye a Tóner HP CB390A-CB383A CMYK, Set Ahorro (4 uds.)	CB390A/81-83A
TARH-CB400A	Sustituye a Tóner HP CB400A Negro	CB400A
TARH-CB400AS4	Sustituye a Tóner HP CB400A-CB403A CMYK, Set Ahorro (4 uds.)	CB400A-CB403A
TARH-CB401A	Sustituye a Tóner HP CB401A Cian	CB401A
TARH-CB402A	Sustituye a Tóner HP CB402A Amarillo	CB402A
TARH-CB403A	Sustituye a Tóner HP CB403A Magenta	CB403A
TARH-CB435A	Sustituye a Tóner HP CB435A Negro	CB435A/35A
TACH-SB435A	Sustituye a Tóner HP CB435A/CB436/CE285A/CE278A negro	002-01-SB435AU

TARH-CB435AXL	Sustituye a Tóner HP CB435A XXL	CB435A/35A
TARH-CB436	Sustituye a Tóner HP CB436A XXL	CB436A/36A
TARH-CB436A	Sustituye a Tóner HP CB436A/36A Negro	CB436A/36A
TARH-CB436ADP	Sustituye a Tóner HP CB436AD/36A Negro, Pack Doble	CB436A/36A
TARH-CB436AS4	Sustituye a Tóner HP CB436A/36A Negro, Set Ahorro (4 uds.)	CB436A
TARH-CB540A	Sustituye a Tóner HP CB540A Negro	CB540A
TARH-CB540ADDP	Sustituye a Tóner HP CB540AD/125A Negro, Pack Doble	CB540AD
TARH-CB540A-S10	Sustituye a Tóner HP CB540-43A 4K/2CMY, Set Ahorro (10 uds.)	CB540A-CB543A
TARH-CB540S4	Sustituye a Tóner HP CB540A-CB543A CMYK, Set Ahorro (4 uds.)	CB540A-CB543A
TARH-CB541A	Sustituye a Tóner HP CB541A Cian	CB541A
TARH-CB542A	Sustituye a Tóner HP CB542A Amarillo	CB542A
TARH-CB543A	Sustituye a Tóner HP CB543A Magenta	CB543A
TACH-CB540A	Sustituye a Tóner HP CB540A Negro	CB540A
TACH-CB541A	Sustituye a Tóner HP CB541A Cian	CB541A
TACH-CB542A	Sustituye a Tóner HP CB542A Amarillo	CB542A
TACH-CB543A	Sustituye a Tóner HP CB543A Magenta	CB543A
TARH-CC364A	Sustituye a Tóner HP CC364A Negro	CC364A/64A
TARH-CC364AS4	Sustituye a Tóner HP CC364A Negro, Set Ahorro (4 uds.)	CC364A
TARH-CC364X	Sustituye a Tóner HP CC364X Negro	CC364X/64X
TARH-CC530A	Sustituye a Tóner HP CC530A Negro	CC530A
TARH-CC530ADDP	Sustituye a Tóner HP CC530AD Negro, Pack Doble	CC530AD
TARH-CC530AS4	Sustituye a Tóner HP CC530A-CC533A CMYK, Set Ahorro (4 uds.)	CC530A-CC533A
TARH-CC531A	Sustituye a Tóner HP CC531A Cian	CC531A
TARH-CC532A	Sustituye a Tóner HP CC532A Amarillo	CC532A
TARH-CC533A	Sustituye a Tóner HP CC533A Magenta	CC533A
TACH-CC530A	Sustituye a Tóner HP CC530A Negro	002-01-SC530A
TACH-CC531A	Sustituye a Tóner HP CC532A Amarillo	002-01-SC531A
TACH-CC532A	Sustituye a Tóner HP CC533A Magenta	002-01-SC532A
TACH-CC533A	Sustituye a Tóner HP CC530A Negro	002-01-SC533A
TARH-CE25053S4	Sustituye a Tóner HP CE250X-53A XL CMYK, Set Ahorro (4 uds.)	CE250X-CE253A
TARH-CE250A	Sustituye a Tóner HP CE250A Negro	CE250A
TARH-CE250X	Sustituye a Tóner HP CE250X Negro	CE250X
TARH-CE251A	Sustituye a Tóner HP CE251A Cian	CE251A
TARH-CE252A	Sustituye a Tóner HP CE252A Amarillo	CE252A
TARH-CE253A	Sustituye a Tóner HP CE253A Magenta	CE253A
TARH-CE260A	Sustituye a Tóner HP CE260A Negro	CE260A
TARH-CE260X	Sustituye a Tóner HP CE260X XXL Negro	CE260X
TARH-CE260XDP	Sustituye a Tóner HP CE260XD/649X Negro, Pack Doble	CE260X
TARH-CE260XS4	Sustituye a Tóner HP CE260X-263A XL, Set Ahorro CMYK (4 uds.)	CE260X/261-63A
TARH-CE261A	Sustituye a Tóner HP CE261A Cian	CE261A
TARH-CE262A	Sustituye a Tóner HP CE262A Amarillo	CE262A
TARH-CE263A	Sustituye a Tóner HP CE263A Magenta	CE263A
TARH-CE264X	Sustituye a Tóner HP CE264X/646X Negro	CE264X
TARH-CE270A	Sustituye a Tóner HP CE270A Negro	CE270A
TARH-CE270AS4	Sustituye a Tóner HP CE270A-CE273A CMYK, Set Ahorro (4 uds.)	CE270A-273A
TARH-CE271A	Sustituye a Tóner HP CE271A Cian	CE271A
TARH-CE272A	Sustituye a Tóner HP CE272A Amarillo	CE272A
TARH-CE273A	Sustituye a Tóner HP CE273A Magenta	CE273A
TARH-CE278A	Sustituye a Tóner HP CE278A Negro	CE278A
TARH-CE278AXL	Sustituye a Tóner HP CE278A XXL Negro	CE278A
TARH-CE285A	Sustituye a Tóner HP CE285A Negro	CE285A
TARH-CE285AS4	Sustituye a Tóner HP CE285A XXL Negro, Set Ahorro (4 uds.)	CE285A
TARH-CE285AXL	Sustituye a Tóner HP CE285A XXL Negro	CE285A
TARH-CE310A	Sustituye a Tóner HP CE310A/126A Negro	CE310A
TARH-CE310ADP	Sustituye a Tóner HP CE310AD/126A Negro, Pack Doble	CE310A
TARH-CE310AS4	Sustituye a Tóner HP CE310A-CE313A CMYK, Set Ahorro (4 uds.)	CE310A-CE313A
TARH-CE311A	Sustituye a Tóner HP CE311A/126A Cian	CE311A
TARH-CE312A	Sustituye a Tóner HP CE312A/126A Amarillo	CE312A
TARH-CE313A	Sustituye a Tóner HP CE313A/126A Magenta	CE313A
TARH-CE320A	Sustituye a Tóner HP CE320A Negro	CE320A
TARH-CE320ADDP	Sustituye a Tóner HP CE320AD/128A Negro, Pack Doble	CE320AD
TARH-CE320AS4	Sustituye a Tóner HP CE320A-CE323A CMYK, Set Ahorro (4 uds.)	CE320A-CE323A
TARH-CE321A	Sustituye a Tóner HP CE321A Cian	CE321A
TARH-CE322A	Sustituye a Tóner HP CE322A Amarillo	CE322A
TARH-CE323A	Sustituye a Tóner HP CE323A Magenta	CE323A
TARH-CE390A	Sustituye a Tóner HP CE390A/90A Negro	CE390A
TARH-CE390AS4	Sustituye a Tóner HP CE390A Negro, Set Ahorro (4 uds.)	CE390A
TARH-CE390X	Sustituye a Tóner HP CE390X/90X Negro	CE390X
TARH-CE400A	Sustituye a Tóner HP CE400A Negro	CE400A
TARH-CE400AS4	Sustituye a Tóner HP CE400A-CE403A CMYK, Set Ahorro (4 uds.)	CE400A-CE403A
TARH-CE400X	Sustituye a Tóner HP CE400X Negro	CE400X

TARH-CE401A	Sustituye a Tóner HP CE401A Cian	CE401A
TARH-CE402A	Sustituye a Tóner HP CE402A Amarillo	CE402A
TARH-CE403A	Sustituye a Tóner HP CE403A Magenta	CE403A
TARH-CE410A	Sustituye a Tóner HP CE410A/305A Negro	CE410A
TARH-CE410L	Sustituye a Tóner HP CE410L XXL Negro	CE410L
TARH-CE410X	Sustituye a Tóner HP CE410X/305X Negro	CE410X
TARH-CE410XDP	Sustituye a Tóner HP CE410X Negro, Pack Doble	CE410X
TARH-CE410XS4	Sustituye a Tóner HP CE410X-413A/305A CMYK, Set Ahorro (4 uds.)	CE410X/411-13A
TARH-CE411A	Sustituye a Tóner HP CE411A/305A Cian	CE411A
TARH-CE411L	Sustituye a Tóner HP CE411L XXL Cian	CE411L
TARH-CE412A	Sustituye a Tóner HP CE412A/305A Amarillo	CE412A
TARH-CE412L	Sustituye a Tóner HP CE412L XXL Amarillo	CE412L
TARH-CE413A	Sustituye a Tóner HP CE413A/305A Magenta	CE413A
TARH-CE740A	Sustituye a Tóner HP CE740A Negro	CE740A
TARH-CE740AS4	Sustituye a Tóner HP CE740A-CE743A CMYK, Set Ahorro (4 uds.)	CE740A-CE743A
TARH-CE741A	Sustituye a Tóner HP CE741A Cian	CE741A
TARH-CE742A	Sustituye a Tóner HP CE742A Amarillo	CE742A
TARH-CE743A	Sustituye a Tóner HP CE743A Magenta	CE743A
TARH-CF033A	Sustituye a Tóner HP CF033A Magenta	CF033A
TARH-CF210A	Sustituye a Tóner HP CF210A Negro	CF210A
TARH-CF210S4	Sustituye a Tóner HP CF210X-CF213A CMYK, Set Ahorro (4 uds.)	CF210X/211-13A
TARH-CF210X	Sustituye a Tóner HP CF210X Negro	CF210X
TARH-CF210XDP	Sustituye a Tóner HP CF210XD 131X Negro, Pack Doble	CF210XD
TARH-CF211A	Sustituye a Tóner HP CF211A Cian	CF211A
TARH-CF211S3	Sustituye a Tóner HP U0SL1AM/131A CMY, Set Ahorro (3 uds.)	CF211A-CF213A
TARH-CF212A	Sustituye a Tóner HP CF212A Amarillo	CF212A
TARH-CF213A	Sustituye a Tóner HP CF213A Magenta	CF213A
TARH-CF214A	Sustituye a Tóner HP CF214A/14A Negro	CF214A
TARH-CF214ADP	Sustituye a Tóner HP CF214A/14A Negro, Pack Doble	CF214A
TARH-CF214X	Sustituye a Tóner HP CF214X/14X Negro	CF214X
TARH-CF281A	Sustituye a Tóner HP CF281A/81A Negro	CF281A
TARH-CF283	Sustituye a Tóner HP CF283X/83X Negro	CF283X
TARH-CF283A	Sustituye a Tóner HP CF283A /83A Negro	CF283A
TARH-CF283AXL	Sustituye a Tóner HP CF283A/83A XL Negro	CF283A
TARH-CF300A	Sustituye a Tóner HP CF300A/827A Negro	CF300A
TARH-CF300AS4	Sustituye a Tóner HP CF300A-CF303A CMYK Set Ahorro (4 uds.)	CF300A
TARH-CF301A	Sustituye a Tóner HP CF301A/827A Cian	CF301A
TARH-CF302A	Sustituye a Tóner HP CF302A/827A Amarillo	CF302A
TARH-CF303A	Sustituye a Tóner HP CF303A/827A Magenta	CF303A
TARH-CF320A	Sustituye a Tóner HP CF320A/652A Negro	CF320A
TARH-CF320X	Sustituye a Tóner HP CF320X/653X Negro	CF320X
TARH-CF321A	Sustituye a Tóner HP CF321A/653A Cian	CF321A
TARH-CF322A	Sustituye a Tóner HP CF322A/653A Amarillo	CF322A
TARH-CF323A	Sustituye a Tóner HP CF323A/653A Magenta	CF323A
TARH-CF325X	Sustituye a Tóner HP CF325X/25X Negro	CF325X
TARH-CF325XL	Sustituye a Tóner HP CF325X/25X XL Negro	CF325XL
TARH-CF330X	Sustituye a Tóner HP CF330X/654X Negro	CF330X
TARH-CF331A	Sustituye a Tóner HP CF331A/654A Cian	CF331A
TARH-CF332A	Sustituye a Tóner HP CF332A/654A Amarillo	CF332A
TARH-CF333A	Sustituye a Tóner HP CF333A/654A Magenta	CF333A
TARH-CF341AS3	Sustituye a Tóner HP CF341A/126A CMY, Set Ahorro (3 uds.)	CF341A
TARH-CF350A	Sustituye a Tóner HP CF350A/130A Negro	CF350A
TARH-CF351A	Sustituye a Tóner HP CF351A/130A Cian	CF351A
TARH-CF352A	Sustituye a Tóner HP CF352A/130A Amarillo	CF352A
TARH-CF353A	Sustituye a Tóner HP CF353A/130A Magenta	CF353A
TARH-CF370AMS3	Sustituye a Tóner HP CF371AM/128A CMY, Set Ahorro (3 uds.)	CE321A
TARH-CF372AMS3	Sustituye a Tóner HP CF372AM/304A CMY, Set Ahorro (3 uds.)	CF372AM
TARH-CF373AMS3	Sustituye a Tóner HP CF373AM/125A CMY, Set Ahorro (3 uds.)	CF373AM
TARH-CF380A	Sustituye a Tóner HP CF380A/312A Negro	CF380A
TARH-CF380X	Sustituye a Tóner HP CF380X /312A Negro	CF380X
TARH-CF380XS4	Sustituye a Tóner HP CF380X-CF383A CMYK, Set Ahorro (4 uds.)	CF380X-CF383A
TARH-CF381A	Sustituye a Tóner HP CF381A/312A Cian	CF381A
TARH-CF382A	Sustituye a Tóner HP CF382A/312A Amarillo	CF382A
TARH-CF383A	Sustituye a Tóner HP CF383A/312A Magenta	CF383A
TARH-DRC4195A	Sustituye a Tambor HP C4195A	C4195A
TARH-DRC9704A	Sustituye a Tambor HP C9704A	C9704A
TARH-DRCB384A	Sustituye a Tambor HP CB384A Negro	CB384A
TARH-DRCB385A	Sustituye a Tambor HP CB385A Cian	CB385A
TARH-DRCB386A	Sustituye a Tambor HP CB386A Amarillo	CB386A
TARH-DRCB387A	Sustituye a Tambor HP CB387A Magenta	CB387A
TARH-DRCE314A	Sustituye a Tambor HP CE314A/126A CMYK	CE314A

TARH-DRQ3964A	Sustituye a Tambor HP Q3964A	Q3964A
TARH-Q1338A	Sustituye a Tóner HP Q1338A Negro	Q1338A/38A
TARH-Q1338AXL	Sustituye a Tóner HP Q1338A/38A Negro	Q1338A
TARH-Q1338AXLS4	Sustituye a Tóner HP Q1338A XXL Negro, Set Ahorro (4 uds.)	Q1338A
TARH-Q1339A	Sustituye a Tóner HP Q1339A/39A Negro	Q1339A
TARH-Q1339ADP	Sustituye a Tóner HP Q1339A Negro, Pack Doble	Q1339A/39A
TARH-Q2610A	Sustituye a Tóner HP Q2610A Negro	Q2610A/10A
TARH-Q2610X	Sustituye a Tóner HP Q2610A XXL Negro	Q2610X
TARH-Q2610XS4	Sustituye a Tóner HP Q2610A XXL Negro, Set Ahorro (4 uds.)	Q2610X
TARH-Q2612A	Sustituye a Tóner HP Q2612A Negro	Q2612A/12A
TARH-Q2612AXL	Sustituye a Tóner HP Q2612X XXL Negro	Q2612A/12A
TARH-Q2613X	Sustituye a Tóner HP Q2613X Negro	Q2613X/13X
TARH-Q2613XL	Sustituye a Tóner HP Q2613XL Negro	Q2613X
TARH-Q2624X	Sustituye a Tóner HP Q2624X Negro	Q2624X/24X
TARH-Q2624XXL	Sustituye a Tóner HP Q2624X XXL Negro	Q2624X/24X
TARH-Q2670A	Sustituye a Tóner HP Q2670A Negro	Q2670A
TARH-Q2670AS4	Sustituye a Tóner HP Q2670A-Q2673A CMYK, Set Ahorro (4 uds.)	Q2670A-Q2673A
TARH-Q2671A	Sustituye a Tóner HP Q2671A Cian	Q2671A
TARH-Q2672A	Sustituye a Tóner HP Q2672A Amarillo	Q2672A
TARH-Q2673A	Sustituye a Tóner HP Q2673A Magenta	Q2673A
TARH-Q2681A	Sustituye a Tóner HP Q2681A Cian	Q2681A
TARH-Q2681AS3	Sustituye a Tóner HP Q2681A-Q2683A CMY, Set Ahorro (3 uds.)	Q2681A-Q2683A
TARH-Q2682A	Sustituye a Tóner HP Q2682A Amarillo	Q2682A
TARH-Q2683A	Sustituye a Tóner HP Q2683A Magenta	Q2683A
TARH-Q3960A	Sustituye a Tóner HP Q3960A Negro	Q3960A
TARH-Q3960AS4	Sustituye a Tóner HP Q3960A-Q3963A CMYK, Set Ahorro (4 uds.)	Q3960A-Q3963A
TARH-Q3961A	Sustituye a Tóner HP Q3961A Cian	Q3961A
TARH-Q3962A	Sustituye a Tóner HP Q3962A Amarillo	Q3962A
TARH-Q3963A	Sustituye a Tóner HP Q3963A Magenta	Q3963A
TARH-Q5942A	Sustituye a Tóner HP Q5942A	Q5942A/42A
TARH-Q5942X	Sustituye a Tóner HP Q5942X Negro	Q5942X
TARH-Q5942XDP	Sustituye a Tóner HP Q5942XD/42X Negro, Pack Doble	Q5942X
TARH-Q5945X	Sustituye a Tóner HP Q5945X Negro	Q5945X
TARH-Q5949A	Sustituye a Tóner HP Q5949A Negro	Q5949A/49A
TARH-Q5949X	Sustituye a Tóner HP Q5949X Negro	Q5949X/49X
TARH-Q5949XL	Sustituye a Tóner HP Q5949XL Negro	Q5949X/49X
TARH-Q5950A	Sustituye a Tóner HP Q5950A Negro	Q5950A
TARH-Q5950AS4	Sustituye a Tóner HP Q5950A-Q5953A CMYK, Set Ahorro (4 uds.)	Q5950A-Q5953A
TARH-Q5951A	Sustituye a Tóner HP Q5951A Cian	Q5951A
TARH-Q5952A	Sustituye a Tóner HP Q5952A Amarillo	Q5952A
TARH-Q5953A	Sustituye a Tóner HP Q5953A Magenta	Q5953A
TARH-Q6000A	Sustituye a Tóner HP Q6000A Negro	Q6000A
TARH-Q6000AS4	Sustituye a Tóner HP Q6000A-Q6003A CMYK, Set Ahorro (4 uds.)	Q6000A-Q6003A
TARH-Q6001A	Sustituye a Tóner HP Q6001A Cian	Q6001A
TARH-Q6002A	Sustituye a Tóner HP Q6002A Amarillo	Q6002A
TARH-Q6003A	Sustituye a Tóner HP Q6003A Magenta	Q6003A
TARH-Q6460A	Sustituye a Tóner HP Q6460A Negro	Q6460A
TARH-Q6460AS4	Sustituye a Tóner HP Q6460A-Q6463A CMYK, Set Ahorro (4 uds.)	Q6460A-Q6463A
TARH-Q6461A	Sustituye a Tóner HP Q6461A Cian	Q6461A
TARH-Q6462A	Sustituye a Tóner HP Q6462A Amarillo	Q6462A
TARH-Q6463A	Sustituye a Tóner HP Q6463A Magenta	Q6463A
TARH-Q6470A	Sustituye a Tóner HP Q6470A Negro	Q6470A
TARH-Q6470AS4	Sustituye a Tóner HP Q6470A-Q6473A CMYK, Set Ahorro (4 uds.)	Q6470A-Q6473A
TARH-Q6471A	Sustituye a Tóner HP Q6471A Cian	Q6471A
TARH-Q6472A	Sustituye a Tóner HP Q6472A Amarillo	Q6472A
TARH-Q6473A	Sustituye a Tóner HP Q6473A Magenta	Q6473A
TARH-Q6511A	Sustituye a Tóner HP Q6511A Negro	Q6511A
TARH-Q6511X	Sustituye a Tóner HP Q6511X Negro	Q6511X/11X
TARH-Q6511XDP	Sustituye a Tóner HP Q6511X XL Negro, Pack Doble	Q6511X
TARH-Q6511XL	Sustituye a Tóner HP Q6511X XL Negro	Q6511X
TARH-Q7516A	Sustituye a Tóner HP Q7516A Negro	Q7516A/16A
TARH-Q7516AS4	Sustituye a Tóner HP Q7516A Negro, Set Ahorro (4 uds.)	Q7516A
TARH-Q7551A	Sustituye a Tóner HP Q7551A Negro	Q7551A/51A
TARH-Q7551AS4	Sustituye a Tóner HP Q7551A Negro, Set Ahorro (4 uds.)	Q7551A/51A
TARH-Q7551X	Sustituye a Tóner HP Q7551X Negro	Q7551X/51X
TARH-Q7551XDP	Sustituye a Tóner HP Q7551XD/51X Negro, Pack Doble	Q7551X/51X
TARH-Q7551XL	Sustituye a Tóner HP Q7551X XXL Negro	Q7551X/51X
TARH-Q7551XLS4	Sustituye a Tóner HP Q7551XXL Negro, Set Ahorro (4 uds.)	Q7551X/51X
TARH-Q7551XS4	Sustituye a Tóner HP Q7551X, Set Ahorro (4 uds.)	Q7551X/51X
TARH-Q7553A	Sustituye a Tóner HP Q7553A	Q7553A
TARH-Q7553AS4	Sustituye a Tóner HP Q7553A Negro, Set Ahorro (4 uds.)	Q7553A

TARH-Q7553X	Sustituye a Tóner HP Q7553X Negro	Q7553X
TARH-Q7553XDP	Sustituye a Tóner HP Q7553XD/53X Negro, Pack Doble	Q7553X
TARH-Q7553XL	Sustituye a Tóner HP Q7553X XXL Negro	Q7553X
TARH-Q7553XS4	Sustituye a Tóner HP Q7553X Negro, Set Ahorro (4 uds.)	Q7553X
TARH-Q7560A	Sustituye a Tóner HP Q7560A Negro	Q7560A
TARH-Q7561A	Sustituye a Tóner HP Q7561A Cian	Q7561A
TARH-Q7562A	Sustituye a Tóner HP Q7562A Amarillo	Q7562A
TARH-Q7563A	Sustituye a Tóner HP Q7563A Magenta	Q7563A
TARH-Q7570A	Sustituye a Tóner HP Q7570A Negro	Q7570A
TARH-Q7581A	Sustituye a Tóner HP Q7581A Cian	Q7581A
TARH-Q7581AS4	Sustituye a Tóner HP Q6470A-Q7583A CMYK, Set Ahorro (4 uds.)	Q6470A-Q7583A
TARH-Q7582A	Sustituye a Tóner HP Q7582A Amarillo	Q7582A
TARH-Q7583A	Sustituye a Tóner HP Q7583A Magenta	Q7583A
TARI-1534S4	Sustituye a Tóner IBM 1534 CMYK, Set Ahorro (4 uds.)	00C5222KS
TARI-28P2008	Sustituye a Tóner IBM 28P2008/28P2010 Negro	28P2008
TARI-28P2492	Sustituye a Tóner IBM 28P2492 Negro	28P2492
TARI-39V0299	Sustituye a Tóner IBM 39V0299 Cian	39V0299
TARI-39V0300	Sustituye a Tóner IBM 39V0300 Magenta	39V0300
TARI-39V0301	Sustituye a Tóner IBM 39V0301 Amarillo	39V0301
TARI-39V0302	Sustituye a Tóner IBM 39V0302 Negro	39V0302
TARI-39V1638	Sustituye a Tóner IBM 39V1638 Negro	39V1638
TARI-53P7707	Sustituye a Tóner IBM 53P7707 Negro	53P7707
TARI-75P4302	Sustituye a Tóner IBM 75P4302 Negro	75P4302
TARI-75P5710	Sustituye a Tóner IBM 75P5710 Negro	75P5710
TARI-DR39V1645	Sustituye a Tóner IBM 39V1645	39V1645
TARKM-160	Sustituye a Tóner Konica Minolta 4518-601/TN 113 Negro	4518-601
TARKM-1600B	Sustituye a Tóner Konica Minolta A0V301H Negro	A0V301H
TARKM-1600BS4	Sustituye a Tóner Konica Minolta 996-7000-465 Negro, Set Ahorro (4 uds.)	996-7000-465
TARKM-1600BXL	Sustituye a Tóner Konica Minolta 996-7000-465 Negro	996-7000-465
TARKM-1600C	Sustituye a Tóner Konica Minolta A0V30HH Cian	A0V30HH
TARKM-1600M	Sustituye a Tóner Konica Minolta A0V30CH Magenta	A0V30CH
TARKM-1600S3	Sustituye a Tóner Konica Minolta A0V30NH CMY, Set Ahorro (3 uds.)	A0V30NH
TARKM-1600S4	Sustituye a Tóner Konica Minolta 1600W CMYK, Set Ahorro (4 uds.)	A0V301H-HH
TARKM-1600Y	Sustituye a Tóner Konica Minolta A0V306H Amarillo	A0V306H
TARKM-20P	Sustituye a Tóner Konica Minolta A32W021 Negro	A32W021
TARKM-2200B	Sustituye a Tóner Konica Minolta 171-0471-001 Negro	171-0471-001
TARKM-2200C	Sustituye a Tóner Konica Minolta 171-0471-004 Cian	171-0471-004
TARKM-2200M	Sustituye a Tóner Konica Minolta 171-0471-003 Magenta	171-0471-003
TARKM-2200S4	Sustituye a Tóner Konica Minolta 171-0471 CMYK, Set Ahorro (4 uds.)	171-0471-001-004
TARKM-2200Y	Sustituye a Tóner Konica Minolta 171-0471-002 Amarillo	171-0471-002
TARKM-2300B	Sustituye a Tóner Konica Minolta 171-0517-005 Negro	171-0517-005
TARKM-2300C	Sustituye a Tóner Konica Minolta 171-0517-008 Cian	171-0517-008
TARKM-2300M	Sustituye a Tóner Konica Minolta 171-0517-007 Magenta	171-0517-007
TARKM-2300S4	Sustituye a Tóner Konica Minolta 2300 CMYK, Set Ahorro (4 uds.)	171-0517-005-008
TARKM-2300Y	Sustituye a Tóner Konica Minolta 171-0517-006 Amarillo	171-0517-006
TARKM-2400B	Sustituye a Tóner Konica Minolta 171-0589-004 Negro	171-0589-004
TARKM-2400C	Sustituye a Tóner Konica Minolta 171-0589-007 Cian	171-0589-007
TARKM-2400M	Sustituye a Tóner Konica Minolta 171-0589-006 Magenta	171-0589-006
TARKM-2400S4	Sustituye a Tóner Konica Minolta 2400 CMYK, Set Ahorro (4 uds.)	171-0589-004-007
TARKM-2400Y	Sustituye a Tóner Konica Minolta 171-0589-005 Amarillo	171-0589-005
TARKM-3300B	Sustituye a Tóner Konica Minolta 9960A171-0550-001 Negro	9960A171-0550-001
TARKM-3300C	Sustituye a Tóner Konica Minolta 9960A171-0550-004 Cian	9960A171-0550-004
TARKM-3300M	Sustituye a Tóner Konica Minolta 9960A171-0550-003 Magenta	9960A171-0550-003
TARKM-3300Y	Sustituye a Tóner Konica Minolta 9960A171-0550-002 Amarillo	9960A171-0550-002
TARKM-3700B	Sustituye a Tóner Konica Minolta A0WG02H/TNP-20 Negro	A0WG02H
TARKM-3700C	Sustituye a Tóner Konica Minolta A0WG0JH/TNP-20 Cian	A0WG0JH
TARKM-3700M	Sustituye a Tóner Konica Minolta A0WGDH/TNP-20 Magenta	A0WGDH
TARKM-3700Y	Sustituye a Tóner Konica Minolta A0WG07H/TNP-20 Amarillo	A0WG07H
TARKM-40P	Sustituye a Tóner Konica Minolta A0FP023/040P/Negro	A0FP023
TARKM-4650B	Sustituye a Tóner Konica Minolta A0DK152 Negro	A0DK152
TARKM-4650C	Sustituye a Tóner Konica Minolta A0DK452 Cian	A0DK452
TARKM-4650M	Sustituye a Tóner Konica Minolta A0DK352 Magenta	A0DK352
TARKM-4650S3	Sustituye a Tóner Konica Minolta A0DKJ52 CMY, Set Ahorro (3 uds.)	A0DKJ52
TARKM-4650S4	Sustituye a Tóner Konica Minolta QMS 4650 CMYK, Set Ahorro (4 uds.)	A0DK152-A0DK452
TARKM-4650Y	Sustituye a Tóner Konica Minolta A0DK252 Amarillo	A0DK252
TARKM-4750B	Sustituye a Tóner Konica Minolta A0X5150 Negro	A0X5150
TARKM-4750C	Sustituye a Tóner Konica Minolta A0X5450 Cian	A0X5450
TARKM-4750M	Sustituye a Tóner Konica Minolta A0X5350 Magenta	A0X5350
TARKM-4750S4	Sustituye a Tóner Konica Minolta A0X5150-A0X5450, Set Ahorro CMYK (4 uds.)	A0X5150-A0X5450
TARKM-4750Y	Sustituye a Tóner Konica Minolta A0X5250 Amarillo	A0X5250
TARKM-5430B	Sustituye a Tóner Konica Minolta 4539-432/QMS 5430 Negro	4539-432

TARKM-5430C	Sustituye a Tóner Konica Minolta 4539-332/QMS 5430 Cian	4539-332
TARKM-5430M	Sustituye a Tóner Konica Minolta 4539-232/QMS 5430 Magenta	4539-232
TARKM-5430S4	Sustituye a Tóner Konica Minolta QMS 5430 CMYK, Set Ahorro (4 uds.)	171-0582-001-004
TARKM-5430Y	Sustituye a Tóner Konica Minolta 4539-132/QMS 5430 Amarillo	4539-132
TARKM-5440B	Sustituye a Tóner Konica Minolta 4539-434/171-0604-001 Negro	4539-434
TARKM-5440C	Sustituye a Tóner Konica Minolta 4539-334/171-0604-004 Cian	4539-334
TARKM-5440M	Sustituye a Tóner Konica Minolta 4539-234/171-0604-003 Magenta	4539-234
TARKM-5440S4	Sustituye a Tóner Konica Minolta 5440 CMYK, Set Ahorro (4 uds.)	171-0582-001-004
TARKM-5440Y	Sustituye a Tóner Konica Minolta 4539-134/171-0604-002 Amarillo	4539-134
TARKM-5500B	Sustituye a Tóner Konica Minolta A06V153 Negro	A06V153
TARKM-5500C	Sustituye a Tóner Konica Minolta A06V453 Cian	A06V453
TARKM-5500M	Sustituye a Tóner Konica Minolta A06V353 Magenta	A06V353
TARKM-5500S4	Sustituye a Tóner Konica Minolta QMS 5500 CMYK, Set Ahorro (4 uds.)	A06V153-A06V453
TARKM-5500Y	Sustituye a Tóner Konica Minolta A06V253 Amarillo	A06V253
TARKM-7820B	Sustituye a Tóner Konica Minolta IOC9 Negro	950-187
TARKM-7820C	Sustituye a Tóner Konica Minolta IOD0 Cian	950-188
TARKM-7820M	Sustituye a Tóner Konica Minolta IOD1 Magenta	950-189
TARKM-7820Y	Sustituye a Tóner Konica Minolta IOD2 Amarillo	950-190
TARKM-C20B	Sustituye a Tóner Konica Minolta A0DK153/TN-318K Negro	A0DK153
TARKM-C20C	Sustituye a Tóner Konica Minolta A0DK453/TN-318C Cian	A0DK453
TARKM-C20M	Sustituye a Tóner Konica Minolta A0DK353/TN-318M Magenta	A0DK353
TARKM-C20S4	Sustituye a Tóner Konica Minolta TN-318 CMYK, Set Ahorro (4 uds.)	A0DK153-A0DK453
TARKM-C20Y	Sustituye a Tóner Konica Minolta A0DK253/TN-318Y Amarillo	A0DK253
TARKM-DR2300	Sustituye a Tambor Konica Minolta 171-0520-001 CMYK	171-0520-001
TARKM-DR2400	Sustituye a Tambor Konica Minolta 1710591-001 CMYK	171-0591-001
TARKM-DR4650B	Sustituye a Tambor Konica Minolta A03100H Negro	A03100H
TARKM-DR4650C	Sustituye a Tambor Konica Minolta A0310GH Cian	A0310GH
TARKM-DR4650M	Sustituye a Tambor Konica Minolta A0310AH Magenta	A0310AH
TARKM-DR4650S3	Sustituye a Tambor Konica Minolta A0310NH CMY, Set Ahorro (3 uds.)	A0310NH
TARKM-DR4650Y	Sustituye a Tambor Konica Minolta A03105H Amarillo	A03105H
TARKM-DR4750B	Sustituye a Tambor Konica Minolta A0WG03H/IUP-12K Negro	A0WG03H
TARKM-DR4750C	Sustituye a Tambor Konica Minolta A0WG0KH/IUP-12C Cian	A0WG0KH
TARKM-DR4750M	Sustituye a Tambor Konica Minolta A0WG0EH/IUP-12M Magenta	A0WG0EH
TARKM-DR4750Y	Sustituye a Tambor Konica Minolta A0WG08H/IUP-12Y Amarillo	A0WG08H
TARKM-DRPP1250	Sustituye a Tambor Konica Minolta 171-0400-002	171-0400-002
TARKM-DRPP1300	Sustituye a Tambor Konica Minolta 171-0568-001	171-0568-001
TARKM-DRPP6EX	Sustituye a Tambor Konica Minolta 171-0436-001	171-0436-001
TARKM-MF1600	Sustituye a Tóner Konica Minolta 4152-613 Negro	4152-613
TARKM-PP1250	Sustituye a Tóner Konica Minolta 171-0511-001 Negro	171-0511-001
TARKM-PP1300	Sustituye a Tóner Konica Minolta 171-0566-002/PagePro 1300 Negro	171-0567-002
TARKM-PP1400	Sustituye a Tóner Konica Minolta 9J04202 Negro	9J04202
TARKM-PP1480	Sustituye a Tóner Konica Minolta 996-7000-877 Negro	996-7000-877
TARKM-PP1480DP	Sustituye a Tóner Konica Minolta 996-7000-877 Negro, Pack Doble	996-7000-877
TARKM-PP4650	Sustituye a Tóner Konica Minolta PP 4650/AOFN021 Negro	A0FN021
TARKM-PP4650XL	Sustituye a Tóner Konica Minolta PP 4650/AOFN022 XXL Negro	A0FN022
TARKM-PP5650XL	Sustituye a Tóner Konica Minolta A0FP022 XXL Negro	A0FP022
TARKM-PP6EX	Sustituye a Tóner Konica Minolta 171-0433-001 Negro	171-0433-001
TARKM-TNP35	Sustituye a Tóner Konica Minolta A63W01H/TNP-35 Negro	A63W01H
TARKM-TNP40	Sustituye a Tóner Konica Minolta A6WN01H/TNP-40 Negro	A6WN01H
TARKM-TNP41	Sustituye a Tóner Konica Minolta A6WT00H/TNP-41 Negro	A6WT00H
TARKY-DR130	Sustituye a Tambor Kyocera 302HS93011/DK130	302HS93011
TARKY-DR150	Sustituye a Tambor Kyocera 302H493010/DK150	302H493010
TARKY-DR170	Sustituye a Tambor Kyocera 302LZ93060/DK170	302LZ93060
TARKY-TK1115	Sustituye a Tóner Kyocera 1T02M50NLO/TK-1115 Negro	1T02M50NLO
TARKY-TK1115P	Sustituye a Tóner Kyocera 1T02M50NLO/TK-1115 Negro - PREMIUM	1T02M50NLO
TARKY-TK1125	Sustituye a Tóner Kyocera 1T02M70NLO/TK-1125 Negro	1T02M70NLO
TARKY-TK1130	Sustituye a Tóner Kyocera 1T02MJ0NLO/TK-1130 Negro	1T02MJ0NLO
TARKY-TK1130P	Sustituye a Tóner Kyocera 1T02MJ0NLO/TK-1130 Negro - PREMIUM	1T02MJ0NLO
TARKY-TK1140	Sustituye a Tóner Kyocera 1T02ML0NLO/TK-1140 Negro	1T02ML0NLO
TARKY-TK1140P	Sustituye a Tóner Kyocera 1T02ML0NLO/TK-1140 Negro - PREMIUM	1T02ML0NLO
TARKY-TK130P	Sustituye a Tóner Kyocera 1T02HS0EU0/TK-130 Negro - PREMIUM	1T02HS0EU0
TARKY-TK150B	Sustituye a Tóner Kyocera 1T05JK0NLO/TK150K Negro	1T05JK0NLO
TARKY-TK150C	Sustituye a Tóner Kyocera 1T05JKCNLO/TK-150C Cian	1T05JKCNLO
TARKY-TK150M	Sustituye a Tóner Kyocera 1T05JKBNLO/TK-150M Magenta	1T05JKBNLO
TARKY-TK150S4	Sustituye a Tóner Kyocera TK-150 CMYK, Set Ahorro (4 uds.)	1T05JK0NLO-ANLO
TARKY-TK150Y	Sustituye a Tóner Kyocera 1T05JKBNLO/TK-150Y Amarillo	1T05JKBNLO
TARKY-TK170	Sustituye a Tóner Kyocera 1T02LZ0NLO/TK-170 Negro	1T02LZ0NLO/TK-170
TARKY-TK170P	Sustituye a Tóner Kyocera 1T02LZ0NLO/TK-170 Negro - PREMIUM	1T02LZ0NLO
TARKY-TK18P	Sustituye a Tóner Kyocera 1T02FM0EU0/TK-18 Negro - PREMIUM	370QB0KX
TARKY-TK20	Sustituye a Tóner Kyocera TK-20H Negro	37027020/TK20H
TARKY-TK20S4	Sustituye a Tóner Kyocera TK-20 H Negro, Set Ahorro (4 uds.)	37027020/TK20H

TARKY-TK25	Sustituye a Tóner Kyocera TK-25 Negro	37027025/TK25
TARKY-TK25S4	Sustituye a Tóner Kyocera TK-25 Negro, Set Ahorro (4 uds.)	37027025
TARKY-TK310	Sustituye a Tóner Kyocera TK-310 XXL Negro	1T02F80EU0/TK310
TARKY-TK3100	Sustituye a Tóner Kyocera 1T02MSONLO/TK-3100 Negro	1T02MSONLO
TARKY-TK3100P	Sustituye a Tóner Kyocera 1T02MSONLO/TK-3100 Negro - PREMIUM	1T02MSONLO
TARKY-TK310P	Sustituye a Tóner Kyocera 1T02F80EU0/TK-310 Negro - PREMIUM	1T02F80EU0
TARKY-TK3110	Sustituye a Tóner Kyocera 1T02MTONLO/TK-3110 Negro	1T02MTONLO
TARKY-TK3110P	Sustituye a Tóner Kyocera 1T02MTONLO/TK-3110 Negro - PREMIUM	1T02MTONLO
TARKY-TK3130	Sustituye a Tóner Kyocera 1T02LVONLO/TK-3130 Negro	1T02LVONLO
TARKY-TK3130P	Sustituye a Tóner Kyocera 1T02LVONLO/TK-3130 Negro - PREMIUM	1T02LVONLO
TARKY-TK3150	Sustituye a Tóner Kyocera 1T02NPONLO/TK-3150 Negro	1T02NPONLO
TARKY-TK3150P	Sustituye a Tóner Kyocera 1T02NXONLO/TK-3150 Negro - PREMIUM	1T02NPONLO
TARKY-TK320P	Sustituye a Tóner Kyocera 1T02F90EU0/TK-320 Negro - PREMIUM	1T02F90EU0
TARKY-TK340P	Sustituye a Tóner Kyocera 1T02J00EU0/TK-340 Negro - PREMIUM	1T02J00EU0
TARKY-TK350P	Sustituye a Tóner Kyocera 1T02J10EU0/TK-350 Negro - PREMIUM	1T02J10EU0
TARKY-TK360P	Sustituye a Tóner Kyocera 1T02J20EU0/TK-360 Negro - PREMIUM	1T02J20EU0
TARKY-TK400	Sustituye a Tóner Kyocera TK-400 Negro	370PAOKL
TARKY-TK400DP	Sustituye a Tóner Kyocera TK-400 Negro, Pack Doble	370PAOKL
TARKY-TK450P	Sustituye a Tóner Kyocera 1T02J50EU0/TK-450 Negro - PREMIUM	1T02J50EU0
TARKY-TK500B	Sustituye a Tóner Kyocera TK-500K/370PD0KW Negro	370PD0KW/TK-500K
TARKY-TK500C	Sustituye a Tóner Kyocera TK-500C/370PD5KW Cian	370PD5KW/TK-500C
TARKY-TK500M	Sustituye a Tóner Kyocera TK-500M/370PD4KW Magenta	370PD4KW/TK-500M
TARKY-TK500S4	Sustituye a Tóner Kyocera TK-500 CMYK, Set Ahorro (4 uds.)	370PD0KW/370PD3KW-370P
TARKY-TK500Y	Sustituye a Tóner Kyocera TK-500Y/370PD3KW Amarillo	370PD3KW/TK-500Y
TARKY-TK510B	Sustituye a Tóner Kyocera TK-510K/1T02F30EU0 Negro	1T02F30EU0/TK510K
TARKY-TK510C	Sustituye a Tóner Kyocera TK-510C/1T02F30EU0 Cian	1T02F30EU0/TK510C
TARKY-TK510M	Sustituye a Tóner Kyocera TK-510M/1T02F30EU0 Magenta	1T02F30EU0/TK510M
TARKY-TK510S4	Sustituye a Tóner Kyocera TK-510 CMYK, Set Ahorro (4 uds.)	1T02F30EU0-AEU0
TARKY-TK510Y	Sustituye a Tóner Kyocera TK-510Y/1T02F30EU0 Amarillo	1T02F30EU0/TK510Y
TARKY-TK5135B	Sustituye a Tóner Kyocera 1T02PAONLO/TK-5135K Negro	1T02PAONLO
TARKY-TK5135C	Sustituye a Tóner Kyocera 1T02PACNLO/TK-5135C Cian	1T02PACNLO
TARKY-TK5135M	Sustituye a Tóner Kyocera 1T02PABNLO/TK-5135M Magenta	1T02PABNLO
TARKY-TK5135Y	Sustituye a Tóner Kyocera 1T02PAANLO/TK-5135Y Amarillo	1T02PAANLO
TARKY-TK520B	Sustituye a Tóner Kyocera TK-520 Negro	1T02HJ0EU0
TARKY-TK520C	Sustituye a Tóner Kyocera TK-520 Cian	1T02HJCEU0
TARKY-TK520M	Sustituye a Tóner Kyocera TK-520 Magenta	1T02HJBEU0
TARKY-TK520S4	Sustituye a Tóner Kyocera TK-520 CMYK, Set Ahorro (4 uds.)	1T02HJ0EU0-AEU0
TARKY-TK520Y	Sustituye a Tóner Kyocera TK-520 Amarillo	1T02HJAEU0
TARKY-TK540B	Sustituye a Tóner Kyocera TK-540K Negro	1T02HL0EU0
TARKY-TK540C	Sustituye a Tóner Kyocera TK-540C Cian	1T02HLCEU0
TARKY-TK540M	Sustituye a Tóner Kyocera TK-540M Magenta	1T02HLBEU0
TARKY-TK540S4	Sustituye a Tóner Kyocera TK-540 CMYK, Set Ahorro (4 uds.)	1T02HL0EU0-AEU0
TARKY-TK540XLB	Sustituye a Tóner Kyocera TK-540K XL Negro	1T02HL0EU0
TARKY-TK540XLC	Sustituye a Tóner Kyocera TK-540C Cian XL	1T02HLCEU0
TARKY-TK540XLM	Sustituye a Tóner Kyocera TK-540M Magenta XL	1T02HLBEU0
TARKY-TK540XLS4	Sustituye a Tóner Kyocera TK-540 XL CMYK, Set Ahorro (4 uds.)	1T02HL0EU0-AEU0
TARKY-TK540XLY	Sustituye a Tóner Kyocera TK-540Y Amarillo XL	1T02HLAEU0
TARKY-TK540Y	Sustituye a Tóner Kyocera TK-540Y Amarillo	1T02HLAEU0
TARKY-TK55	Sustituye a Tóner Kyocera TK- 55 Negro	370QC0KX/TK55
TARKY-TK550B	Sustituye a Tóner Kyocera 1T02HM0EU0/TK-550K Negro	1T02HM0EU0
TARKY-TK550C	Sustituye a Tóner Kyocera 1T02HMCEU0/TK-550C Cian	1T02HMCEU0
TARKY-TK550M	Sustituye a Tóner Kyocera 1T02HMBEU0/TK-550M Magenta	1T02HMBEU0
TARKY-TK550S4	Sustituye a Tóner Kyocera TK-550 CMYK, Set Ahorro (4 uds.)	1T02HM0EU0-AEU0
TARKY-TK550XLB	Sustituye a Tóner Kyocera 1T02HM0EU0/TK-550K XL Negro	1T02HM0EU0
TARKY-TK550XLC	Sustituye a Tóner Kyocera 1T02HMCEU0/TK-550C Cian XL	1T02HMCEU0
TARKY-TK550XLM	Sustituye a Tóner Kyocera 1T02HMBEU0/TK-550M Magenta XL	1T02HMBEU0
TARKY-TK550XLS4	Sustituye a Tóner Kyocera TK-550 XL CMYK, Set Ahorro (4 uds.)	1T02HM0EU0-AEU0
TARKY-TK550XLY	Sustituye a Tóner Kyocera 1T02HMAEU0/TK-550Y Amarillo XL	1T02HMAEU0
TARKY-TK550Y	Sustituye a Tóner Kyocera 1T02HMAEU0/TK-550Y Amarillo	1T02HMAEU0
TARKY-TK55S4	Sustituye a Tóner Kyocera TK-55 Negro, Set Ahorro (4 uds.)	370QC0KX
TARKY-TK560B	Sustituye a Tóner Kyocera 1T02HN0EU0/TK-560K Negro	1T02HN0EU0
TARKY-TK560C	Sustituye a Tóner Kyocera 1T02HNCEU0/TK-560C Cian	1T02HNCEU0
TARKY-TK560M	Sustituye a Tóner Kyocera 1T02HNBEU0/TK-560M Magenta	1T02HNBEU0
TARKY-TK560S4	Sustituye a Tóner Kyocera TK-560 CMYK, Set Ahorro (4 uds.)	1T02HN0EU0-AEU0
TARKY-TK560XLB	Sustituye a Tóner Kyocera 1T02HN0EU0/TK-560K XL Negro	1T02HN0EU0
TARKY-TK560XLC	Sustituye a Tóner Kyocera 1T02HNCEU0/TK-560C Cian XL	1T02HNCEU0
TARKY-TK560XLM	Sustituye a Tóner Kyocera 1T02HNBEU0/TK-560M Magenta XL	1T02HNBEU0
TARKY-TK560XLS4	Sustituye a Tóner Kyocera TK-560 XL CMYK, Set Ahorro (4 uds.)	1T02HN0EU0-AEU0
TARKY-TK560XLY	Sustituye a Tóner Kyocera 1T02HNAEU0/TK-560Y Amarillo XL	1T02HNAEU0
TARKY-TK560Y	Sustituye a Tóner Kyocera 1T02HNAEU0/TK-560Y Amarillo	1T02HNAEU0
TARKY-TK570BP	Sustituye a Tóner Kyocera 1T02HG0EU0/TK-570K Negro - PREMIUM	1T02HG0EU0

TARKY-TK570CP	Sustituye a Tóner Kyocera 1T02HGCEU0/TK-570C Cian - PREMIUM	1T02HGCEU0
TARKY-TK570MP	Sustituye a Tóner Kyocera 1T02HGBEU0/TK-570M Magenta - PREMIUM	1T02HGBEU0
TARKY-TK570YP	Sustituye a Tóner Kyocera 1T02HGAEU0/TK-570Y Amarillo - PREMIUM	1T02HGAEU0
TARKY-TK580B	Sustituye a Tóner Kyocera 1T02TAONL0/TK-580K Negro	1T02TAONL0
TARKY-TK580BP	Sustituye a Tóner Kyocera 1T02TAONL0/TK-580K Negro - PREMIUM	1T02TAONL0
TARKY-TK580C	Sustituye a Tóner Kyocera 1T02TACNL0/TK-580C Cian	1T02TACNL0
TARKY-TK580CP	Sustituye a Tóner Kyocera 1T02TACNL0/TK-580C Cian - PREMIUM	1T02TACNL0
TARKY-TK580M	Sustituye a Tóner Kyocera 1T02TABNL0/TK-580M Magenta	1T02TABNL0
TARKY-TK580MP	Sustituye a Tóner Kyocera 1T02TABNL0/TK-580M Magenta - PREMIUM	1T02TABNL0
TARKY-TK580S4	Sustituye a Tóner Kyocera TK-580 CMYK, Set Ahorro (4 uds.)	1T02TAONL0-CNLO
TARKY-TK580XLB	Sustituye a Tóner Kyocera 1T02TAONL0/TK-580K XL Negro	1T02TAONL0
TARKY-TK580XLC	Sustituye a Tóner Kyocera 1T02TACNL0/TK-580C Cian XL	1T02TACNL0
TARKY-TK580XLM	Sustituye a Tóner Kyocera 1T02TABNL0/TK-580M Magenta XL	1T02TABNL0
TARKY-TK580XLS4	Sustituye a Tóner Kyocera TK-580 XL CMYK, Set Ahorro (4 uds.)	1T02TAONL0-CNLO
TARKY-TK580XLY	Sustituye a Tóner Kyocera 1T02TAANL0/TK-580Y Amarillo XL	1T02TAANL0
TARKY-TK580Y	Sustituye a Tóner Kyocera 1T02TAANL0/TK-580Y Amarillo	1T02TAANL0
TARKY-TK580YP	Sustituye a Tóner Kyocera 1T02TAANL0/TK-580Y Amarillo - PREMIUM	1T02TAANL0
TARKY-TK590B	Sustituye a Tóner Kyocera 1T02KVONL0/TK-590K Negro	1T02KVONL0/TK-590BK
TARKY-TK590BP	Sustituye a Tóner Kyocera 1T02KVONL0/TK-590K Negro - PREMIUM	1T02KVONL0
TARKY-TK590C	Sustituye a Tóner Kyocera 1T02KVCNL0/TK-590C Cian	1T02KVCNL0/TK-590C
TARKY-TK590CP	Sustituye a Tóner Kyocera 1T02KVCNL0/TK-590C Cian - PREMIUM	1T02KVCNL0
TARKY-TK590M	Sustituye a Tóner Kyocera 1T02KVBNL0/TK-590M Magenta	1T02KVBNL0/TK590M
TARKY-TK590MP	Sustituye a Tóner Kyocera 1T02KVBNL0/TK-590M Magenta - PREMIUM	1T02KVBNL0
TARKY-TK590S4	Sustituye a Tóner Kyocera TK-590 CMYK, Set Ahorro (4 uds.)	1T02KVONL0-ANL0
TARKY-TK590XLB	Sustituye a Tóner Kyocera 1T02KVONL0/TK-590K XL Negro	1T02KVONL0
TARKY-TK590XLC	Sustituye a Tóner Kyocera 1T02KVCNL0/TK-590C Cian XL	1T02KVCNL0
TARKY-TK590XLM	Sustituye a Tóner Kyocera 1T02KVBNL0/TK-590M Magenta XL	1T02KVBNL0
TARKY-TK590XLS4	Sustituye a Tóner Kyocera TK-590 XL CMYK, Set Ahorro (4 uds.)	1T02KVONL0-ANL0
TARKY-TK590XLY	Sustituye a Tóner Kyocera 1T02KVANL0/TK-590Y Amarillo XL	1T02KVANL0
TARKY-TK590Y	Sustituye a Tóner Kyocera 1T02KVANL0/TK-590Y Amarillo	1T02KVANL0/TK590Y
TARKY-TK590YP	Sustituye a Tóner Kyocera 1T02KVANL0/TK-590Y Amarillo - PREMIUM	1T02KVANL0
TARKY-TK60	Sustituye a Tóner Kyocera 37027060/TK-60 XXL Negro	37027060/TK60
TARKY-TK6305	Sustituye a Tóner Kyocera 1T02LHONL0/TK-6305 Negro	1T02LHONL0
TARKY-TK6305DP	Sustituye a Tóner Kyocera 1T02LHONL0/TK-6305 Negro, Pack Doble	1T02LHONL0
TARKY-TK6305P	Sustituye a Tóner Kyocera 1T02LHONL0/TK-6305 Negro - PREMIUM	1T02LHONL0
TARKY-TK65	Sustituye a Tóner Kyocera TK- 65 Negro	370QD0KX/TK65
TARKY-TK65S4	Sustituye a Tóner Kyocera TK-65 Negro, Set Ahorro (4 uds.)	370QD0KX
TARKY-TK6705	Sustituye a Tóner Kyocera 1T02LFONL0/TK-6705 Negro	1T02LFONL0
TARKY-TK675	Sustituye a Tóner Kyocera TK-675 Negro	1T02H00EU0
TARKY-TK675DP	Sustituye a Tóner Kyocera TK-675 Negro, Pack Doble	1T02H00EU0
TARKY-TK70	Sustituye a Tóner Kyocera TK-70 Negro	370AC010
TARKY-TK70DP	Sustituye a Tóner Kyocera TK-70 Negro, Pack Doble	370AC010
TARKY-TK715	Sustituye a Tóner Kyocera TK-715 Negro	1T02GR0EU0
TARKY-TK725P	Sustituye a Tóner Kyocera 1T02KR0NL0/TK-725 Negro - PREMIUM	1T02KR0NL0
TARKY-TK825B	Sustituye a Tóner Kyocera 1T02FZ0EU0/TK-825K Negro	1T02FZ0EU0
TARKY-TK825C	Sustituye a Tóner Kyocera 1T02FZCEU0/TK-825C Cian	1T02FZCEU0
TARKY-TK825M	Sustituye a Tóner Kyocera 1T02FZBEU0/TK-825M Magenta	1T02FZBEU0
TARKY-TK825Y	Sustituye a Tóner Kyocera 1T02FZAEU0/TK-825Y Amarillo	1T02FZAEU0
TARKY-TK8305B	Sustituye a Tóner Kyocera 1T02LK0NL0/TK-8305K Negro	1T02LK0NL0
TARKY-TK8305BP	Sustituye a Tóner Kyocera 1T02LK0NL0/TK-8305K Negro - PREMIUM	1T02LK0NL0
TARKY-TK8305C	Sustituye a Tóner Kyocera 1T02LKCNL0/TK-8305C Cian	1T02LKCNL0
TARKY-TK8305CP	Sustituye a Tóner Kyocera 1T02LKCNL0/TK-8305C Cian - PREMIUM	1T02LKCNL0
TARKY-TK8305M	Sustituye a Tóner Kyocera 1T02LKBNL0/TK-8305M Magenta	1T02LKBNL0
TARKY-TK8305MP	Sustituye a Tóner Kyocera 1T02LKBNL0/TK-8305M Magenta - PREMIUM	1T02LKBNL0
TARKY-TK8305Y	Sustituye a Tóner Kyocera 1T02LKANL0/TK-8305Y Amarillo	1T02LKANL0
TARKY-TK8305YP	Sustituye a Tóner Kyocera 1T02LKANL0/TK-8305Y Amarillo - PREMIUM	1T02LKANL0
TARKY-TK8315BP	Sustituye a Tóner Kyocera 1T02MVONL0/TK-8315K Negro - PREMIUM	1T02MVONL0
TARKY-TK8315CP	Sustituye a Tóner Kyocera 1T02MVCNL0/TK-8315C Cian - PREMIUM	1T02MVCNL0
TARKY-TK8315MP	Sustituye a Tóner Kyocera 1T02MVBNL0/TK-8315M Magenta - PREMIUM	1T02MVBNL0
TARKY-TK8315YP	Sustituye a Tóner Kyocera 1T02MVANL0/TK-8315Y Amarillo - PREMIUM	1T02MVANL0
TARKY-TK8505B	Sustituye a Tóner Kyocera 1T02LCONL0/TK-8505K Negro	1T02LCONL0
TARKY-TK8505BP	Sustituye a Tóner Kyocera 1T02LCONL0/TK-8505K Negro - PREMIUM	1T02LCONL0
TARKY-TK8505C	Sustituye a Tóner Kyocera 1T02LCCNL0/TK-8505C Cian	1T02LCCNL0
TARKY-TK8505CP	Sustituye a Tóner Kyocera 1T02LCCNL0/TK-8505C Cian - PREMIUM	1T02LCCNL0
TARKY-TK8505M	Sustituye a Tóner Kyocera 1T02LCBNL0/TK-8505M Magenta	1T02LCBNL0
TARKY-TK8505MP	Sustituye a Tóner Kyocera 1T02LCBNL0/TK-8505M Magenta - PREMIUM	1T02LCBNL0
TARKY-TK8505Y	Sustituye a Tóner Kyocera 1T02LCANL0/TK-8505Y Amarillo	1T02LCANL0
TARKY-TK8505YP	Sustituye a Tóner Kyocera 1T02LCANL0/TK-8505Y Amarillo - PREMIUM	1T02LCANL0
TARKY-TK855B	Sustituye a Tóner Kyocera 1T02H70EU0/TK-855K Negro	1T02H70EU0
TARKY-TK855C	Sustituye a Tóner Kyocera 1T02H7CEU0/TK-855C Cian	1T02H7CEU0
TARKY-TK855M	Sustituye a Tóner Kyocera 1T02H7BEU0/TK-855M Magenta	1T02H7BEU0

TARKY-TK855S4	Sustituye a Tóner Kyocera TK-855 CMYK, Set Ahorro (4 uds.)	1T02H70EU0-AEU0
TARKY-TK855Y	Sustituye a Tóner Kyocera 1T02H7AEU0/TK-855Y Amarillo	1T02H7AEU0
TARKY-TK865B	Sustituye a Tóner Kyocera 1T02JZ0EU0/TK-865K Negro	1T02JZ0EU0
TARKY-TK865BP	Sustituye a Tóner Kyocera 1T02JZ0EU0/TK-865K Negro - PREMIUM	1T02JZ0EU0
TARKY-TK865C	Sustituye a Tóner Kyocera 1T02JZCEU0/TK-865C Cian	1T02JZCEU0
TARKY-TK865CP	Sustituye a Tóner Kyocera 1T02JZCEU0/TK-865C Cian - PREMIUM	1T02JZCEU0
TARKY-TK865M	Sustituye a Tóner Kyocera 1T02JZBEU0/TK-865M Magenta	1T02JZBEU0
TARKY-TK865MP	Sustituye a Tóner Kyocera 1T02JZBEU0/TK-865M Magenta - PREMIUM	1T02JZBEU0
TARKY-TK865Y	Sustituye a Tóner Kyocera 1T02JZAEU0/TK-865Y Amarillo	1T02JZAEU0
TARKY-TK865YP	Sustituye a Tóner Kyocera 1T02JZAEU0/TK-865Y Amarillo - PREMIUM	1T02JZAEU0
TARKY-TK880C	Sustituye a Tóner Kyocera 1T02KACNLO/TK880C Cian	1T02KACNLO
TARKY-TK880M	Sustituye a Tóner Kyocera 1T02KABNLO/TK880M Magenta	1T02KABNLO
TARKY-TK895B	Sustituye a Tóner Kyocera 1T0T2K00NL/TK-895K Negro	1T0T2K00NL
TARKY-TK895BP	Sustituye a Tóner Kyocera 1T0T2K00NL/TK-895K Negro - PREMIUM	1T0T2K00NL
TARKY-TK895C	Sustituye a Tóner Kyocera 1T0T2K0CNL/TK-895C Cian	1T0T2K0CNL
TARKY-TK895CP	Sustituye a Tóner Kyocera 1T0T2K0CNL/TK-895C Cian - PREMIUM	1T0T2K0CNL
TARKY-TK895M	Sustituye a Tóner Kyocera 1T0T2K0BNL/TK-895M Magenta	1T0T2K0BNL
TARKY-TK895MP	Sustituye a Tóner Kyocera 1T0T2K0BNL/TK-895M Magenta - PREMIUM	1T0T2K0BNL
TARKY-TK895S4	Sustituye a Tóner Kyocera TK-895 CMYK, Set Ahorro (4 uds.)	1T0T2K00NL-0CNL
TARKY-TK895Y	Sustituye a Tóner Kyocera 1T0T2K0ANL/TK-895Y Amarillo	1T0T2K0ANL
TARKY-TK895YP	Sustituye a Tóner Kyocera 1T0T2K0ANL/TK-895Y Amarillo - PREMIUM	1T0T2K0ANL
TARL-C500B	Sustituye a Tóner Lexmark C500H2KG/C500S2KG Negro	0C500H2KG
TARL-C500C	Sustituye a Tóner Lexmark C500H2CG/C500S2CG Cian	0C500H2CG
TARL-C500M	Sustituye a Tóner Lexmark C500H2MG/C500S2MG Magenta	0C500H2MG
TARL-C500S4	Sustituye a Tóner Lexmark C500 CMYK, Set Ahorro (4 uds.)	0C500H2KG-H2YG
TARL-C500XLB	Sustituye a Tóner Lexmark C500H2KG/C500S2KG XXL Negro	0C500H2KG
TARL-C500XLC	Sustituye a Tóner Lexmark C500H2CG/C500S2CG XXL Cian	0C500H2CG
TARL-C500XLM	Sustituye a Tóner Lexmark C500H2MG/C500S2MG XXL Magenta	0C500H2MG
TARL-C500XLS4	Sustituye a Tóner Lexmark C500 XXL CMYK, Set Ahorro (4 uds.)	0C500H2KG-H2YG
TARL-C500XLY	Sustituye a Tóner Lexmark C500H2YG/C500S2YG XXL Amarillo	0C500H2YG
TARL-C500Y	Sustituye a Tóner Lexmark C500H2YG/C500S2YG Amarillo	0C500H2YG
TARL-C510B	Sustituye a Tóner Lexmark 020K1403/C510 Negro	020K1403
TARL-C510C	Sustituye a Tóner Lexmark 020K1400/C510 Cian	020K1400
TARL-C510M	Sustituye a Tóner Lexmark 020K1401/C510 Magenta	020K1401
TARL-C510Y	Sustituye a Tóner Lexmark 020K1402/C510 Amarillo	020K1402
TARL-C522B	Sustituye a Tóner Lexmark 00C5222KS Negro	00C5222KS
TARL-C522C	Sustituye a Tóner Lexmark 00C5222CS Cian	00C5222CS
TARL-C522M	Sustituye a Tóner Lexmark 00C5222MS Magenta	00C5222MS
TARL-C522S4	Sustituye a Tóner Lexmark C522 CMYK, Set Ahorro (4 uds.)	C522
TARL-C522XLB	Sustituye a Tóner Lexmark C522 C530 XXL Negro	00C5222KS
TARL-C522XLC	Sustituye a Tóner Lexmark C522 C530 XXL Cian	00C5222CS
TARL-C522XLM	Sustituye a Tóner Lexmark C522 C530 XXL Magenta	00C5222MS
TARL-C522XLS4	Sustituye a Tóner Lexmark C522XXL CMYK, Set Ahorro (4 uds.)	C522
TARL-C522XLY	Sustituye a Tóner Lexmark C522 C530 XXL Amarillo	00C5222YS
TARL-C522Y	Sustituye a Tóner Lexmark 00C5222YS Amarillo	00C5222YS
TARL-C540B	Sustituye a Tóner Lexmark 0C540H1KG Negro	0C540H1KG
TARL-C540C	Sustituye a Tóner Lexmark 0C540H1CG Cian	0C540H1CG
TARL-C540M	Sustituye a Tóner Lexmark 0C540H1MG Magenta	0C540H1MG
TARL-C540S4	Sustituye a Tóner Lexmark 0C540H1 CMYK, Set Ahorro (4 uds.)	0C540H1
TARL-C540Y	Sustituye a Tóner Lexmark 0C540H1YG Amarillo	0C540H1YG
TARL-C544B	Sustituye a Tóner Lexmark 0C544X1KG Negro	0C544X1KG
TARL-C544C	Sustituye a Tóner Lexmark 0C544X1CG Cian	0C544X1CG
TARL-C544M	Sustituye a Tóner Lexmark 0C544X1MG Magenta	0C544X1MG
TARL-C544S4	Sustituye a Tóner Lexmark 0C544X1KG-YG CMYK, Set Ahorro (4 uds.)	0C544X1KG-YG
TARL-C544Y	Sustituye a Tóner Lexmark 0C544X1YG Amarillo	0C544X1YG
TARL-C546B	Sustituye a Tóner Lexmark 0C546U1KG Negro	0C546U1KG
TARL-C546S4	Sustituye a Tóner Lexmark 0C546U1KG-4X1YG CMYK, Set Ahorro (4 uds.)	C546U1KG-0C544X1YG
TARL-C734B	Sustituye a Tóner Lexmark 0C734A2KG Negro	0C734A2KG
TARL-C734C	Sustituye a Tóner Lexmark 0C734A2CG Cian	0C734A2CG
TARL-C734M	Sustituye a Tóner Lexmark 0C734A2MG Magenta	0C734A2MG
TARL-C734S4	Sustituye a Tóner Lexmark 0C734A2KG-A2YG CMYK, Set Ahorro (4 uds.)	0C734A2
TARL-C734Y	Sustituye a Tóner Lexmark 0C734A2YG Amarillo	0C734A2YG
TARL-C736B	Sustituye a Tóner Lexmark C734/C736/C738 Negro	0C736H2KG
TARL-C736C	Sustituye a Tóner Lexmark C734/C736/C738 Cian	0C736H1CG
TARL-C736M	Sustituye a Tóner Lexmark C734/C736/C738 Magenta	0C736H1MG
TARL-C736S4	Sustituye a Tóner Lexmark C734/C736/C738 CMYK, Set Ahorro (4 uds.)	0C736H2KG-H1YG
TARL-C736Y	Sustituye a Tóner Lexmark C734/C736/C738 Amarillo	0C736H1YG
TARL-C746B	Sustituye a Tóner Lexmark C746H1KG Negro	C746H1KG
TARL-C746C	Sustituye a Tóner Lexmark C746A1CG Cian	C746A1CG
TARL-C746M	Sustituye a Tóner Lexmark C746A1MG Magenta	C746A1MG
TARL-C746Y	Sustituye a Tóner Lexmark C746A1YG Amarillo	C746A1YG

TARL-C7700C	Sustituye a Tóner Lexmark 00C7700CH Cian	00C7700CH
TARL-C7700M	Sustituye a Tóner Lexmark 00C7700MH Magenta	00C7700MH
TARL-C770B	Sustituye a Tóner Lexmark 00C7700KH Negro	00C7700KH
TARL-C770Y	Sustituye a Tóner Lexmark 00C7700YH Amarillo	00C7700YH
TARL-C780B	Sustituye a Tóner Lexmark 0C780H1KG Negro	0C780H1KG
TARL-C780C	Sustituye a Tóner Lexmark 0C780H1CG Cian	0C780H1CG
TARL-C780M	Sustituye a Tóner Lexmark 0C780H1MG Magenta	0C780H1MG
TARL-C780Y	Sustituye a Tóner Lexmark 0C780H1YG Amarillo	0C780H1YG
TARL-C782B	Sustituye a Tóner Lexmark 0C782X1KG Negro	0C782X1KG
TARL-C782C	Sustituye a Tóner Lexmark 0C782X1CG Cian	0C782X1CG
TARL-C782M	Sustituye a Tóner Lexmark 0C782X1MG Magenta	0C782X1MG
TARL-C782Y	Sustituye a Tóner Lexmark 0C782X1YG Amarillo	0C782X1YG
TARL-C910B	Sustituye a Tóner Lexmark 12N0771/C910 Negro	0012N0771
TARL-C910C	Sustituye a Tóner Lexmark 12N0768/C910 Cian	0012N0768
TARL-C910M	Sustituye a Tóner Lexmark 12N0769/C910 Magenta	0012N0769
TARL-C910S4	Sustituye a Tóner Lexmark C910 CMYK, Set Ahorro (4 uds.)	0012N0768-771
TARL-C910Y	Sustituye a Tóner Lexmark 12N0770/C910 Amarillo	0012N0770
TARL-C920B	Sustituye a Tóner Lexmark 00C9202KH/C920 Negro	00C9202KH
TARL-C920C	Sustituye a Tóner Lexmark 00C9202CH/C920 Cian	00C9202CH
TARL-C920M	Sustituye a Tóner Lexmark 00C9202MH/C920 Magenta	00C9202MH
TARL-C920S4	Sustituye a Tóner Lexmark C920 CMYK, Set Ahorro (4 uds.)	00C92002
TARL-C920Y	Sustituye a Tóner Lexmark 00C9202YH/C920 Amarillo	00C9202YH
TARL-C950B	Sustituye a Tóner Lexmark C950X2KG Negro	C950X2KG
TARL-C950C	Sustituye a Tóner Lexmark C950X2CG Cian	C950X2CG
TARL-C950M	Sustituye a Tóner Lexmark C950X2MG Magenta	C950X2MG
TARL-C950Y	Sustituye a Tóner Lexmark C950X2YG Amarillo	C950X2YG
TARL-CS310B	Sustituye a Tóner Lexmark 70C2HK0/702HK/700H1 Negro	70C2HK0
TARL-CS310C	Sustituye a Tóner Lexmark 70C2HC0/702HC/700H2 Cian	70C2HC0
TARL-CS310M	Sustituye a Tóner Lexmark 70C2HMO/702HM/700H3 Magenta	70C2HMO
TARL-CS310Y	Sustituye a Tóner Lexmark 70C2HY0/702HY/700H4 Amarillo	70C2HY0
TARL-CS510B	Sustituye a Tóner Lexmark 70C2XK0/702XK Negro	70C2XK0
TARL-CS510C	Sustituye a Tóner Lexmark 70C2XC0/702XC Cian	70C2XC0
TARL-CS510M	Sustituye a Tóner Lexmark 70C2XM0/702XM Magenta	70C2XM0
TARL-CS510Y	Sustituye a Tóner Lexmark 70C2XY0/702XY Amarillo	70C2XY0
TARL-CX310B	Sustituye a Tóner Lexmark 80C2SK0/802SK Negro	80C2SK0
TARL-CX310C	Sustituye a Tóner Lexmark 80C2SC0/802SC Cian	80C2SC0
TARL-CX310M	Sustituye a Tóner Lexmark 80C2SM0/802SM Magenta	80C2SM0
TARL-CX310S4	Sustituye a Tóner Lexmark 80C2S0 CMYK, Set Ahorro (4 uds.)	80C2SK0
TARL-CX310Y	Sustituye a Tóner Lexmark 80C2SY0/802SY Amarillo	80C2SY0
TARL-CX410B	Sustituye a Tóner Lexmark 80C2HK0/802HK Negro	80C2HK0
TARL-CX410C	Sustituye a Tóner Lexmark 80C2HC0/802HC Cian	80C2HC0
TARL-CX410M	Sustituye a Tóner Lexmark 80C2HMO/802HM Magenta	80C2HMO
TARL-CX410Y	Sustituye a Tóner Lexmark 80C2HY0/802HY Amarillo	80C2HY0
TARL-CX510B	Sustituye a Tóner Lexmark 80C2XK0/802XK Negro	80C2XK0
TARL-CX510C	Sustituye a Tóner Lexmark 80C2XC0/802XC Cian	80C2XC0
TARL-CX510M	Sustituye a Tóner Lexmark 80C2XM0/802XM Magenta	80C2XM0
TARL-CX510Y	Sustituye a Tóner Lexmark 80C2XY0/802XY Amarillo	80C2XY0
TARL-DRE230	Sustituye a Tambor Lexmark 0012A8302/E230	0012A8302
TARL-DRE250	Sustituye a Tambor Lexmark 0E250X22G	0E250X22G
TARL-DRE260	Sustituye a Tambor Lexmark 0E260X22G	0E260X22G
TARL-DRX203	Sustituye a Tambor Lexmark 0X203H22G	0X203H22G
TARL-DRX340	Sustituye a Tambor Lexmark 0X340H22G	0X340H22G
TARL-DRX850	Sustituye a Tambor Lexmark 0X850H22G	0X850H22G
TARL-E120	Sustituye a Tóner Lexmark 12016SE/E 120 Negro	0012036SE
TARL-E120DP	Sustituye a Tóner Lexmark 12016SE/E 120 Negro, Pack Doble	0012036SE
TARL-E120XL	Sustituye a Tóner Lexmark 12016SE/E 120 XXL Negro	0012036SE
TARL-E120XLDP	Sustituye a Tóner Lexmark 12016SE/E 120XXL Negro, Pack Doble	0012036SE
TARL-E210	Sustituye a Tóner Lexmark 10S0150/E 210 Negro	0010S0150
TARL-E220	Sustituye a Tóner Lexmark 0012S0400 Negro	0012S0400
TARL-E230	Sustituye a Tóner Lexmark 0024036SE Negro	0024036SE
TARL-E260	Sustituye a Tóner Lexmark E260A11E/E260A21E Negro	0E260A11E
TARL-E260DP	Sustituye a Tóner Lexmark E260A11E/E260A21E Negro, Pack Doble	0E260A11E
TARL-E310	Sustituye a Tóner Lexmark 13T0101 Negro	13T0101
TARL-E310DP	Sustituye a Tóner Lexmark 13T0101, Pack Doble	13T0101
TARL-E321	Sustituye a Tóner Lexmark 12A7405/12A7305 Negro	0012A7305
TARL-E330	Sustituye a Tóner Lexmark E230/E330/1700/1710/1412 Negro	24035SA
TARL-E360	Sustituye a Tóner Lexmark 0E360H11E Negro	0E360H11E
TARL-E360DP	Sustituye a Tóner Lexmark 0E360H11E Negro, Pack Doble	0E360H11E
TARL-E460	Sustituye a Tóner Lexmark E460/0E460X11E Negro	0E460X11E
TARL-E460DP	Sustituye a Tóner Lexmark E460/0E460X11E Negro, Pack Doble	0E460X11E
TARL-M1140	Sustituye a Tóner Lexmark 24B6213 Negro	24B6213

TARL-M1145	Sustituye a Tóner Lexmark 24B6035 Negro	24B6035
TARL-M410	Sustituye a Tóner Lexmark 17G0154 Negro	017G0154
TARL-M5155	Sustituye a Tóner Lexmark 24B6015 Negro	24B6015
TARL-MS310	Sustituye a Tóner Lexmark 50F2000/502 Negro	50F2000
TARL-MS310XL	Sustituye a Tóner Lexmark 50F2H00/502H Negro	50F2H00
TARL-MS410	Sustituye a Tóner Lexmark 50F2X00/502X Negro	50F2X00
TARL-MS510	Sustituye a Tóner Lexmark 50F0UA0/502UA Negro	50F0UA0
TARL-MS810	Sustituye a Tóner Lexmark 52D2000/522 Negro	52D2000
TARL-MS810XL	Sustituye a Tóner Lexmark 52D2H00/522H Negro	52D2H00
TARL-MS811	Sustituye a Tóner Lexmark 52D2X00/522X Negro	52D2X00
TARL-MX310	Sustituye a Tóner Lexmark 60F2000/602 Negro	60F2000
TARL-MX310XL	Sustituye a Tóner Lexmark 60F2H00/602H Negro	60F2H00
TARL-MX510	Sustituye a Tóner Lexmark 60F2X00/602X Negro	60F2X00
TARL-MX810	Sustituye a Tóner Lexmark 62D2000/622 Negro	62D2000
TARL-MX810XL	Sustituye a Tóner Lexmark 62D2H00/622H Negro	62D2H00
TARL-MX811	Sustituye a Tóner Lexmark 62D2X00/622X Negro	62D2X00
TARL-OPTRAE	Sustituye a Tóner Lexmark 0069G8256 Negro	0069G8256
TARL-S1620	Sustituye a Tóner Lexmark 1382925 Negro	0012A1544
TARL-T420	Sustituye a Tóner Lexmark 12A7415/12A7315 Negro	0012A7415
TARL-T430	Sustituye a Tóner Lexmark T430/12A8425/12A8325 Negro	0012A8425
TARL-T520	Sustituye a Tóner Lexmark 0012A6735/0012A6835 Negro	0012A6735
TARL-T610	Sustituye a Tóner Lexmark 12A5845/12A5745 Negro	0012A5745
TARL-T620	Sustituye a Tóner Lexmark 0012A6765/0012A6865 Negro	0012A6865
TARL-T630	Sustituye a Tóner Lexmark 0012A7362 Negro	0012A7362
TARL-T632	Sustituye a Tóner Lexmark 0012A7365/T632 Negro	0012A7365
TARL-T640	Sustituye a Tóner Lexmark 0064036HE Negro	0064036HE
TARL-T644	Sustituye a Tóner Lexmark 0064416XE/T644 Negro	0064416XE
TARL-T65025K	Sustituye a Tóner Lexmark 0T650H31E/0T650H11E Negro	0T650H31E
TARL-T6507K	Sustituye a Tóner Lexmark 0T650A11E Negro	0T650A11E
TARL-T654	Sustituye a Tóner Lexmark 0T654X11E/0T654X31E Negro	0T654X11E
TARL-W810	Sustituye a Tóner Lexmark 0012L0250 Negro	0012L0250
TARL-W810DP	Sustituye a Tóner Lexmark 0012L0250 Negro, Pack Doble	0012L0250
TARL-W840	Sustituye a Tóner Lexmark 00W84020H Negro	00W84020H
TARL-W850	Sustituye a Tóner Lexmark 00W850H21G Negro	00W850H21G
TARL-X215	Sustituye a Tóner Lexmark 018S0090/X215 Negro	0018S0090
TARL-X215DP	Sustituye a Tóner Lexmark 018S0090/X215 Negro, Pack Doble	0018S0090
TARL-X264	Sustituye a Tóner Lexmark 0X264H11G Negro	0X264H11G
TARL-X264DP	Sustituye a Tóner Lexmark 0X264H11G Negro, Pack Doble	0X264H11G
TARL-X340	Sustituye a Tóner Lexmark X340A21G Negro	X340A21G
TARL-X3406K	Sustituye a Tóner Lexmark 0X340H21G Negro	0X340A21G
TARL-X422	Sustituye a Tóner Lexmark X422/12A4715/12A3715 Negro	0012A3715
TARL-X463	Sustituye a Tóner Lexmark 0X463H11G Negro	0X463H11G
TARL-X46315K	Sustituye a Tóner Lexmark X463/0X463X11G Negro	0X463X11G
TARL-X560B	Sustituye a Tóner Lexmark 0X560H2KG Negro	0X560H2KG
TARL-X560C	Sustituye a Tóner Lexmark 0X560H2CG Cian	0X560H2CG
TARL-X560M	Sustituye a Tóner Lexmark 0X560H2MG Magenta	0X560H2MG
TARL-X560S4	Sustituye a Tóner Lexmark X560 CMYK, Set Ahorro (4 uds.)	0X560H2
TARL-X560Y	Sustituye a Tóner Lexmark 0X560H2YG Amarillo	0X560H2YG
TARL-X644	Sustituye a Tóner Lexmark 0X644X11E Negro	0X644X11E
TARL-X65125K	Sustituye a Tóner Lexmark 0X651H11E Negro	0X651H11E
TARL-X6517K	Sustituye a Tóner Lexmark 0X651A11E Negro	0X651A11E
TARL-X654	Sustituye a Tóner Lexmark 0X654X11E Negro	0X654X11E
TARL-X850	Sustituye a Tóner Lexmark 0X850H21G Negro	0X850H21G
TARL-X850DP	Sustituye a Tóner Lexmark 0X850H21G Negro, Pack Doble	0X850H21G
TARL-X945B	Sustituye a Tóner Lexmark 0X945X2KG Negro	0X945X2KG
TARL-X945C	Sustituye a Tóner Lexmark 0X945X2CG Cian	0X945X2CG
TARL-X945M	Sustituye a Tóner Lexmark 0X945X2MG Magenta	0X945X2MG
TARL-X945S4	Sustituye a Tóner Lexmark X940/X945 CMYK, Set Ahorro (4 uds.)	0X945X2
TARL-X945Y	Sustituye a Tóner Lexmark 0X945X2YG Amarillo	0X945X2YG
TAROK-5780	Sustituye a Tóner OTA 1074705 Negro	1074705
TAROK-5780S4	Sustituye a Tóner OTA 1074705 Negro, Set Ahorro (4 uds.)	1074705
TAROK-B2500	Sustituye a Tóner OTA 9004391 Negro	9004391
TAROK-B2500S4	Sustituye a Tóner OTA 9004391 Negro con Chip, Set Ahorro (4 uds.)	9004391
TAROK-B4400	Sustituye a Tóner OTA 43502302/B4400 Negro	43502302
TAROK-B4400S4	Sustituye a Tóner OTA 43502302/B4400 Negro, Set Ahorro (4 uds.)	43502302
TAROK-B440B	Sustituye a Tóner OTA 43979216 Negro	43979216
TAROK-B4520	Sustituye a Tóner OTA 9004168 Negro	9004168
TAROK-B4520DP	Sustituye a Tóner OTA 9004168 Negro, Pack Doble	9004168
TAROK-B6100	Sustituye a Tóner OTA 9004058 Negro	9004058
TAROK-B6100DP	Sustituye a Tóner OTA 9004058 Negro, Pack Doble	9004058
TAROK-B6200	Sustituye a Tóner OTA 9004078 Negro	9004078

TAROK-B6200DP	Sustituye a Tóner OTA 9004078 Negro, Pack Doble	9004078
TAROK-B6300	Sustituye a Tóner OTA 9004079 Negro	9004079
TAROK-B6300DP	Sustituye a Tóner OTA 9004079 Negro, Pack Doble	9004079
TAROK-B6500	Sustituye a Tóner OTA 9004462 Negro	9004462
TAROK-B710	Sustituye a Tóner OTA 1279001 Negro	1279001
TAROK-C110B	Sustituye a Tóner OTA 44250724 Negro	44250724
TAROK-C110C	Sustituye a Tóner OTA 44250723 Cian	44250723
TAROK-C110M	Sustituye a Tóner OTA 44250722 Magenta	44250722
TAROK-C110S4	Sustituye a Tóner OTA C110 CMYK, Set Ahorro (4 uds.)	44250721-44250724
TAROK-C110Y	Sustituye a Tóner OTA 44250721 Amarillo	44250721
TAROK-C3100B	Sustituye a Tóner OTA 42804516 Negro	42804516
TAROK-C3100C	Sustituye a Tóner OTA 42804515 Cian	42804515
TAROK-C3100M	Sustituye a Tóner OTA 42804514 Magenta	42804514
TAROK-C3100S4	Sustituye a Tóner OTA 42804513-16 CMYK, Set Ahorro (4 uds.)	42804513-42804516
TAROK-C3100Y	Sustituye a Tóner OTA 42804513 Amarillo	42804513
TAROK-C310B	Sustituye a Tóner OTA 44469803 Negro	44469803
TAROK-C310C	Sustituye a Tóner OTA 44469706 Cian	44469706
TAROK-C310M	Sustituye a Tóner OTA 44469705 Magenta	44469705
TAROK-C310S4	Sustituye a Tóner OTA 44469803-04 CMYK, Set Ahorro (4 uds.)	44469803/704-06
TAROK-C310Y	Sustituye a Tóner OTA 44469704 Amarillo	44469704
TAROK-C3200B	Sustituye a Tóner OTA 42804540/43034808 Negro	42804540
TAROK-C3200C	Sustituye a Tóner OTA 42804539/43034807 Cian	42804539
TAROK-C3200M	Sustituye a Tóner OTA 42804538/43034806 Magenta	42804538
TAROK-C3200S4	Sustituye a Tóner OTA C3200 CMYK, Set Ahorro (4 uds.)	42126662-42126665
TAROK-C3200Y	Sustituye a Tóner OTA 42804537/43034805 Amarillo	42804537
TAROK-C321B	Sustituye a Tóner OTA 44973536 Negro	44973536
TAROK-C321C	Sustituye a Tóner OTA 44973535 Cian	44973535
TAROK-C321M	Sustituye a Tóner OTA 44973534 Magenta	44973534
TAROK-C321S4	Sustituye a Tóner OTA 44973536-33 CMYK, Set Ahorro (4 uds.)	44973533-44973536
TAROK-C321Y	Sustituye a Tóner OTA 44973533 Amarillo	44973533
TAROK-C3300B	Sustituye a Tóner OTA 43459332/43459436 Negro	43459332
TAROK-C3300C	Sustituye a Tóner OTA 43459331/43459435 Cian	43459331
TAROK-C3300M	Sustituye a Tóner OTA 43459330/43459434 Magenta	43459330
TAROK-C3300Y	Sustituye a Tóner OTA 43459329/43459433 Amarillo	43459329
TAROK-C3520B	Sustituye a Tóner OTA 43459324/43459428 Negro	43459324
TAROK-C3520C	Sustituye a Tóner OTA 43459323/43459427 Cian	43459323
TAROK-C3520M	Sustituye a Tóner OTA 43459322/43459426 Magenta	43459322
TAROK-C3520S4	Sustituye a Tóner OTA 43459324 CMYK, Set Ahorro (4 uds.)	43459324/69-371
TAROK-C3520Y	Sustituye a Tóner OTA 43459321/43459425 Amarillo	43459321
TAROK-C5100B	Sustituye a Tóner OTA 42127408 Negro	42127408
TAROK-C5100C	Sustituye a Tóner OTA 42127407 Cian	42127407
TAROK-C5100M	Sustituye a Tóner OTA 42127406 Magenta	42127406
TAROK-C5100S4	Sustituye a Tóner OTA 42127405-08 CMYK, Set Ahorro (4 uds.)	42127405-08
TAROK-C5100Y	Sustituye a Tóner OTA 42127405 Amarillo	42127405
TAROK-C510B	Sustituye a Tóner OTA 44469804 Negro	44469804
TAROK-C510C	Sustituye a Tóner OTA 44469724 Cian	44469724
TAROK-C510M	Sustituye a Tóner OTA 44469723 Magenta	44469723
TAROK-C510S4	Sustituye a Tóner OTA 44469804-722 CMYK, Set Ahorro (4 uds.)	44469804/722-24
TAROK-C510Y	Sustituye a Tóner OTA 44469722 Amarillo	44469722
TAROK-C5200S4	Sustituye a Tóner OTA 42804505 CMYK, Set Ahorro (4 uds.)	42804505-08
TAROK-C5250B	Sustituye a Tóner OTA 42127457/42804548 Negro	42127457
TAROK-C5250C	Sustituye a Tóner OTA 42127456/42804547 Cian	42127456
TAROK-C5250M	Sustituye a Tóner OTA 42127455/42804546 Magenta	42127455
TAROK-C5250S4	Sustituye a Tóner OTA C5250 CMYK, Set Ahorro (4 uds.)	42127454-42127457
TAROK-C5250Y	Sustituye a Tóner OTA 42127454/42804545 Amarillo	42127454
TAROK-C5600B	Sustituye a Tóner OTA 43324408 Negro	43324408
TAROK-C5600C	Sustituye a Tóner OTA 43381907 Cian	43381907
TAROK-C5600M	Sustituye a Tóner OTA 43381906 Magenta	43381906
TAROK-C5600S4	Sustituye a Tóner OTA C5600/C5700 CMYK, Set Ahorro (4 uds.)	43324408/81905-07
TAROK-C5600Y	Sustituye a Tóner OTA 43381905 Amarillo	43381905
TAROK-C5650B	Sustituye a Tóner OTA 43865708 Negro	43865708
TAROK-C5650C	Sustituye a Tóner OTA 43872307 Cian	43872307
TAROK-C5650M	Sustituye a Tóner OTA 43872306 Magenta	43872306
TAROK-C5650S4	Sustituye a Tóner OTA C5650/C5750 CMYK, Set Ahorro (4 uds.)	43865708/72305-07
TAROK-C5650Y	Sustituye a Tóner OTA 43872305 Amarillo	43872305
TAROK-C5800B	Sustituye a Tóner OTA 43324424 Negro	43324424
TAROK-C5800C	Sustituye a Tóner OTA 43324423 Cian	43324423
TAROK-C5800M	Sustituye a Tóner OTA 43324422 Magenta	43324422
TAROK-C5800S4	Sustituye a Tóner OTA C5800/C5900 CMYK, Set Ahorro (4 uds.)	43324421-43324424
TAROK-C5800Y	Sustituye a Tóner OTA 43324421 Amarillo	43324421
TAROK-C5850B	Sustituye a Tóner OTA 43865724 Negro	43865724

TAROK-C5850C	Sustituye a Tóner OTA 43865723 Cian	43865723
TAROK-C5850M	Sustituye a Tóner OTA 43865722 Magenta	43865722
TAROK-C5850S4	Sustituye a Tóner OTA C5850/C5950 CMYK, Set Ahorro (4 uds.)	43865721-43865724
TAROK-C5850Y	Sustituye a Tóner OTA 43865721 Amarillo	43865721
TAROK-C610B	Sustituye a Tóner OTA 44315308 Negro	44315308
TAROK-C610C	Sustituye a Tóner OTA 44315307 Cian	44315307
TAROK-C610M	Sustituye a Tóner OTA 44315306 Magenta	44315306
TAROK-C610S4	Sustituye a Tóner OTA 44315305-08 CMYK, Set Ahorro (4 uds.)	44315305-44315308
TAROK-C610Y	Sustituye a Tóner OTA 44315305 Amarillo	44315305
TAROK-C7000B	Sustituye a Tóner OTA 41304212 Negro	41304212
TAROK-C7000C	Sustituye a Tóner OTA 41304211 Cian	41304211
TAROK-C7000M	Sustituye a Tóner OTA 41304210 Magenta	41304210
TAROK-C7000Y	Sustituye a Tóner OTA 41304209 Amarillo	41304209
TAROK-C7100B	Sustituye a Tóner OTA 41963008 Negro	41963008
TAROK-C7100C	Sustituye a Tóner OTA 41963007 Cian	41963007
TAROK-C7100M	Sustituye a Tóner OTA 41963006 Magenta	41963006
TAROK-C7100Y	Sustituye a Tóner OTA 41963005 Amarillo	41963005
TAROK-C710C	Sustituye a Tóner OTA 43866107/C710 Cian	43866107
TAROK-C801B	Sustituye a Tóner OTA 44643004 Negro	44643004
TAROK-C801C	Sustituye a Tóner OTA 44643003 Cian	44643003
TAROK-C801M	Sustituye a Tóner OTA 44643002 Magenta	44643002
TAROK-C801S4	Sustituye a Tóner OTA 44643004-01 CMYK, Set Ahorro (4 uds.)	44643001-44643004
TAROK-C801Y	Sustituye a Tóner OTA 44643001 Amarillo	44643001
TAROK-C810B	Sustituye a Tóner OTA 44059108 Negro	44059108
TAROK-C810C	Sustituye a Tóner OTA 44059107 Cian	44059107
TAROK-C810M	Sustituye a Tóner OTA 44059106 Magenta	44059106
TAROK-C810S4	Sustituye a Tóner OTA C810 CMYK, Set Ahorro (4 uds.)	44059105-44059108
TAROK-C810Y	Sustituye a Tóner OTA 44059105 Amarillo	44059105
TAROK-C822B	Sustituye a Tóner OTA 44844616 Negro	44844616
TAROK-C822C	Sustituye a Tóner OTA 44844615 Cian	44844615
TAROK-C822M	Sustituye a Tóner OTA 44844614 Magenta	44844614
TAROK-C822Y	Sustituye a Tóner OTA 44844613 Amarillo	44844613
TAROK-C831B	Sustituye a Tóner OTA 44844508 Negro	44844508
TAROK-C831C	Sustituye a Tóner OTA 44844507 Cian	44844507
TAROK-C831M	Sustituye a Tóner OTA 44844506 Magenta	44844506
TAROK-C831Y	Sustituye a Tóner OTA 44844505 Amarillo	44844505
TAROK-C8600B	Sustituye a Tóner OTA 43487712 XXL Negro	43487712
TAROK-C8600C	Sustituye a Tóner OTA 43487711 XXL Cian	43487711
TAROK-C8600M	Sustituye a Tóner OTA 43487710 XXL Magenta	43487710
TAROK-C8600S4	Sustituye a Tóner OTA C8600 XXL CMYK, Set Ahorro (4 uds.)	43487709-43487711
TAROK-C8600Y	Sustituye a Tóner OTA 43487709 XXL Amarillo	43487709
TAROK-C9200B	Sustituye a Tóner OTA 41515212 Negro	41515212
TAROK-C9200C	Sustituye a Tóner OTA 41515211 Cian	41515211
TAROK-C9200M	Sustituye a Tóner OTA 41515210 Magenta	41515210
TAROK-C9200S4	Sustituye a Tóner OTA 41515209-41515212 CMYK, Set Ahorro (4 uds.)	41515209-41515212
TAROK-C9200Y	Sustituye a Tóner OTA 41515209 Amarillo	41515209
TAROK-C9300B	Sustituye a Tóner OTA 41963608 Negro	41963608
TAROK-C9300C	Sustituye a Tóner OTA 41963607 Cian	41963607
TAROK-C9300M	Sustituye a Tóner OTA 41963606 Magenta	41963606
TAROK-C9300S4	Sustituye a Tóner OTA 4193605-41963608 CMYK, Set Ahorro (4 uds.)	4193605-41963608
TAROK-C9300Y	Sustituye a Tóner OTA 41963605 Amarillo	41963605
TAROK-C9600B	Sustituye a Tóner OTA 42918916 Negro	42918916
TAROK-C9600C	Sustituye a Tóner OTA 42918915 Cian	42918915
TAROK-C9600M	Sustituye a Tóner OTA 42918914 Magenta	42918914
TAROK-C9600S4	Sustituye a Tóner OTA 43112702/C9600 CMYK, Set Ahorro (4 uds.)	42918913-42918913
TAROK-C9600Y	Sustituye a Tóner OTA 42918913 Amarillo	42918913
TAROK-DRB401	Sustituye a Tambor OTA 44574307	44574307
TAROK-DRB410	Sustituye a Tambor OTA B410/43979002	43979002
TAROK-DRB411	Sustituye a Tambor OTA 44574302	44574302
TAROK-DRC3100B	Sustituye a Tambor OTA 42126608 Negro	42126608
TAROK-DRC3100B2	Sustituye a Tambor OTA 42126644 Negro	42126644
TAROK-DRC3100C	Sustituye a Tambor OTA 42126607 Cian	42126607
TAROK-DRC3100C2	Sustituye a Tambor OTA 42126643 Cian	42126643
TAROK-DRC3100M	Sustituye a Tambor OTA 42126606 Magenta	42126606
TAROK-DRC3100M2	Sustituye a Tambor OTA 42126642 Magenta	42126642
TAROK-DRC3100Y	Sustituye a Tambor OTA 42126605 Amarillo	42126605
TAROK-DRC3100Y2	Sustituye a Tambor OTA 42126641 Amarillo	42126641
TAROK-DRC3200B	Sustituye a Tambor OTA 42126665 Negro	42126665
TAROK-DRC3200C	Sustituye a Tambor OTA 42126664 Cian	42126664
TAROK-DRC3200M	Sustituye a Tambor OTA 42126663 Magenta	42126663
TAROK-DRC3200Y	Sustituye a Tambor OTA 42126662 Amarillo	42126662

TAROK-DRC321	Sustituye a Tambor OTA 44968301/C321	44968301
TAROK-DRC5250B	Sustituye a Tambor OTA 42126673 Negro	42126673
TAROK-DRC5250C	Sustituye a Tambor OTA 42126672 Cian	42126672
TAROK-DRC5250M	Sustituye a Tambor OTA 42126671 Magenta	42126671
TAROK-DRC5250Y	Sustituye a Tambor OTA 42126670 Amarillo	42126670
TAROK-DRC5500B	Sustituye a Tambor OTA 43381724 Negro	43381724
TAROK-DRC5500C	Sustituye a Tambor OTA 43381723 Cian	43381723
TAROK-DRC5500M	Sustituye a Tambor OTA 43381722 Magenta	43381722
TAROK-DRC5500Y	Sustituye a Tambor OTA 43381721 Amarillo	43381721
TAROK-DRC5650B	Sustituye a Tambor OTA 43870008 Negro	43870008
TAROK-DRC5650C	Sustituye a Tambor OTA 43870007 Cian	43870007
TAROK-DRC5650M	Sustituye a Tambor OTA 43870006 Magenta	43870006
TAROK-DRC5650Y	Sustituye a Tambor OTA 43870005 Amarillo	43870005
TAROK-DRC5700B	Sustituye a Tambor OTA 43381708 Negro	43381708
TAROK-DRC5700C	Sustituye a Tambor OTA 43381707 Cian	43381707
TAROK-DRC5700M	Sustituye a Tambor OTA 43381706 Magenta	43381706
TAROK-DRC5700Y	Sustituye a Tambor OTA 43381705 Amarillo	43381705
TAROK-DRC5950B	Sustituye a Tambor OTA 43870024 Negro	43870024
TAROK-DRC5950C	Sustituye a Tambor OTA 43870023 Cian	43870023
TAROK-DRC5950M	Sustituye a Tambor OTA 43870022 Magenta	43870022
TAROK-DRC5950Y	Sustituye a Tambor OTA 43870021 Amarillo	43870021
TAROK-DRC610B	Sustituye a Tambor OTA C610/44315108 Negro	44315108
TAROK-DRC610C	Sustituye a Tambor OTA C610/44315107 Cian	44315107
TAROK-DRC610M	Sustituye a Tambor OTA C610/44315106 Magenta	44315106
TAROK-DRC610Y	Sustituye a Tambor OTA C610/44315105 Amarillo	44315105
TAROK-DRC710B	Sustituye a Tambor OTA C710/43913808 Negro	43913808
TAROK-DRC710C	Sustituye a Tambor OTA C710/43913807 Cian	43913807
TAROK-DRC710M	Sustituye a Tambor OTA C710/43913806 Magenta	43913806
TAROK-DRC710Y	Sustituye a Tambor OTA C710/43913805 Amarillo	43913805
TAROK-DRC711B	Sustituye a Tambor OTA C711/44318508 Negro	44318508
TAROK-DRC711C	Sustituye a Tambor OTA C711/44318507 Cian	44318507
TAROK-DRC711M	Sustituye a Tambor OTA C711/44318506 Magenta	44318506
TAROK-DRC711Y	Sustituye a Tambor OTA C711/44318505 Amarillo	44318505
TAROK-DRC810B	Sustituye a Tambor OTA 44064012 Negro	44064012
TAROK-DRC810C	Sustituye a Tambor OTA 44064011 Cian	44064011
TAROK-DRC810M	Sustituye a Tambor OTA 44064010 Magenta	44064010
TAROK-DRC810Y	Sustituye a Tambor OTA 44064009 Amarillo	44064009
TAROK-DRC8600B	Sustituye a Tambor OTA 43449016 Negro	43449016
TAROK-DRC8600C	Sustituye a Tambor OTA 43449015 Cian	43449015
TAROK-DRC8600M	Sustituye a Tambor OTA 43449014 Magenta	43449014
TAROK-DRC8600Y	Sustituye a Tambor OTA 43449013 Amarillo	43449013
TAROK-DRC9600B	Sustituye a Tambor OTA 42918108 Negro	42918108
TAROK-DRC9600C	Sustituye a Tambor OTA 42918107 Cian	42918107
TAROK-DRC9600M	Sustituye a Tambor OTA 42918106 Magenta	42918106
TAROK-DRC9600S4	Sustituye a Tambor OTA 42918108-05 CMYK, Set Ahorro (4 uds.)	42918105-42918108
TAROK-DRC9600Y	Sustituye a Tambor OTA 42918105 Amarillo	42918105
TAROK-DRTYPE8	Sustituye a Tambor OTA 41331602	41331602
TAROK-DRTYPE9	Sustituye a Tambor OTA Type 9	42102802
TAROK-MB260	Sustituye a Tóner OTA 01240001/MB 260/80/90 XXL Negro	1240001
TAROK-MB260S4	Sustituye a Tóner OTA MB 260/80/90 XXL Negro, Set Ahorro (4 uds.)	1240001
TAROK-MC760B	Sustituye a Tóner OTA 45396304/MC760/770/780 Negro	45396304
TAROK-MC760C	Sustituye a Tóner OTA 45396303/MC760/770/780 Cian	45396303
TAROK-MC760M	Sustituye a Tóner OTA 45396303/MC760/770/780 Magenta	45396302
TAROK-MC760Y	Sustituye a Tóner OTA 45396301/MC760/770/780 Amarillo	45396301
TAROK-MC851B	Sustituye a Tóner OTA 44059168/MC851 Negro	44059168
TAROK-MC851C	Sustituye a Tóner OTA 44059167/MC851 Cian	44059167
TAROK-MC851M	Sustituye a Tóner OTA 44059166/MC851 Magenta	44059166
TAROK-MC851S4	Sustituye a Tóner OTA 4405916/MC851 CMYK, Set Ahorro (4 uds.)	44059168
TAROK-MC851Y	Sustituye a Tóner OTA 44059165/MC851 Amarillo	44059165
TAROK-MC860B	Sustituye a Tóner OTA 44059212 Negro	44059212
TAROK-MC860C	Sustituye a Tóner OTA 44059211 Cian	44059211
TAROK-MC860M	Sustituye a Tóner OTA 44059210 Magenta	44059210
TAROK-MC860S4	Sustituye a Tóner OTA MC 860 CMYK, Set Ahorro (4 uds.)	44059209
TAROK-MC860Y	Sustituye a Tóner OTA 44059209 Amarillo	44059209
TAROK-TYPE3	Sustituye a Tóner OTA Type 3 Negro	9002390
TAROK-TYPE5	Sustituye a Tóner OTA TYPE5	40433203
TAROK-TYPE6DP	Sustituye a Tóner OTA Type 6 Negro, Pack Doble	00079801/TYPE6
TAROK-TYPE8	Sustituye a Tóner OTA Type 8 Negro	41331702/TYPE8
TAROL-455	Sustituye a Tóner Olivetti B0455 Negro	B0455
TAROL-456	Sustituye a Tóner Olivetti B0456 Cian	B0456
TAROL-457	Sustituye a Tóner Olivetti B0457 Magenta	B0457

TAROL-458	Sustituye a Tóner Olivetti B0458 Amarillo	B0458
TAROL-466	Sustituye a Tóner Olivetti B0466 Negro	B0466
TAROL-466S4	Sustituye a Tóner Olivetti B0466-B0469 CMYK, Set Ahorro (4 uds.)	B0466
TAROL-467	Sustituye a Tóner Olivetti B0467 Cian	B0467
TAROL-468	Sustituye a Tóner Olivetti B0468 Magenta	B0468
TAROL-469	Sustituye a Tóner Olivetti B0469 Amarillo	B0469
TARPA-UG3221	Sustituye a Tóner Panasonic UG-3221 Negro	UG-3221
TARPA-UG3313	Sustituye a Tóner Panasonic UG-3313 Negro	UG-3313
TARPA-UG3350	Sustituye a Tóner Panasonic UG-3350 Negro	UG-3350
TARPA-UG3380	Sustituye a Tóner Panasonic UG-3380 Negro	UG-3380
TARPH-PFA821	Sustituye a Tóner Philips PFA 821/253109258 XXL Negro	PFA821
TARPH-PFA822	Sustituye a Tóner Philips PFA 822/253109266 XXL Negro	PFA822
TARPH-PFA822S4	Sustituye a Tóner Philips PFA 822/253109266 XXL Negro, Set Ahorro (4 uds.)	PFA822
TARRI-SP100	Sustituye a Tóner Ricoh 407166 Negro	407166
TARRI-SP3400	Sustituye a Tóner Ricoh 406522/SP3400HA Negro	406522
TARRI-SP4100	Sustituye a Tóner Ricoh 402810 Negro	402810
TARRI-SPC240B	Sustituye a Tóner Ricoh 406094 Negro	406094
TARRI-SPC240C	Sustituye a Tóner Ricoh 406097 Cian	406097
TARRI-SPC240M	Sustituye a Tóner Ricoh 406099 Magenta	406099
TARRI-SPC240S4	Sustituye a Tóner Ricoh 406094-6106 CMYK, Set Ahorro (4 uds.)	406094-406106
TARRI-SPC240Y	Sustituye a Tóner Ricoh 406106 Amarillo	406106
TARRI-SPC252B	Sustituye a Tóner Ricoh 407716/SPC 252 DN Negro	407716
TARRI-SPC252C	Sustituye a Tóner Ricoh 407717/SPC 252 DN Cian	407717
TARRI-SPC252M	Sustituye a Tóner Ricoh 407718/SPC 252 DN Magenta	407718
TARRI-SPC252Y	Sustituye a Tóner Ricoh 407719/SPC 252 DN Amarillo	407719
TARRI-SPC310B	Sustituye a Tóner Ricoh 406479 Negro	406479
TARRI-SPC310C	Sustituye a Tóner Ricoh 406480 Cian	406480
TARRI-SPC310M	Sustituye a Tóner Ricoh 406481 Magenta	406481
TARRI-SPC310S4	Sustituye a Tóner Ricoh 406479-82 CMYK, Set Ahorro (4 uds.)	406479-406482
TARRI-SPC310Y	Sustituye a Tóner Ricoh 406482 Amarillo	406482
TARRI-SPC3500	Sustituye a Tóner Ricoh 406990/SPC3500XE Negro	406990
TARRI-TYPE1190	Sustituye a Tóner Ricoh 431013/TYPE1190 Negro	431013
TARRI-TYPE1210	Sustituye a Tóner Ricoh 430072/TYPE1210D Negro	430072
TARRI-TYPE1210DP	Sustituye a Tóner Ricoh 430072/TYPE1210D Negro, Pack Doble	430072
TARRI-TYPE1260	Sustituye a Tóner Ricoh 430351/TYPE1260D Negro	430351
TARRI-TYPE1265	Sustituye a Tóner Ricoh Type 1265 D Negro	430400/TYPE1265D
TARRI-TYPE1275	Sustituye a Tóner Ricoh Type 1275 D/430475 Negro	430475
TARRI-TYPE140B	Sustituye a Tóner Ricoh 402097/TYPE140 Negro	402097
TARRI-TYPE140C	Sustituye a Tóner Ricoh 402098/TYPE140 Cian	402098
TARRI-TYPE140M	Sustituye a Tóner Ricoh 402099/TYPE140 Magenta	402099
TARRI-TYPE140Y	Sustituye a Tóner Ricoh 402100/TYPE140 Amarillo	402100
TARRI-TYPE1435	Sustituye a Tóner Ricoh Type 1435 Negro	430244
TARRI-TYPE1435DP	Sustituye a Tóner Ricoh Type 1435 Negro, Pack Doble	430244
TARRI-TYPE145B	Sustituye a Tóner Ricoh 888308/TYPE145 Negro	888308
TARRI-TYPE145C	Sustituye a Tóner Ricoh 888311/TYPE145 Cian	888311
TARRI-TYPE145M	Sustituye a Tóner Ricoh 888310/TYPE145 Magenta	888310
TARRI-TYPE145Y	Sustituye a Tóner Ricoh 888309/TYPE145 Amarillo	888309
TARRI-TYPE215	Sustituye a Tóner Ricoh 400760/TYPE215 Negro	400760
TARRI-TYPE70	Sustituye a Tóner Ricoh TYPE70 Negro	339474
TARRI-TYPEBP22	Sustituye a Tóner Ricoh TYPEBP22 Negro	402430
TARRI-TYPEFX200	Sustituye a Tóner Ricoh 412477/TYPEFX200 Negro	412477
TARSA-101S	Sustituye a Tóner Samsung MLT-D101S Negro	MLT-D101S
TARSA-101SDP	Sustituye a Tóner Samsung MLT-D101S Negro, Pack Doble	MLT-D101S
TARSA-101X	Sustituye a Tóner Samsung MLT-D101X Negro	MLT-D101X
TARSA-103L	Sustituye a Tóner Samsung MLT-D103L Negro	MLT-D103L/ELS
TARSA-103LS4	Sustituye a Tóner Samsung MLT-D103L Negro, Set Ahorro (4 uds.)	MLT-D103L/ELS
TARSA-103S	Sustituye a Tóner Samsung MLT-D103S Negro	MLT-D103S/ELS
TARSA-103SS4	Sustituye a Tóner Samsung MLT-D103S Negro, Set Ahorro (4 uds.)	MLT-D103S/ELS
TARSA-1042S	Sustituye a Tóner Samsung MLT-D1042S Negro	MLT-D1042S
TARSA-1042SS4	Sustituye a Tóner Samsung MLT-D1042S Negro, Set Ahorro (4 uds.)	MLT-D1042S
TARSA-1042X	Sustituye a Tóner Samsung MLT-D1042X/ELS/1042X Negro	MLT-D1042S
TARSA-1052L	Sustituye a Tóner Samsung MLT-D1052L Negro	MLT-D1052L
TARSA-1052LDP	Sustituye a Tóner Samsung MLT-P1052A/ELS/1052 Negro, Pack Doble	MLT-D1052L
TARSA-1052LS4	Sustituye a Tóner Samsung MLT-D1052L Negro, Set Ahorro (4 uds.)	MLT-D1052L
TARSA-1052S	Sustituye a Tóner Samsung MLT-D1052S/1052 Negro XXL	MLT-D1052S
TARSA-1082	Sustituye a Tóner Samsung MLT-D1082S/1082 Negro	MLT-D1082S
TARSA-1082DP	Sustituye a Tóner Samsung MLT-P1082A Negro, Pack Doble	MLT-P1082A
TARSA-111L	Sustituye a Tóner Samsung MLT-D111L Negro	MLT-D111L
TARSA-111LS4	Sustituye a Tóner Samsung MLT-D111L Negro, Set Ahorro (4 uds.)	MLT-D111L/ELS
TARSA-111S	Sustituye a Tóner Samsung MLT-D111S Negro	MLT-D111S
TARSA-111SS4	Sustituye a Tóner Samsung MLT-D111S Negro, Set Ahorro (4 uds.)	MLT-D111S/ELS

TARSA-116L	Sustituye a Tóner Samsung MLT-D116L Negro	MLT-D116L
TARSA-116LDP	Sustituye a Tóner Samsung MLT-D116L/116L Negro, Pack Doble	MLT-D116L
TARSA-116S	Sustituye a Tóner Samsung MLT-D116S/116S XXL Negro	MLT-D116S
TARSA-116SDP	Sustituye a Tóner Samsung MLT-D116S/116SXXL Negro, Pack Doble	MLT-D116S
TARSA-117S	Sustituye a Tóner Samsung MLT-D117S/ELS Negro	MLT-D117S
TARSA-119S	Sustituye a Tóner Samsung MLT-D119SELS Negro	MLT-D119SELS
TARSA-119SXL	Sustituye a Tóner Samsung MLT-D119SELS XXL Negro	MLT-D119SELS
TARSA-1210	Sustituye a Tóner Samsung ML-1210D3 Negro	ML-1210D3
TARSA-1520	Sustituye a Tóner Samsung ML-1520D3 Negro	ML-1520D3
TARSA-1520S4	Sustituye a Tóner Samsung ML-1520D3 Negro, Set Ahorro (4 uds.)	ML-1520D3
TARSA-1610D2	Sustituye a Tóner Samsung ML-1610D2 Negro	ML-1610D2
TARSA-1630	Sustituye a Tóner Samsung ML-D1630 Negro	MLD1630A
TARSA-1630DP	Sustituye a Tóner Samsung ML-D1630A Negro, Pack Doble	MLD1630A
TARSA-1710	Sustituye a Tóner Samsung ML-1710D3 Negro	ML-1710D3
TARSA-2010D3	Sustituye a Tóner Samsung ML-2010D3 Negro	ML-2010D3
TARSA-2010S4	Sustituye a Tóner Samsung ML-2010D3 Negro, Set Ahorro (4 uds.)	ML-2010D3
TARSA-203E	Sustituye a Tóner Samsung MLT-D203E Negro	MLT-D203E
TARSA-203L	Sustituye a Tóner Samsung MLT-D203L Negro	MLT-D203L
TARSA-203U	Sustituye a Tóner Samsung MLT-D203U Negro	MLT-D203U
TARSA-204E	Sustituye a Tóner Samsung MLT-D204E/ELS Negro	MLT-D204EELS
TARSA-204L	Sustituye a Tóner Samsung MLT-D204L/ELS Negro	MLT-D204LELS
TARSA-204U	Sustituye a Tóner Samsung MLT-D204U/ELS Negro	MLT-D204U/ELS
TARSA-205E	Sustituye a Tóner Samsung MLT-D205E/ELS Negro	MLT-D205E
TARSA-205L	Sustituye a Tóner Samsung MLT-D205L/ELS Negro	MLT-D205L
TARSA-205LS4	Sustituye a Tóner Samsung MLT-D205L/ELS Negro, Set Ahorro (4 uds.)	MLT-D205L
TARSA-205S	Sustituye a Tóner Samsung MLT-D205S/ELS Negro	MLT-D2082L
TARSA-205SS4	Sustituye a Tóner Samsung MLT-D205S/ELS Negro, Set Ahorro (4 uds.)	MLT-D205S
TARSA-2082DP	Sustituye a Tóner Samsung MLT-P2082A Negro, Pack Doble	MLT-D2082L
TARSA-2082L	Sustituye a Tóner Samsung MLT-D2082L Negro	MLT-D2082L
TARSA-2092L	Sustituye a Tóner Samsung MLT-D2092L Negro	MLT-D2092L
TARSA-2092LS4	Sustituye a Tóner Samsung MLT-D2092L Negro, Set Ahorro (4 uds.)	MLT-D2092L
TARSA-2150	Sustituye a Tóner Samsung ML-2150 D8 Negro	ML-2150D8
TARSA-2150DP	Sustituye a Tóner Samsung ML-2150 D8 Negro, Pack Doble	ML-2150D8
TARSA-2250	Sustituye a Tóner Samsung ML-2250D5 Negro	ML-2250D5
TARSA-2250S4	Sustituye a Tóner Samsung ML-2250D5 Negro, Set Ahorro (4 uds.)	ML-2250D5
TARSA-2550	Sustituye a Tóner Samsung ML-2550DA Negro	ML-2550DA
TARSA-2850	Sustituye a Tóner Samsung ML-2850 Negro	MLD2850B
TARSA-3050	Sustituye a Tóner Samsung MLD3050B Negro	MLD3050B
TARSA-3050DP	Sustituye a Tóner Samsung MLD-3050B Negro, Pack Doble	MLD3050B
TARSA-305L	Sustituye a Tóner Samsung MLT-D305L/ELS Negro	MLT-D305L
TARSA-305LDP	Sustituye a Tóner Samsung MLT-D305L/ELS Negro, Pack Doble	MLT-D305L
TARSA-307L	Sustituye a Tóner Samsung MLT-D307L/ELS Negro	MLT-D307L/ELS
TARSA-309E	Sustituye a Tóner Samsung MLT-D309E/ELS Negro	MLT-D309E
TARSA-309L	Sustituye a Tóner Samsung MLT-D309L/ELS Negro	MLT-D309L/ELS
TARSA-309S	Sustituye a Tóner Samsung MLT-D309S/ELS Negro	MLT-D309L/ELS
TARSA-3470A	Sustituye a Tóner Samsung MLD-3470A Negro	MLD-3470A
TARSA-3470B	Sustituye a Tóner Samsung MLD-3470B Negro	MLD-3470B
TARSA-3470BDP	Sustituye a Tóner Samsung MLD-3470B Negro, Pack Doble	MLD-3470B
TARSA-3560	Sustituye a Tóner Samsung ML-3560DB Negro	ML-3560DB
TARSA-3560DBS4	Sustituye a Tóner Samsung ML-3560DB Negro, Set Ahorro (4 uds.)	ML-3560DB
TARSA-4500	Sustituye a Tóner Samsung ML-4500D3 Negro	ML-4500D3
TARSA-4550	Sustituye a Tóner Samsung MLD-4550B Negro	MLD-4550B
TARSA-4550S4	Sustituye a Tóner Samsung MLD-4550B Negro, Set Ahorro (4 uds.)	MLD-4550B
TARSA-6060	Sustituye a Tóner Samsung ML-6060 D6 Negro	ML-6060D6
TARSA-7000	Sustituye a Tóner Samsung ML-7000D8 Negro	ML-7000D8
TARSA-810	Sustituye a Tóner Samsung MLC-810 Negro	MLC-810
TARSA-C2620B	Sustituye a Tóner Samsung CLT-K505L Negro	CLT-K505L
TARSA-C2620C	Sustituye a Tóner Samsung CLT-C505L Cian	CLT-C505L
TARSA-C2620M	Sustituye a Tóner Samsung CLT-M505L Magenta	CLT-M505L
TARSA-C2620S4	Sustituye a Tóner Samsung CLT-505L CMYK, Set Ahorro (4 uds.)	CLT-K505L
TARSA-C2620Y	Sustituye a Tóner Samsung CLT-Y505L Amarillo	CLT-Y505L
TARSA-CLP300B	Sustituye a Tóner Samsung CLP-K300A Negro	CLP-K300A
TARSA-CLP300C	Sustituye a Tóner Samsung CLP-C300A Cian	CLP-C300A
TARSA-CLP300M	Sustituye a Tóner Samsung CLP-M300A Magenta	CLP-M300A
TARSA-CLP300S4	Sustituye a Tóner Samsung CLP-300 CMYK, Set Ahorro (4 uds.)	CLP-300A
TARSA-CLP300Y	Sustituye a Tóner Samsung CLP-Y300A Amarillo	CLP-Y300A
TARSA-CLP310B	Sustituye a Tóner Samsung CLT-K4092S/K4092/CLP 310 Negro	CLT-K4092S
TARSA-CLP310BDP	Sustituye a Tóner Samsung CLT-P4092B Negro, Pack Doble	CLT-P4092B
TARSA-CLP310C	Sustituye a Tóner Samsung CLT-C4092S/C4092/CLP 310 Cian	CLT-C4092S
TARSA-CLP310M	Sustituye a Tóner Samsung CLT-M4092S/M4092/CLP 310 Magenta	CLT-M4092S
TARSA-CLP310S4	Sustituye a Tóner Samsung CLT-P4092C CMYK, Set Ahorro (4 uds.)	CLT-4092S

TARSA-CLP310Y	Sustituye a Tóner Samsung CLT-Y4092S/Y4092/CLP 310 Amarillo	CLT-Y4092S
TARSA-CLP320B	Sustituye a Tóner Samsung CLT-K4072S/CLP 320 Negro	CLT-K4072S
TARSA-CLP320BDP	Sustituye a Tóner Samsung CLT-P4072B/ELS Negro, Pack Doble	CLT-P4072B
TARSA-CLP320C	Sustituye a Tóner Samsung CLT-C4072S/CLP 320 Cian	CLT-C4072S
TARSA-CLP320M	Sustituye a Tóner Samsung CLT-M4072S/CLP 320 Magenta	CLT-M4072S
TARSA-CLP320S4	Sustituye a Tóner Samsung CLP-320 CMYK, Set Ahorro (4 uds.)	CLT-4072S
TARSA-CLP320Y	Sustituye a Tóner Samsung CLT-Y4072S/CLP 320 Amarillo	CLT-Y4072S
TARSA-CLP350B	Sustituye a Tóner Samsung CLP-K350A Negro	CLP-K350A
TARSA-CLP350C	Sustituye a Tóner Samsung CLP-C350A Cian	CLP-C350A
TARSA-CLP350M	Sustituye a Tóner Samsung CLP-M350A Magenta	CLP-M350A
TARSA-CLP350S4	Sustituye a Tóner Samsung CLP-350 CMYK, Set Ahorro (4 uds.)	CLP-350A
TARSA-CLP350Y	Sustituye a Tóner Samsung CLP-Y350A Amarillo	CLP-Y350A
TARSA-CLP360B	Sustituye a Tóner Samsung CLT-K406S/CLP-360 Negro	CLT-K406S
TARSA-CLP360C	Sustituye a Tóner Samsung CLT-C406S/CLP-360 Cian	CLT-C406S
TARSA-CLP360M	Sustituye a Tóner Samsung CLT-M406S/CLP-360 Magenta	CLT-M406S
TARSA-CLP360S4	Sustituye a Tóner Samsung CLP-360 CMYK, Set Ahorro (4 uds.)	CLT-P406C
TARSA-CLP360Y	Sustituye a Tóner Samsung CLT-Y406S/CLP-360 Amarillo	CLT-Y406S
TARSA-CLP415B	Sustituye a Tóner Samsung CLT-K504S/CLP-415 Negro	CLT-K504S
TARSA-CLP415C	Sustituye a Tóner Samsung CLT-C504S/CLP-415 Cian	CLT-C504S
TARSA-CLP415M	Sustituye a Tóner Samsung CLT-M504S/CLP-415 Magenta	CLT-M504S
TARSA-CLP415S4	Sustituye a Tóner Samsung CLP-415 CMYK, Set Ahorro (4 uds.)	CLP-415
TARSA-CLP415Y	Sustituye a Tóner Samsung CLT-Y504S/CLP-415 Amarillo	CLT-Y504S
TARSA-CLP500B	Sustituye a Tóner Samsung CLP-500 Negro	CLP-500D7K
TARSA-CLP500C	Sustituye a Tóner Samsung CLP-500 Cian	CLP-500D5C
TARSA-CLP500M	Sustituye a Tóner Samsung CLP-500 Magenta	CLP-500D5M
TARSA-CLP500S4	Sustituye a Tóner Samsung CLP-500 CMYK, Set Ahorro (4 uds.)	CLP-500D7/CLP500D5
TARSA-CLP500Y	Sustituye a Tóner Samsung CLP-500 Amarillo	CLP-500D5Y
TARSA-CLP510B	Sustituye a Tóner Samsung CLP-510 Negro	CLP-510D7K
TARSA-CLP510C	Sustituye a Tóner Samsung CLP-510 Cian	CLP-510D5C
TARSA-CLP510M	Sustituye a Tóner Samsung CLP-510 Magenta	CLP-510D5M
TARSA-CLP510S4	Sustituye a Tóner Samsung CLP-510 CMYK, Set Ahorro (4 uds.)	CLP-510D7/510D5
TARSA-CLP510Y	Sustituye a Tóner Samsung CLP-510 Amarillo	CLP-510D5Y
TARSA-CLP600B	Sustituye a Tóner Samsung CLP-K600A Negro	CLP-K600A
TARSA-CLP600C	Sustituye a Tóner Samsung CLP-C600A Cian	CLP-C600A
TARSA-CLP600M	Sustituye a Tóner Samsung CLP-M600A Magenta	CLP-M600A
TARSA-CLP600S4	Sustituye a Tóner Samsung CLP-600 CMYK, Set Ahorro (4 uds.)	CLP-600A
TARSA-CLP600Y	Sustituye a Tóner Samsung CLP-Y600A Amarillo	CLP-Y600A
TARSA-CLP620B	Sustituye a Tóner Samsung CLT-K5082L Negro	CLT-K5082L
TARSA-CLP620C	Sustituye a Tóner Samsung CLT-C5082L Cian	CLT-C5082L
TARSA-CLP620M	Sustituye a Tóner Samsung CLT-M5082L Magenta	CLT-M5082L
TARSA-CLP620S4	Sustituye a Tóner Samsung CLP-620 CMYK, Set Ahorro (4 uds.)	CLT-5082L
TARSA-CLP620Y	Sustituye a Tóner Samsung CLT-Y5082L Amarillo	CLT-Y5082L
TARSA-CLP660B	Sustituye a Tóner Samsung CLP-K660B Negro	CLP-K660B
TARSA-CLP660C	Sustituye a Tóner Samsung CLP-C660B Cian	CLP-C660B
TARSA-CLP660M	Sustituye a Tóner Samsung CLP-M660B Magenta	CLP-M660B
TARSA-CLP660S4	Sustituye a Tóner Samsung CLP-660 CMYK, Set Ahorro (4 uds.)	CLP-660B
TARSA-CLP660Y	Sustituye a Tóner Samsung CLP-Y660B Amarillo	CLP-Y660B
TARSA-CLP680B	Sustituye a Tóner Samsung CLT-K506L/CLP-680 Negro	CLT-K506L
TARSA-CLP680C	Sustituye a Tóner Samsung CLT-C506L/CLP-680 Cian	CLT-C506L
TARSA-CLP680M	Sustituye a Tóner Samsung CLT-M506L/CLP-680 Magenta	CLT-M506L
TARSA-CLP680S4	Sustituye a Tóner Samsung CLT-K506L-CLT-Y506L CMYK, Set Ahorro (4 uds.)	CLT-K506L-Y506L
TARSA-CLP680Y	Sustituye a Tóner Samsung CLT-Y506L/CLP-680 Amarillo	CLT-Y506L
TARSA-CLP770B	Sustituye a Tóner Samsung CLT-K6092S Negro	CLT-K6092S
TARSA-CLP770C	Sustituye a Tóner Samsung CLT-C6092S Cian	CLT-C6092S
TARSA-CLP770M	Sustituye a Tóner Samsung CLT-M6092S Magenta	CLT-M6092S
TARSA-CLP770Y	Sustituye a Tóner Samsung CLT-Y6092S Amarillo	CLT-Y6092S
TARSA-CLX8380B	Sustituye a Tóner Samsung CLX-K8380A Negro	CLX-K8380A/ELS
TARSA-CLX8380C	Sustituye a Tóner Samsung CLX-C8380A Cian	CLX-C838A/ELS
TARSA-CLX8380M	Sustituye a Tóner Samsung CLX-M8380A Magenta	CLX-M8380A/ELS
TARSA-CLX8380Y	Sustituye a Tóner Samsung CLX-Y8380A Amarillo	CLX-Y8380A/ELS
TARSA-CLX9201B	Sustituye a Tóner Samsung CLT-K809S/ELS/K809 Negro	CLT-K809S/ELS
TARSA-CLX9201C	Sustituye a Tóner Samsung CLT-C809S/ELS/C809 Cian	CLT-C809S/ELS
TARSA-CLX9201M	Sustituye a Tóner Samsung CLT-M809S/ELS/M809 Magenta	CLT-M809S/ELS
TARSA-CLX9201Y	Sustituye a Tóner Samsung CLT-Y809S/ELS/Y809 Amarillo	CLT-Y809S/ELS
TARSA-CLX9250B	Sustituye a Tóner Samsung MLT-K607S/ELS Negro	MLT-K607S/ELS
TARSA-CLX9250C	Sustituye a Tóner Samsung CLT-C6072S Cian	CLT-C6072S
TARSA-CLX9250M	Sustituye a Tóner Samsung CLT-M6072S Magenta	CLT-M6072S
TARSA-CLX9250XLB	Sustituye a Tóner Samsung CLT-K6062S Negro	CLT-K6062S
TARSA-CLX9250XLC	Sustituye a Tóner Samsung CLT-C6062S Cian	CLT-C6062S
TARSA-CLX9250XLM	Sustituye a Tóner Samsung CLT-M6062S Magenta	CLT-M6062S
TARSA-CLX9250XLY	Sustituye a Tóner Samsung CLT-Y6062S Amarillo	CLT-Y6062S

TARSA-CLX9250Y	Sustituye a Tóner Samsung CLT-Y6072S Amarillo	CLT-Y6072S
TARSA-DR4512	Sustituye a Tambor Samsung MLT-R307/ELS Negro	MLT-R307/ELS
TARSA-DRCLP310	Sustituye a Tambor Samsung CLT-R409 CMYK	CLT-R409
TARSA-DRCLP320	Sustituye a Tambor Samsung CLT-R407 CMYK	CLT-R407
TARSA-DRCLP360	Sustituye a Tambor Samsung CLT-R406/SEE CMYK, Set Ahorro (4 uds.)	CLT-R406
TARSA-DRSCX5315	Sustituye a Tambor Samsung SCX-5315R2	SCX-5315R2
TARSA-DRSCX6320	Sustituye a Tambor Samsung SCX-6320R2	SCX-6320R2
TARSA-DRSCX6345	Sustituye a Tambor Samsung SCX-R6345A	SCX-R6345A
TARSA-DRSLT116	Sustituye a Tambor Samsung MLT-R116	MLT-R116
TARSA-DRSLT204	Sustituye a Tambor Samsung MLT-R204/SEE/204	MLT-R204/SEE
TARSA-SCX4100	Sustituye a Tóner Samsung SCX-4100D3 Negro	SCX-4100D3
TARSA-SCX4100DP	Sustituye a Tóner Samsung SCX-4100D3 Negro, Pack Doble	SCX-4100D3
TARSA-SCX4200	Sustituye a Tóner Samsung SCX-D4200A Negro	SCX-D4200A
TARSA-SCX4200S4	Sustituye a Tóner Samsung SCX-D4200A Negro, Set Ahorro (4 uds.)	SCX-D4200A
TARSA-SCX4216DP	Sustituye a Tóner Samsung SCX-P4216A Negro, Pack Doble	SCX-4216D3
TARSA-SCX4216S4	Sustituye a Tóner Samsung SCX-4216D3 Negro, Set Ahorro (4 uds.)	SCX-4216D3
TARSA-SCX4300	Sustituye a Tóner Samsung MLT-D1092S/SCX-4300 Negro	MLT-D1092S
TARSA-SCX4300S4	Sustituye a Tóner Samsung SCX-4300 Negro, Set Ahorro (4 uds.)	MLT-D1092S
TARSA-SCX4521	Sustituye a Tóner Samsung SCX-4521D3 Negro	SCX-4521D3
TARSA-SCX4521S4	Sustituye a Tóner Samsung SCX-4521D3 Negro, Set Ahorro (4 uds.)	SCX-4521D3
TARSA-SCX4720	Sustituye a Tóner Samsung SCX-4720 D5 Negro	SCX-4720D5
TARSA-SCX5530	Sustituye a Tóner Samsung SCX-D5530B Negro	SCX-D5530B
TARSA-SCX5530DP	Sustituye a Tóner Samsung SCX-D5530B Negro, Pack Doble	SCX-D5530B
TARSA-SCX6320	Sustituye a Tóner Samsung SCX-6320D8 Negro	SCX-6320D8
TARSA-SCX6320S4	Sustituye a Tóner Samsung SCX-6320D8 Negro, Set Ahorro (4 uds.)	SCX-6320D8
TARSA-SCX6345	Sustituye a Tóner Samsung SCX-D6345A Negro	SCX-D6345A
TARSA-SCX6555	Sustituye a Tóner Samsung SCX-D6555A Negro	SCX-D6555A
TARSA-SCXD4725	Sustituye a Tóner Samsung SCX-4725 Negro	SCX-D4725A
TARSA-SCXP4216	Sustituye a Tóner Samsung SCX-4216D3 Negro	SCX-P4216
TARSA-SF5100	Sustituye a Tóner Samsung SF-5100D3 Negro	SF-5100D3
TARSA-SF5100DP	Sustituye a Tóner Samsung SF-5100D3 Negro, Pack Doble	SF-5100D3
TARSA-SF6800	Sustituye a Tóner Samsung SF6800 Negro	SF-6800D6
TARSA-SFD560	Sustituye a Tóner Samsung SF-D560RA Negro	SFD-560RA
TARSA-SFD560S4	Sustituye a Tóner Samsung SF-D560RA Negro, Set Ahorro (4 uds.)	SFD-560RA
TARSG-CTR365	Sustituye a Tóner Sagem CTR365/288094565 Negro	CTR365
TARSH-AC360S4	Sustituye a Tóner Sharp AC360 CMYK, Set Ahorro (4 uds.)	AC360
TARSH-ARC360B	Sustituye a Tóner Sharp AR-C 36 TBE Negro	AR-C36TBE
TARSH-ARC360C	Sustituye a Tóner Sharp AR-C 36 TCE Cian	AR-C36TCE
TARSH-ARC360M	Sustituye a Tóner Sharp AR-C 36 TME Magenta	AR-C36TME
TARSH-ARC360Y	Sustituye a Tóner Sharp AR-C 36 TYE Amarillo	AR-C36TYE
TARTA-8008B	Sustituye a Tóner Tally Genicom 43376 Negro	43376
TARTA-8008BDP	Sustituye a Tóner Tally Genicom 43376 Negro, Pack Doble	43379
TARTA-8008C	Sustituye a Tóner Tally Genicom 43336 Cian	43336
TARTA-8108B	Sustituye a Tóner Tally Genicom T8108 Negro	43799
TARTA-8108C	Sustituye a Tóner Tally Genicom T8108 Cian	43796
TARTA-8108S4	Sustituye a Tóner Tally Genicom T8108 CMYK, Set Ahorro (4 uds.)	43796-43799
TARTA-8108Y	Sustituye a Tóner Tally Genicom T8108 Amarillo	43798
TARTA-9330	Sustituye a Tóner Tally Genicom 3872 Negro	43872
TARTA-DR9316	Sustituye a Tambor Tally Genicom 43347	043347
TARTR-4228	Sustituye a Tóner Triumph-Adler 612810015 Negro	612810015
TARTS-DR170F	Sustituye a Tambor Toshiba Estudio 170F	6A000000311
TARTS-T4030	Sustituye a Tóner Toshiba 6B000000452/T4030 Negro	6B000000452
TARTS-ZT170	Sustituye a Tóner Toshiba 6A000000312/ZT170 Negro	6A000000312
TARU-44128	Sustituye a Tóner Utax 4412810010 Negro	4412810010
TARU-44130	Sustituye a Tóner Utax 4413010010 XL Negro	4413010010
TARU-44135DP	Sustituye a Tóner Utax 4413510010 Negro, Pack Doble	4413510010
TARU-44235	Sustituye a Tóner Utax 4423510010 Negro	4423510010
TARU-44235DP	Sustituye a Tóner Utax 4423510010 Negro, Pack Doble	4423510010
TARU-44240	Sustituye a Tóner Utax 4424010010 Negro	4424010010
TARU-44345	Sustituye a Tóner Utax 4434510010 Negro	4434510010
TARU-44360	Sustituye a Tóner Utax 4436010010 Negro	4436010010
TARU-CLP3521B	Sustituye a Tóner Utax 4452110010 Negro	4452110010
TARU-CLP3521C	Sustituye a Tóner Utax 4452110011 Cian	4452110011
TARU-CLP3521M	Sustituye a Tóner Utax 4452110014 Magenta	4452110014
TARU-CLP3521S4	Sustituye a Tóner Utax 4452110010-16 CMYK, Set Ahorro (4 uds.)	4452110010-16
TARU-CLP3521Y	Sustituye a Tóner Utax 4452110016 Amarillo	4452110016
TARU-CLP3621B	Sustituye a Tóner Utax 4462110010 Negro	4462110010
TARU-CLP3621C	Sustituye a Tóner Utax 4462110011 Cian	4462110011
TARU-CLP3621M	Sustituye a Tóner Utax 4462110014 Magenta	4462110014
TARU-CLP3621Y	Sustituye a Tóner Utax 4462110016 Amarillo	4462110016
TARU-CLP3721B	Sustituye a Tóner Utax 4472110010 Negro	4472110010

TARU-CLP3721C	Sustituye a Tóner Utax 4472110011 Cian	4472110011
TARU-CLP3721M	Sustituye a Tóner Utax 4472110014 Magenta	4472110014
TARU-CLP3721S4	Sustituye a Tóner Utax 4472110010-16 CMYK, Set Ahorro (4 uds.)	4472110010-16
TARU-CLP3721Y	Sustituye a Tóner Utax 4472110016 Amarillo	4472110016
TARXA-CL21B	Sustituye a Tóner Xante 200-100124 Negro	200-100124
TARXA-CL21C	Sustituye a Tóner Xante 200-100121 Cian	200-100121
TARXA-CL21M	Sustituye a Tóner Xante 200-100122 Magenta	200-100122
TARXA-CL21Y	Sustituye a Tóner Xante 200-100123 Amarillo	200-100123
TARXA-CL30B	Sustituye a Tóner Xante 200-100161 Negro	200-100161
TARXA-CL30C	Sustituye a Tóner Xante 200-100158 Cian	200-100158
TARXA-CL30M	Sustituye a Tóner Xante 200-100159 Magenta	200-100159
TARXA-CL30Y	Sustituye a Tóner Xante 200-100160 Amarillo	200-100160
TARXE-DRM20	Sustituye a Tambor Xerox 113R00671	113R00671
TARXE-DRPH6120	Sustituye a Tambor Xerox 108R00691 CMYK	108R00691
TARXE-P8E	Sustituye a Tóner Xerox 113R00296 Negro	113R00296
TARXE-P8EDP	Sustituye a Tóner Xerox 113R00296 Negro, Pack Doble	113R00296
TARXE-PE16	Sustituye a Tóner Xerox 113R00667/PE 16 Negro	113R00667
TARXE-PH1235B	Sustituye a Tóner Xerox 006R90303 Negro	006R90303
TARXE-PH1235C	Sustituye a Tóner Xerox 006R90304 Cian	006R90304
TARXE-PH1235M	Sustituye a Tóner Xerox 006R90305 Magenta	006R90305
TARXE-PH1235Y	Sustituye a Tóner Xerox 006R90306 Amarillo	006R90306
TARXE-PH2135B	Sustituye a Tóner Xerox 016-1917-00 Negro	016-1917-00
TARXE-PH2135C	Sustituye a Tóner Xerox 016-1918-00 Cian	016-1918-00
TARXE-PH2135M	Sustituye a Tóner Xerox 016-1919-00 Magenta	016-1919-00
TARXE-PH2135Y	Sustituye a Tóner Xerox 016-1920-00 Amarillo	016-1920-00
TARXE-PH3110	Sustituye a Tóner Xerox 109R00639 Negro	109R00639
TARXE-PH3124	Sustituye a Tóner Xerox 106R01159 Negro	106R01159
TARXE-PH3124S4	Sustituye a Tóner Xerox 106R01159 Negro, Set Ahorro (4 uds.)	106R01159
TARXE-PH3130	Sustituye a Tóner Xerox 109R00725 Negro	109R00725
TARXE-PH3140	Sustituye a Tóner Xerox 108R00909 Negro	108R00909
TARXE-PH3320	Sustituye a Tóner Xerox 106R02307 Negro	106R02307
TARXE-PH3600	Sustituye a Tóner Xerox 106R01371 Negro	106R01371
TARXE-PH5500	Sustituye a Tóner Xerox 113R00668 Negro	113R00668
TARXE-PH5550	Sustituye a Tóner Xerox 106R01294 Negro	106R01294
TARXE-PH5550DP	Sustituye a Tóner Xerox 106R01294 Negro, Pack Doble	106R01294
TARXE-PH6120C	Sustituye a Tóner Xerox 113R00693 Cian	113R00693
TARXE-PH6120M	Sustituye a Tóner Xerox 113R00695 Magenta	113R00695
TARXE-PH6128B	Sustituye a Tóner Xerox 106R01455 Negro	106R01455
TARXE-PH6128C	Sustituye a Tóner Xerox 106R01452 Cian	106R01452
TARXE-PH6128M	Sustituye a Tóner Xerox 106R01453 Magenta	106R01453
TARXE-PH6128S4	Sustituye a Tóner Xerox CMYK, Set Ahorro (4 uds.)	106R01452-55
TARXE-PH6128Y	Sustituye a Tóner Xerox 106R01454 Amarillo	106R01454
TARXE-PH6300B	Sustituye a Tóner Xerox 106R01085 Negro	106R01085
TARXE-PH6300C	Sustituye a Tóner Xerox 106R01082 Cian	106R01082
TARXE-PH6300M	Sustituye a Tóner Xerox 106R01083 Magenta	106R01083
TARXE-PH6300S4	Sustituye a Tóner Xerox CMYK, Set Ahorro (4 uds.)	106R01082-85
TARXE-PH6300Y	Sustituye a Tóner Xerox 106R01084 Amarillo	106R01084
TARXE-PH6350B	Sustituye a Tóner Xerox 106R01147 Negro	106R01147
TARXE-PH6350C	Sustituye a Tóner Xerox 106R01144 Cian	106R01144
TARXE-PH6350M	Sustituye a Tóner Xerox 106R01145 Magenta	106R01145
TARXE-PH6350S4	Sustituye a Tóner Xerox CMYK, Set Ahorro (4 uds.)	106R01144-1147
TARXE-PH6350Y	Sustituye a Tóner Xerox 106R01146 Amarillo	106R01146
TARXE-PH6360B	Sustituye a Tóner Xerox 106R01221/Phaser 6360 Negro	106R01221
TARXE-PH6360C	Sustituye a Tóner Xerox 106R01218/Phaser 6360 Cian	106R01218
TARXE-PH6360M	Sustituye a Tóner Xerox 106R01219/Phaser 6360 Magenta	106R01219
TARXE-PH6360S4	Sustituye a Tóner Xerox Phaser 6360 CMYK, Set Ahorro (4 uds.)	106R01218-106R01221
TARXE-PH6360Y	Sustituye a Tóner Xerox 106R01220/Phaser 6360 Amarillo	106R01220
TARXE-PH6700B	Sustituye a Tóner Xerox 106R01510 Negro	106R01510
TARXE-PH6700C	Sustituye a Tóner Xerox 106R01507 Cian	106R01507
TARXE-PH6700M	Sustituye a Tóner Xerox 106R01508 Magenta	106R01508
TARXE-PH6700S4	Sustituye a Tóner Xerox 106R01510-07 CMYK, Set Ahorro (4 uds.)	106R01507-1510
TARXE-PH6700Y	Sustituye a Tóner Xerox 106R01509 Amarillo	106R01509
TARXE-PH7300B	Sustituye a Tóner Xerox 016-1980-00 Negro	016-1980-00
TARXE-PH7300C	Sustituye a Tóner Xerox 016-1977-00 Cian	016-1977-00
TARXE-PH7300M	Sustituye a Tóner Xerox 016-1978-00 Magenta	016-1978-00
TARXE-PH7300S4	Sustituye a Tóner Xerox 016-1977-1980 CMYK, Set Ahorro (4 uds.)	016-1977-1980
TARXE-PH7300Y	Sustituye a Tóner Xerox 016-1979-00 Amarillo	016-1979-00
TARXE-WC3550	Sustituye a Tóner Xerox 106R01528 Negro	106R01528
TARXE-WC3550XL	Sustituye a Tóner Xerox 106R01530 Negro	106R01530
TARXE-WC4250	Sustituye a Tóner Xerox 106R01409 Negro	106R01409
TARXE-WC7425B	Sustituye a Tóner Xerox 006R01395 Negro	006R01395

TARXE-WC7425C	Sustituye a Tóner Xerox 006R01398 Cian	006R01398
TARXE-WC7425M	Sustituye a Tóner Xerox 006R01397	006R01397
TARXE-WC7425S4	Sustituye a Tóner Xerox CMYK, Set Ahorro (4 uds.)	006R01395-1398
TARXE-WC7425Y	Sustituye a Tóner Xerox 006R01396 Amarillo	006R01396
TARXE-WC7525B	Sustituye a Tóner Xerox 006R01513 7525 Negro	006R01513
TARXE-WC7525C	Sustituye a Tóner Xerox 006R01516 7525 Cian	006R01516
TARXE-WC7525M	Sustituye a Tóner Xerox 006R01515 7525 Magenta	006R01515
TARXE-WC7525S4	Sustituye a Tóner Xerox CMYK, Set Ahorro (4 uds.)	006R01513-1516
TARXE-WC7525Y	Sustituye a Tóner Xerox 006R01514 Amarillo	006R01514